

SPORT-UTILITY ACE SERIES

OPERATOR'S GUIDE

Includes Safety, Vehicle and Maintenation

WARNING

Read this guide thoroughly. It contains important safety information. Minimum recommended operators age: 16 years old. Keep this operator's guide with the vehicle at all times.

520003508

Original Instruction

⚠ WARNING

This vehicle may exceed the performance of other vehicles you may have ridden in the past. Take time to familiarize yourself with your new vehicle.

CALIFORNIA PROPOSITION 65 WARNING

A WARNING

Operating, servicing and maintaining an off-road vehicle can expose you to chemicals including engine exhaust, carbon monoxide, phthalates, and lead, which are known to the State of California to cause cancer and birth defects or other reproductive harm. To minimize exposure, avoid breathing exhaust, do not idle the engine except as necessary, service your vehicle in a well-ventilated area and wear gloves or wash your hands frequently when servicing your vehicle. For more information go to

www.p65warnings.ca.gov/products/passenger-vehicle.

NOTF:

In Canada, products are distributed and serviced by Bombardier Recreational Products Inc. (BRP).

In the USA, products are distributed and serviced by BRP US Inc.

In the European Economic Area (which is comprised of the member states of the European Union plus the United Kingdom, Norway, Iceland and Liechtenstein), the Commonwealth of the Independent States (including Ukraine and Turkmenistan) and Turkey, products are distributed and serviced by BRP European Distribution S.A. and other affiliates or subsidiaries of BRP.

For all other countries, products are distributed and serviced by Bombardier Recreational Products Inc. (BRP) or its affiliates.

TM® Trademarks of BRP or its affiliates.

This is a non-exhaustive list of trademarks that are the property of Bombardier Recreational Products Inc. or its affiliates. Trademarks may not be registered in every jurisdictions:

ACE™	D.E.S.S.™	HPG™
iTC™	RER™	ROTAX®
SKI-DOO®	XPS®	

All rights reserved. No parts of this Operator's Guide may be reproduced in any form without the prior written permission of Bombardier Recreational Products Inc.

©Bombardier Recreational Products Inc. (BRP) 2025

This page is intentionally blank

Deutsch	Dieses Handbuch ist möglicherweise in Ihrer Landessprache verfügbar. Bitte wenden Sie sich an Ihren Händler oder besuchen Sie: www.operatorsguides.brp.com
English	This guide may be available in your language. Check with your dealer or go to: www.operatorsguides.brp.com
Español	Es posible que este manual esté disponible en su idioma. Consulte a su distribuidor o visite: www.operatorsguides.brp.com
Français	Ce guide peut être disponible dans votre langue. Vérifier avec votre concessionnaire ou aller à: www.operatorsguides.brp.com
Italiano	Questa guida potrebbe essere disponibile nella propria lingua. Contattare il concessionario o consultare: www.operatorsguides.brp.com
中文	本手册可能有您的语种的翻译版本。请向经销商问询,或者登录 www.operatorsguides.brp.com 查询。
日本語	このガイドは、言語によって翻訳版が用意されています。. ディーラーに問い合わせるか、次のアドレスでご確認ください: www.operatorsguides.brp.com
Nederlands	Deze handleiding kan beschikbaar zijn in uw taal. Vraag het aan uw dealer of ga naar: www.operatorsguides.brp.com
Norsk	Denne boken kan finnes tilgjengelig på ditt eget språk. Kontakt din forhandler eller gå til: www.operatorsguides.brp.com
Português	Este manual pode estar disponível em seu idioma. Fale com sua concessionária ou visite o site: www.operatorsguides.brp.com
Русский	Воспользуйтесь руководством на вашем языке. Узнайте о его наличии у дилера или на странице по адресу www.operatorsguides.brp.com
Suomi	Käyttöohjekirja voi olla saatavissa omalla kielelläsi. Tarkista jälleenmyyjältä tai käy osoitteessa: www.operatorsguides.brp.com
Svenska	Denna bok kan finnas tillgänglig på ditt språk. Kontakta din återförsäljare eller gå till: www.operatorsguides.brp.com

OPERATOR'S GUIDE

Model	Package	Engine		
Tundra	Sport			600 ACE
Tullula	LE	000 ACL		
Skandic	LE 20 in.	600 ACE		
		900 ACE		
Skariuic	LE 24 in.	900 ACE		
	SE 20/ 24 in.	900 ACE		

TABLE OF CONTENTS

GENERAL INFORMATION

GENERAL INFORMATION	10
Know Before you Go	10
Safety Messages About this Operator's Guide Respect of the Environment BE A RESPONSIBLE RIDER	10
About this Operator's Guide	11
Respect of the Environment	12
BE A RESPONSIBLE RIDER	13
SAFETY INFORMATION	
BEFORE YOU GO	16
Operating Age and Ability	16
Drugs and Alcohol	16
Drugs and Alcohol Avalanche Safety Training Courses	16
Protective Gear	
Required Equipment	17
Required EquipmentGET FAMILIAR WITH THE SNOWMOBILE	19
Track Propulsion System	19
Steering	19
Tether Cord	20
Braking	20
Parking Brake Programmable D.E.S.S. Key	20
Programmable D.E.S.S. Key	20
Carrying Loads	
Towing Loads Towing Another Snowmobile	21
Towing Another Snowmobile	22
Accessories and Modifications	23
Traction Enhancing Products	23
RIDE SAFELY	28
Rider Position (Forward Operation) Rider Position (Reverse Operation)	28
Rider Position (Reverse Operation)	30
Riding with Passenger(s)	30
Riding Alone	31
Riding AloneRiding in a Group	31
Avoiding Collisions	32
Riding Behaviors	33
Speeding	33
Moving Parts	33
Know Terrain and Riding Variations	34
Respect of the Wildlife	38
Respect of the Wildlife Carbon Monoxide (CO) Poisoning Gasoline Fires and Other Hazards	38
Gasoline Fires and Other Hazards	39
Burns from Hot Parts	39
PRACTICE EXERCISES	40
Where to Practice Exercises	
Exercises to Practice	40

TABLE OF CONTENTS

FUELING	. 43
Fueling Procedure TRANSPORTING THE VEHICLE IMPORTANT ON-PRODUCT LABELS (CANADA/UNITED	43
TRANSPORTING THE VEHICLE	. 44
IMPORTANT ON-PRODUCT LABELS (CANADA/UNITED	
STATES)	45
Vehicle Safety Labels	45
Technical Information Labels	71
Hang Tag(s)	74
Hang Tag(s) IMPORTANT ON-PRODUCT LABELS (ALL COUNTRIES	EX-
CEPT CANADA/UNITED STATES)	. 76
Vehicle Safety Labels	76
l echnical Information Labels	107
PRE-RIDE INSPECTION	110
Before Starting the Engine	110
After Engine is Started	110
Pre-Ride Check List	111
REPORTING SAFETY DEFECTS	113
VEHICLE INFORMATION	
VEHICLE IN ORMATION	
PRIMARY CONTROLS	116
Handlebar	116
Throttle Lever (TC Throttle Lever) Except Turbo Models	116
Emergency Engine Stop Switch	119
Emergency Engine Stop Switch. Brake Lever Aluminum Reservoir Snow MY25Parking Brake Lever	121
Parking Brake Lever	123
Engine Cut-off Switch	124
SECONDARY CONTROLS	127
Handlebar Multifunction Switch	
Driving Modes	
Gearshift Lever	
Reverse Lever (if equipped)	133
Horn Button (if equipped)	133
4.5" DIGITAL DISPLAY	135
Multifunction Display Warning Lamps and Indicators	135
Warning Lamps and Indicators	137
Settings	
7.2" DIGITAL DISPLAY	141
Multifunction Display Warning Lamps and Indicators	141
Warning Lamps and Indicators	143
Settings	145
BODY AND SEAT	146
Front and Rear Bumpers	140
Windshield	148
Adjustable Mirrors (if equipped) Front Storage Compartment	151
Front Storage Compartment	153
Side PanelsUpper Body Module	103
opper body wodule	100

Seat	
EQUIPMENT	169
Operator's Guide	169
Mountain Strap	169
Mountain Strap Electric Visor Jack Connector	169
Drive Belt Guard	170
Spare Drive Belt Holder	174
Tools	176
Tools	178
Cargo Box (if equipped)	180
Cargo Box (if equipped)	182
FUEL	186
Fuel Requirements	186
Fueling Procedure	
ENGINE ÖIL	
Recommended Oil	
BREAK-IN PERIOD	190
Operation During Break-In	190
BASIC PROCEDURES MODELS WITHOUT GEARBOX	191
Engine Starting Procedure	191
Emergency Starting	191
Vehicle Warm-Up	191
Shifting in High or Low range	192
Shifting in High or Low range Shifting in Reverse	194
Shifting in Forward from Reverse	196
Shutting Off the Engine	196
SPECIAL PROCEDURES	197
General	197
GeneralRIDING CONDITIONS AND YOUR SNOWMOBILE	200
Altitude	200
Temperature	
Hard Packed Snow	
TUNE YOUR RIDE	
Rear Suspension Adjustments	
Adjustment Tips According to Vehicle Behavior	
Adjustifient hips According to Verlicle Deliavior	213
MAINTENANCE	
MAINTENANCE SCHEDULE	218
EPA Regulation - Canadian and USA Vehicles	218
Trail/ Crossover/ Utility Usage	219
Trail/ Crossover/ Utility Usage	220
MAINTENANCE PROCEDURES	225
Engine Coolant	225
Engine Oil	
Engine Oil Filter Replacement	234
Exhaust System	236
Spark Plugs	237
, 5-	

TABLE OF CONTENTS

Brake Fluid Chaincase Oil Gearbox Oil Drive Chain Drive Belt Track Suspension	. 241 . 245 . 249 . 250 . 255
Skis Fuses Headlights Battery	. 266 . 266 . 269 . 273
VEHICLE CARE Post-Operation Care Vehicle Cleaning and Protection	. 281
STORAGE Engine Internal Lubrication	. 282 . 283
PRESËASON PREPARATION	.284 .285
TECHNICAL INFORMATION	
VEHICLE IDENTIFICATION	
Vehicle Description Decal	
Identification Numbers	
COMPLIANCE LABELS	.297
EPA Compliance LabelSSCC Label	
BAT Compliance Label	
Regulation (EU) 2016/1628 applicable for Non-Road Mobile	. 200
Machineries	299
NOISE EMISSION AND VIBRATION VALUES	301
EU DECLARATION OF CONFORMITY	.302
UK DECLARATION OF CONFORMITY	303
EPA CERTIFIED ENGINES	.304
Engine Emissions Information	206
USA and Canada	306
Mexico	307
Brazil	
Japan	. 308
Europe	. 308
BRP RF DESS POST GEN3 (CAN)	.313
USA and Canada	. 313
MexicoBrazil	
Japan	
Europe	

TECHNICAL SPECIFICATIONS

ENGINE	322 323 325 327 329 329
TROUBLESHOOTING	
TROUBLESHOOTING-GUIDELINES MONITORING SYSTEM Pilot Lamps, Messages and Beeper Codes Pilot Lamps – Digital Display. Pilot Lamps, Messages and Beeper Codes Pilot Lamps – Digital Display. Fault Codes	345 4.5" 345 7.2" 349
WARRANTY	
BRP LIMITED WARRANTY USA AND CANADA: 2026 SKI-DO SNOWMOBILES. US EPA EMISSION-RELATED WARRANTY	356 360 363 MIC TES
CUSTOMER INFORMATION	
DATA PRIVACY INFORMATION CONTACT US Asia Pacific Europe, Middle East and Africa Latin America North America CHANGE OF ADDRESS/OWNERSHIP	376 376 376 377 377

This page is intentionally blank

GENERAL INFORMATION

GENERAL INFORMATION

Congratulations on your purchase of a new BRP snowmobile. Whatever model you have chosen, it is backed by the Bombardier Recreational Products Inc. (BRP) warranty and a network of authorized BRP snowmobile dealers ready to provide the parts, service or accessories you may require.

Your dealer is committed to your satisfaction. He has taken training to perform the initial set-up and inspection of your snowmobile as well as completed the final adjustment required to suit your specific weight and riding environment before you took possession.

At delivery, you were informed of the warranty coverage and signed the Pre-delivery Check List to ensure your new vehicle was prepared to your entire satisfaction.

Know Before you Go

To learn how to reduce the risk for you, your passenger or bystanders being injured or killed, read the following sections before you operate the vehicle:

- Safety Information
- Vehicle Information.

Also read all safety labels on your snowmobile and watch attentively the safety video located at:

Or, use the following QR code.



Safety Messages

This operator's guide utilizes the following symbols and words to emphasize particular information:

The safety alert symbol indicates a potential injury hazard.

A WARNING

Indicates a potential hazard which, if not avoided, could result in serious injury or death.



Indicates a hazard situation which, if not avoided, could result in minor or moderate injury.

NOTICE

Indicates an instruction which, if not followed, could severely damage vehicle components or other property.

About this Operator's Guide

This operator's guide has been prepared to acquaint the owner, operator and passenger with this snowmobile and its various controls, maintenance and safe riding instructions.

The following terminology in regards to operator, passenger and vehicle configuration is used as follows throughout this guide:

- Operator: refers to the person being behind the controls and driving the snowmobile.
- Passenger: refers to a person sitting behind the operator.
- 1-UP: refers to a model designed for an operator only.
- 2-UP: refers to a model designed to accommodate one passenger.

Keep this operator's guide in the vehicle as you can refer to it for the operation, instructing others, maintenance and troubleshooting.

Note that this guide is available in several languages. In the event of any discrepancy, the English version shall prevail.

If you want to view and/or print an extra copy of your operator's guide, simply visit the following website:

www.operatorsguides.brp.com

The information contained in this document is correct at the time of publication. BRP, however, maintains a policy of continuous improvement of its products without imposing upon itself any obligation to install them on products previously manufactured. Due to late changes, some differences between the manufactured product and the descriptions and/or specifications in this guide may occur. BRP reserves the right at any time to discontinue or change specifications, designs, features, models or equipment without incurring any obligation upon itself.

This operator's guide should remain with the vehicle when it's sold.

Respect of the Environment

The guidelines that we support are not designed to limit your snow-mobiling fun, but to preserve the beautiful freedom that you can experience only on a snowmobile! These guidelines will keep snowmobilers healthy, happy and able to introduce others to what they know and enjoy about their favorite winter pastime. So, the next time you hit the trails on a cool, crisp and clear winter day, we ask you to remember that you are paving the way for the future of our sport. Help us lead it down the right path! From all of us at BRP, thank you for doing your share.

There is nothing more exhilarating than snowmobiling. Venturing onto snowmobile trails that cross wild areas is an exciting and healthy winter sport. However, as the number of people using these recreational parks increases, so does the potential for damage to the environment. Abuse of land, facilities and resources inevitably leads to restrictions and closures of both private and public land.

In essence, the greatest threat to our sport, is all around us. Which leaves us with one logical choice. When we snowmobile, we must always ride responsibly.

The vast majority respect the law and the environment. Each of us must set an example for those who are new to the sport, young and old alike.

It is in every one's best interest to tread lightly into our recreational areas. Because, in the long run, to protect the sport we must preserve the environment

Become informed. Obtain maps, regulations and other information from the Forest Service or from other public land agencies. Learn the rules and follow them and that goes for speed limits, too!

Avoid running over young trees, shrubs, and grasses and don't cut wood. On flatlands or areas where trail riding is popular, it's important to ride only where authorized. Remember, there is a link between protecting your environment and your own safety.

Respect wildlife and be particularly sensitive of animals that are rearing young or suffering from food shortage. Stress can sap scarce energy reserves. Refrain from riding in areas where only animals are intended to tread!

Obey gate closures and regulatory signs and remember, light treaders don't litter!

Stay out of wilderness areas. They're closed to all vehicles. Know where the boundaries are.

Obtain permission to travel across private land. Respect the rights of landowners and other people's privacy. Remember, snowmobile technology has lowered the noise factor considerably, but you still shouldn't rev your engines where quiet "is the order of the day".

Snowmobilers know all too well the efforts that have been made throughout the sport's history to enjoy access to areas where people can snowmobile safely and responsibly. This effort continues today, as strong as ever.

Respecting the areas where we ride... wherever they may be... is the only way to ensure their future enjoyment. That's one major reason why we know you'll agree that Light Treading is smart sledding! And there are more.

Enjoying the opportunity to see winter and all its natural majestic wonders, is an experience cherished by snowmobilers. Light Treading will preserve this opportunity and will make it possible for us to expose others to the beauty of winter and the unique thrill of our sport! Light Treading will help our sport to grow!

Finally, Light Treading is the sign of a smart snowmobiler. You don't have to leave big tracks or careen through a virgin forest to show you can ride. So whether you're driving a high performance BRP snowmobile or any other make or model, show you know what you're doing. Show you know how to send snow flying and make tracks with a light touch!

BE A RESPONSIBLE RIDER

At BRP, we believe there's an opportunity for everyone in the powersports and marine communities to come together and rethink how we approach safety, riding etiquete, and the environment. We believe that when we empower all riders to ride responsibly—to look out for each other and safeguard our trails and playgrounds—we inspire an industry to welcome newcomers, build a more caring community and generate positive experiences.

Whether you ride on trails, roads, water or snow, BRP is committed to driving positive change. That's why we're making the Responsible Rider program a key part of our Corporate Social Responsibility initiative through action, education and community empowerment.

To learn more about Responsible Rider, including tips and tricks on safety, riding etiquette and the environment, visit **ski-doo.com/responsible-rider**. Or, use the following QR code.



It's time to take action! Join BRP, our fellow ISMA members and the entire snowmobiling community - including BRP President and CEO José Boisjoli - in taking the pledge to preserve access to our favorite winter playgrounds and snowmobile trails. You can sign the pledge at snowmobilerspledge.org

SAFETY INFORMATION

BEFORE YOU GO

A WARNING

Disregarding any of the safety precautions and instructions contained in this section could cause injury including the possibility of death.

Operating Age and Ability

Operators must be qualified. Make sure the operator is 16 or older. Your state (or province) may have additional requirements. Laws regarding the minimum age and licensing requirements vary from one jurisdiction to another. Be sure to contact the local authorities for information regarding the legal operation of a snowmobile in the intended jurisdiction of use. BRP highly recommends that you take a safety riding course. Basic training is required for the safe operation of any snowmobile.

Operation of this snowmobile with a disability that impairs vision, reaction time, judgment, or operation of the controls is not recommended. The safe use of your snowmobile depends on many conditions such as visibility, speed, weather, environment, traffic, vehicle condition and the condition of the operator. The performance of some snowmobiles may significantly exceed that of other snowmobiles you have operated. Therefore, use by novice or inexperienced operators is not recommended.

Each passenger must be able to simultaneously place both feet firmly flat against each footboard when properly seated.

Drugs and Alcohol

Never ride after consuming alcohol or drugs. Riding on a snowmobile requires the operator and passenger (s) to be sober, attentive and alcohol, singly or in combination, decreases reaction time, impedes judgment, impairs vision, and inhibits your ability to safely ride on a snowmobile.

Avalanche Safety Training Courses

We recommend that all mountain riders take a local avalanche safety training course to become more familiar with snow conditions and learn how to properly use their equipment. Here are some web sites that can help you finding important information:

- US: www.avalanche.org
- Europe: www.avalanches.org
- Canada: www.avalanche.ca

Protective Gear

Proper snowmobile clothing should be worn by all riders. It should be comfortable and not too tight. Always check the weather forecast before going on a ride. Dress for the coldest weather expected. Thermal underwear next to the skin also provides a good insulation.

Always wear an approved helmet at all times for safety and comfort. They provide both warmth and reduce injury. A stocking type cap, balaclava and face mask should always be carried or worn. Goggles or a face shield that attach to the helmet are indispensable.

Hands should be protected by a pair of snowmobile gloves or mitts which have sufficient insulation and allow use of thumbs and fingers for operation of controls.

Rubber bottom boots with either a nylon or a leather top, with removable felt liners are best suited for snowmobiling.

You should keep yourself as dry as possible when snowmobiling. When you come indoors, take your snowmobile suit and boots off and make certain they dry properly.

Do not wear a long scarf or loose apparels that could get caught in moving parts.

Carry colored lens goggles.

Required Equipment

As the owner of the snowmobile, you are responsible for ensuring that all required safety equipment is aboard. Check your local regulations about requirements.

First aid kit	Provided tool kit
Mobile phone	Knife
Spare spark plugs	Flashlight
Adhesive tape (duct tape)	Trail map
Spare drive belt	Snack
Probe*	Shovel*

BEFORE YOU GO

Avalanche bag*	-
*When riding in an area with avalanche risk	

GET FAMILIAR WITH THE SNOWMOBILE

This vehicle may exceed the performance of other vehicles you may have ridden. Take time to familiarize yourself with your new vehicle.

Inexperienced riders may overlook risks and be surprised by vehicle's specific behavior and terrain conditions. Ride slowly. Excessive speed and reckless driving can kill.

Make sure you read and understand the content of this operator's guide to become completely familiar with the controls and operation of the snowmobile before embarking on your first trip or taking on a passenger(s). If you have not had the opportunity to do so, practice driving solo in a suitable traffic-free area to become accustomed to the feel and response of each control.

It is very important to inform any operator, regardless of his experience, of the handling characteristics of this snowmobile. The snowmobile configuration, such as ski stance, ski type, suspension type, track length, width and type vary from a model to another. The snowmobile handling is greatly influenced by these characteristics.

Track Propulsion System

Your snowmobile features a track propulsion system. The track grips on the snow-covered surface and pushes the snowmobile in the opposite direction of the force applied on the surface. Stay away from the track. Personal injury will result if contact is made with the revolving track.

⚠ WARNING

Never stand behind or near a rotating track. Debris could be projected causing severe injuries.

The grip of the track will vary depending on the surface conditions. The grip may be reduced on hard-pack snow or ice. Reduce your speed and allow more space to turn. Refer to the *TRACTION ENHANCING PRODUCTS* subsection of this guide to learn how to balance the grip of the ski vs the grip of the track. If the front and rear of the snowmobile are out of balance due to an incorrect combination of traction enhancing products, the snowmobile may tend to oversteer or understeer, which could lead to a loss of control.

Steering

Skis are used to steer the snowmobile through the handlebar. The performance to steer will vary depending of the grip of the skis on the surface. Steering control ability may be reduced on hard-pack snow, ice or roads. Reduce speed and allow more space to turn. Refer to the TRACTION ENHANCING PRODUCTS subsection of this guide to learn how to balance the grip of the ski versus the grip of the track. If

the front and rear of the snowmobile are out of balance due to an incorrect combination of traction enhancing products, the snowmobile may tend to oversteer or understeer, which could lead to a loss of control.

Riding with a passenger or when carrying loads, the steering control will also be reduced. Reduce speed and allow more space to turn.

Tether Cord

Always attach tether cord eyelet to clothing before starting the engine to help ensure the engine stops should the operator fall off.

After riding, always remove the tether cord from the engine cut-off switch to avoid unauthorized use by children or others and to prevent starting in a closed environment (ex: garage).

Braking

Braking performances may vary suddenly under certain conditions. Always remember that the snowmobile braking distance may be affected when riding with a passenger and when loaded with cargo at the rear. Never jam the brake and lock the track. Be sure to use restraint in braking to keep from blocking the track in order to avoid surprises that could lead to a loss of control.

Using studs on the track will give you better braking capacity on packed snow or ice but will have no noticeable effect on soft snow. Refer to *Enhancing Traction Control Products* subsection for track studding application.

Parking Brake

Always engage parking brake before starting the engine. Parking brake should be used whenever snowmobile is parked.

Make sure parking brake is fully disengaged before operating the snowmobile. When you ride the vehicle, brake pads that are caused to drag by a continuous pressure on the lever may cause damage to the brake system and cause loss of braking capacity or fire.

Programmable D.E.S.S. Key

The Programmable D. E. S. S. Key can be programmed to limit the speed of the snowmobile and the engine torque. Enabling first time users and less experienced operators to learn how to operate while gaining the necessary confidence and control.

Visit your BRP authorized dealer to see if this accessory is available for your model.

Carrying Loads

Carrying loads affects the vehicle handling, stability and braking distance. Appropriate loading and weight distribution are therefore important.

When carrying loads it is very important to follow the recommendations:

- Never exceed the maximum cargo capacity. Refer to Safety Information on the Vehicle or Technical Specifications subsections for the applicable cargo load capacity of your snowmobile.
- Always adjust the suspensions according to the cargo load. Refer to *Tune Your Ride* subsection for more details.
- Never carry a load unless it is properly secured using a BRP LinQ certified accessory. Compatible accessories which are not BRP certified may not be considered as fit for this purpose.
- Always reduce your speed, turn gradually and allow longer braking distance when carrying loads.

⚠ WARNING

Failure to follow these recommendations when carrying or towing loads could lead to a loss of control and possibly in a tip over.

Towing Loads

Towing loads affects the vehicle handling, stability and braking distance. Appropriate loading and weight distribution are therefore important.

When towing a load it is very important to follow the recommendations:

- Always use a rigid tow bar to tow a cargo carrier or an accessory.
- Never tow a load using a rope. Using a rope would result in a collision between the load and the snowmobile and possibly in a tip over in case of a rapid deceleration or on a downward slope.
- Never tow a load by attaching it directly to the bumper. Use only
 the hitch to tow a load. Make sure that the cargo carrier hitch is
 compatible with the one on the vehicle. Use security chains or cables to secure the cargo carrier with the vehicle. Avoid excessive
 slack in the chains or cables, it could break and snap back.
- Never exceed the vehicle maximum tow capacity. Refer to Safety Information on the Vehicle or Technical Specifications subsections for the applicable towing capacity of your snowmobile.
- Never exceed the tongue weight capacity, if applicable.
- Always make sure load is evenly distributed and safely secured on the cargo carrier. Make sure there is at least some weight on the tongue, if applicable.

GET FAMILIAR WITH THE SNOWMOBILE

- Always adjust the suspensions according to the weight on the tongue, if applicable. Refer to *Tune Your Ride* subsection for more details.
- Reduce your speed and turn gradually. Avoid hills and rough terrain. Riding this vehicle with a cargo carrier substantially increases the risk of toppling, especially on inclined slopes. Never attempt steep hills.
- Allow more distance for braking, especially on inclined surfaces and when a passenger is on board. Be careful not to skid or slide.
- Use caution when disconnecting a loaded cargo carrier; its load may topple on you or others.

♠ WARNING

Failure to follow these recommendations when carrying or towing loads could lead to a loss of control and possibly in a tip over.

On vehicle equipped with a gearbox, always put the shift lever to L (low range) when towing a cargo carrier.

Any towed accessory should have reflectors on both sides and at the rear.

Check country transport regulations for brake light(s) requirements.

Towing Another Snowmobile

If a snowmobile is disabled and must be towed, in an emergency situation only, a rope can be used

- Remove the drive belt. Refer to Maintenance Procedures for more details.
- Attach the rope to the ski legs (spindles), not to the skis. If the ski legs are not accessible, attach the rope to the bumper.
- Have someone sit on the towed snowmobile to steer and activate the brake if needed.
- Tow at low speed with extra caution.

NOTICE

Always remove the drive belt of the snowmobile that is to be towed to prevent damage to its belt and drive system.

In some areas, it may be illegal to do so. Check with state or local authorities.

Accessories and Modifications

Any modifications or addition of accessories approved by BRP may affect the handling of your vehicle. It is important to take the time to get familiar with the vehicle once modifications are made to understand how to adapt your driving behavior accordingly.

Avoid installing equipment not specifically approved by BRP for the vehicle and avoid unauthorized modifications. These modifications and equipment have not been tested by BRP and may create hazards. For example, they could:

- Create a loss of control and increase risk of crash
- Cause overheating or short circuits increasing the risk of fire or burn injuries
- Affect the protection features provided by the vehicle
- Affect the behavior of the trailer when the vehicle is transported
- Cause a risk of losing objects on the road when transported.

Your vehicle may also become illegal to ride.

Ask your authorized BRP dealer for suitable available accessories for your vehicle.

For safety reasons, some BRP accessories must be installed by a BRP dealer but if you decide to install the accessory by yourself, when not required to be done by the dealer, it is important to follow all the instructions carefully and, if applicable, understand all the information on how to use the product or for servicing.

If the accessory has been installed on your vehicle by another person than you, BRP strongly recommends you to read the corresponding instruction sheet as there may be more for information on how to use it safely or for the servicing.

The instruction sheets can be found at this address:

HTTPS://INSTRUCTIONS BRP COM

Traction Enhancing Products

NOTE

This section is applicable to all snowmobile models that are either equipped with a:

- Factory installed track approved by BRP for special studs installation.
- Factory pre-studded track.

or that can received one of these tracks.

Always refer to your authorized BRP snowmobile dealer to learn more on traction enhancing products and applicability on your snowmobile.

GET FAMILIAR WITH THE SNOWMOBILE

Using traction enhancing products such as, adjustable or more aggressive ski carbide runners and / or track studs on your snowmobile will change its behavior, particularly in terms of maneuverability, acceleration, and braking.

Using traction enhancing products gives a better grip on hard packed snow and ice, but has no noticeable effect in deep snow. For this reason, driving a snowmobile equipped with traction enhancing products requires a certain adaptation period. If your snowmobile is equipped with traction enhancing products, be sure to take plenty of time to get used to the way it handles when turning, accelerating, and braking.

The use of track studs can increase the load and the stress on certain snowmobile components, as well as the vibration level. This can cause premature wear on parts such as belt, brake linings, bearings, chain, chain sprockets, and shorten track life.

Track studs can also cause serious damage to your snowmobile if it is not equipped with the appropriate tunnel protectors.

Check local regulations concerning the use of traction enhancing products on snowmobiles.

Studding an unapproved track or using unapproved studs increase the risk of the track tearing or severing

Installing track studs and tunnel protector(s) requires technical knowledge. To ensure safe and proper installation, BRP recommends to have the studs installed by your dealer.

For maintenance and replacement refer to *Track* in *Maintenance Procedures*.

Maneuverability


Using traction enhancing products such as, more aggressive ski carbide runners and/or studs makes the snowmobile grip the ground better at both the front and at the rear. The use of carbide runners is therefore required to give the skis a better grip, so that the front and rear of the snowmobile are in balance. While off-the-shelf carbide ski runners are adequate, they don't necessarily give you optimal control, since that depends on your personal preferences, your riding style, and how your suspension is adjusted.

⚠ WARNING

If the front and rear of the snowmobile are out of balance due to an incorrect combination of traction enhancing products, the snowmobile may tend to oversteer or understeer, which could lead to a loss of control.

Oversteering


In certain conditions, using more aggressive ski carbide runners without studs on the rear track could make the snowmobile prone to oversteering, see illustration.

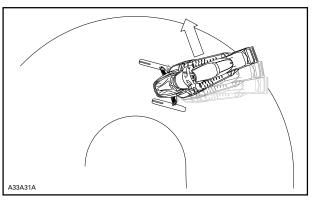

OVERSTEERING

Understeering


In certain conditions, the use of studs on the track could make the snowmobile prone to understeering if the skis are not equipped with more aggressive ski carbide runners, see illustration.

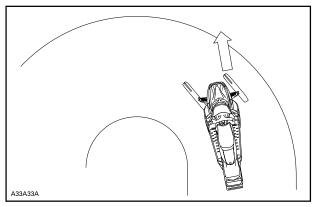

UNDERSTEERING

Controlled Driving

A balanced combination of carbide ski runners and studs on the track ensures adequate control and better handling, see illustration.

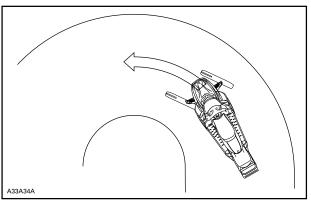

CONTROLLED DRIVING

Acceleration

Using studs on the track will allow your sled to accelerate better on packed snow and ice but will have no noticeable effect on soft snow. This can cause sudden variations in traction under certain conditions.

Always go easy on the throttle and never try to spin the track to make the rear of the snowmobile skid. This could cause debris or ice to be thrown violently backwards, possibly injuring others nearby or on snowmobiles behind you.

Braking

As in the case of acceleration, using studs on the track will give you better braking capacity on packed snow or ice but will have no noticeable effect on soft snow. Braking may thus vary suddenly under certain conditions. Be sure to use restraint in braking to keep from blocking the track in order to avoid surprises that could lead to a loss of control.

RIDE SAFELY

Rider Position (Forward Operation)

Your riding position and balance are the two basic principles of making your snowmobile go where you want it to. When turning on the side of a hill, you and your passenger must be ready to shift body weight to help it turn in the desired direction. Operator and passenger must never attempt this maneuvering by placing feet outside of the vehicle. Experience will teach you how much lean to put into turns at different speeds and how much you will have to lean into a slope to maintain proper balance.

Generally, the riding position for best balance and control is sitting. However, the posting, kneeling or standing positions are also used under certain conditions.

A WARNING

Do not attempt any maneuvers if they are beyond your abilities.

Sitting

Feet on the running boards, body midway back on seat is an ideal position when operating the snowmobile over familiar, smooth terrain. Knees and hips should remain flexible to absorb shocks.



Posting

A semi-sitting position with the body off the seat and the feet under the body in a sort of squatting posture, thus allowing the legs to absorb the shocks when traveling over uneven terrain. Avoid abrupt stops.



Kneeling

This position is achieved by placing one foot firmly on the running board and the opposite knee on the seat. Avoid abrupt stops.



Standing

Place both feet on the running boards. Knees should be flexed to absorb the shock from surface bumps. This is an effective position to see better and to shift weight as conditions dictate. Avoid abrupt stop.



Rider Position (Reverse Operation)

When operating in reverse:

- Ensure the path behind is clear of obstacles or bystanders before proceeding in reverse.
- BRP recommends sitting on your snowmobile when operating in reverse
- Avoid standing up. Your weight could shift forward against throttle lever while operating in reverse, causing an unexpected acceleration. Unexpected acceleration when snowmobile operates in reverse can cause a loss of control.

Fast reverse while turning, could result in loss of stability and control.

Riding with Passenger(s)

This vehicle is designed for one (1) operator and as many passengers as there are seats with straps or handholds installed on the vehicle conforming to SSCC standards. Passenger must only sit on designated passenger seat.

⚠ WARNING

- Never carry a passenger on a seat not approved by BRP.
- Never allow anyone to sit between the handlebar and the operator.

Even when a passenger is allowed, this person must be physically fit for snowmobiling.

Any passenger must always be able to firmly lay his feet on the footrests and keep his hands on the handholds or seat strap when seated. Respecting those physical criteria is important to ensure that the passenger is stable and to reduce the risks of ejection. Falls can result in severe injury or death.

The operator has a responsibility to ensure the safety of his passenger and should inform the passenger about snowmobiling basics.

Before riding the vehicle, adjust suspension according to weight. Refer to *Tune Your Ride* subsection for more details.

Ask your passenger to inform you to slowdown or stop immediately if he feels uncomfortable or insecure during the ride.

When going over bumps, riders(s) may raise their body slightly off the seat to absorb the shocks with their legs.

An unforeseen bump can leave you passenger-less. Remind your passenger to lean into the turn with you, without causing the vehicle to topple. Be extremely careful, go more slowly and check the passenger frequently. Keep a watchful eye on your passenger while riding.

Braking ability and steering control are reduced when riding with a passenger. Decrease speed and allow extra space to maneuver.

Riding Alone

Venturing out alone with your snowmobile could also be hazardous. You could run out of fuel, have an accident, or damage your snowmobile. Remember, your snowmobile is capable of traveling further in half an hour than you may be able to walk in a day. Use the "buddy system". Always ride with a friend or member of your snowmobile club. Even then, tell someone where you are going and the approximate time you plan to return.

Riding in a Group

Before starting out, designate a "trail boss" to lead the party and another person to follow-up at the end of the party. Ensure that all members of the party are aware of the proposed route and destination. When riding with others, limit your abilities to the experience of others. Never overtake the trail boss or, for that matter, any other snowmobile. Use down-the-line hand signals to indicate hazards or intent of direction change. It's important to keep a safe distance between each snowmobile but each one behind the leader should know the position of the machine ahead

Light Signals

As an alternative to the hand signals, a light signal system can be installed on your snowmobile. Whether it is an OEM or after-sales system, it consists basically in a 2 colors LED light that signals you are followed by other riders, or you are the last rider. Last rider of the group does not mean that no other snowmobile from another group is coming. Always be careful.

Visit you BRP snowmobile dealer for more information.

MODE 1 : DEFAULT.	WHITE light
MODE 2 : CAUTION, RIDERS BEHIND ME.	AMBER (LEFT SIDE ONLY) light
MODE 3: BEWARE, I'M THE LAST SLED IN THE GROUP , OR ALONE.	GREEN light
MODE 4 : CAUTION, THERE'S A HAZARDOUS SITUATION, OR BEWARE, I'VE STOPPED.	AMBER (BOTH SIDES FLASHING) light
MOUNTED ON HANDLEBAR	MOUNTED ON HANDLEBAR

Avoiding Collisions

Wherever riding your vehicle always be on the look-out for the unexpected. Operate defensively. Scan constantly for people, objects, conditions and upcoming vehicles. In the trail, always stay on the appropriate side - as per country regulation - to avoid collision, especially when the field of vision is reduced. E.g.: Before a hilltop and a curve. Use extra caution whenever off-trail.

Always keep a safe distance from other snowmobiles and bystanders. Tailgating another snowmobile should be avoided. If the snowmobile in front of you slows for any reason, its operator and passenger could be harmed through your neglect. Maintain a safe stopping distance between you and the snowmobile in front of you. Depending on the terrain condition, stopping may require a little more space than you think. Play it safe. Be prepared to use evasive driving.

On land or water, fog or visibility-limiting snow can form. If you must proceed into the fog or heavy snow, do so slowly with your lights on and watch intently for hazards. If you are not sure of your way, do not proceed. Keep a safe distance behind other snowmobilers to improve visibility and reaction time.

Riding Behaviors

Injury or death may result to the snowmobile operator, passenger or bystander if the snowmobile is used in risky conditions which are beyond the operator's, passenger's or snowmobile's capabilities or intended use.

Remember, promotional material may show risky maneuvers performed by professional riders under ideal and controlled conditions. You should never attempt any such risky maneuvers if they are beyond your level of riding ability.

Jumping can be a hazardous situation. It requires practice and should be done in a known and controlled environment. Never attempt jumping in a trail. A loss of control could lead to an impact with different elements like rock or tree, or with another snowmobile. When jumping be prepared for landing to absorb the shock. Brace yourself for the impact and your knees must be flexed to act as shock absorbers.

Also, an uneven or mined surface in the trail could be enough to kick upward the snowmobile and generate an impact or a loss of control. When "gunning" the throttle, the vehicle digs into and leaves an irregular snow surface for others. So protect the other users by not spinning the track in the middle of the trail

Speeding

Excessive speed and reckless driving can be fatal. Always adjust your speed according to snow conditions and circumstances. In many cases, you cannot react or respond quickly enough to the unexpected. Always ride at a speed which is suitable to the trail, weather conditions and your own ability. Know your local rules. Speed limit may be in effect and meant to be observed.

Moving Parts

Stay away from the track. Personal injury will result if contact is made with the rotating track.

RIDE SAFELY

To prevent serious injury to individuals near the snowmobile:

- Never stand behind or near a moving track
- Always use a wide-base snowmobile stand with a rear deflector panel if it is necessary to rotate track
 When the track is raised off the ground, only run it at the lowest
- When the track is raised off the ground, only run it at the lowest possible speed. Centrifugal force could cause debris, damaged or loose studs, pieces of torn track, or an entire severed track to be violently thrown backwards out of the tunnel with tremendous force
- Never operate the engine without the belt guard securely installed
- Never operate the vehicle without the brake disk guard securely installed
- Never operate the vehicle with the side panels opened, or the hood removed

Know Terrain and Riding Variations

Groomed Trail

On a maintained trail, sitting is the most preferred riding position. Do not race and, above all, keep to the right hand side of the trail. Be prepared for the unexpected. Observe all trail signs. Do not zigzag from one side of the trail to the other.

Ungroomed Trail

Unless there has been a fresh snowfall you can expect "washboard" and snowdrift conditions. Taken at excessive speeds, such conditions can be physically harmful. Slow down. Hold on the handlebar and assume a posting position. Feet should be under the body assuming a crouched position to absorb any jarring effect. On longer stretches of "washboard" trails, the kneeling position of one knee on the seat can be adopted. This provides a certain amount of comfort, while at the same time keeps the body loose and capable of vehicle control. Beware of hidden rocks or tree stumps partially hidden by a recent snowfall.

Deep Snow

In deep "powder" snow, your vehicle could begin to "bog" down. If this occurs, turn in as wide an arc as possible and look for a firmer base. If you do get "bogged", and it happens to everyone, do not spin your track as this makes the vehicle sink deeper. Instead, turn the engine off, get off and move the back of the vehicle onto new snow. Then tramp a clear path ahead of the vehicle. A few feet will generally suffice. Restart the engine. Assume the standing position and rock the vehicle gently as you steadily and slowly apply the throttle. Depending on whether the front or rear end of the vehicle is sinking, your feet should be placed on the opposing end of the running boards. Never place foreign material beneath the track for support. Do not allow anyone to stand in front of, or to the rear of, the snowmobile with the

engine running. Stay away from the track. Personal injury will result if contact is made with the revolving track.

Frozen Water

Traveling frozen lakes and rivers can be fatal. Avoid waterways. If you are in an unfamiliar area, ask the local authorities or residents about the ice condition, inlets, outlets, springs, fast moving currents or other hazards. Never attempt to operate your snowmobile on ice that may be too weak to support you and the vehicle. Operating a snowmobile on ice or icy surfaces can be very dangerous if you do not observe certain precautions. The very nature of ice is foreign to good control of a snowmobile or any vehicle. Traction for starting, turning or stopping is much less than that on snow. Thus, these distances can be multiplied manyfold. Steering is minimal, and uncontrolled spins are an ever present danger. When operating on ice, drive slowly with caution. Allow yourself plenty of room for stopping and turning.

Slush

Slush should be avoided at all times. Always check for slush before starting across any lake or river. If dark spots appear in your tracks, get off the ice immediately. Ice and water can be thrown rearward into the path of a following snowmobile. Getting a vehicle out of a slush area is strenuous and in some cases, impossible.

Uphill

There are two types of hills you can encounter — the open hill on which there are few trees, cliffs or other obstacles, and a hill that can only be climbed directly. On an open hill, the approach is to climb it by side hilling or slaloming. Approach at an angle. Adopt a standing position with both feet on the same running board. Keep your weight on the uphill side at all times. Maintain a steady, safe speed. Continue as far as you can in this direction, then switch to an opposite hill angle and riding position.

A direct climb could present problems. Choose the standing position, accelerate before you start the climb and then reduce throttle pressure to prevent track slippage.

In either case, vehicle speed should be as fast as the incline demands. Always slow down as you reach the crest. If you cannot proceed further, don't spin your track. Apply the parking brake, turn the engine off, free the skis by pulling them out and downhill, place the rear of the snowmobile uphill, restart the engine, release the parking brake and ease it out with slow even throttle pressure. Position yourself to avoid tipping over, then descend.

Downhill

Downhill driving requires that you have full control of your vehicle at all times. On steeper hills, keep your center of gravity low and both hands on the handlebar. Maintain slight throttle pressure and allow the machine to run downhill with the engine operating. If a higher than safe speed is reached, slow down by braking but apply the brake with frequent light pressure. Never jam the brake and lock the track.

Side Hill

When crossing a side hill or traversing up or downhill, certain procedures must be followed. All riders should lean towards the slope as required for stability. The preferred operating positions are the standing position, with both feet on the running board that is facing uphill. Be prepared to shift your weight quickly as needed. Side hills and steep slopes are not recommended for a beginner or a novice snowmobiler.

Avalanche Hazard

When riding on mountainous terrain, you should be aware of the risk of avalanches. Avalanches vary in size and shapes and generally occur in steep terrain and on unstable snow.

New snow, animals, people, wind and snowmobiles can all trigger an avalanche. Avoid high marking or traversing steep terrain when avalanche conditions are possible. When in unstable snow conditions, travel should be restricted to lower angle slopes. Wind formed cornices should be avoided. Staying off unstable conditions is the key to safe mountain riding. Probably most important is to be aware of the conditions and dangers on a daily basis when in the mountains. Check local avalanche forecasts and threats each day before heading out to ride and heed forecasters advice.

You should always carry a snow shovel, probe and avalanche beacon while riding on mountains.

Bright Sunshine

Bright sunny days can considerably reduce your vision. The glare from sun and snow may blind you to the extent that you cannot easily distinguish ravines, ditches or other obstacles. Goggles with colored lenses should always be worn under these conditions.

Night Rides

The amount of natural and artificial light at a given time can affect your ability to see or to be seen. Be extra cautious. Drive at speeds that will allow you to stop in time when you see an unknown or dangerous object ahead. Stay on established trails and never operate in unfamiliar territory. Be sure both headlights and taillight are working and clean.

Unfamiliar Territory

Whenever you enter an area that is new to you, drive with extreme caution. There may be obstructions hidden beneath the snow. Go slow enough to recognize potential hazards such as fences or fence posts, brooks crossing your path, rocks, sudden dips, guy wires and countless other obstacles which could result in a termination of your snow-mobile ride.

Driving off established trails and in the woods requires reduced speed and increased vigilance. Driving too fast in an area can make even minor obstacles very hazardous. Even hitting a small rock or stump could throw your snowmobile out of control and cause injury to its riders. Even when following existing tracks, be cautious. Travel at a speed so you can see what is around the next bend or over the top of the hill.

Hidden Wires

Always be on the lookout for hidden wires, especially in areas that may have been farmed at one time or another. Too many accidents have been caused by running into wires in the fields, guy wires next to poles and roads, and into chains and wires used as road closures. Slow speeds are a must.

Riding Uneven Surfaces

Unplanned jumps of snowdrifts, snowplow ridges, culverts, indistinguishable objects or sudden drop in the trail can be dangerous. You can avoid them by wearing the proper color lenses or face shields and by operating at a lower speed.

A good way to help seeing these terrain variations is to wear the proper color lenses or face shields and by operating at a lower speed. Crouch (stand) towards the rear of the vehicle and keep the skis up and straight ahead. Apply partial throttle and brace yourself for the impact. Knees must be flexed to act as shock absorbers.

Road Crossing

Your snowmobile is not designed to operate or turn on pavement of public streets, roads or highways. Avoid road traveling. If you must do so, and it is permitted, reduce speed and stay on the edge of the way where you can find snow to help providing capabilities to maintain directional control.

As snowmobile trails often cross roadways it is important for riders to know the proper crossing procedures. When approaching a roadway, signal to others that you are stopping at the intersection and slowly come to a complete stop back from the road's edge. In some cases, you will be approaching the road from a ditch or snowbank. Choose a place where you know you can climb without difficulty. Stop completely at the top of the bank and wait for all traffic to clear. Then, look

carefully in both directions before crossing at a 90° angle. If needed, assume a standing position to look both ways. Be wary of parked vehicles. When you are certain that the road is clear proceed straight across the intersection without hesitation. Each rider needs to come to a complete stop, look both ways and then proceed when the roadways is clear of oncoming traffic.

Railroad Crossing

Never ride on railroad tracks. It is illegal. Railroad tracks and railroad rights-of-way are private property. A snowmobile is no match for a train. Before crossing a railroad track, stop, look and listen.

Respect of the Wildlife

Wildlife compliments your snowmobiling day. Snowmobile tracks provide firm ground over which animals can travel from area to area. Do not violate this privilege by chasing or harassing wildlife. Fatigue and exhaustion can lead to animal's death. Avoid areas posted for the protection or feeding of wildlife. If you happen to be fortunate enough to see an animal, stop your snowmobile and observe quietly.

Carbon Monoxide (CO) Poisoning

All engine exhaust contains carbon monoxide (CO), a deadly gas. Breathing carbon monoxide can cause headaches, dizziness, drowsiness, nausea, confusion and eventually death.

Carbon monoxide is a colorless, odorless, tasteless gas that may be present even if you do not see or smell any engine exhaust. Deadly levels of carbon monoxide can collect rapidly, and you can quickly be overcome and unable to save yourself. Also, deadly levels of carbon monoxide can linger for hours or days in enclosed or poorly ventilated areas.

If you experience any symptoms of carbon monoxide poisoning, leave the area immediately, get fresh air and seek medical treatment.

To prevent serious injury or death from carbon monoxide:

- Never run the vehicle in poorly ventilated or partially enclosed areas such as garages, carports or barns. Even if you try to ventilate engine exhaust with fans or open windows and doors, carbon monoxide can rapidly reach dangerous levels.
- Never run the vehicle outdoors where engine exhaust can be drawn into a building through openings such as windows and doors.
- Never stand next to the vehicle while the engine is running. A person standing next to the vehicle when the engine is running may inhale high concentrations of exhaust fumes.

After riding, always remove the tether cord from the engine cut-off switch to avoid unauthorized use by children or others and to prevent starting in a closed environment (ex: garage).

Gasoline Fires and Other Hazards

Gasoline is extremely flammable and highly explosive. Fuel vapors can spread and be ignited by a spark or flame many feet away from the engine. To reduce the risk of fire or explosion, follow these instructions:

- Use only an approved gasoline container to store fuel.
- Strictly adhere to instructions in Vehicle Fueling Procedure.
- Never start or operate the engine if the fuel cap is not properly installed.
- Use only a BRP approved LinQ fuel caddy to carry extra fuel on the vehicle. It should be properly installed and secured.

Gasoline is poisonous and can cause injury or death.

- Never siphon gasoline by mouth.
- If you swallow gasoline, get any in your eye or inhale gasoline vapor, visit your doctor immediately.
- If gasoline spills on you, wash with soap and water and change your clothes.

Burns from Hot Parts

Certain components may become hot during operation. Avoid contact during and shortly after operation to avoid burns.

PRACTICE EXERCISES

Practice alone the following exercises after having done the entire Pre-ride inspection. Always start and stop the engine according to the instructions in ENGINE STARTING PROCEDURE and SHUTTING OFF THE ENGINE in BASIC PROCEDURES. Don't forget to attach the tether cord to your jacket.

Where to Practice Exercises

Find a suitable area to practice the exercises. Ensure the area meet the following requirements:

- No traffic
- No obstacles
- Hard packed snow
- Ample space to maneuver.

Exercises to Practice

Practice alone the following exercises after having done the entire Pre-ride inspection. Always start and stop the engine according to the instructions in ENGINE STARTING PROCEDURE and SHUTTING OFF THE ENGINE in BASIC PROCEDURES. Don't forget to attach the tether cord to your jacket.

Using the Emergency Engine Stop Switch

Purpose: Become familiar with the operation of throttle lever and to become familiar with using the engine stop switch.

Directions:

- With the parking brake engaged, start the engine and let idle until it reaches the operation temperature.
- Use the engine stop switch to shut the engine off. Press the switch with your right thumb while keeping your hand on the handgrip.
- Restart the engine and repeat the exercise. No idle time is required.

Tips for additional practice:

- Press the emergency engine stop switch without looking at it.

Starting, Stopping and Basic Handling

Purpose:

- Learn throttle control and how to get the vehicle moving.
- Become familiar with low speed deceleration and braking.

If you feel like you are losing control while doing this exercise, release the throttle to stop accelerating and apply the brake as needed to slow down. You can also use the engine stop switch to cut power entirely.

Directions: At first, you will only use the throttle for a moment at a time, then release it and coast.

- Start the engine and release the parking brake lever.
- Slowly apply throttle until the vehicle starts to creep forward. As soon as you start moving release the throttle and coast, then press the brake lever to stop.
- Continue with this part of the exercise until you are comfortable with applying and releasing the throttle.

Engine Stop While in Motion

Purpose: Become familiar with using the emergency engine stop switch when in motion so you know how the vehicle will react if you need to use it later.

Directions:

- Partway down the straightaway, while operating at 8 km/h (5MPH), toggle the engine stop switch to OFF position and coast to a stop.
- Restart the engine and repeat the exercise. Try increasing your speed (to a maximum of 20 km/h (12MPH) before using the engine stop switch.

In an emergency, the snowmobile engine can be stopped by pressing down on the emergency engine stop switch or by pulling the tether cord cap from the engine cut-off switch, while applying brake.

Basic Turns

Purpose: Get comfortable turning in a controlled manner on both sides.

Directions:

- Roll in a straight line at low speed and make a wide arcing turn.
 Make sure there is enough space to perform the entire turn.
- Repeat right and left turns and maintain a steady speed bellow 8km/h (5MPH). Hold the throttle to maintain your low speed.
- Leaning forward and into the curve may help you to turn the handlebar more easily.

Quick Stops

Purpose:

- Become familiar with the vehicle braking ability.
- Learn to apply brakes with maximum efficiency.

This exercise is like what you did before, except you'll be applying the brake more firmly, working up to braking at the maximum without locking the track rotation. Always release the throttle completely for quick stops. If you apply throttle and brake at the same time, your stopping distance will be longer.

'n	re	^t	11	۱n	c.

PRACTICE EXERCISES

- Start at one end of the straightaway and accelerate to 8 km/h (5MPH). Partway down the straightaway, release the throttle completely and brake quickly.
- Keep head and eyes up, keep handlebar straight, and do not release the brake until fully stopped.
- Repeat, increasing your speed and braking harder. When you feel
 that the rotation of the track will be stopped you need to release
 the pressure on the break lever. To maintain control, you need to
 keep the track in rotation.

Operating in Reverse

Purpose: Become familiar with the vehicle handling and turning radius in reverse.

Directions:

- Shift into reverse and remain seated. Refer to SHIFTING IN RE-VERSE in BASIC PROCEDURES.
- Check that the area behind you is clear. While looking backwards, slowly reverse and stop by releasing throttle and using the brake, just like when operating normally.
- Keep your speed low and do not back up for long distances.
- Repeat the reverse and stop in straight line until you get comfortable.
- Once you are comfortable with reversing in straight line, you can slowly reverse while turning the handle bar.

FUFLING

Fuel is flammable and explosive under certain conditions.

- Never use an open flame to check fuel level.
- Never smoke or allow flame or spark in vicinity.
- Always proceed in a well-ventilated area.

Fueling Procedure

- Stop engine and engage the parking brake.
- 2. Have operator and passenger get off the vehicle. Do not sit or lean on seat when fuel tank cap is not properly installed.
- 3. Unscrew slowly the fuel reservoir cap counterclockwise to stabilize pressure before removing it.

NOTE:

A short whistling sound is normal.

- Insert the spout into the filler neck.
- Pour fuel slowly so that air can escape from the tank and prevent fuel flow back. Be careful not to spill fuel.
- 6. Stop filling after the release of the gas pump nozzle handle and wait a moment before removing the spout. Do not retract the gas pump nozzle to put more fuel into the fuel tank. **Do not overfill**.

 7. Reinstall the fuel cap and fully tighten clockwise.
- 8. Always wipe off any small fuel spillage from the vehicle. If a major spillage occurs, remove side panels to remove fuel vapors from engine compartment before starting.
- 9. Before getting on the way don't forget to disengage the parking brake.
- 10. Never top up the fuel tank before placing the vehicle in a warm area. As temperature increases, fuel expands and may overflow.

TRANSPORTING THE VEHICLE

Make sure that oil reservoir and fuel tank caps are properly installed.

Many type of trailer can be used to transport a vehicle. Tilt-bed, flatbed or enclosed trailers, no matter the trailer used, always proceed with precaution when driving the vehicle on and off of it.

Always anchor the vehicle securely, front and rear, even on short hauls. Use appropriate tie-down straps only. Make sure all equipment is securely fastened. Cover the vehicle to prevent road grime from causing damage.

Make sure the trailer meets state or provincial requirements. Ensure the hitch and safety chains are secured, and the brake, turn indicators and clearance lights are functional.

A WARNING

Make sure all seats, accessories and cargo are properly secured, or remove it to prevent from falling on the road and creating a hazard for following vehicles.

A WARNING

Do not tow the vehicle facing backwards. If the vehicle is towed facing backwards, the wind may cause damage to the windshield or even loss of the windshield.

IMPORTANT ON-PRODUCT LABELS (CANADA/UNITED STATES)

Vehicle Safety Labels

These labels are affixed to the vehicle for the safety of the operator, passenger or bystanders.

The following labels are on your vehicle and they should be considered permanent parts of the vehicle. If missing or damaged, the decals can be replaced free of charge. Visit an authorized BRP snowmobile dealer.

NOTE:

In the event of any discrepancy between this guide and the vehicle, the safety labels on the vehicle have precedence over the labels in this guide.

Pulley Guard and Drive Pulley Tightening Torque - Warning and Notice Label

A WARNING / AVERTISSEMENT This guard must ALWAYS be in place when the engine is running. Beware of rotating parts, they could

cause injuries or catch your clothing.

De protecteur doit TOUJOURS être en place lorsque le noteur tourne, les pièces en rotation peuvent provoquer des blessures ou prendre dans vos vêtements.


NOTICE

Drive pulley bolt recommended torque:

115-125 Nm (85-92 lbfst)


Not applying the recommended torque may result in a major failure of the drive pulley and the engine. Refer to the shop manual for the complete assembly procedure.

PULLEY GUARD AND DRIVE PULLEY TIGHTENING TORQUE – WARNING AND NOTICE LABEL

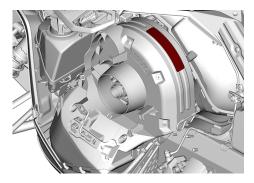

Do Not Open When Hot - Warning Label



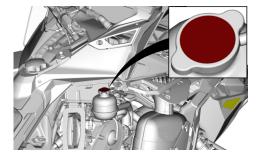


IMPORTANT ON-PRODUCT LABELS (CANADA/UNITED STATES)

Do Not Open When Hot - Warning Label

A WARNING

Do not open when hot.



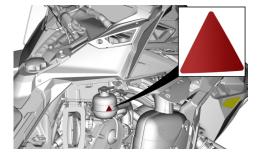


Beware of Hot Parts - Caution Label


A CAUTION

Beware of hot parts.



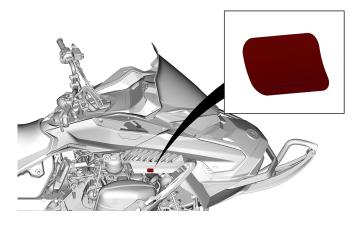

IMPORTANT ON-PRODUCT LABELS (CANADA/UNITED STATES)

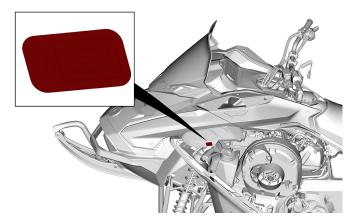

Engine Oil Level - Caution Label

ACAUTION

Engine oil and certain components in the engine compartment may be hot. Direct contact may result in skin burn.

Checking engine oil level:

- Make sure the engine is at operating temperature.
- Vehicule must be level to perform verification.
- · Let the engine run at idle for at least 30 seconds.
- Stop the engine and wait 30 seconds.
- · Check the oil level using the dipstick.

The engine of this snowmobile has been developed and validated using the BRP XPS™ Synthetic 4-stroke oil. BRP recommends the use of its XPS™ approved lubricant or equivalent. Damages caused by oil which is not suitable for this engine may not be covered by BRP limited warranty. See operator's quide for more information.

ENGINE OIL LEVEL - CAUTION LABEL




INSIDE THE LH SIDE PANEL

Disk Guard - Warning Label

AWARNING This guard must always be in place except when servicing.

DISK GUARD - WARNING LABEL

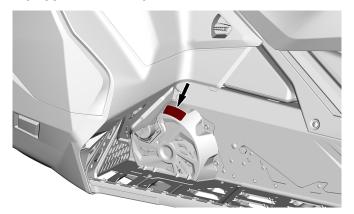


400 mm (16 in.) Tunnel Width

Starting Procedure - Warning Label



STARTING PROCEDURE - WARNING LABEL

IMPORTANT ON-PRODUCT LABELS (CANADA/UNITED STATES)

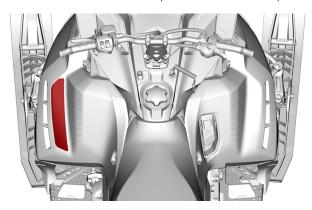

Passenger Safety - Warning Label



PASSENGER SAFETY - WARNING LABEL

IMPORTANT ON-PRODUCT LABELS (CANADA/UNITED STATES)



LABEL LOCATION

Maximum Cargo Load and Towing Capacity – Warning Label


AWARNING

Never sit in cargo area

Exceeding maximum cargo load may affect steering control, braking ability and cause permanent damage.

Maximum cargo load (including tongue weight): 25 kg (55 lb) 245 N Maximum towing capacity: 260 kg (573 lb) 2550 N

TYPICAL CARGO AREA – WARNING LABEL

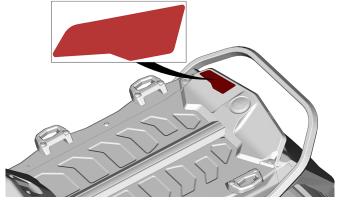


LABEL LOCATION

Rotating Track - Warning Label

Never stand behind or near a rotating track. Debris could be projected causing severe injuries. Before removing packed snow/ice, stop engine, tilt and hold vehicle on the side.

ROTATING TRACK - WARNING LABEL

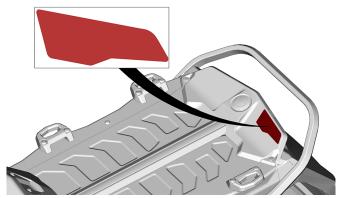

LABEL LOCATION

500 and 600 mm (20 and 24 in.) Tunnel Width

Starting Procedure - Warning Label

A WARNING

- Read and understand all safety labels, locate and read operator's guide and watch the safety video (using the QR code link or visit Ski-Doo web site) before operation.
- Get familiar with your vehicle. Inexperienced riders may overlook risks and be surprised by vehicle's specific behavior and terrain conditions. Ride slowly.
 - Excessive speed and reckless driving can kill.
- ALWAYS adjust your speed according to snow conditions and circumstances.
- Steering control and braking ability may be reduced on hard-pack snow, ice or roads. Reduce speed & allow more space to stop or turn.
- Respect laws on minimum operator age. Manufacturer recommends a minimum operating age of 16 years old.
- Never open side panels or hood while engine is running or if vehicle is in motion. Ensure to remove tether cord from post before opening those.

BEFORE STARTING:

- 1. Attach tether cord to your clothing.
- Check proper operation of the throttle and brake levers each time before starting. They must return to their initial position when released.
- 3. Apply parking brake.
- 4. Turn handlebars all the way in both directions to check for interference and insure free operation.

AFTER STARTING :


- 1. Pull-out tether cord to check if engine shuts off
- 2. Re-start and push in the emergency engine stop switch to check if engine shuts off.
- 3. Disengage parking brake before riding to avoid brake fading.





STARTING PROCEDURE - WARNING LABEL

IMPORTANT ON-PRODUCT LABELS (CANADA/UNITED STATES)

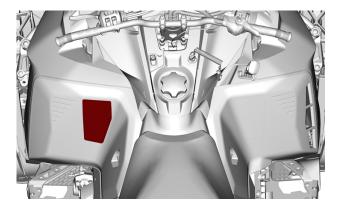


Passenger Safety - Warning Label



PASSENGER SAFETY - WARNING LABEL

IMPORTANT ON-PRODUCT LABELS (CANADA/UNITED STATES)

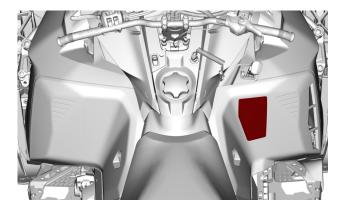


Passenger Seat - Warning Label

AWARNING

To reduce the risk of severe injury or death.
BEFORE riding, ALWAYS make sure that the latch on each side of the seat or the accessory is fully engaged.


PASSENGER SEAT - WARNING LABEL

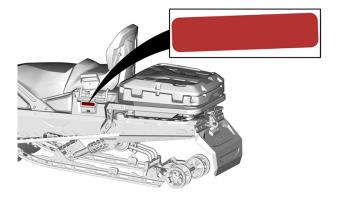

Rear Storage Compartment - Warning Label



REAR STORAGE COMPARTMENT - WARNING LABEL

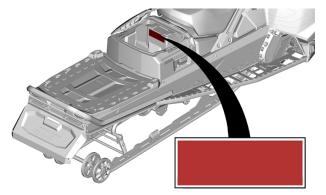


TYPICAL

Molded Safety Pictogram

A WARNING

Never carry passengers on the rear storage compartment.



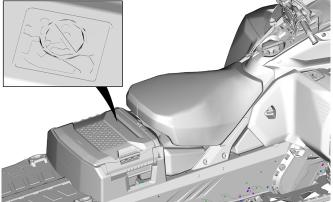


Maximum Cargo Load and Tongue Weight Capacity — Warning Label

AWARNING

Never sit in cargo area

Avoid losing control of the vehicle.


- Reduce your speed when carrying cargo.
- · Always adjust suspension according to cargo load.
- MAXIMUM cargo load : 57 kg (125 lb) 556 N (including tongue weight)
- Maximum tongue weight : 16 kg (35 lb) 156 N

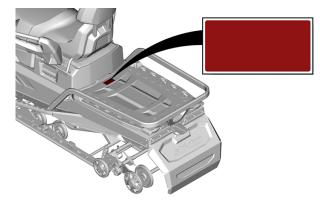

Maximum Towing Capacity - Warning Label



MAXIMUM SPECIFICATIONS - WARNING LABEL

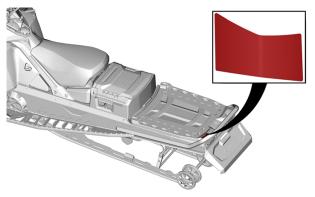


LABEL LOCATION — TYPICAL

Rotating Track - Warning Label



ROTATING TRACK - WARNING LABEL

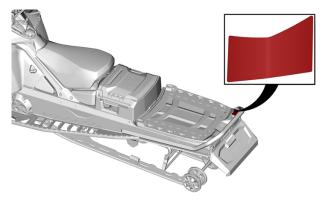

LABEL LOCATION — TYPICAL

Rear Cargo Box - Warning Label


AWARNING

- Exceeding maximum cargo load may affect steering control, braking ability and cause permanent damage.

- For maximum cargo load specification, refer to the Operator's Guide.

- Never exceed a cargo load of 20 kg (44 lb) on the lid.

REAR CARGO BOX (OUTSIDE) - WARNING LABEL

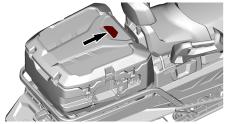

LABEL LOCATION

Rear Cargo Box - Warning Label

A WARNING

- NEVER carry a child or pet in this cargo box. The cargo box is airtight which can lead to suffocation.
- NEVER carry flammables or dangerous liquids inside the cargo box. If ignited, this can lead to an explosion and cause severe injury of death.
- NEVER exceed the cargo load capacity of your vehicle.
- For maximum cargo load specification, refer to the Operator's Guide.
- Never carry more than 20 kg (44 lb) on the lid of the box.
- Max cargo load capacity of the box = 48 kg (105 lb), including cargo load on the lid.
- -Refer to the instruction sheet of this cargo box for the installation of the LinQ Anchor on the lid.

REAR CARGO BOX (INSIDE) - WARNING LABEL




LABEL LOCATION


Technical Information Labels

Adjustment Tools Label

- Install suspension adjustment tool first. (Illustrated red on label) Install pulley expander and Headlight adjustment tool second. (Illustrated blue on label)
- Refer to Tools in Equipment.

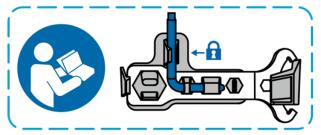

ADJUSTMENT TOOLS

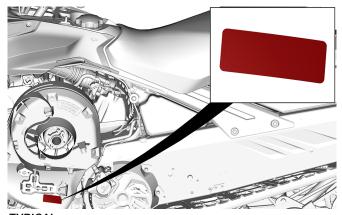

TYPICAL

IMPORTANT ON-PRODUCT LABELS (CANADA/UNITED STATES)

Recommended Fuel - Notice Label

Refer to the *Technical Specifications* for appropriate fuel type for your vehicle engine.




AKI (RON+MON)/2 OCTANE RATING - NOTICE LABEL



RON OCTANE RATING - NOTICE LABEL

IMPORTANT ON-PRODUCT LABELS (CANADA/UNITED STATES)

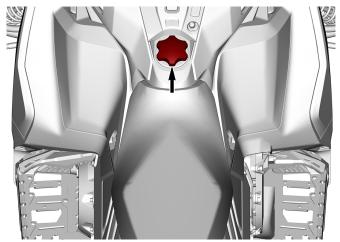

TYPICAL

Hang Tag(s)

EPA Certified Hang Tag

VEHICLE MODEL NAME:

ENGINE DESCRIPTION:

EPA CERTIFIED

NER (NORMALIZED EMISSION RATE) = ON 0 TO 10 SCALE, 0 BEING THE CLEANEST.

BOMBARDIER RECREATIONAL PRODUCTS INC
*NO TO BE REMOVED PRIOR SALE.



MODÈLE DU VÉHICULE:

DESCRIPTION DU MOTEUR:

EPA CERTIFIÉ

TEN (TAUX D'EMISSION NORMALISÉ) =
SUR UNE ÉCHELLE DE 0 À 10, 0 ÉTANT LE PLUS PROPRE.

BOMBARDIER PRODUITS RÉCRÉATIFS INC.

*NE PAS ENLEVER AVANT LA VENTE.

9197



California Proposition 65 Warning

AWARNING: Operating, servicing and maintaining a passenger vehicle or off-highway motor vehicle can expose you to chemicals including engine exhaust, carbon monoxide, phthalates, and lead, which are known to the State of California to cause cancer and birth defects or other reproductive harm. To minimize exposure, avoid breathing exhaust, do not idle the engine except as necessary, service your vehicle in a well-ventilated area and wear gloves or wash your hands frequently when servicing your vehicle. For more information, go to www.P65Warnings.ca.gov/passenger-vehicle.

▲WARNING: Battery posts, terminals and related accessories contain lead and lead compounds, which are known to the State of California to cause cancer and birth defects or other reproductive harm. To minimize exposure, wear gloves or wash your hands frequently when servicing your vehicle.

For more information, go to www.P65Warnings.ca.qov

This vehicle comes with a hang tag and labels containing important safety information.

Any person who rides this vehicle should read and understand this information before riding.

Vehicle Safety Labels

These labels are affixed to the vehicle for the safety of the operator, passenger or bystanders.

The following labels are on your vehicle and they should be considered permanent parts of the vehicle. If missing or damaged, the decals can be replaced free of charge. Visit an authorized BRP snowmobile dealer

NOTE:

In the event of any discrepancy between this guide and the vehicle, the safety labels on the vehicle have precedence over the labels in this guide.

Pulley Guard and Drive Pulley Tightening Torque - Warning and Notice Label

WARNING

This guard must ALWAYS be in place when engine is running. Beware of rotating parts, they could cause injuries or catch your clothing.

NOTICE


- Drive pulley bolt recommended torque is 115 to 125 Nm (85 to 92 lbf-ft).
- Not applying the recommended torque may result in a major failure of the drive pulley and the engine.
- Refer to the service manual for the complete assembly procedure.










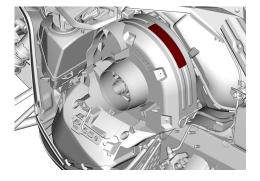

Do Not Open When Hot - Warning Label



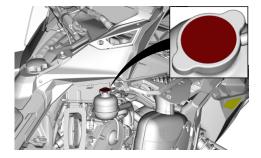


Do Not Open When Hot - Warning Label

A WARNING

Do not open when hot.



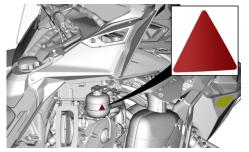



Beware of Hot Parts - Caution Label

A CAUTION

Beware of hot parts.



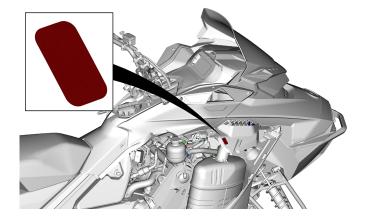

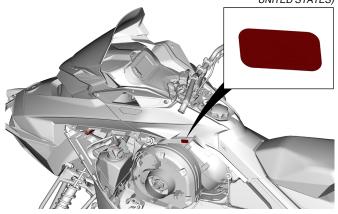

Engine Oil Level - Caution Label

⚠ CAUTION

Engine oil and Certain components in the engine compartment may be hot. Direct contact may result in skin burn. Checking the engine oil:

- Make sure the engine is at operating temperature.
- Vehicle must be level to perform verification.
 Let the engine run at idle for at least 30 seconds.
- Stop the engine and wait 30 seconds.
- 5. Check the oil level using the dipstick.

The engine of this snowmobile has been developed and validated using the BRP XPSTM Synthetic 4-stroke oil.

BRP Recommends the use of its XPS approved lubricant or equivalent. Damages caused by oil which is not suitable for this engine

may not be covered by BRP limited warranty. Refer to the operator's guide for more information.






INSIDE THE LH SIDE PANEL

Disk Guard - Warning Label

A WARNING

This guard must ALWAYS be in place except when servicing.



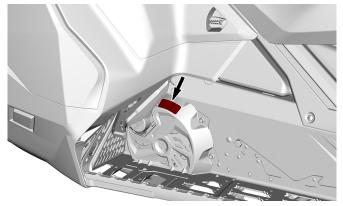

400 mm (16 in.) Tunnel Width

Starting Procedure - Warning Label

⚠ WARNING

- Read and understand all safety labels, locate and read the operator's guide and watch the safety video (using the QR code link or visit Ski-Doo web site) before operation.
- Respect laws on minimum operator age. Manufacturer recommends a minimum operating age of 16 years old.
- ALWAYS wear ear protection.
- Get familiar with your vehicle. Inexperienced riders may overlook risks and be surprised by vehicle's specific behavior and terrain conditions. Ride slowly.
- Excessive speed and reckless driving can kill.
- ALWAYS adjust your speed according to snow conditions and circumstances.
- Steering control and braking ability may be reduced on hard-pack snow, ice or roads. Reduce speed & allow more space to stop or turn.
- Never open side panels or hood while engine is running or if vehicle is in motion. Ensure to remove tether cord from post before opening those.

Before starting


- 1. Attach tether cord to your clothing.
- Turn handlebars all the way in both directions to check for interference and insure free operation.
- Check proper operation of the throttle and brake levers each time before starting. They must return to their initial position when released.
- 4. Apply parking brake.

After Starting:

- Push in the emergency engine stop switch to check if engine shuts off.
- 2. Re-start and pull-out tether cord to check if engine shuts off.
- Re-start. Disengage parking brake before riding to avoid brake fading.



STARTING PROCEDURE - WARNING LABEL

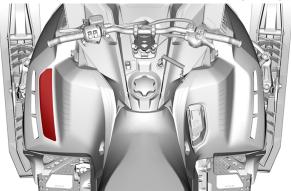

Passenger Safety - Warning Label

A WARNING

Remember: you are responsible of the safety of your passenger.

All drivers and passengers must read the following:

- Always wear an approved helmet and clothing appropriate for snowmobiling.
- Operate defensively, scan constantly for people, objects, conditions and upcoming vehicles.
- Avoid surprise, be on the look out for the unexpected.
- Use extra caution whenever off-trail.
- Avoid thin ice/ open water.
- Never ride under the influence of alcohol or drugs, even as passenger.


This vehicle is design for one (1) operator and as many passengers as there are seats with straps or handgrips installed on the vehicle conforming to SSCC standards.

When riding with a passenger:

- Braking ability and steering control are reduced.
- Decrease speed and allow extra space to maneuver.
- Adjust suspension according to weight.



PASSENGER SAFETY - WARNING LABEL

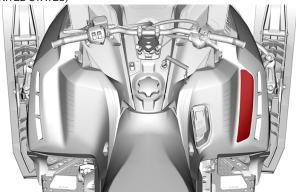

LABEL LOCATION


Maximum Cargo Load and Towing Capacity - Warning Label

A WARNING

- Never sit in the cargo area.
- Always use a securely fastened rigid tow bar to tow.
- Refer to the operator's guide for more details.
- Exceeding maximum cargo may affect steering control, braking ability and cause permanent damage.
- MAXIMUM cargo load (including tongue weight): 25 kg (245 N)
- MAXIMUM tongue weight: 10 kg (98 N)
- MAXIMUM towing capacity: 260 kg (2550 N)



CARGO AREA - WARNING LABEL

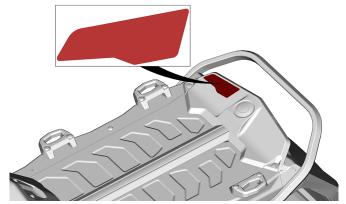

LABEL LOCATION


Rotating Track — Warning Label

⚠ WARNING

- NEVER stand behind or near a rotating track. Debris could be projected causing severe injuries.
- To remove packed snow/ ice, remove tether cord from the vehicle, lift and hold vehicle on the side and use tools stored on the drive belt guard.



ROTATING TRACK — WARNING LABEL

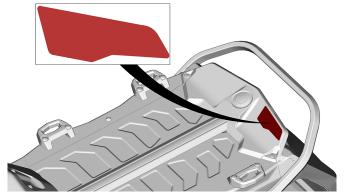

LABEL LOCATION

500 and 600 mm (20 and 24 in.) Tunnel Width

Starting Procedure - Warning Label

A WARNING


- Read and understand all safety labels, locate and read the operator's guide and watch the safety video (using the QR code link or visit Ski-Doo web site) before operation.
- Respect laws on minimum operator age. Manufacturer recommends a minimum operating age of 16 years old.
- ALWAYS wear ear protection.
- Get familiar with your vehicle. Inexperienced riders may overlook risks and be surprised by vehicle's specific behavior and terrain conditions. Ride slowly.
- Excessive speed and reckless driving can kill.
- ALWAYS adjust your speed according to snow conditions and circumstances.
- Steering control and braking ability may be reduced on hard-pack snow, ice or roads. Reduce speed & allow more space to stop or turn.
- Never open side panels or hood while engine is running or if vehicle is in motion. Ensure to remove tether cord from post before opening those.

Before starting


- 1. Attach tether cord to your clothing.
- Turn handlebars all the way in both directions to check for interference and insure free operation.
- Check proper operation of the throttle and brake levers each time before starting. They must return to their initial position when released.
- 4. Apply parking brake.

After Starting:

- Push in the emergency engine stop switch to check if engine shuts off.
- Re-start and pull-out tether cord to check if engine shuts off.
- Re-start. Disengage parking brake before riding to avoid brake fading.

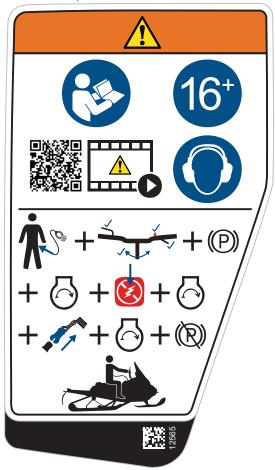

STARTING PROCEDURE - WARNING LABEL

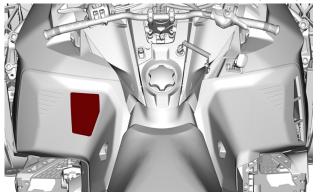

Passenger Safety - Warning Label

A WARNING

Remember: you are responsible of the safety of your passenger.

All drivers and passengers must read the following:

- Always wear an approved helmet and clothing appropriate for snowmobiling.
- Operate defensively, scan constantly for people, objects, conditions and upcoming vehicles.
- Avoid surprise, be on the look out for the unexpected.
- Use extra caution whenever off-trail.
- Avoid thin ice/ open water.
- Never ride under the influence of alcohol or drugs, even as passenger.


This vehicle is design for one (1) operator and as many passengers as there are seats with straps or handgrips installed on the vehicle conforming to SSCC standards.

When riding with a passenger:

- Braking ability and steering control are reduced.
- Decrease speed and allow extra space to maneuver.
 - Adjust suspension according to weight.




PASSENGER SAFETY - WARNING LABEL

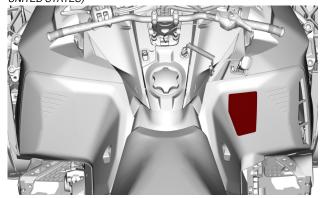


Passenger Seat - Warning Label

⚠ WARNING

BEFORE riding, ALWAYS make sure that the latch on each side of the seat or the accessory is fully engaged.

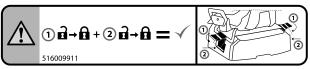

PASSENGER SEAT - WARNING LABEL

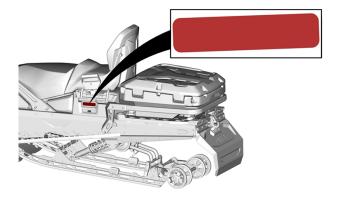


Rear Storage Compartment - Warning Label


⚠ WARNING

To reduce the risk of severe injury or death:

- Never carry flammable or dangerous liquids inside cargo box. If ignited, this can lead to an explosion. Make sure the cover is closed and latched before riding.

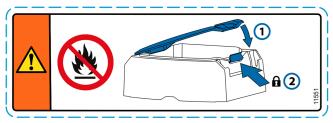

REAR STORAGE COMPARTMENT - WARNING LABEL

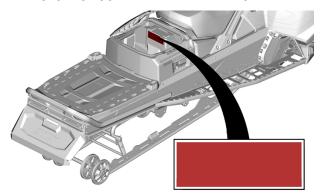



TYPICAL

Molded Safety Pictogram

A WARNING

Never carry passengers on the rear storage compartment.

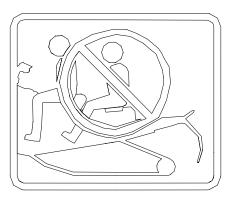

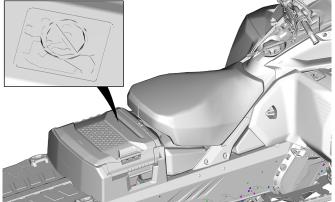


Maximum Cargo Load and Tongue Weight Capacity — Warning Label

A WARNING

- Exceeding maximum cargo may affect steering control, braking ability and cause permanent damage.
- MAXIMUM cargo load (including tongue weight): 57 kg (556 N)
 - MAXIMUM tongue weight: 16 kg (156 N)



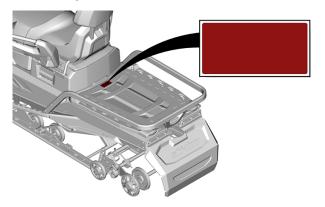


102 _____SAFETY INFORMATION _____


Maximum Towing Capacity - Warning Label

A WARNING

- Always use a securely fastened rigid tow bar to tow.
- Refer to the operator's guide for more details.
- Exceeding maximum cargo may affect steering control, braking ability and cause permanent damage.
- MAXIMUM tongue weight: 16 kg (156 N)
- MAXIMUM towing capacity (HD bumper): 680 kg (6672 N)
 MAXIMUM towing capacity (STD bumper): 544 kg (5338 N)

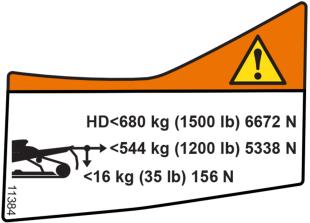

MAXIMUM TOWING CAPACITY - WARNING LABEL

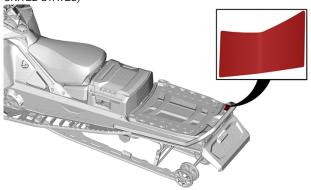


LABEL LOCATION — TYPICAL

Rotating Track - Warning Label

⚠ WARNING


- NEVER stand behind or near a rotating track. Debris could be projected causing severe injuries.

To remove packed snow/ ice, remove tether cord from the vehicle, lift and hold vehicle on the side and use tools stored on the drive belt guard.

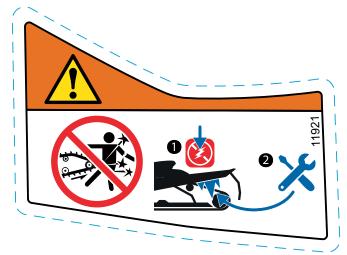

ROTATING TRACK - WARNING LABEL

IMPORTANT ON-PRODUCT LABELS (ALL COUNTRIES EXCEPT CANADA/ UNITED STATES)

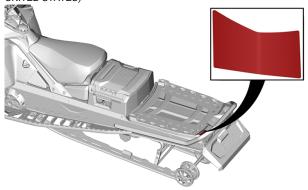


LABEL LOCATION — TYPICAL


Technical Information Labels

Adjustment Tools Label

- Install suspension adjustment tool first. (Illustrated red on label) Install pulley expander and Headlight adjustment tool second. (Illustrated blue on label)
- Refer to Tools in Equipment.

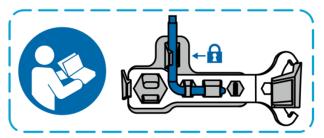

ADJUSTMENT TOOLS

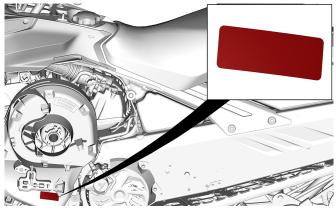

TYPICAL

IMPORTANT ON-PRODUCT LABELS (ALL COUNTRIES EXCEPT CANADA)
UNITED STATES)

Recommended Fuel — Notice Label

Refer to the *Technical Specifications* for appropriate fuel type for your vehicle engine.




AKI (RON+MON)/2 OCTANE RATING - NOTICE LABEL



RON OCTANE RATING - NOTICE LABEL

IMPORTANT ON-PRODUCT LABELS (ALL COUNTRIES EXCEPT CANADA/ UNITED STATES)

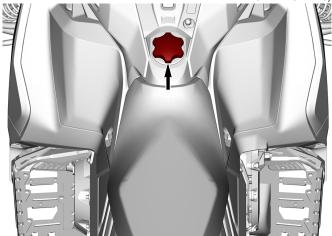

TYPICAL

PRE-RIDE INSPECTION

Perform a pre-ride inspection before each ride to detect potential problems during operation. The pre-ride inspection can help you monitor wear and deterioration before they become a problem. Correct any problems that you discover to reduce the risk of an accident or a malfunction.

Before Starting the Engine

- Remove snow and ice from body including lights, seat, footrests, controls and instruments.
- Remove packed snow and ice from the rear suspension using the wrench tool stored on the drive belt guard.
- Verification of the air intake system
 - Verify that the air silencer pre filter is free of snow
 - Verify that the air silencer pre filter membrane is not damaged and free of holes or cracks. In case there is damage or hole in the filter, do not start the unit and see your dealer for a proper entire inspection of the intake system together with pre filter exchange.
- Verify that skis and steering operate freely. Check corresponding action of skis versus handlebar.
- Check fuel and injection oil for levels and leaks. Replenish if necessary and in case of any leaks; you should seek service from an authorized BRP snowmobile dealer, repair shop, or person of your own choosing for maintenance, repair, or replacement.
- All storage compartments must be properly latched and they must not contain any heavy or breakable objects. Hood and side panels must be also properly latched.
- Activate the throttle control lever several times to check that it operates easily and smoothly. It must return to idle position when released.
- Activate the brake lever and make sure the brake fully applies before the brake control lever touches the handlebar grip. It must fully return when released.
- Apply parking brake and check if it operates properly. Leave parking brake applied.
- Inspect drive belt condition and height. Refer to drive belt in maintenance procedures.

After Engine is Started

For proper engine starting procedure, refer to the appropriate *Engine Starting Procedure*.

 Check headlights high beam and low beam, taillight, stop light and pilot lamps operation.

110	SAFETY INFORMATION

NOTE:

You may need to detach tether cord from your clothes to check lights. In such a case, attach cord as soon as you get back at the controls of the snowmobile.

- 2. Check the engine cut-off switch (by pulling tether cord cap) and emergency engine stop switch operation.
- 3. Release parking brake.
- 4. Refer to Vehicle warm up and follow instructions.

Pre-Ride Check List

ITEM	OPERATION	✓
BODY INCLUDING SEAT, FOOTRESTS, LIGHTS, AIR FILTER, CONTROLS AND INSTRUMENTS	Check condition and remove snow or ice.	
SKIS AND STEERING ACTION	Check for free movement and proper operation.	
SKI RUNNERS	Check for abnormal wear.	
FUEL	Check for proper level and no leaks.	
INJECTION OIL (IF APPLICABLE)	Check for proper level and no leaks.	
COOLANT	Check for proper level and no leaks.	
DRIVE BELT	Check for cracks, fraying or abnormal wear and proper height.	
THROTTLE LEVER	Check for proper operation.	
BRAKE LEVER	Check for proper operation.	
PARKING BRAKE, BRAKE	Check for proper operation.	
BRAKE FLUID	Check for proper level and no leaks.	
STORAGE COMPARTMENT	Check for proper latching and no heavy or breakable objects.	

PRE-RIDE INSPECTION

TRACK	Check condition and remove snow or ice. For studded tracks, refer to <i>Traction Enhancing Products</i> .	
SLIDER SHOES	Check for abnormal wear.	
EMERGENCY ENGINE STOP SWITCH AND ENGINE CUT-OFF SWITCH (TETHER CORD CAP)	Check for proper operation. Tether cord must be attached to operator clothing eyelet.	
LIGHTS	Check for proper operation.	
HORN BUTTON (IF EQUIPPED)	Check for proper operation.	

REPORTING SAFETY DEFECTS

In Canada, if you believe that your vehicle has a defect which could cause a crash or could cause injury or death, you should immediately inform Transport Canada in addition to notifying Bombardier Recreational Products Inc.

If Transport Canada receives similar complaints, it may open an investigation, and if it finds that a safety defect exists in a group of vehicles, it may order a recall and remedy campaign. However, Transport Canada cannot become involved in any individual problems between you, your dealer or Bombardier Recreational Products Inc.

To contact Transport canada:



819-994-3328 (Gatineau-Ottawa area or internationally) Toll free: 1 800-333-0510 (in Canada)



Transport Canada - ASFAD 330 Sparks Street Ottawa, ON K1A 0N5



https://www.tc.gc.ca/recalls

This page is intentionally blank

VEHICLE INFORMATION

PRIMARY CONTROLS

Handlebar

The handlebar controls the steering of the snowmobile. As the handlebar is rotated to right or left, the skis are turned right or left to steer the snowmobile.

A WARNING

Fast reverse while turning, could result in loss of stability and control.




TYPICAL

Throttle Lever (ITC Throttle Lever) Except Turbo Models

Throttle lever is located on the RH side of handlebar.

When squeezed, it increases the engine speed. When released, engine speed returns automatically to idle.

Designed to be either thumb or finger activated.

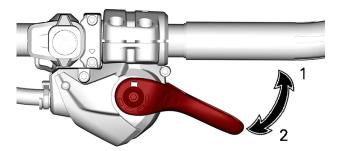

TC THROTTLE LEVER

- 1. To accelerate
- 2. To decelerate

⚠ WARNING


Test the throttle lever operation each time before starting the engine. The lever must return to the rest position once released. Otherwise, do not start engine.

Switching from Thumb to Finger Throttle Position (¡TC Throttle Lever)


CAUTION

It is highly recommended to immobilize the snowmobile before attempting any modification to the throttle position as it could lead to a hazardous situation.


There are mainly three positions to choose from when going from the thumb to the finger throttle position and the best one will be to the rider's preference and in direct relation with the riding style and conditions.

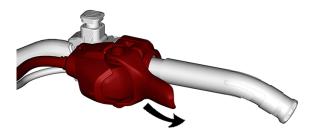

THUMB THROTTLE POSITION: PUSH DOWNWARD TO ROTATE THROTTLE HOUSING

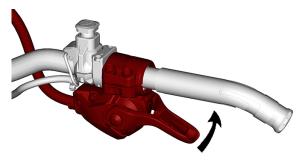

IF WANTED, CONTINUE TO ROTATE THE THROTTLE HOUSING

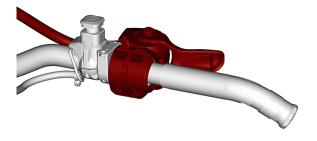

FINGER THROTTLE POSITION

A CAUTION


It is HIGHLY recommended to use gloves and NOT mitts when using the finger throttle position.

It is not recommended to use the finger throttle position while riding in dense off trail areas.

The procedure to go back to the thumb throttle position is the reverse of the one shown above.

Emergency Engine Stop Switch


The emergency engine stop switch is located on the RH side of handlebar.

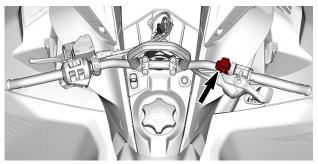

TYPICAL


PRIMARY CONTROLS

To stop the engine in an emergency, push the switch down in OFF position and simultaneously apply the brake.

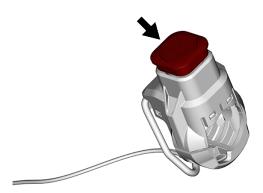

OFF POSITION

To allow engine starting, pull the switch up in ON position.

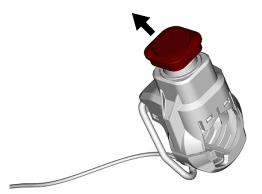

ON POSITION

All operators of the snowmobile should familiarize themselves with the function of the emergency engine stop switch by using it several times

on first outing and whenever stopping the engine thereafter. This engine stopping procedure will become a reflex and will prepare operators for emergency situations requiring its use.

⚠ WARNING

If the switch has been used in an emergency caused by a suspected malfunction, the source of the malfunction should be determined and corrected before restarting engine. Visit an authorized BRP snowmobile dealer for servicing.

Brake Lever Aluminum Reservoir Snow MY25

Brake Lever Adjustment


WARNING

It is important to adjust the brake lever to the user size and normal riding position.

Proper brake lever position should allow:

- Good support for the index and middle finger on the lever.
- Use the outer end of the lever to optimize the force.
- Proper wrist alignment.

Taking the time to adjust and try out the brake lever before your first snowmobile outing improves user comfort.

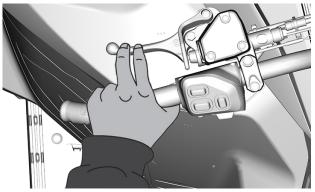

TYPICAL


PRIMARY CONTROLS

Adjusting the Brake Lever


 Loosen the two bolts enough to easily move the brake lever on the handlebar.

NOTE:

If the two bolts are not loosen enough the brake lever can leave marks on the handlebar.

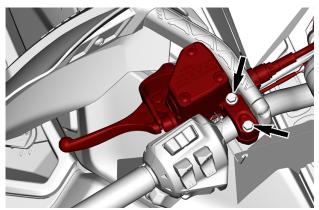

Locate the reference mark on the handlebar and respect the distance and rotation limits.

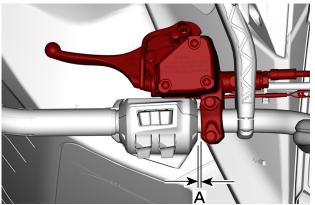


A. 0 to 15 mm (0 to 0.590 in) between the side of the multifunction switch and the side of the brake lever

3. With the operator on the driver's seat, put the brake lever in the desired position.

TIGHTENING TORQUE		
Brake lever adjustment bolts	8.5 ± 1.5 Nm (75 ± 13 lbf-in)	

Parking Brake Lever

Parking brake lever is located on the LH side of handlebar.

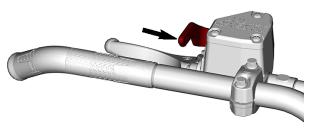

TYPICAL


Parking brake should be used whenever snowmobile is parked.

⚠ WARNING

Make sure parking brake is fully disengaged before operating the snowmobile. When you ride the vehicle, brake pads that are caused to drag by a continuous pressure on the lever may cause damage to the brake system and cause loss of braking capacity and/or fire.

To Engage Parking Brake

Apply and hold brake, then lock brake lever using the parking brake lever as shown.

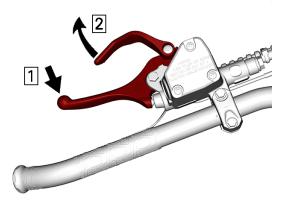

TYPICAL — ENGAGE MECHANISM


- 1. Apply and hold brake
- 2. Lock brake lever using parking brake lever

To Release Parking Brake

Squeeze brake lever. Parking brake lever will automatically return to its original position. Always release parking brake before riding.

Engine Cut-off Switch

On models using a D.E.S.S. key, this key is also the engine cut-off switch.

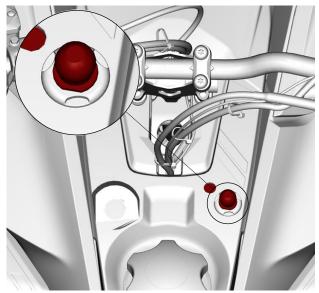

TYPICAL

The engine cut-off switch (tether cord) is located on the console.

The tether cord cap must be securely snapped on the engine cut-off switch to allow vehicle operation.

Pulling the tether cord cap from the switch shuts the engine off.

A WARNING

Always attach the tether cord eyelet to clothing before starting the engine.

D.E.S.S. (Digitally Encoded Security System)

The tether cord cap has an integrated D.E.S.S. key to provide you and your snowmobile with the equivalent security of a conventional lock key.

The D.E.S.S. key contains an electronic chip which features a unique permanently memorized digital code.

PRIMARY CONTROLS

Your authorized BRP snowmobile dealer has programed the D.E.S.S. of your snowmobile to recognize the D.E.S.S. key in the tether cord cap to allow vehicle operation.

If another tether cord is used without programming the D.E.S.S., the engine will start but will not reach drive pulley engagement speed to move vehicle.

Make sure the tether cord cap is free of dirt or snow.

D.E.S.S. Flexibility

The D.E.S.S. of your snowmobile can be programmed by your authorized BRP snowmobile dealer to accept up to 8 different keys.

We recommend the purchase of additional tether cords from your authorized BRP snowmobile dealer. If you have more than one D.E.S.S. equipped BRP snowmobile, each can be programmed by your authorized BRP snowmobile dealer to accept the other vehicles D.E.S.S. keys.


SECONDARY CONTROLS

Some features may not apply to your model or could be optional.

Vehicle safety labels are not shown on illustrations. For information on vehicle safety labels, refer to *Vehicle Safety Labels*.

Handlebar Multifunction Switch

Multifunction switch is located on the LH side of handlebar.

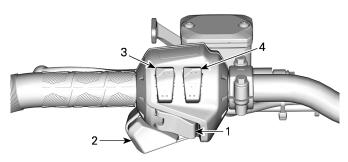

TYPICAL

- 1. Start/Electronic Reverse button
- 2. Headlights dimmer switch
- 3. Heated grips switch
- 4. Heated throttle lever switch

Start / Electronic Reverse Button

Press to start engine. Refer to Engine Starting Procedure in Basic Procedures.

Once engine is started, press to engage the electronic reverse. Refer to Shifting in Reverse in Basic Procedures for procedure.

Headlights Dimmer Button

Press to select HI or LOW beam. Lights are automatically ON when the engine is running.


Heated Grips Switch

NOTE:

Under 2000 RPM, heated grips will be limited at 50%.

SECONDARY CONTROLS

Depress switch as required to select heating intensity to keep your hands at a comfortable temperature.

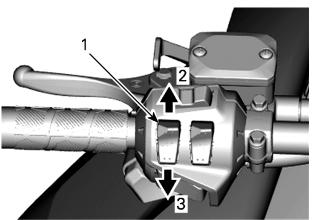


VARIABLE INTENSITY

- 1. Heated grip switch
- 2. Increase heat
- 3. Decrease heat

The heating intensity is displayed via the digital display.

Heated Grips Display

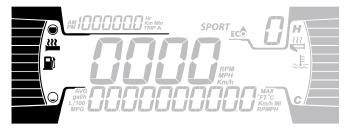

There are ten intensity settings. When released, display will return to fuel level.


Heated grips will be in OFF position when there are no bars displayed on the gauge.

Heated Throttle Lever Switch

NOTE:

Under 2000 RPM, heated throttle lever will be limited at 50%.

Depress switch as required to select heating intensity to keep your thumb at a comfortable temperature.

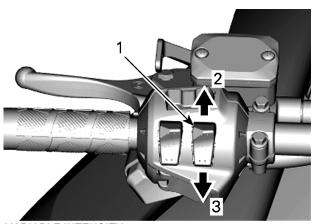


VARIABLE INTENSITY

- 1. Heated throttle lever switch
- 2. Increase heat
- 3. Decrease heat

The heating intensity is displayed via the digital display.

Heated Throttle Lever Display

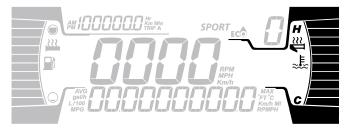

There are ten intensity settings. When released, display will return to fuel level

Heated throttle lever will be in OFF position when there are no bars displayed on the gauge.

Driving Modes

⚠ WARNING

Whenever changing operating mode, make sure to maintain situational awareness while riding.

ECO Mode (Fuel Economy Mode)

When ECO mode is selected (fuel economy mode), vehicle torque and speed are limited whereby an optimal cruising speed is maintained in order to reduce fuel consumption.

Once activated, ECO mode will remain active until it is deactivated by the operator.

Standard Mode

When in Standard mode, no indicator is in the multifunction gauge.

Sport Mode

A WARNING

Ensure passenger is advised to hold on tightly before activating Sport mode. Sport mode provides increased acceleration.

When selected, Sport mode provides for instant throttle response and more rapid accelerations than Standard or ECO mode.

Once activated, Sport mode will remain active until it is deactivated by the operator.


A message of the selected mode will be displayed at activation and deactivation as follow:

Operating mode	Message at Activation
Sport	SPORT MODE
Standard	STANDARD MODE
Eco	ECO MODE

Navigating the Driving Modes

Use ECO/ Standard/ Sport Mode switch to navigate between power levels, from ECO (reduced power) to Standard (full power) to Sport (increased response).

To increase power, press the switch upwards. To decrease power, press the switch downwards.

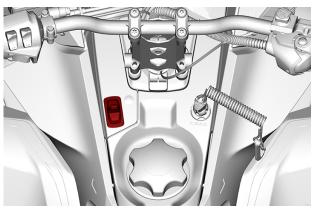

TYPICAL

To activate Standard mode when in Sport mode, press bottom end of switch once.

To activate ECO mode when in Sport mode, press bottom end of switch twice.

SECONDARY CONTROLS

To activate ECO mode when in Standard mode, press bottom end of switch once.

A WARNING

Ensure passenger is advised to hold on tightly before activating Sport mode. Sport mode provides increased acceleration.

To activate Sport mode when in Standard mode, press top end of switch once.

To activate Sport mode when in ECO mode, press top end of switch twice.


To activate Standard mode when in ECO mode, press top end of switch once.

A WARNING

When adjusting modes, be sure to maintain situational awareness of other snowmobiles, obstacles, or persons.

Gearshift Lever

Model equipped with Hi/Lo Gearbox

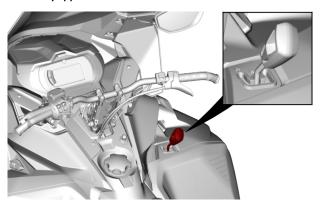

TYPICAL

Use this lever to select gears. The gearbox has two forward gears and a neutral

Shifting from one position to another is possible at speeds lower than 30 km/h (19 MPH)

A CAUTION

Shifting at a speed faster than 30 km/h (19 MPH) may cause serious damage to the gearbox.

Neutral

The neutral position disengages the gearbox forward gears.

NOTE: The reverse gear still can be activated.

High Range (Forward)

This position selects the high speed range of the gearbox. It is the normal driving speed range. It allows the vehicle to reach its maximum speed.

Low Range (Forward)

This position selects the low speed range of the gearbox. It allows the vehicle to move slowly with maximum torque.

NOTICE

Use the low speed range to pull a cargo carrier, carry heavy cargo, go over obstacles or drive uphill and downhill.


Reverse Lever (if equipped)

Refer to Shifting in Reverse in Basic Procedures for proper operation.

Horn Button (if equipped)

For vehicles sold in Finland

Press on the horn button to activate the horn

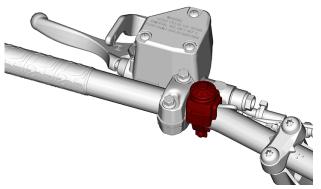

TYPICAL

4.5" DIGITAL DISPLAY

Multifunction Display

Lower Display



May display the following:

- RPM
- Speed
- Engine Temperature
- Fuel Statistics
- Settings
- Messages
- Outside temperature (if equipped)

To change the displayed information, use the gauge LOWER (M) button, or the Mode button on the handlebar multifunction switch, if equipped.

The SPEED STAT display shows the maximum and the averaged speed. Hold LOWER button for 3 seconds to reset.

When the SPEED display is chosen, the RPM is shown in the TRIP display.

Left Lateral Display



The left lateral display includes:

Fuel level indicator

4.5" DIGITAL DISPLAY

Heated Grip level

Right Lateral Display



The right lateral display includes:

- Engine Temperature
- Heated throttle indicator

Central Display



Display the RPM of the engine or the vehicle speed in Km/h or MPH.

Trip Display




This display shows trip informations:

- Cumulative distance odometer
- Trip A hours
- Trip A distance (Km or mph)
- Vehicle hour meter
- Clock (If battery equipped)

To change the displayed information, use the gauge UPPER (T) button, or the Trip button on the handlebar multifunction switch, if equipped.

Driving Mode Display

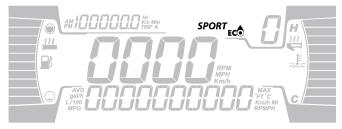

The MODE display indicates the selected mode of operation:

- SPORT
- ECO
- STANDARD

NOTE:

When in STANDARD mode, no information is displayed.

A message of the selected mode will be displayed on the lower display at activation and deactivation as follow:

DRIVING MODE	MESSAGE AT ACTIVATION	MESSAGE AT DEACTIVATION
Sport	Sport	Sport OFF
Eco	Eco	Eco OFF

Warning Lamps and Indicators

The following indicator lamps will alert you to a vehicle condition that may become serious. Some lamps will illuminate when starting the vehicle to make sure they work. If any lamps remain on after starting the

vehicle, refer to the respective system warning lamp for further information.

NOTE:

Some warning indicators appear in the display of the multifunction gauge and function the same as an indicator lamp but do not display when starting the vehicle.

Telltale Lights - Lower Bar




Lights	Description
!	ORANGE - Vehicle malfunction
	BLUE - The high beam are selected
, } π	RED - The engine temperature is too high.
	RED - Parking brake is engaged or malfunction of the brake system
- +	RED - The battery voltage too low or problem with the electrical system
25	RED - Low injection oil level
	ORANGE - Low fuel level
Ģ	ORANGE Turn on: Malfunction of the vehicle emissions control system Blink: Engine problems, the limp home mode is activated. Have the vehicle serviced immediately.

Icons and Indicators - Multifunction Display

Icons and Indicators	
SPORT	Denotes SPORT mode is selected.
ECÔ	Denotes ECO mode is selected.

Settings

Setup

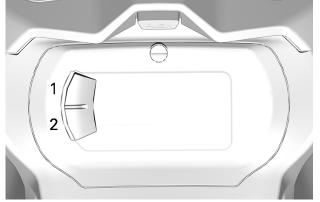

- 1. Upper button (Trip)
- 2. Lower button (Menu)

NOTE: A Trip and a Menu buttons can be found on the handlebar multifunction switch, if equipped.

Using the LOWER (M) button, select $\mbox{\bf SETTINGS}$ and hold to enter setting menu.

Reset Stats

Using LOWER button, select RESET STAT and hold to reset.

Unit Selection

This multifunction gauge is factory preset in metric units but it is possible to change it to imperial units.

Using LOWER button, select **UNITS** and hold button to change units.

Setting Clock

Using LOWER button, select CLOCK to change the clock.

- Press LOWER button to select clock display.
- Push and hold LOWER button for 1 second.
- 3. Press LOWER button to select 12:00 AM PM or 24:00 time base.
- 4. Push and hold LOWER button to acknowledge selection.
- 5. Press LOWER button to change hours (hours flash).
- Push and hold LOWER button to acknowledge hour selection.
- Press LOWER button to switch to minutes (minutes flash).
- 8. Push and hold LOWER button to acknowledge minutes selection.

Setting Language

The gauge display language can be changed. Refer to an authorized BRP snowmobile dealer for language availability and to setup the gauge to your preference.

7.2" DIGITAL DISPLAY



Multifunction Display

- Select the upper or center display by using the MENU (M) button on the multifunction switch. Refer to Secondary Controls for Menu/ Set button location.
- While the desired display is flashing, navigate through the display, by using the SET (S) button on the multifunction switch.

Once the desired information is displayed, press the MENU (M) button or wait 5 seconds to confirm.

To reset

- Average speed
- Top speed
- Total fuel consumption

Press and hold the SET (S) button while display is flashing.

Lower Display



May display the following:

- Settings
- Messäges

The SPEED display shows the Maximum and the averaged speed. Hold MENU button for 3 seconds to reset.

Left Lateral Display



The left lateral display includes:

- Fuel level indicator
- Heated Grip level
- Trip distance A and B (Km or mph)
- Cumulative hours
- Speed
- RPM
- Odometer

Right Lateral Display



The right lateral display includes:


- Engine Temperature
- Heated throttle indicator
 - Clock

Central Display



Display the vehicle speed in Km/h (or MPH) or the RPMs. Refer to Settings.

Driving Mode Display

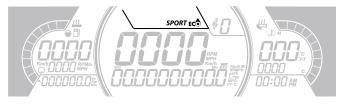

The MODE display indicates the selected mode of operation:

- SPORT
- ECO
- STANDARD

NOTE:

When in STANDARD mode, no information is displayed.

A message of the selected mode will be displayed on the lower display at activation and deactivation as follow:

DRIVING MODE	MESSAGE AT ACTIVATION	MESSAGE AT DEACTIVATION
Sport	Sport	Sport OFF
Eco	Eco	Eco OFF

Warning Lamps and Indicators

The following indicator lamps will alert you to a vehicle condition that may become serious. Some lamps will illuminate when starting the vehicle to make sure they work. If any lamps remain on after starting the vehicle, refer to the respective system warning lamp for further information.

NOTE:

Some warning indicators appear in the display of the multifunction gauge and function the same as an indicator lamp but do not display when starting the vehicle.

Telltale Lights - Lower Bar



Lights	Description	
!	ORANGE - Vehicle malfunction	
	BLUE - The high beam are selected	
ш }}	RED - The engine temperature is too high.	
	RED - Parking brake is engaged or malfunction of the brake system	
- +	RED - The battery voltage too low or problem with the electrical system	
\$ 1	RED - Low injection oil level	
	ORANGE - Low fuel level	
Ç	ORANGE Turn on: Malfunction of the vehicle emissions control system Blink: Engine problems, the limp home mode is activated. Have the vehicle serviced immediately.	

Icons and Indicators - Multifunction Display

Icons and Indicators		
SPORT	Denotes SPORT mode is selected.	
ECÔ	Denotes ECO mode is selected.	

Settings

Setup

Using MENU button, select **SETTINGS** and hold to enter setting menu. Various options are available such as swapping the SPEED and RPM in the Central Display.

Unit Selection

This multifunction gauge is factory preset in metric units but it is possible to change it to imperial units.

Using MENU button, select UNITS and hold button to change units.

Setting Clock

Using MENU button, select CLOCK and hold to change units.

- Press MENU button to select clock display.
- Push and hold MENU button for 1 second.
- 3. Press MENU button to select 12:00 AM PM or 24:00 time base.
- Push and hold MENU button or OK button to acknowledge selection.
- 5. Press MENU button to change hours (hours flash).
- Push and hold MENU button or OK button to acknowledge hour selection
- 7. Push MENU button to switch to minutes (minutes flash).
- 8. Press MENU button to change minutes.

Setting Language

The gauge display language can be changed. Refer to an authorized BRP snowmobile dealer for language availability and to setup the gauge to your preference.


BODY AND SEAT

Front and Rear Bumpers


To be used whenever snowmobile requires manual lifting.

A CAUTION


Beware of injuries by using proper lifting techniques, notably using your legs force. Do not attempt to lift the rear of vehicle if it is above your limits. Use appropriate lifting device or have assistance to share lifting stress if possible.

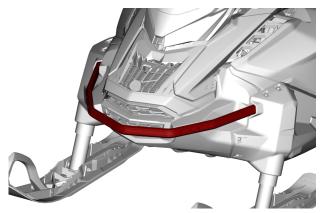


FRONT BUMPER

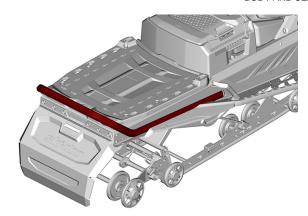

STD BUMPER — 20 INCHES TUNNEL

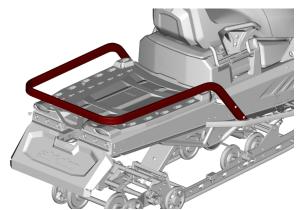

CARGO - HEAVY DUTY BUMPER — 20 AND 24 INCHES TUNNEL

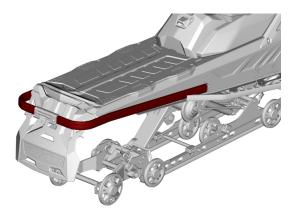


HEAVY DUTY BUMPER — 16 INCHES TUNNEL

Windshield

Removing the Windshield


1. Pull off the deflector pins off the grommets, if applicable.

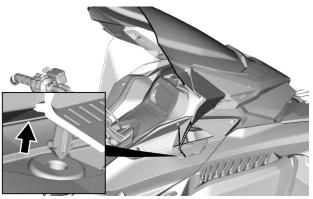

TYPICAL — WITH SIDE DEFLECTORS


2. Place hands on each sides of the windshield.

3. Pull the windshield up until both side pins come out of their rubber grommets.

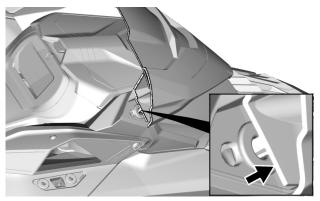

TYPICAL

4. Disengage the center pin or tab, if applicable.

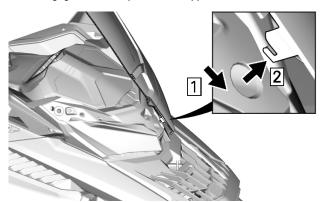

TYPICAL — CENTER TAB - WITH SIDE DEFLECTORS


Installing the Windshield

1. Lubricate the grommets using soapsuds, if required.

NOTICE

Do not lubricate grommets with any type of grease.

2. Insert center pin or tab in headlamp module hole.

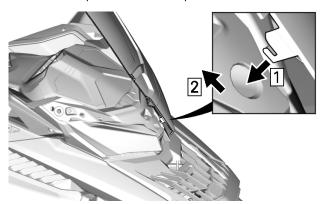


TYPICAL - CENTER TAB - WITH SIDE DEFLECTORS




TYPICAL

3. Secure windshield by inserting the windshield pins into the grommets.

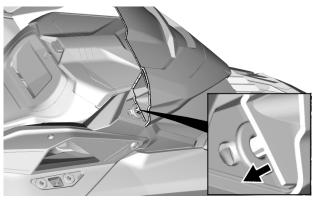

TYPICAL

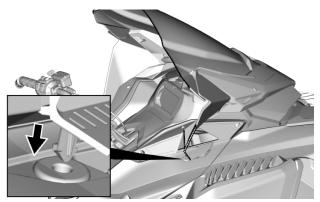

TYPICAL — WITH SIDE DEFLECTORS

Adjustable Mirrors (if equipped)


Each mirror can be adjusted to suit operator's preference.

⚠ WARNING

Adjust with vehicle at rest in a safe place.


BODY AND SEAT

When installing a cover, the mirrors can be tilted downward to ease installation.

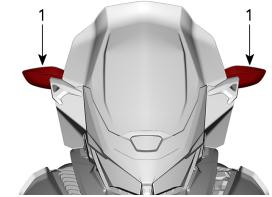

TYPICAL

1. Mirrors

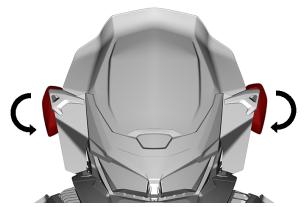


TYPICAL

Front Storage Compartment

A storage compartment is located at the front of the vehicle, above the gauge.

The Operator's Guide and the emergency starter rope are in the front storage compartment.

To open, push the button and lift the cover.

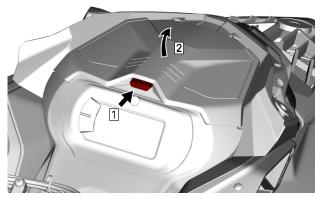

TYPICAL

NOTE:

When closing, make sure cover is secured properly. You will hear a "click".


Side Panels

A WARNING


Never operate engine with side panels opened or removed from vehicle.

Removing the Side Panels


1. Unlock all latches, then open panel.

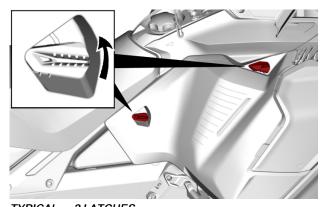

TYPICAL — 2 LATCHES
2. Pivot side panel around lower edge.

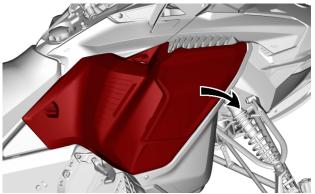

3. Slide the panel hinge off the bottom pan.

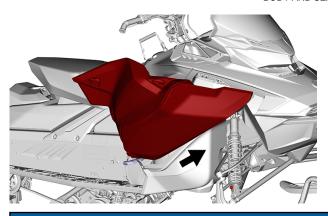

NOTICE

Make sure to place panel in a safe place to avoid scratching.


Installing the Side Panels

The installation is the reverse of the removal procedure. Make sure the bottom panel tab is inserted in the side bottom pan during installation. If not, side bottom pan will be scratched and panel tab can get damaged

Upper Body Module

Removing the Upper Body Module

- Remove the windshield. Refer to windshield in Body/Seat for more details.
- 2. Open the storage compartment.

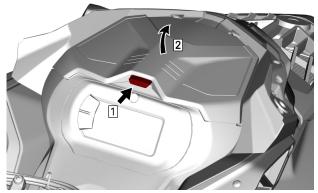


TYPICAL

3. Remove the gauge support retaining screws.




TYPICAL

4. Lift the front of the gauge support, then slide it forward to remove it.

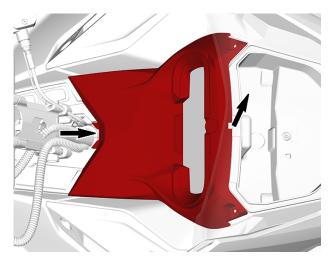


 5. Disconnect the gauge connector and remove the support.
 6. Lift the storage compartment and disconnect the 12V power outlet connectors, if equipped, before removing the storage connectors, compartment.

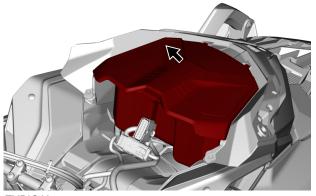


TYPICAL

7. Disconnect the headlight connectors.

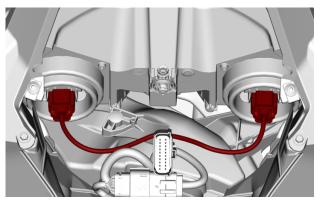


TYPICAL


- 8. Remove both side panels. Refer to *Side Panels* in this section.9. Loosen the air intake duct clamp.

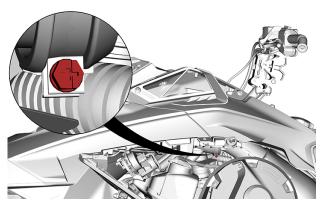

10. Remove the upper body module retaining screws on both sides.

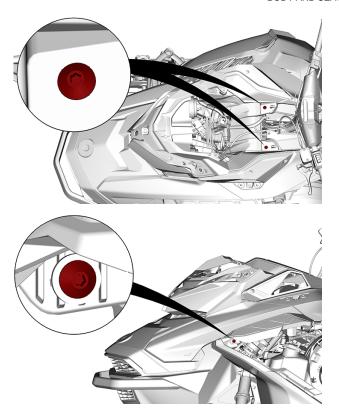

11. Lift the rear end of both lateral hood until their tabs come out of the rear console.

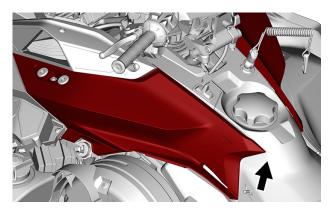


12. Remove the upper body module.

- Grab the upper body module in the gauge support section.
 Pull the module forward.
 Remove the module from the vehicle.

Installing the Upper Body Module

1. At front, insert the upper body module tabs into the bottom pan openings.

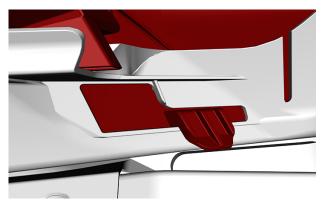

FRONT HOOD TAB

- Lower the rear end of the upper body module.
 Insert the rear end hooks of the upper body module into the slots in the console

NOTE:

Make sure the air intake duct is positioned properly connected.

4. Tighten air intake duct clamp.

TIGHTENING TORQUE		
Intake duct clamp	1.0 ± 0.2 Nm (9 ± 2 lbf-in)	

5. On both sides, install the upper body module retaining screws.

TIGHTENING TORQUE		
Upper body screws	1.8 ± 0.2 Nm (16 ± 2 lbf-in)	

- 6. Connect the headlight connectors.
- 7. Install the storage compartment but leave the cover open.
- 8. Install gauge, secure with the screws.


TIGHTENING TORQUE		
Gauge support screws	2.3 ± 0.2 Nm (20 ± 2 lbf-in)	

Seat

400 mm (16 in.) Tunnel Width


Removing the Seat - Front Tab Lock

 From between the fuel tank and the seat front end, pull the locking tab upwards.

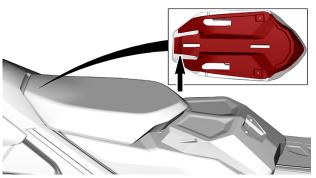

TYPICAL

2. Pull the seat rearward to release it from the retaining tabs.

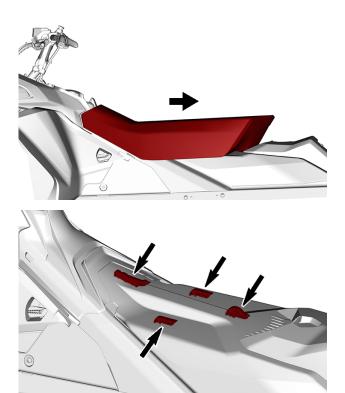

RETAINING TABS

Installing the Seat (Tab Lock)


€ €

NOTICE


Riding the vehicle with any objects between the seat and the fuel tank could damage the fuel tank. NEVER place any objects between seat and fuel tank.

BODY AND SEAT

1. Place the seat over the retaining tabs, then slide it forward until the tab locks over the front hook.

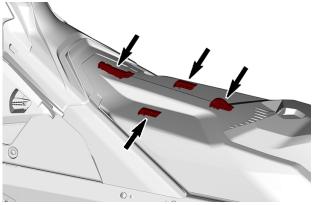

RETAINING TABS

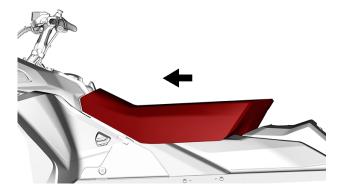


500 and 600 mm (20 and 24 in.) Tunnel Width

Operator's Seat

Removing the Seat

Release the latch at the back of the seat.

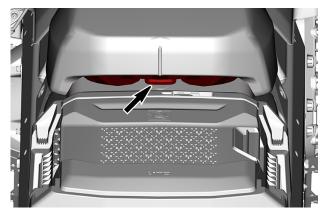

Slide seat rearwards to remove it.

Installing the Seat

NOTICE

Riding the vehicle with any objects between the seat and the fuel tank could damage the fuel tank. NEVER place any objects between seat and fuel tank.


Place seat over the hooks, then slide it forward.

Securely engage the latch.

A WARNING

Make sure seat is securely latched before riding.

Passenger Seat (if equipped)

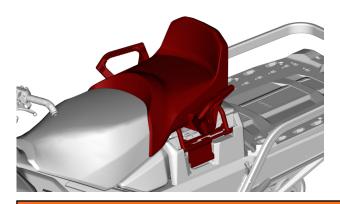


⚠ WARNING

Any passenger must be able to firmly lay is feet on the footrests and keep his hands on the handholds at all times when seated. Respecting those physical criteria is important to ensures that the passenger is stable and to reduce the risks of ejection.

Removing the Passenger Seat

1. Unlock seat latch on both sides.

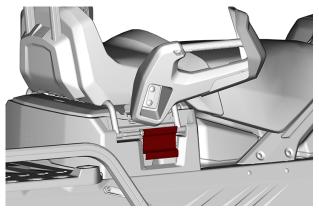

TYPICAL


- 2. Lift the seat to disconnect the electrical connector.
- 3. Remove passenger seat.

Installing the Passenger Seat

The installation is the reverse of removal procedure. However, pay attention to the following.

Ensure to reach the second step when latching.

BODY AND SEAT

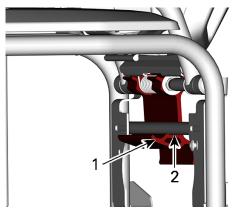

First step
 Second step

A WARNING

Ensure the latch is on the second step before riding.

EQUIPMENT

Some features may not apply to your model or could be optional.

Operator's Guide

The Operator's Guide should be stored in the Front Storage Compartment.

Mountain Strap


This handlebar strap shall be used only to provide additional pulling force when snowmobile is stuck in a slanted position. On an exceptional basis it can be used at very slow speed only, when standing on the right running board to bring the vehicle back on its desired path. When riding, both hands should remain on the handlebar grips to provide braking capability, as well proper steering and directional control. Do not use handlebar strap for towing, lifting or side hilling.

A WARNING

Do not use while riding at speed. Steering control is highly reduced and brake control is not possible.

Electric Visor Jack Connector

An electric visor can be connected to the jack connector. A stress relief extension is supplied with the vehicle.

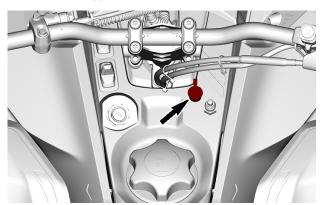

TYPICAL — DRIVER - ELECTRIC VISOR JACK CONNECTOR
I OCATION

Drive Belt Guard

Removing the Drive Belt Guard

A WARNING

NEVER operate engine:

- Without shields and belt guard securely installed.
- With hood and/or side panels opened or removed.

NEVER attempt to make adjustments to moving parts while engine is running.


NOTE:

Belt guard is purposely made slightly oversize to maintain tension on its pins and retainers preventing undue noise and vibration. It is important that this tension be maintained when reinstalling.

Remove tether cord cap from engine cut-off switch.

Open the LH side panel. See procedure in this section.

Remove retaining pin.

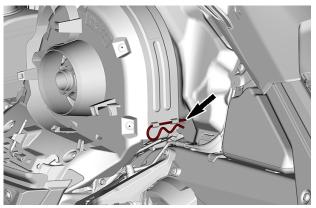


TYPICAL


Lift rear portion of guard then release from front tab.

Installing the Drive Belt Guard


1. Insert belt guard tab in front support slot.

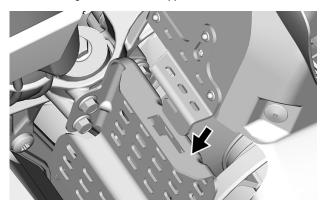

2. Push drive belt guard toward engine then toward front of vehicle.

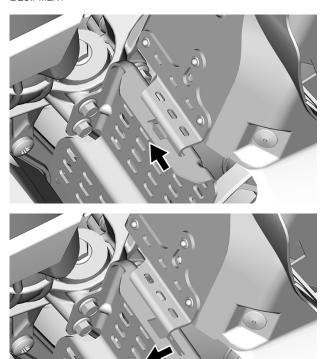


3. Insert belt guard tab between bottom pan and hook.

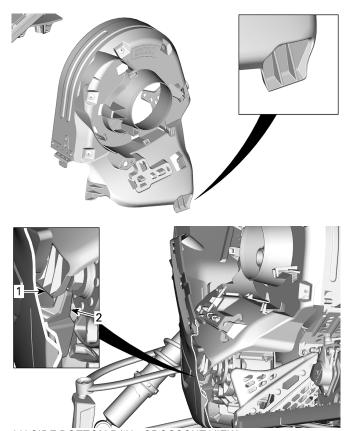

LH SIDE BOTTOM PAN - CROSSCUT VIEW

- Belt guard tab
 Bottom pan hook
- 4. Position the rear portion of the belt guard over the retainer and secure it using the retaining pin.

EQUIPMENT

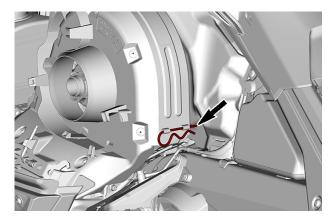

Spare Drive Belt Holder

A spare drive belt can be stored in a holder located on the drive belt guard.

NOTE:

The spare drive belt is not supplied with the snowmobile.


Position spare drive belt into drive belt guard slot.



TYPICAL

- Drive belt guard
 Slot

Secure in place by sliding it behind the tabs.

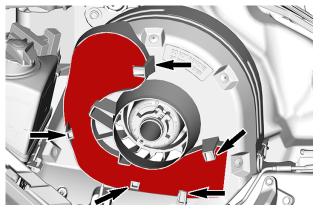


TYPICAL

Tools

A part of the drive belt guard is designed to hold the tools allowing for basic maintenance.

The tools are supplied with the vehicle. They should always be installed in their proper location and orientation.

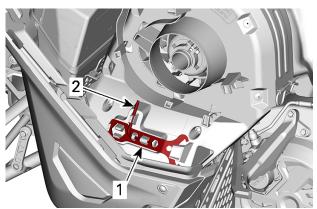

TYPICAL - DRIVE BELT GUARD TOOLS LOCATION

- 1. Suspension adjustment tool
- 2. Pulley expander and headlight adjustment tool

Install in the following sequence:

A CAUTION


Make sure tools are secured properly. Tools may detach and cause damage to rotating parts.

1. Slide the suspension adjustment tool open end under retaining tab.




SUSPENSION ADJUSTMENT TOOL


2. Press the closed end on the retaining tabs.

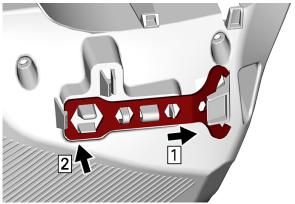

3. Slide the Pulley expander and headlight adjustment tool short end into hole.

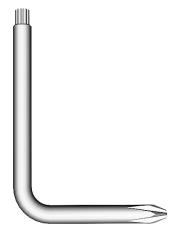


PULLEY EXPANDER AND HEADLIGHT ADJUSTMENT TOOL
4. Rotate and clip long end in place.

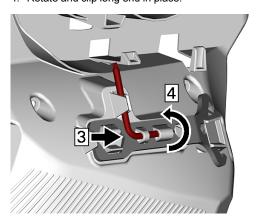


Rear Storage Compartment (if equipped)

A storage compartment is located at the rear of the seat, above the battery cover.

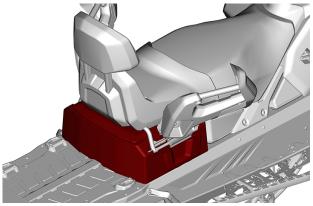

TYPICAL


To open, tilt passenger seat (if equipped).

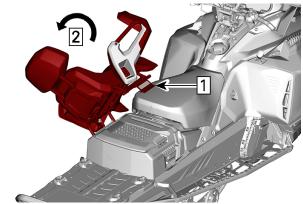

TYPICAL

- Unlock seat latch
 Tilt passenger seat

Lift handle.

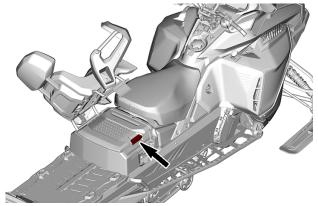


TYPICAL


Cargo Box (if equipped)

The cargo box can contain up to 22 kg (44 lb) on the cover and a total of 48 kg (105 lb) (including weight on cover).

The cargo box is secured by LinQ attachment. To Install, lower box in cargo area.

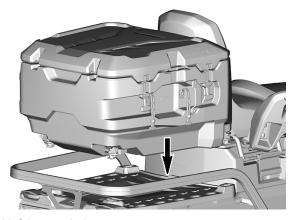

Turn LinQ levers to lock.

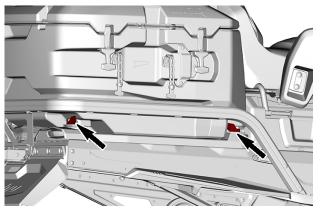

RH SIDE SHOWN - REPEAT ON LH SIDE


Hitch (if equipped)

NOTE:

Refer to decal on vehicle for towing weight capacities.


Hitch type availability depends on applicable models and regions.

Hitch receiver

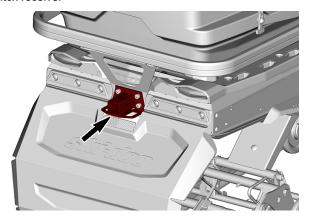


Use the hitch in conjunction with a tow bar to tow an accessory.


Tongue Hitch

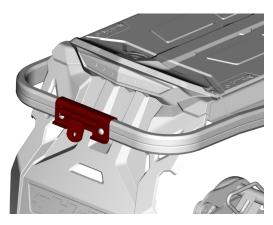

J-Hook Hitch

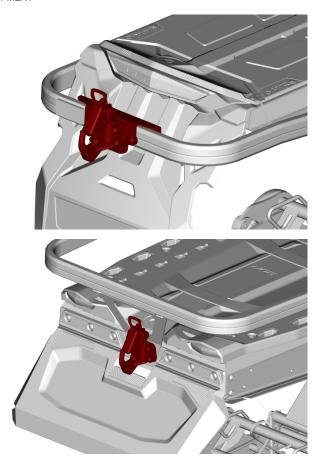

To open the hook, push and turn the handle to retract locking plate.

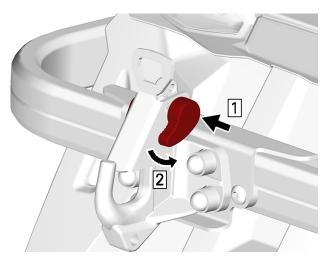

When attaching any accessory, always refer to the manufacturer's recommendations.

⚠ WARNING

Never tow an accessory with a rope. Always use a rigid tow bar. Using a rope would result in a collision between the object and the snowmobile and possibly in a tip over in case of a rapid deceleration or on a downward slope.

FUEL

Fuel Requirements

NOTICE

Always use fresh gasoline. Gasoline will oxidize; the result is loss of octane, volatile compounds, and the production of gum and varnish deposits which can damage the fuel system.

Alcohol fuel blending varies by country and region. Your vehicle has been designed to operate using the recommended fuels, however, be aware of the following:

- Use of fuel containing alcohol above the percentage specified by government regulations is not recommended and can result in the following problems in the fuel system components:
 - Starting and operating difficulties.
 - Deterioration of rubber or plastic parts.
 - Corrosion of metal parts.
 - Damage to internal engine parts.
- Inspect frequently for the presence of fuel leaks or other fuel system abnormalities if you suspect the presence of alcohol in gasoline exceeds the current government regulations.
- Alcohol blended fuels attract and hold moisture which may lead to fuel phase separation and can result in engine performance problems or engine damage.

Recommended Fuel

Use unleaded gasoline containing MAXIMUM 10% ethanol. The gasoline must have the following minimum octane requirements:

Fuel type	Engine	Minimum octane rating
Fuel with NO ethanol	600 ACE 900 ACE	87 AKI (RON+MON)/2 92 RON
	900 ACE Turbo 900 ACE Turbo R	91 AKI (RON+MON)/2 95 RON
Fuel which may contain up to 10% MAX ethanol	600 ACE 900 ACE 900 ACE Turbo 900 ACE Turbo R	91 AKI (RON+MON)/2 95 RON

186

NOTICE

Never experiment with other fuels. Engine or fuel system damages may occur with the use of an inadequate fuel.

NOTICE

Do NOT use fuel from fuel pumps labeled E85.

Use of fuel labeled E15 is prohibited by U.S. EPA Regulations.

Fueling Procedure

WARNING

Always stop engine before refueling.

A WARNING

Fuel is flammable and explosive under certain conditions. Never use an open flame to check fuel level. Never smoke or allow flame or spark in vicinity. Always work in a well-ventilated area.

NOTE:

Do not sit or lean on seat when fuel tank cap is not properly installed.

- 1. Stop engine.
- 2. Have operator and passenger get off vehicle.


A WARNING

Do not allow anyone seated on the vehicle while fueling.

Unscrew slowly the fuel reservoir cap counterclockwise to stabilize pressure before removing it.

NOTE:

A short whistling sound is normal.

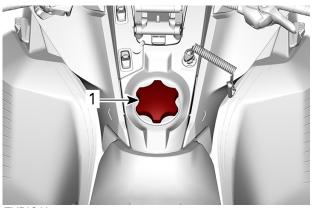

TYPICAL

- 1. Fuel tank cap
- Insert the spout into the filler neck.
- Pour fuel slowly so that air can escape from the tank and prevent fuel flow back. Be careful not to spill fuel.
- Stop filling when the fuel reaches the bottom of filler neck. Do not overfill

A WARNING

Never top up the fuel tank before placing the vehicle in a warm area. As temperature increases, fuel expands and may overflow.

7. Fully tighten fuel reservoir cap clockwise.

⚠ WARNING

Always wipe off any small fuel spillage from the vehicle. If a major spillage occurs, remove side panels to remove fuel vapors from engine compartment before starting.

NOTE:

Do not sit or lean on seat when fuel tank cap is not properly installed.

ENGINE OIL

Recommended Oil

Rotax[®] engines were developed and validated using the XPS™ oil. BRP recommends the use of its XPS engine oil or an equivalent at all time. Do not add any oil additives to the recommended engine oil. Damages caused by the use of an oil not suitable for the engine or by adding of an oil additives may not be covered by the BRP Limited Warranty.

XPS RECOMMENDED Engine Oil

4T 0W40 Synthetic oil

IF THE RECOMMENDED XPS ENGINE OIL IS NOT AVAILABLE

Use a 0W40 4-stroke SAE synthetic engine oil meeting or exceeding the following lubricant industry specifications. Always check the API service label certification on the oil container, it must contain at least the indicated standard.

API service classification SN

BREAK-IN PERIOD

Operation During Break-In

Engine

During the break-in period:

- Avoid prolonged full throttle operation.
- Avoid sustained accelerations.
- Avoid prolonged cruising speeds.
- Avoid engine overheating.

However, brief accelerations and speed variations contribute to a good break-in.

During a predetermined period, the engine management system controls some engine parameters.

The duration is based on fuel volume. It will take approximately two fuel tanks to complete the break-in.

During this period:

- The engine performance and behavior will not be optimal.
- The fuel and oil consumption will be higher.

Drive Belt

A new drive belt requires a break in period of 50 km (30 mi).

During the break-in period:

- Avoid strong acceleration and deceleration.
- Avoid pulling a load.
- Avoid high speed cruising.

If the vehicle creeps, lower the drive belt height from the preliminary setting. Refer to *Drive Belt* in *maintenance procedure*.

BASIC PROCEDURES MODELS WITHOUT GEARBOX

Engine Starting Procedure

Procedure

- Apply parking brake.
- Recheck throttle control lever operation.
- Put your helmet on.
- Ensure that the tether cord cap is installed on the engine cut-off switch and that the cord is attached to your clothing eyelet.
- Ensure that the emergency engine stop switch is in the ON position (up).

WARNING

Never depress throttle while starting engine.

6. Release parking brake.

NOTF:

For an initial cold start, do not release parking brake. Perform the vehicle warm-up procedure as explained below.

Depress the START button to engage the electric starter and start the engine. Release button immediately when engine has started.

NOTICE

Do not engage electric starter for more than 10 seconds at a time. A rest period should be observed between the cranking cycles to allow electric starter to cool down.

Emergency Starting

Do not attempt any emergency starting procedure. Have the battery charged or replaced.

Vehicle Warm-Up

Before every ride, vehicle has to be warmed up as follows.

- Start engine as explained in ENGINE STARTING PROCEDURE (PAGE 191) ENGINE STARTING PROCEDURE above.
- 2. Allow engine to warm up one or two minutes at idle speed.

NOTE:

Engine will shut down after approximately 12 minutes of idling.

- Disengage parking brake.
- Apply throttle until drive pulley engages. Drive at low speed the first two or three minutes.

NOTICE

If vehicle does not move when throttle is applied, stop engine, remove tether cord cap from the engine cut-off switch, then do the following.

- Check if skis are stuck on the ground. Lift one ski at a time by the handle, then put it down.
- Check if track is stuck on the ground. Lift rear of snowmobile enough to clear track from the ground, then drop.
- Check rear suspension for hard snow or ice accumulation that could interfere with track rotation. Clean the area.
 - Validate that transmission is engaged (not in neutral).

CAUTION

Beware of injuries by using proper lifting techniques, notably using your legs force. Do not attempt to lift the rear of vehicle if it is above your limits.

A WARNING

Make sure tether cord cap is removed before standing in front the vehicle, getting close to the track or rear suspension components.

NOTE:

Warm-up is electronically controlled. During this period (up to 10 minutes depending on ambient temperature), engine RPM is limited.

Shifting in High or Low range


This transmission is designed to accept shifting while moving. However, shifting while the engine is under heavy load is not recommended.

NOTICE

Shifting at a speed faster than 30 km/h (19 MPH) may cause serious damage to the gearbox.

High Range

This position selects the high speed range of the gearbox. It is the normal driving speed range. It allows the vehicle to reach its maximum speed.

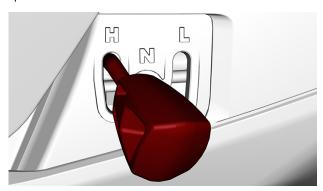

Low Range


This position selects the low speed range of the gearbox. It allows the vehicle to move slowly with maximum engine torque.

Low range should be used whenever:

- Pulling a cargo carrier or accessory
- Hauling a load
- Crossing obstacles
- Climbing onto trailer
- Hill climbing

It is also recommended to use low range if driving for prolonged periods at speeds under 24 km/h (15 MPH).

BASIC PROCEDURES MODELS WITHOUT GEARBOX

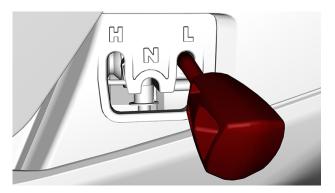


NOTICE

Use the low speed range to pull a cargo carrier, carry heavy cargo, go over obstacles or drive uphill and downhill.

Shifting in Reverse

- 1. Bring vehicle to a complete stop.
- Apply and hold brake. Remain seated, refer to Rider Position (Reverse Operation) in Riding the vehicle for posture information.
- With engine at idle speed, select reverse (R) gear using the reverse lever or Start / RER button.


Models with Reverse Lever

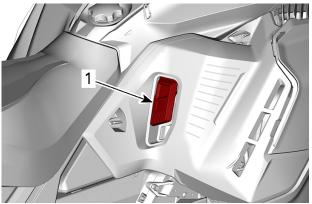

TYPICAL

1. Reverse lever

Models with Start / RER button

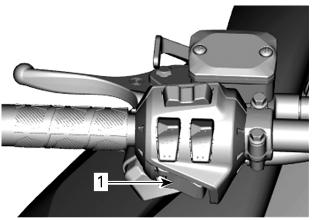

- 1. Start / RER button
- Wait until reverse beeper sounds, then gently depress throttle lever.

A WARNING

The reverse speed is not limited. Always proceed with caution as fast reverse could result in loss of vehicle stability. Come to complete stop before activating the reverse. Always remain seated and apply the brake before shifting. Ensure the path behind is clear of obstacles or bystanders before proceeding.

Shifting in Forward from Reverse

- Bring vehicle to a complete stop.
- Apply and hold brake.
- 3. Press and release the RER button or reverse lever.
- Apply throttle slowly and evenly. Allow drive pulley to engage then accelerate carefully.

Shutting Off the Engine

Release throttle lever and wait until engine has returned to idle speed.

Shut off the engine using either the emergency engine stop switch or by pulling off the tether cord cap from the engine cut-off switch.

♠ WARNING

Always remove the tether cord cap from engine cut-off switch when vehicle is not in operation in order to prevent accidental engine starting or to avoid unauthorized use by children or others or theft.

After engine shutdown:

The fan may remain active between 1 and 4 minutes after the shut-down depending on the exhaust temperature.

SPECIAL PROCEDURES

General

NOTE:

Component failures resulting from these events are not warrantable.

Refer to the appropriate subsections in this manual for the required tasks outlined in these procedures.

Fuel Flooded Engine

If the engine does not start and it is fuel-flooded, this special mode can be activated to prevent fuel injection and to cut ignition while cranking. Proceed as follows:

- For models equipped with a gearbox, move shift lever in park position.
- Turn the ignition key in ON position or install key on D.E. S.S. post.
- Turn ignition key in START position or press the engine START button during 10 seconds.
- Release the ignition key or the engine START button.
- Release throttle lever completely.
- Turn the ignition key to START position or press the engine START button again to allow starting.

If the engine does not start:

- Unplug injector electrical connector
- 2. Clean the spark plug caps area then remove them.
- 3. Remove the spark plugs.
- Crank engine several times.

- Install new spark plugs if possible or clean and dry spark plugs.
- Start engine as explained above.

NOTICE

Verify that there is no fuel in engine oil. If so, replace engine oil.

If it does not work:

- 1. Check fuses condition.
- Check the ignition system.
- 3. Check the fuel system.

Rolled Over Vehicle

Inspect components of the following systems: cooling, suspension, drivetrain and steering.

Inspect body and chassis for damage (welded joints, bent or cracked parts).

If vehicle has no damage, refer to *Maintenance Procedures* and inspect the following.

- Check for oil accumulation in the air intake system.
- Check the air filter
- Check all fluids level before restarting engine.
- After restarting engine, check multifunction gauge if any malfunction is detected.
- Troubleshoot and repair as required before using vehicle.

Submerged Vehicle

In the event the vehicle was submerged, proceed with the following.

NOTICE

A submerged vehicle may cause several damages (short and long term) if not serviced adequately or soon enough. If water was drawn into the engine, the engine is most likely in a hydraulic lock. Do not crank or start engine or severe damage will occur. Inspect engine for water intrusion and hvdraulic lock damage (water in the oil and cylinders, bent piston rod...). Čarry out all items in this topic before cranking or attempting to start engine.

For models equipped with turbocharger.

- Check for water intrusion through both sides of the turbo (impeller and compressor sides). Clean and dry as required.
- Inspect the boost control solenoid valve. Clean valve, test engine and turbo system for proper operation. Replace valve if required.

For models equipped with Water Injection System.

 Look for water in ICE fluid tank, if in doubt, flush ICE fluid and refill with new fluid.

For all models.

- Drain the entire air intake system. Remove parts as required.
- Inspect the throttle body.
- 6. Replace the air filter.
- Drain, inspect and clean the CVT.

- Empty mufflers (removal required).
- Unplug ECM, multifunction gauge and open fuse boxes. Check for presence of water. Dry as necessary.
- Inspect all lights for water intrusion. Dry as required.
- Replace the engine oil (without starting the engine).
- Remove spark plugs. Crank engine in drowned mode to expel any water.

A CAUTION

Keep away from spark plug holes to avoid being splashed when cranking engine.

- 13. Add a small quantity of engine oil in cylinders (approxi-
- mately 2 teaspoonfuls).

 14. Install spark plugs (replace if required).
- Look for water in fuel tank, if in doubt, flush fuel tank and refill with new gas.
- Look for water in brake system. Replace brake fluid as required.
- Before starting engine, use the BRP Diagnostic Software (BUDS2) and check vehicle for fault codes.
- 18. Start the engine and allow it to run at idle speed until the engine reaches its operating temperature.
- 19. Stop the engine.
- 20. Change engine oil and filter.

NOTE:

Change oil as many times as necessary, until there is no whitish appearance in engine oil.

- 21. Check chaincase or gearbox oil. Replace oil if contaminated with water.
- 22. Lubricate suspension components.
- 23. Spray all metal parts with lubricant to prevent corrosion.

Lubricant and anti-corrosive

Test drive to confirm proper operation.

RIDING CONDITIONS AND YOUR SNOWMOBILE

Altitude

At factory, your snowmobile was calibrated to be used within an altitude range (relative to sea level).

A new snowmobile has a tag attached to the handlebar indicating its calibration. Refer to Safety Information on Vehicle.

If for any reason you don't know your snowmobile calibration, contact an authorized BRP snowmobile dealer.

If your snowmobile is to be used at an altitude outside the specified range, have it calibrated accordingly by an authorized BRP snowmobile dealer.

NOTICE

An inappropriate altitude calibration would decrease performance and may cause serious damage to the snowmobile.

Temperature

The engine management of these engines provides the optimum air/fuel ratio for all temperatures.

Hard Packed Snow

All models covered in this guide which are equipped with a minimum track profile of 44 mm (1.75 in) are built for deep snow conditions and should never be used during a prolonged period of time in marginal or hard packed snow conditions.

In the event you have to ride in these types of conditions:

- Avoid exceeding a speed of 70 km/h (45 mph) in all conditions
- Avoid hard acceleration (over 75% of throttle)
- Ice scratchers should be applied
- Engine temperature should not exceed 75% on the temperature gauge.

NOTICE

Running these types of tracks at high speed on a trail, on hard packed surfaces or on ice puts more stress on the lugs, which tends to heat up as a result. It also could drastically reduce the life of specific wear parts. To avoid potential degradation, delamination or damages to the track and wear parts, reduce your speed and minimize the distance that is being ridden on these types of surfaces.

Vehicles Equipped with Ice Scratchers

Ice scratchers are equipped on the vehicle to increase engine cooling efficiency, to lubricate and to cool track clips and sliders. They must be used whenever on ice, hard packed snow, or any conditions that do not lift enough snow particles into the rear suspension and the tunnel

NOTICE

Although it is not recommended to ride a snowmobile equipped with a high lug profile track on trails or hard packed snow conditions, it is highly suggested to combine idler wheels and ice scratchers on a vehicle used in these conditions.

IMPORTANT

Ridding in these trail conditions puts the reliability of the track and its warranty at risk

If equipped with the following track profile heights, never exceed the recommended sustained vehicle speeds listed.

Track Profile Height	Maximum Sustained Speed
57 mm (2.25 in) 60 mm (2.36 in)	110 km/h (70 MPH)
64 mm (2.52 in) 75 mm (3 in)	95 km/h (60 MPH)

TUNE YOUR RIDE

Snowmobile handling and comfort depend upon multiple adjustments.

⚠ WARNING

Suspension adjustment could affect vehicle handling. Always take time to familiarize yourself with the vehicle's behavior after any suspension adjustment have been made. Always adjust LH and RH suspension components to the same setting.

Choice of suspension adjustments vary with carrying load, operator's weight, personal preference, riding speed and field condition.

NOTF:

Some adjustments may not apply to your snowmobile.

A WARNING


Before proceeding with any suspension adjustment, remember:

- Park in a safe place.
- Remove the tether cord cap from the engine cut-off switch.
- Use appropriate lifting device or have assistance to share lifting stress. If a lifting device is not used, use proper lifting techniques, notably using your legs force.
- Do not attempt to lift the front or rear of vehicle if it is above your limits.
- Support front of vehicle off the ground with a suitable device before adjusting suspension.
- Support rear of vehicle off the ground with a wide-base snowmobile stand with a rear deflector panel.
- Make sure support device is stable and secure.

The best way to set up the suspension is to customize each adjustment one at a time. Various adjustments are interrelated. It may be necessary to readjust center spring after adjusting front springs for instance. Test run the snowmobile under the same conditions; trail, speed, snow, operator riding position, etc. Proceed methodically until you are satisfied.

Following are guidelines to fine-tune suspension. Use suspension adjustment tool provided in the tool kit.


Rear Suspension Adjustments

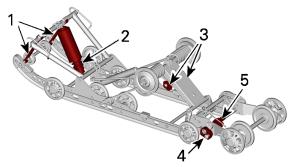

SC-5U - ADJUSTABLE COMPONENTS

- 1. Stopper straps

- Center spring
 Rear springs
 Extension stabilizer cam
- 5. Extension spring cam

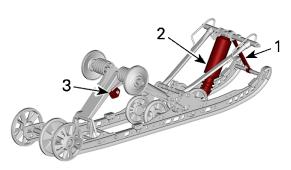

CMOTION

- Stopper strap
 Center spring
- 3. Rear spring

NOTICE

Whenever adjusting rear suspension, check track tension and adjust if necessary.

Stopper Strap

Stopper strap length has an effect on the amount of weight the center spring has to carry especially during acceleration, therefore on the front end uplift.

Stopper straps length also has an effect on center spring travel.

NOTICE

Whenever stopper strap length is changed, track tension must be checked.


Action	Result
Increasing stopper strap length	Lighter ski pressure under acceleration
	More center spring travel
	More bump absorption capability
	Heavier ski pressure under acceleration
Decreasing stopper strap length	Less center spring travel
	Less bump absorption capability

NOTE:

Stopper strap could be set to position 4, 5, 6 and 7. Below are illustrations for position 4 and 6. Smaller numbers correspond to a longer strap setting.


NOTICE

Do NOT set to a position lower than 4. It could lead to center shock damage.

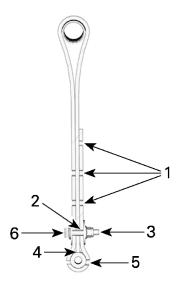

STOPPER STRAP POSITION 4 (4TH HOLE, FACTORY SETTINGS)

- 1. Free holes
- 2. 4th hole from end
- 3. Towards rear
- 4. Tip of strap touching strap axis
 5. Two holes left open between screw head and nut
 6. Towards front

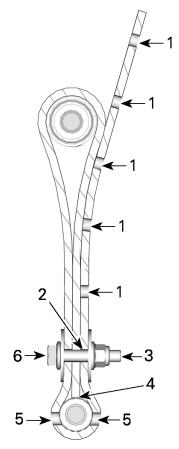

STOPPER STRAP POSITION 6 (6TH HOLE)

- 1. Free holes
- 6th hole from end
- 6th hole from
 Towards rear
- Tip of strap touching strap axis
 Two holes left open between screw head and nut
 Towards front

Always install the stopper strap bolt as close as possible to the lower shaft.

NOTF:

Decreasing the stopper strap length may reduce comfort.

When operating the snowmobile in deep snow, it may be necessary to vary stopper strap length and/or riding position, to change the angle at which the track rides on the snow. Operator's familiarity with the various adjustments as well as snow conditions will dictate the most efficient combination.

Generally, a longer stopper strap setting gives better performance in deep snow on a flat landscape.

Center Spring


Center spring preload has an effect on steering effort, handling and bump absorption.

Also, since center spring preload adjustment puts more or less pressure on the front of the track, it has an effect on the performance in deep snow.

Action	Result
Increasing preload	Lighter steering
	More bump absorption capability
	Better deep snow starts
	Better deep snow performance and handling
	Heavier steering
Decreasing preload	Less bump absorption capability
	Better trail handling

Cam Type Adjuster


Using the suspension adjustment tool provided in the tool kit, turn the cam to increase or decrease the spring preload.

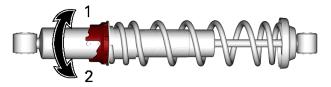

- Increase preload
- 2. Decrease preload

Ring Type Adjuster

Grab and turn the ring and the spring to increase or decrease the spring preload.

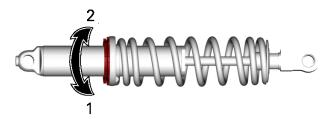

- 1. Increase preload
- 2. Decrease preload

Rear Spring

Rear spring preload has an effect on comfort, ride height and load compensation.

Also, adjusting rear spring preload shifts more or less weight to the snowmobile front end. As a result, more or less weight is applied to the skis. This has an effect on performance in deep snow, steering effort and handling.

Slight suspension bottoming occurring under the worst riding conditions indicates a good choice of spring preload.

NOTE:


Ensure to adjust suspension when hauling cargo.

NOTE:

Remove cargo load to ease preload adjustment.

Action	Result
Increasing preload	Firmer rear suspension
	Higher rear end
	More bump absorption capability
	Heavier steering
	Softer rear suspension
	Lower rear end
Decreasing preload	Less bump absorption capability
	Lighter steering
	Better performance and handling in deep snow

Refer to the following to determine if preload is correct.

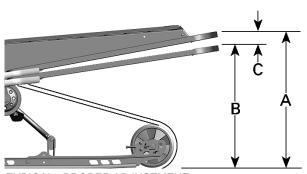

TYPICAL - PROPER ADJUSTMENT

- A = Suspension fully extended B = Suspension has collapsed with operator, passenger and load added
- C = Distance between dimension "A" and "B", see table below

С	What to do
50 to 75 mm (2 to 3 in)	No adjustment required
More than 75 mm (3 in)	Adjusted too soft. Increase preload
Less than 50 mm (2 in)	Adjusted too firm. Decrease preload

NOTE:

If the specification is unattainable with the original springs, see an authorized BRP snowmobile dealer for other available springs.


NOTICE

To increase spring preload, always turn the left side adjustment cam in a clockwise direction, and the right side cam in a counterclockwise direction.


A CAUTION

Never set preload cams directly from position 5 to 1 or directly from position 1 to 5.

The adjustment cams have 5 different settings, 1 being the softest.

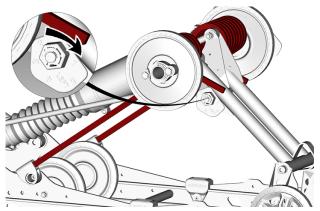


SPRING PRELOAD ADJUSTMENT LH — TYPICAL

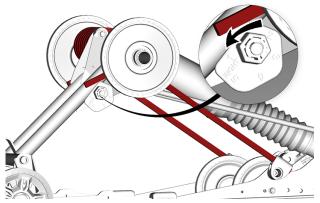

SPRING PRELOAD ADJUSTMENT RH — TYPICAL

Rear Suspension Extension Spring Preload (SC-5U) Adjust by turning the preload cam.

TUNE YOUR RIDE

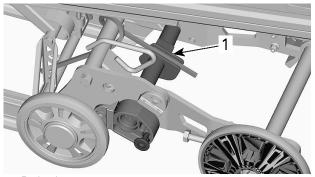


1. Preload cam

ACTION	RESULT
Increasing preload	More track surface on the ground
	Less extension lift
Decreasing preload	Better reverse capability especially in deep snow
	More extension lift


Rear Suspension Extension Stabilizer Cam

To change stabilizer cam setting, pull lock off, then turn cam.


Ensure the lock if fully pushed-in when locked.

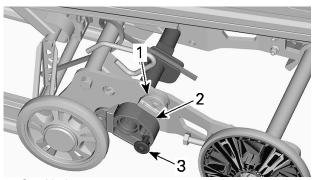

- Stop block
 Stabilizer cam
 Lock

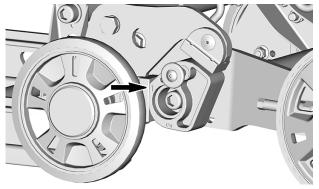

POSITION 1

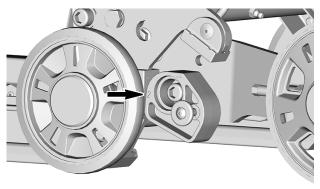

POSITION 2

Cam setting	Result
Away from upper stop block	Allows free movement of the suspension extension on its entire stroke
(Position 2)	General use
	Good reverse capability
	Locks the suspension extension in line with the suspension rails
Leaning on both stop blocks (Position 1)	Better traction, full track contact surface
	Better towing capability

Adjustment Tips According to Vehicle Behavior

Problem	Corrective Measures	
Front suspension darting	Check ski alignment. - Reduce front suspension spring preload. - Increase center spring preload. - Reduce rear spring preload.	
Steering feels too heavy at steady speeds	Reduce front suspension spring preload.Increase center spring preload.	
Steering feels too heavy during acceleration	Reduce rear spring preload.Lengthen limiter strap.	
Too much ski lift during cornering or acceleration	Shorten limiter strap.Increase rear spring preload.	
Rear of snowmobile seems too stiff	Reduce rear spring preload.	
Rear of snowmobile seems too soft	Increase rear spring preload.	
Rear suspension is frequently bottoming	 Increase rear spring preload. Increase center spring preload. Lengthen limiter strap. 	
Snowmobile seems to pivot around its center	 Reduce center spring preload. Increase rear spring preload. Increase front suspension spring preload. Shorten limiter strap. 	
Track spins too much at start	Lengthen limiter strap. Reduce rear spring preload. Increase center spring preload.	

This page is intentionally blank

MAINTENANCE

MAINTENANCE SCHEDULE

Maintenance is very important to keep your vehicle in safe operating condition. The vehicle should be serviced as per the maintenance schedule

Proper maintenance is the owner's responsibility. A warranty claim may be denied if, among other things, the owner or operator caused the problem through improper maintenance or use.

Perform periodic checks and follow the maintenance schedule. The maintenance schedule does not exempt the pre-ride inspection.

A WARNING

Failure to properly maintain the vehicle according to the maintenance schedule and procedures can make it unsafe to operate.

EPA Regulation - Canadian and USA Vehicles

A repair shop or person of the owner's choosing may maintain, replace, or repair emission control devices and systems. These instructions do not require components or service by BRP or authorized BRP snowmobile dealers.

Although an authorized BRP snowmobile dealer has an in-depth technical knowledge and tools to service your vehicle, the emission-related warranty is not conditioned on the use of an authorized BRP snowmobile dealer or any other establishment with which BRP has a commercial relationship.

Proper maintenance is the owner's responsibility. A warranty claim may be denied if, among other things, the owner or operator caused the problem through improper maintenance or use.

For emission-related warranty claims, BRP is limiting the diagnosis and repair of emission-related parts to the authorized BRP snowmobile dealers. For more information, please refer to the *US EPA Emissions PERFORMANCE WARRANTY* contained in the *warranty* section.

You must follow the instructions for fuel requirements in the fueling section of this manual. Even if gasoline containing greater than ten volume percent ethanol is readily available, the US EPA issued a prohibition against the use of gasoline containing greater than 10 vol% ethanol that applies to this vehicle. The use of gasoline containing greater than 10 vol% ethanol with this engine may harm the emission control system.

Trail/ Crossover/ Utility Usage

Whether your vehicle is a Trail, Crossover, or Utility model, these types of usage require maintenance tasks to be performed between the regular yearly intervals. These are identified as A+ in the chart below.

If you regularly ride in **trails, explore the countryside, or work** with your snowmobile, follow the A+ Trail / Crossover / Utility interval and perform the tasks outlined in the chart below.

Extreme Cold Condition

An engine that is frequently operated at or below an ambient temperature of -25 °C (-13 °F) will require an increase in service and maintenance schedule.

Any combustion engine operated at these low ambient temperature will collect an increased amount of condensation at every startup/warm-up.

Since the engine is not reaching operating temperatures for extended periods of time, the oil is starting to be strongly diluted with water and gas residue (more water content).

An engine needs to reach operating temperature, in order to be able to evaporate condensate out of the oil.

If daily usage (work or leisure driving cycle) is similar to those mentioned below, BRP strongly recommends changing the oil at least once a month.

Parameters of an increase in service and maintenance schedule:

- Engine not reaching the proper operating temperature during normal daily usage
- Multiple starts and stops without reaching operating temperature
- Short idle periods
- Low RPM driving cycle in short distances without reaching operating temperature.

NOTF:

BRP strongly recommends the installation of a block heater to help warm up the liquids, this will also help to extend the oil lifetime.

Maintenance Schedule

Make sure to perform proper maintenance at recommended intervals as indicated in the tables.

The maintenance chart indicates the items needing to be addressed based on 2 criteria, whichever happens first:

- Calendar time
- Odometer reading.

Your driving habits determines the factors you shall adhere too. For example:

- Someone who uses their vehicle every other weekend trail riding with friends would most likely follow the **odometer reading** to determine the frequency of his maintenance.
- Someone who uses their vehicle seldomly over the year or only on a few occasions would follow the calendar time to determine the frequency of his maintenance.

IMPORTANT: The following tables show the appropriate maintenance application for the first 3 years. For subsequent years, repeat the same pattern alternatively.

Maintenance Overview		
Calendar Time	Odometer	Trail/ Cross Over/ Utility
Every Month	1500 km (1000 mi)	A+
1 Year	3000 km (2000 mi)	Α
Every Month	4500 km (3000 mi)	A+
2 Years	6000 km (4000 mi)	A and B
Every Month	7500 km (5000 mi)	A+

600 ACE/900 ACE Engines

TRAIL / CROSSOVER /UTILITY	A+	Α	В
A = Adjust C = Clean I = Inspect L = Lubricate R = Replace T = Torque	Every month or 1500 km (1000 mi)	Every year or 3000 km (2000 mi)	Every 2 years or 6000 km (4000 mi)
Air and Fuel Delivery			
Fuel components (fuel cap, hoses, clamps and tank fixation) and function		I	
In-line fuel filter		R Every 5 years	
Body and Chassis			
Body panels and hardware		I, T	
Pivots, latches, hinges and key barrels		L	
Engine and Cooling			
Engine cooling components (coolant concentration, coolant level, hose condition, clamps, leaks)		I, A	
Engine oil and oil filter		R	
Engine seals and gaskets		I	
Spark plugs		R	

TRAIL / CROSSOVER /UTILITY	A+	Α	В
A = Adjust C = Clean I = Inspect L = Lubricate R = Replace T = Torque	Every month or 1500 km (1000 mi)	Every year or 3000 km (2000 mi)	Every 2 years or 6000 km (4000 mi)
		Every 3 years or 10 000 km (6000 mi)	
Engine coolant		R Every 5 years	
Exhaust and Emissions			
Exhaust components (gaskets, pipes, muffler condition, leaks)		ı	
Exhaust manifold		Т	
Brake			
Brake components and function		I, L	
Brake fluid			R Every 2 years
Drive			
Chaincase drive chain tension	Α	Α	
Gearbox / chaincase oil level	I	I	

TRAIL / CROSSOVER /UTILITY	A+	Α	В
A = Adjust C = Clean I = Inspect L = Lubricate R = Replace T = Torque	Every month or 1500 km (1000 mi)	Every year or 3000 km (2000 mi)	Every 2 years or 6000 km (4000 mi)
Track alignment and tension	Α	I, A	
Gearbox / chaincase oil			R
Continuously Variable Tra	nsmission (CVT)	
CVT components and function		I, C, L	
CVT drive belt condition	ı		
CVT drive belt tension	Α	Α	
Drive pulley retaining screw		Т	
Electrical			
Battery connections and condition		ı	
Electrical harness routing		I	
Headlight aim		Α	
Modules and applicable software updates		1	
Operation of control switches and lighting		ı	
Steering and Controls			
Ski runners	I	I	

TRAIL / CROSSOVER /UTILITY	A+	Α	В
A = Adjust C = Clean I = Inspect L = Lubricate R = Replace T = Torque	Every month or 1500 km (1000 mi)	Every year or 3000 km (2000 mi)	Every 2 years or 6000 km (4000 mi)
Gearbox position lever operation		I, A	
Steering alignment		I, A	
Steering components and function		I	
Throttle cable		Α	
Throttle operation		ı	
Suspension			
Suspension components and function		I, L	

MAINTENANCE PROCEDURES

This section includes instructions for basic maintenance procedures.

⚠ WARNING

Turn off the engine, remove tether cord cap and follow these maintenance procedures when performing maintenance. If you do not follow proper maintenance procedures you can be injured by hot parts, moving parts, electricity, chemicals or other hazards.

⚠ WARNING

Should removal of a locking device be required (e.g. lock tabs, self-locking fasteners, etc.) when undergoing disassembly/assembly, always replace with a new one.

Engine Coolant

! WARNING

Never open coolant tank cap when engine is hot.

Engine Coolant Level Verification


Open the RH side panel, see Body and Seat.

Check coolant level at room temperature. Liquid should be at cold level line of coolant tank.

NOTE:

When checking level at low temperature it may be slightly lower than the mark

If additional coolant is necessary or if entire system has to be refilled, refer to an authorized BRP snowmobile dealer, repair shop or person of your own choosing.

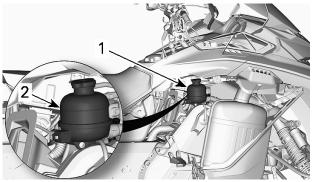

TYPICAL

- Coolant reservoir
- 2. COLD line

Recommended Engine Coolant

RECOMMENDED COOLANT

XPS Extended life pre-mixed coolant

IF THE RECOMMENDED XPS COOLANT IS NOT AVAILABLE

Distilled water and antifreeze solution (50% distilled water, 50% antifreeze)

NOTICE

Always use ethylene-glycol antifreeze containing corrosion inhibitors specifically for internal combustion aluminum engines.

Engine Oil

Extreme Cold Condition

An engine that is operated in -25°C/-13°F and below environment will require an increase in service and maintenance schedule.

Any combustion engine operated in such a low load and rather cold operating temperature collects an increased amount of condensation at every startup/warm-up.

Since the engine is not reaching operating temperatures for extended periods of time, the oil is starting to be strongly diluted with water and gas residue (more water content).

An engine needs to reach operating temperature, in order to be able to evaporate condensate out of the oil.

If daily usage (work or leisure driving cycle) is similar to those mentioned below, BRP strongly recommends changing the oil at least once a month.

Parameters of an increase in service and maintenance schedule:

- Engine not reaching the proper operating temperature during normal daily usage
- Multiple starts and stops without reaching operating temperature
- Short idle periods
 Low RPM driving cycle in short distances without reaching operating temperature.

NOTE:

BRP strongly recommends the installation of a block heater to help warm up the liquids, this will also help to extend the oil lifetime.

Recommended Oil

Rotax[®] engines were developed and validated using the XPS™ oil. BRP recommends the use of its XPS engine oil or an equivalent at all time. Do not add any oil additives to the recommended engine oil. Damages caused by the use of an oil not suitable for the engine or by adding of an oil additives may not be covered by the BRP Limited Warranty.

XPS RECOMMENDED Engine Oil

4T 0W40 Synthetic oil

IF THE RECOMMENDED XPS ENGINE OIL IS NOT AVAILABLE

Use a 0W40 4-stroke SAE synthetic engine oil meeting or exceeding the following lubricant industry specifications. Always check the API service label certification on the oil container, it must contain at least the indicated standard.

API service classification SN

Engine Oil Level Verification


NOTICE

Check level before each ride and refill if necessary. Do not overfill. Operating the engine with an improper level may severely damage engine. Wipe off any spillage.

With the engine at normal operating temperature (90 °C (194 °F) at oil tank surface), place vehicle on a level surface and proceed as follows to check oil level:

- Start engine and let it idle for at least 30 seconds.
 Stop engine.

- Open the LH side panel.
 Unscrew and remove dipstick and wipe clean.

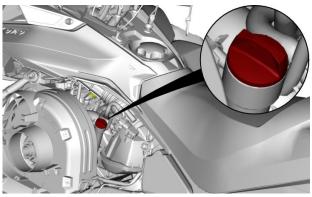

TYPICAL - LH SIDE OF VEHICLE

- 5. Put the dipstick back in the filler tube and fully tighten it
- 6. Remove dipstick again and check oil level. It should be near or equal to the MAX mark.



TYPICAL

- 1. MIN
- MAX
- 3. Operating range
- 7. To add oil, place a funnel into the filler tube to avoid spillage.

NOTE:

The oil quantity between MIN. and MAX. mark is approximately 500 ml (16.9 fl oz(US)).

- 1. Add a small amount of oil and recheck oil level.
- Repeat the operation until oil level reaches the dipstick's MAX mark. Do not overfill.
- 8. Reinstall dipstick and properly tighten it.
- 9. Wipe off any oil spillage.
- 10. Close the LH side panel.

CAUTION

Engine oil can be very hot.

A WARNING

Wipe off any oil spills. Oil is highly flammable when heated.

Replacing the Engine Oil

A CAUTION


The engine oil can be very hot. Wait until engine oil is warm.

NOTICE

Engine oil and oil filter must be replaced at the same time.


MAINTENANCE PROCEDURES

- 1. Bring engine to its normal operating temperature (90 $^{\circ}\text{C}$ (194 $^{\circ}\text{F})$ at oil tank surface).
- 2. Place vehicle on a level surface.
- 3. Remove the LH side panel.
- 4. Remove dipstick.

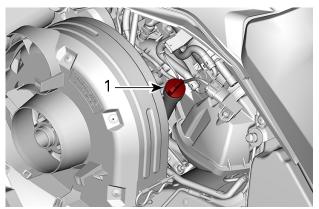


LH SIDE OF VEHICLE

- 1. Oil tank dipstick
- 5. Remove the oil filter.
- From underneath the vehicle, remove one access cover retaining screw and loosen the other.

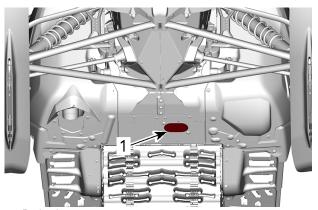

- 1. Drain plugs access cover
- 7. Pivot the access cover to clear the bottom pan opening.

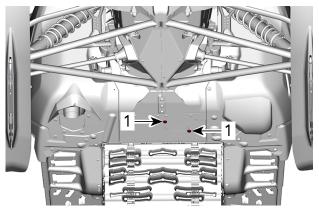


- 1. Retaining screws

- 8. Clean drain plug area.9. Place a drain pan under the bottom pan opening.10. Remove engine drain plugs in the following order.
 - 1. Main drain plug

MAINTENANCE PROCEDURES

2. Secondary drain plug

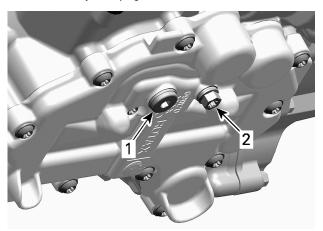


TYPICAL - UNDERNEATH THE ENGINE

- 1. Main drain plug
- 2. Secondary drain plug
- 11. Allow oil to drain completely.
 12. Install **NEW** sealing washers on oil drain plugs.

NOTICE

Never use a sealing washer a second time. Always replace with a new one.

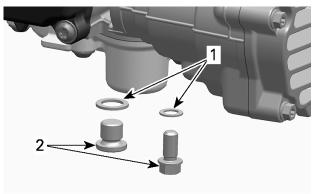

TYPICAL

- 1. Sealing washer
- 2. Oil drain plug
- 13. Install drain plugs and tighten to specification.

Tightening Torque	
Drain plugs	15 ± 2 Nm (133 ± 18 lbf-in)

- 14. Install a NEW oil filter.
- 15. Refill oil tank at the proper level with the recommended oil.

	Approximate Engine Oil Capacity (with filter)	
2.1 l (2.22 qt (liq.,US))		
Approximate Engine Oil Capacity (with filter)		

Approximate Engine Oil Capacity (with filter)


3.3 I (3.5 qt (liq.,US))

- 16. Reinstall dipstick in oil tank and properly tighten it.
- 17. Start engine and let it idle for a few minutes.
- 18. Ensure there are no leaks.
- Stop engine and check oil level as explained in this subsection. Refill if necessary.
- 20. Dispose oil and filter as per your local environmental regulations.

Engine Oil Filter Replacement

Removing the Oil Filter


- 1. Remove the RH side panel.
- 2. Clean oil filter area.
- Remove the oil filter cover and the filter.

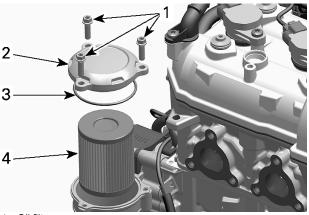

- 1. Oil filter cover screws
- 2. Oil filter cover
- 3. O-ring
- 4 Oil filter
- 4. Discard the O-ring and the filter.
- 5. Dispose filter as per your local environmental regulations.

Installing the Oil Filter

 Check the oil filter inlet and outlet orifices inside oil filter receptacle (integrated part of magneto cover) for dirt and contaminations.

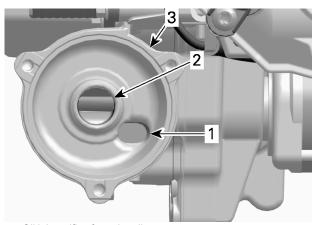

- Oil inlet orifice from the oil pressure pump
 Oil outlet orifice to the engine lubrication system
 Oil filter receptacle

- Install a **NEW** O-ring on oil filter cover.
 Lubricate filter seal and cover O-ring with engine oil.



Lubricate with engine oil

NOTICE

Pay attention to avoid pinching the O-ring during filter and cover installation.

- 4. Place the **NEW** filter into the oil filter compartment.
- 5. Install the oil filter cover.
- 6. Tighten oil filter cover screws to specification.

Tightening Torque		
Oil filter cover screws 10 ± 1 Nm (89 ± 9 lbf-in)		

7. Wipe off any oil spillage on engine.

Exhaust System

Exhaust System Verification

The muffler tail pipe should be centered with the exit hole in the bottom pan. Exhaust system must be free of rust or leaks. Make sure that all parts are securely in place.

Check retaining springs and heat shields condition and replace if necessary.

The exhaust system is designed to reduce noise and to improve the total performance of the engine. Modification may be in violation of local laws

NOTICE

If any exhaust system component is removed, modified or damaged, severe engine damage may result.

Spark Plugs

Spark plugs inspection or replacement may be performed by an authorized BRP snowmobile dealer, repair shop, or person of your own choosing. Spark plugs inspection or replacement requires an in-depth technical knowledge. Though not required, it is recommended that an authorized BRP snowmobile dealer performs spark plugs inspection or replacement.

Brake Fluid

Recommended Brake Fluid

Recommended Brake Fluid	
XPS DOT 4 Brake Fluid	
Alternative or if not available	
DOT 4 Brake Fluid	

Use only DOT 4 brake fluid from a sealed container. An opened container may be contaminated or may have absorbed moisture from the air

A WARNING


Use only DOT 4 brake fluid from a sealed container. To avoid serious damage to the braking system, do not use fluids other than the recommended one, nor mix different fluids for topping up.

Verifying the Brake Fluid Level - Model with Aluminum Reservoir

NOTICE


Vehicle must be on a level surface before checking any fluid levels.

 Position the handlebar in the straight-ahead position to ensure the reservoir is level. 2. Check brake fluid in the reservoir for proper level.

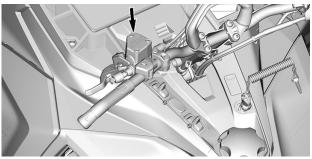

TYPICAL

Brake fluid must always be above the MIN. line when brake lever is squeezed.

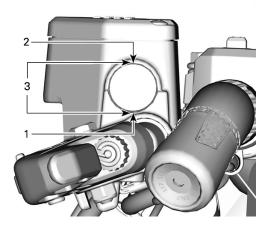

TYPICAL


- 1. Minimum
- 2. Maximum
- 3. Operating range

Adding Brake Fluid


NOTICE

Vehicle must be on a level surface before checking any fluid levels.


1. Clean the reservoir cap area.

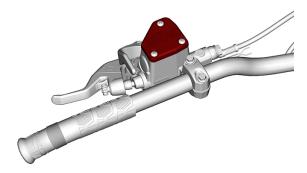

2. Remove the screws retaining the reservoir cap.

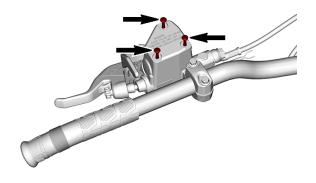

3. Remove the reservoir cap.

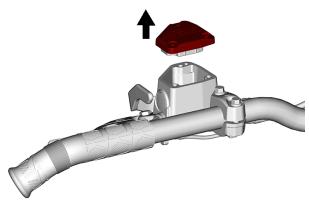


Add fluid as required. Do not overfill. Use only the recommended brake fluid.

⚠ CAUTION

Avoid getting brake fluid on skin or eyes - it may cause severe burns. In case of contact with the skin, wash thoroughly. In case of contact with the eyes, immediately rinse with plenty of water for at least 10 minutes and then consult a doctor immediately.

NOTICE

- Brake fluid can damage paint, rubber and plastic parts
- Protect these nearby parts with a rag when servicing the brake system
- Rinse thoroughly in case of spillage.
- Ensure the diaphragm is pushed in the reservoir cap before installing the cap one the reservoir.

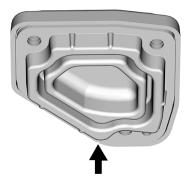

6. Reinstall reservoir cap and screws. Tighten to specification.

Tightening Torque	
Reservoir cap screws	0.7 ± 0.1 Nm (6 ± 1 lbf-in)

Chaincase Oil

Recommended Chaincase Oil


Recommended Chaincase Oil		
XPS Synthetic chaincase oil		
Alternative or if not available		
75W140 gear oil that meets the API GL-5 specification		

NOTICE

If the recommended XPS chaincase oil is not available, use a 75W140 gear oil that meets the API GL-5 specification. The chaincase of this snowmobile has been developed and validated using the XPS™ Synthetic chaincase oil. BRP strongly recommends the use of its XPS Synthetic chaincase oil at all times. Damages caused by oil which is not suitable for the chaincase will not be covered by the BRP limited warranty.

Verifying the Chaincase Oil Level

With the vehicle on a level surface, check the oil level by removing the check plug.

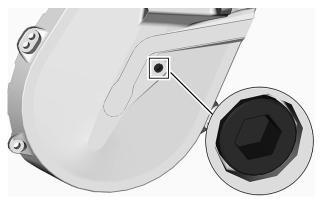

CHECK PLUG

Oil level must reach the threaded hole.

If level is correct, reinstall check plug and tighten to the specified torque.


Tightening Torque		
Check plug	6 ± 1 Nm (53 ± 9 lbf-in)	

If level is insufficient, refer to Chaincase Filling Procedure.

Replacing the Chaincase Oil

Draining the Chaincase Oil

- 1. Place the vehicle on a level surface.
- 2. Place a drain pan under the chaincase drain plug area.
- Remove filler cap.
- 4. Remove the drain plug located at the bottom of the chaincase.

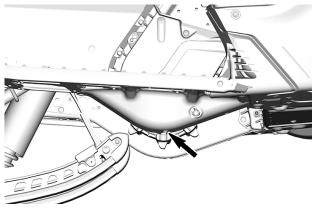


TYPICAL

- 5. Wait a while to allow all oil to drain out of the chaincase.
- 6. Install drain plug and tighten to specification.

Tightening Torque		
Chaincase drain plug	6 ± 1 Nm (53 ± 9 lbf-in)	


Filling the Chaincase

- 1. Open the RH side panel. Refer to Equipment.
- 2. Remove the check plug.

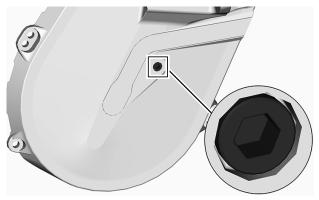

CHECK PLUG

3. Remove the filler cap.

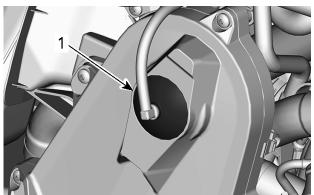

TYPICAL - TOP OF CHAINCASE

- 1. Filler cap
- Pour recommended oil in the filler hole until oil comes out by the check plug hole.
- 5. Reinstall check plug and tighten to specification.

Tightening Torque		
Check plug	6 ± 1 Nm (53 ± 9 lbf-in)	

Reinstall the filler cap.

Gearbox Oil

Recommended Gearbox Oil

XPS RECOMMENDED Chaincase Oil

XPS™ Synchromesh Transmission Synthetic Oil

IF THE RECOMMENDED XPS OIL IS NOT AVAILABLE

Use a 75W140 gear oil that meets the API GL-5 specification

NOTICE

The gearbox of this snowmobile has been developed and validated using the XPS synchromesh transmission synthetic oil. BRP strongly recommends the use of its synchromesh transmission synthetic oil at all times. Damages caused by oil which is not suitable for the gearbox will not be covered by the BRP limited warranty.

Gearbox Oil I evel

With the vehicle on a level surface, check the oil level by removing the check plug on the left side of gearbox.


Oil level must reach the threaded hole's lower edge.



CHECK PLUG.

To add oil, proceed as follows:

1. Remove the filler plug.

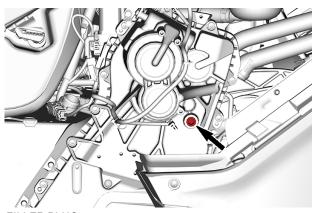

FILLER PLUG


- Pour recommended oil in gearbox by the filler hole until oil comes out by the check plug hole.
 Reinstall check and filler plug and tighten to specifications.

TIGHTENING TORQUE		
Check plug	6 ± 1 Nm (53 ± 9 lbf-in)	
Filler plug	8 ± 1 Nm (71 ± 9 lbf-in)	

Replacing the Gearbox Oil

Gearbox Oil Draining

- 1. Place the vehicle on a level surface.
- 2. Place a drain pan under gearbox drain plug area.
- 3. Remove filler cap.
- 4. Remove the drain plug located at the bottom of gearbox.

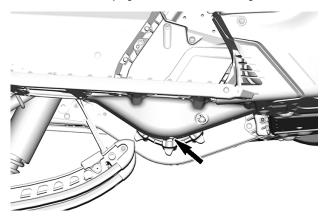

- 5. Wait a while to allow all oil to drain out of gearbox.
- 6. Install drain plug and tighten to specification.

Tightening Torque		
Gearbox drain plug	6 ± 1 Nm (53 ± 9 lbf-in)	


Gearbox Oil Filling

NOTE:


Vehicle must be on a level surface

MAINTENANCE PROCEDURES

- 1. Remove the filler plug.
- 2. Remove oil level check plug.

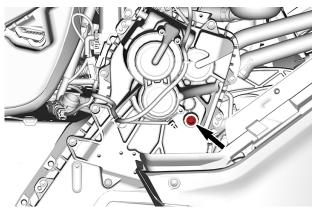

FILLER PLUG

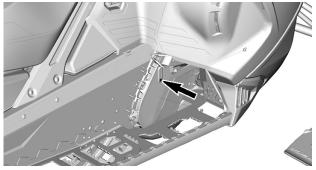

CHECK PLUG

3. Pour recommended oil into gearbox through the filler hole.

NOTE:

Oil level is correct when it just begins to come out of the check plug orifice.

4. Reinstall check plug and tighten to specification.

tightenir	ng torque
Oil level check plug	6 ± 1 Nm (53 ± 9 lbf-in)

Drive Chain


Access to Chaincase

Open RH side panel, refer to Equipment.

Drive Chain Adjustment

Using the Torx end of the driven pulley expander, GENTLY turn tensioner clockwise to eliminate the play.

NOTE: Make sure the play is completely eliminated by trying to turn back and forth the driven pulley.

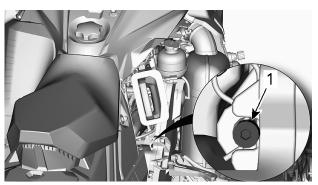

TYPICAL

Do not force the tensioner in.

NOTF:

Do not remove the hair cotter pin.

NOTICE

Overtightening the drive chain could result in severe damage to the chaincase components.

Drive Belt

Drive Belt Inspection


Remove the drive belt guard. Refer to the procedure in Equipment.

Inspect belt for cracks, fraying or abnormal wear (uneven wear, wear on one side, missing cogs, cracked fabric). If abnormal wear is noted, probable cause could be pulley misalignment, excessive RPM with frozen track, fast starts without warm-up period, burred or rusty sheave, oil on belt or distorted spare belt. Contact an authorized BRP snowmobile dealer.

Replacing the Drive Belt

Removing the Drive Belt

- 1. Remove the tether cord cap from engine cut-off switch.
- 2. Remove the LH side panel.
- Remove the drive belt guard. Refer to Removing the Drive Belt Guard.
- Insert the driven pulley expander provided, in the threaded hole on the adjuster hub as shown.

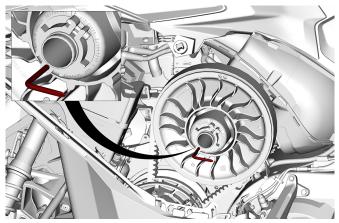

TYPICAL - PULLEY EXPANDER INSTALLED ON ADJUSTER HUB

- Open the driven pulley by screwing the tool in.
- Remove the drive belt by slipping it over the edge of the driven pulley, then over the drive pulley.

Installing the Drive Belt

The driven pulley must be expanded. Refer to Removing the Drive Belt.


1. Slip the belt over the drive pulley, then over the driven pulley.

NOTICE

Do not force or use tools to pry the belt into place, as this could cut or break the cords in the belt.

NOTE:

The maximum drive belt life span is obtained when belt is installed with arrows in the direction of rotation.

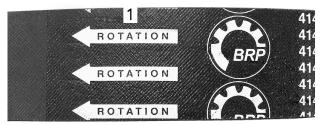


- 1. To be pointed in the direction of rotation
- Unscrew and remove the driven pulley expander from the pulley.
- Rotate the driven pulley several times to properly set the belt between the sheaves.
- 4. If a new belt was installed, an adjustment will be required for the proper belt height. Refer to Adjusting the Drive Belt Height.
- Install belt quard.
- Close side panel.


Adjusting the Drive Belt Height

The drive belt height must be checked every time a new drive belt is installed and as part of the pre-ride inspection.

- 1. Remove the tether cord cap from engine cut-off switch.
- 2. Remove the LH side panel.
- 3. Remove the drive belt guard.
- Loosen the clamping screw.
- Loosen the clamping screw.

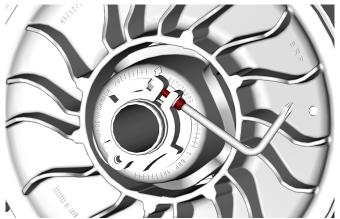

Using the suspension adjustment tool provided in the tool kit, turn the adjustment ring 1/4 turn at a time then rotate the driven pulley to properly set the belt between the pulley sheaves.

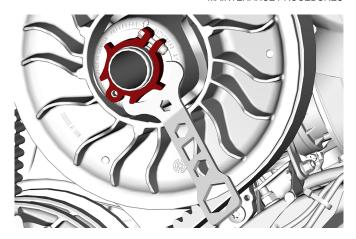


NOTE:

The adjustment ring has left hand treads.

NOTF:

Turning the adjustment ring counterclockwise lowers the belt in the pulley. Turning the ring clockwise raises the belt in the pulley.

7. Repeat until the lowest portion of the cogs on the external surface of drive belt is even with the driven pulley edge.

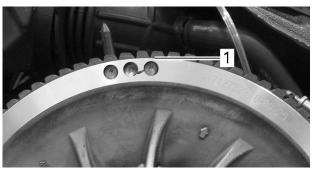


PRELIMINARY SETTING

1. Lowest portion of cogs even with external surface of drive belt

8. Tighten the adjustment ring clamping screw.

Tightening Torque	
Adjustment ring clamping screw	5.5 ± 0.5 Nm (49 ± 4 lbf-in)

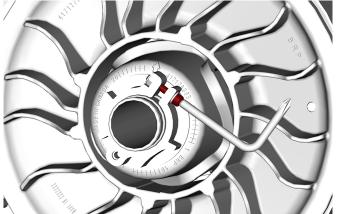

- 9. Install belt guard, refer to Installing the Drive Belt Guard.
- 10. Install LH side panel.
- 11. Start engine and check if vehicle creeps.
- 12. If vehicle does not creep, adjustment is complete.
- 13. If vehicle creeps, check the drive belt deflection.

Reverse Activation (if equipped)

Reverse may not activate or may be harder to activate if the belt is positioned too high in the driven pulley. If reverse activation does not work properly, ensure the drive belt is properly adjusted.

Adjust the drive belt lower in the driven pulley if needed.

Track

Track Condition

A WARNING

Remove tether cord cap from engine cut-off switch before performing any maintenance or adjustment, unless otherwise specified. Vehicle must be parked in a safe place, away from the trail.

Remove tether cord cap from engine cut-off switch.

Lift the rear of the snowmobile and support it with a wide-base snowmobile mechanical stand with a rear deflector panel. With the engine off, rotate the track by hand, and inspect condition. If worn or cut, or if track fibers are exposed, or if missing or defective inserts or guides are noted: contact an authorized BRP snowmobile dealer.

Snowmobiles Equipped with Traction Enhancing Products

If your snowmobile is equipped with a BRP approved studded track, PROCEED WITH A VISUAL INSPECTION OF YOUR TRACK BEFORE EACH USE.

Look for any defects, such as:

- Perforations in the track
- Tears in the track (particularly around traction holes on studded tracks)
- Lugs that are broken or torn off, exposing portions of rods
- Delamination of the rubber
- Broken rods
- Broken studs (studded tracks)
- Bent studs (studded tracks)
- Missing studs
- Studs that are torn off the track
- Missing track guide(s)
- Also, ensure that studs nut are tighten to the recommended torque.

On approved studded tracks, replace broken or damaged studs immediately. If your track shows signs of deterioration, it must be replaced immediately. When in doubt, ask your dealer.

♠ WARNING

Riding with a damaged track or studs could lead to a loss of control.

MAINTENANCE PROCEDURES

For complete information on traction enhancing products, refer to *TRACTION ENHANCING PRODUCTS* in *SAFETY INFORMATION* at the beginning of this Operator's Guide.

Track Tension and Alignment

NOTE:

Track tension and alignment are interrelated. Do not adjust one without the other.

⚠ WARNING

To prevent serious injury to individuals near the snowmobile:

- NEVER stand behind or near a moving track.
- Always use a wide-base snowmobile stand with a rear deflector panel if it is necessary to rotate track.
- When the track is raised off the ground, only run it at the lowest possible speed.

Centrifugal force could cause debris, damaged or loose studs, pieces of torn track, or an entire severed track to be violently thrown backwards out of the tunnel with tremendous force, possibly resulting in the loss of a leg or other serious injury.

Verifying the Track Tension

NOTE:


Ride the snowmobile in snow about 15 to 20 minutes prior to adjusting track tension.

- 1. Remove tether cord cap from engine cut-off switch.
- 2. Lift rear of vehicle and support it off the ground.

⚠ CAUTION

Use proper lifting techniques, notably using your legs force. Do not attempt to lift the rear of vehicle if it is above your limits.

- 3. Allow rear suspension to fully extend.
- 4. Prepare the tensiometer.

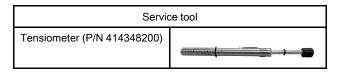


1. Set the bottom O-ring as per the *Track Deflection* from the applicable vehicle in the *Technical Specifications* table.




- 1. Bottom O-ring
 - 2. Place the upper O-ring to 0 kgf (0 lbf).



- 1. Upper O-ring
- Position the tensiometer on track, halfway between front and rear idler wheels.
- 6. Push the tensiometer downwards until bottom O-ring (deflection set earlier) be aligned with the bottom of slider shoe.

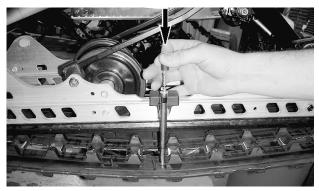

TYPICAL

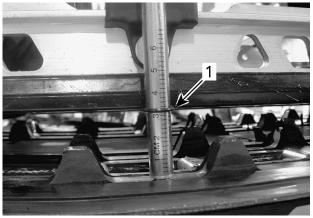

TYPICAL

- 1. Deflection O-ring aligned with slider shoe
- 7. Read load recorded by the upper O-ring on the tensiometer.



TYPICAL - LOAD READING

- 1. Upper O-ring
- 8. Load reading must be as per the track deflection in the *Technical Specifications*.
- 9. If load reading is not in accordance with the specification, adjust track tension. Refer to *Track Tension Adjustment*.


Adjusting the Track Tension

1. Remove tether cord cap from engine cut-off switch.

CAUTION

Use proper lifting techniques, notably using your legs force. Do not attempt to lift the rear of vehicle if it is above your limits.


- Remove wheel caps.
- 3. Loosen the rear axle screws on both sides.
- Tighten or loosen both adjustment screws (equally) to increase or decrease track tension.

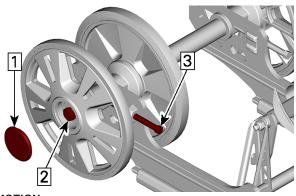

CMOTION

Step 1. Remove cap

Step 2. Loosen the axle screw or nut Step 3. Tighten or loosen adjustment screws

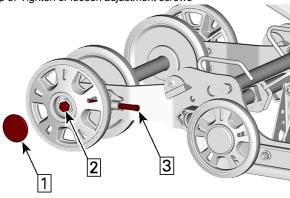

SC-5U

Step 1. Remove cap

Step 2. Loosen the axle screw or nut

Step 3. Tighten or loosen adjustment screws

- 5. If correct tension is unattainable, contact an authorized BRP snowmobile dealer.
- 6. Retighten the rear axle fasteners to specification.

TIGHTENING TORQUE	
Rear idler wheel retaining screws	48 ± 6 Nm (35 ± 4 lbf-ft)

7. Check track alignment as described below.

Aligning the Track

A WARNING

Before checking track alignment, ensure that the track is free of all particles which could be thrown out while track is rotating. Keep hands, tools, feet and clothing clear of track. Always lift the snowmobile on a wide-base stand with a rear deflector panel. Ensure no one is standing in close proximity to the snowmobile, especially at the rear of the track. Never rotate track at high speed.

Centrifugal force could cause debris, damaged or loose studs, pieces of torn track, or an entire severed track to be violently thrown backwards out of the tunnel with tremendous force.


Lift rear of vehicle and support it off the ground.

A CAUTION

Use proper lifting techniques, notably by using the force of your legs. Do not attempt to lift the rear of vehicle if it is above your limits.


- Start engine and accelerate slightly so that track slowly turns. This must be done in a short period of time (15 to 20 seconds).
- Check that the track is well centered; equal distance on both sides between edges of track guides and slider shoes.

MAINTENANCE PROCEDURES

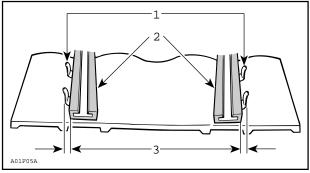

- Guides
- Slider shoes 2.
- Equal distance

4. To correct track alignment:

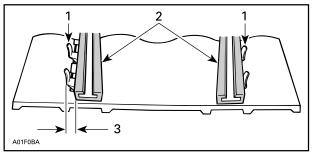

- Guides
- Slider shoes Tighten on this side

 - Stop engine.
 Remove tether cord cap from engine cut-off switch.

A WARNING

Remove tether cord cap from engine cut-off switch before performing any maintenance or adjustment, unless otherwise specified. Vehicle must be parked in a safe place, away from the trail.

- 3. Loosen the rear axle nut.
- 4. Tighten adjustment screw on side where the slider shoe is the farthest from the track insert guides.
- 5. Tighten the rear axle nut.

⚠ WARNING

Properly tighten wheel retaining bolt, otherwise wheel may come off and cause track to "lock".

- Restart engine and rotate track slowly to recheck alignment.
- 7. Tighten the rear axle nut to specified torque.

Tightening Torque	
Rear axle screw	48 ± 6 Nm (35 ± 4 lbf-ft)

8. Reposition snowmobile on the ground.

Suspension

Rear Suspension Condition

Visually inspect all suspension components including slider shoes, springs, wheels, etc.

NOTE:

During normal driving, snow will act as a lubricant and coolant for the slider shoes. Extensive riding on ice or sanded snow, will create excessive heat build-up and cause premature slider shoe wear.

Suspension Stopper Strap Condition

Inspect stopper straps for wear and cracks, bolt and nut for tightness. If loose inspect holes for deformation. Replace as required. Tighten nut to specification.

MAINTENANCE PROCEDURES


Tightening Torque	
Stopper strap nut	7 ± 1 Nm (62 ± 9 lbf-in)

Suspension Lubrication


Lubricate the following suspension pivots at grease fittings. Refer to *Maintenance Schedule* for maintenance frequency.

SERVICE PRODUCT


XPS Synthetic suspension grease

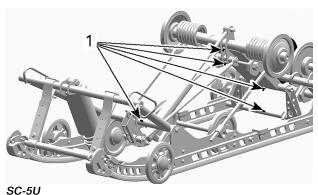


SC-50 1. Grease fittings

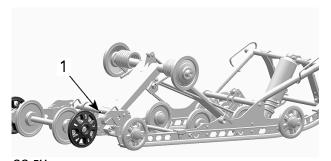

SC-5U1. Grease fittings

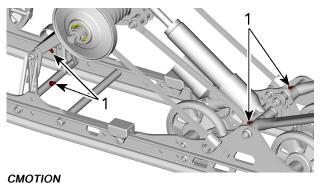

1. Grease fittings

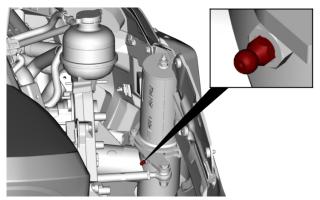

LTS SUSPENSION - RH SIDE SHOWN

Steering and Front Suspension Condition

Visually inspect steering and front suspension for tightness of components (steering arms, control arms and links, tie rods, ball joints, ski bolts, ski legs, etc.). If necessary, contact an authorized BRP snowmobile dealer.

Skis

Wear and Condition of Skis and Runners

Check the condition of the skis and ski runner carbides. If worn, contact an authorized BRP snowmobile dealer

⚠ WARNING


Excessively worn skis and/or ski runners will adversely affect snowmobile control.

Fuses


Access to Fuse Block

Open RH side panel, refer to Body and Seat.


Fuses Location

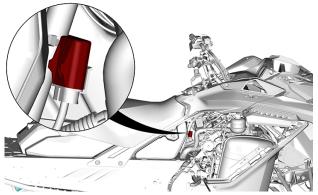

TYPICAL - FA

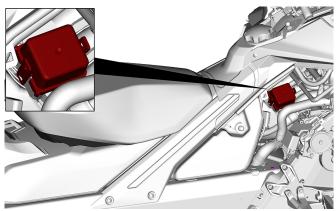

TYPICAL - FUSE BOX 1 (FB1)

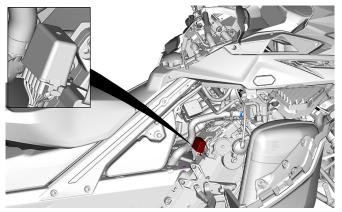


TYPICAL - FUSE BOX 2 (FB2) - IF EQUIPPED

Refer to Technical Specification for relay and fuse identification.

Fuse Inspection

Check fuse condition and replace it if necessary.

To remove fuse from holder, pull fuse out. Check if filament is melted.

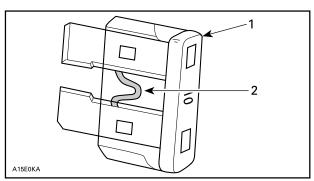

- 1. Fuse
- 2. Check if melted

A WARNING

Do not use a higher rated fuse.


⚠ WARNING

If fuse has burnt out, source of malfunction should be determined and corrected before restarting. See an authorized BRP snowmobile dealer for servicing.

Headlights

Headlights Bulb Replacement

- Remove the windshield. Refer to Removing the Windshield in Body and Seat subsection.
- 2. Open the storage compartment.

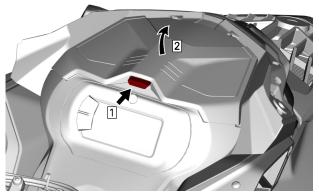


TYPICAL

3. Remove the gauge support retaining screws.


MAINTENANCE PROCEDURES




4. Lift the front of the gauge support, then slide it forward to remove it.

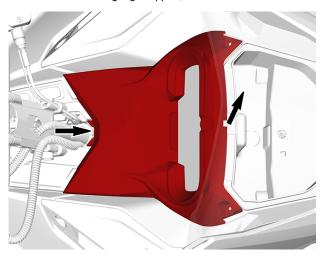

- 5. Set gauge support aside.6. Remove the storage compartment.

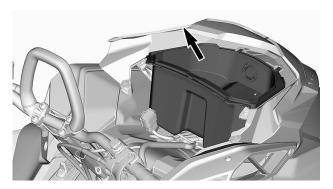


- Disconnect 12V power outlet connectors to remove (if equipped).
 Disconnect bulb connector.

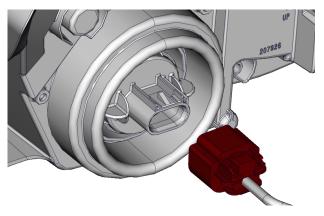

9. Unlock bulb by turning it counterclockwise. 10. Pull bulb out.

NOTE:

Ensure bulb seal stays in place.

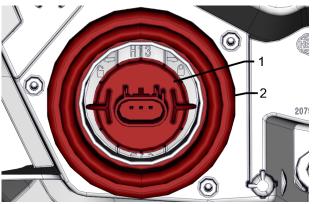

- 1. Bulb
- 2. Bulb seal

Install a new bulb using the reverse of the removal procedure.


NOTICE

Never touch glass portion of an halogen bulb with bare fingers, it shortens its operating life. If glass is touched, clean it with isopropyl alcohol which will not leave a film on the bulb.

Check headlights operation.


Headlights Beam Aiming

Open the storage compartment.

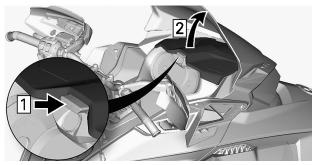

TYPICAL

Turn the adjustment screw to reach desired beam height.

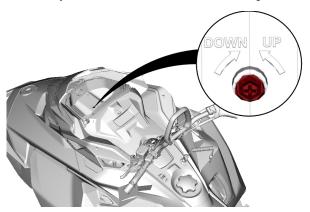


Battery

400 mm (16 in.) Tunnel Width

Removing the Battery

- 1. Remove the seat.
- 2. Remove the battery cover.

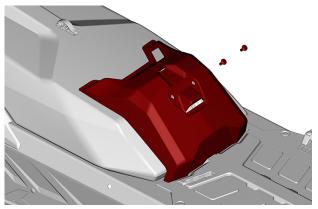


TYPICAL

3. Disconnect the negative terminal first, then the positive terminal.


NOTICE

Battery BLACK (–) cable must always be disconnected first and connected last.

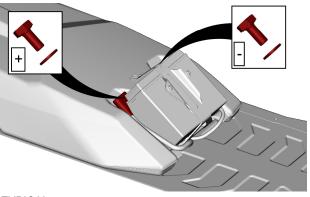


TYPICAL

4. Remove the battery hold down bracket.

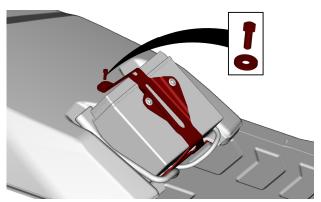

TYPICAL

5. Remove the battery.

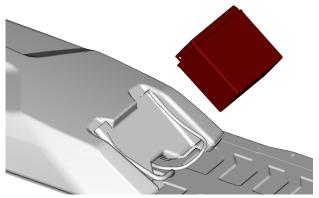

TYPICAL

Installing the Battery

NOTICE

Battery BLACK (–) cable must always be disconnected first and connected last.


The installation is the reverse of the removal procedure. However, pay attention to the following details.

TIGHTENING TORQUE	
Battery terminals (positive and negative)	6 ± 0.5 Nm (53 ± 4 lbf- IN)
Battery hold down bracket	5 ± 0.5 Nm (44 ± 4 lbf- IN)
Battery cover retaining screws	1.5 ± 0.5 Nm (13 ± 4 lbf- IN)

500 and 600 mm (20 and 24 in.) Tunnel Width


Removing the Battery

- Remove the passenger seat and backrest, if equipped.
 Open the cargo box, remove the battery cover and all mounting screws.

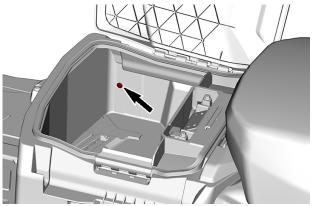

LH SIDE SCREW SHOWN


3. Remove the cargo box.

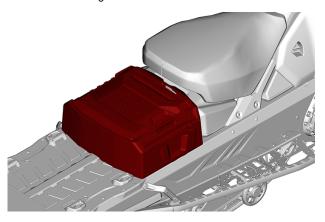


4. Disconnect the negative terminal first, then the positive terminal.

NOTICE


Battery BLACK (-) cable must always be disconnected first and connected last.

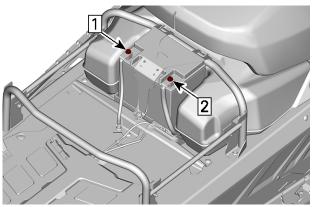

- Disconnect negative
 Disconnect positive
- 5. Remove the battery hold down bracket.

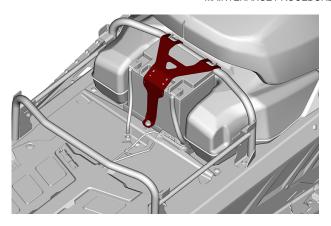

6. Remove the battery.

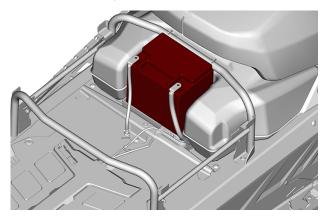

Installing the Battery

The installation is the reverse of the removal procedure. However, pay attention to the following details.

MAINTENANCE PROCEDURES

TIGHTENING TORQUE	
Battery terminals (positive and negative)	7 ± 0.5 Nm (62 ± 4 lbf- IN)
Battery hold down bracket	5 ± 0.5 Nm (44 ± 4 lbf- IN)
Battery cover retaining screws	5 ± 0.5 Nm (44 ± 4 lbf- IN)

VEHICLE CARE

Post-Operation Care

Remove snow and ice from rear suspension, track, front suspension, steering mechanism and skis.

♠ WARNING

Make sure D.E.S.S. key is removed from D.E.S.S. post before standing in front the vehicle, getting close to the track or rear suspension components.

Always cover your snowmobile when leaving it outside overnight or during extended periods of inactivity. This will protect it from frost and snow as well as help retain its appearance.

Vehicle Cleaning and Protection

Wash snowmobile using water mixed with a mild detergent.

Use only microfiber cloths or an equivalent.

NOTICE

Never use a high pressure washer to clean the vehicle. Use low pressure only, like a garden hose.

Non Compatible Cleaning Products

Material Type	Non-Compatible Cleaning Products
All plastics, vinyls, painted steel and aluminium	BRAKE AND PARTS CLEANER OR ANY PETROLEUM BASE CLEANING PRODUCTS

Compatible Cleaning Products

Material Type	Cleaning Product
All plastics, vinyls,	Automotive type soap with water
painted steel and	XPS Spray Cleaner and Polish
aluminium.	XPS All Purpose Cleaner

For more information and products, Visit the XPS Products website at www.xpslubricants.com

STORAGE

During summer, or when a snowmobile is not in use for more than three months, proper storage is necessary.

Storage

Clean the vehicle

Add fuel stabilizer to fuel following the product manufacturer recommendations.

Run the engine after adding the product to the fuel

Lubricate engine

Lubricate brake lever pivot

Lubricate rear suspension

Charge battery monthly to keep it fully charged during storage

Block muffler outlet with rags

Lift rear of vehicle until track is clear of the ground. Do not release track tension

CAUTION

Use appropriate lifting device or have assistance to share lifting stress. If a lifting device is not used, use proper lifting techniques, notably using your legs force. Do not attempt to lift the rear of vehicle if it is above your limits.

NOTICE

The snowmobile has to be stored in a cool and dry place and covered with an opaque but ventilated tarpaulin. This will prevent sun rays and grime from affecting plastic components and vehicle finish.

NOTICE

Fuel stabilizer should be added prior to engine lubrication to ensure carburetor protection against varnish deposits.

Engine Internal Lubrication

Engine internal parts must be lubricated to protect them from rust formation during the storage period.

Proceed as follows:

- Remove spark plugs.
- Spray storage oil into each cylinder.

XPS storage oil

NOTF:

Use the storage oil as per country availability.

- Crank the engine over, 1 or 2 seconds maximum, to lubricate cylinders.
- Reinstall the spark plugs.

NOTE:

Do not run engine during storage period.

5. Block muffler outlet, engine air inlet with rags.

NOTICE

To avoid causing damage to vehicle, use memory aid to make sure rags are removed from their installed location.

PRESEASON PREPARATION

Proper vehicle preparation is necessary when a vehicle has not been used for more than three months.

Using the *maintenance schedule*, perform the items titled *EVERY YEAR AT PRESEASON*.

Visit your authorized BRP snowmobile dealer for more information.

MAINTENANCE RECORDS

Send photocopy of maintenance record to BRP if needed.

	Pre-delivery	
Serial number:		Signature/Print:
Mileage / km:		
Hours:		
Date:		
Dealer no:		
Notes:		
Refer to	vehicle Pre-Delivery Bulletin for deta procedures	iled installation

MAINTENANCE RECORDS

	First inspection	
Mileage / km:		Signature/Print:
Hours:		
Date:		
Dealer no:		
Notes:		
For mai	ntenance schedule refer to Maintenar section of this operator's guide	
	Service	
Mileage / km:	Service	Signature/Print:
	Service	Signature/Print:
km:	Service	Signature/Print:
km: Hours:	Service	Signature/Print:
km: Hours: Date: Dealer	Service	Signature/Print:
km: Hours: Date: Dealer no:	Service	Signature/Print:
km: Hours: Date: Dealer no:	Service	Signature/Print:

Mileage / km:		Signature/Print:
Hours:		
Date:		
Dealer no:		
Notes:		
For main	ntenance schedule refer to Maintenar section of this operator's guide	
	Service	
Mileage / km:		Signature/Print:
Hours:		
Date:		
Dealer no:		
Notes:		
For main	ntenance schedule refer to Maintenar section of this operator's guide	

Service

MAINTENANCE RECORDS

	Service	
Mileage / km:		Signature/Print:
Hours:		
Date:		
Dealer no:		
Notes:		
For main	ntenance schedule refer to Maintenar section of this operator's guide	
		·
	Service	
Mileage / km:	Service	Signature/Print:
	Service	Signature/Print:
km:	Service	Signature/Print:
km: Hours:	Service	Signature/Print:
km: Hours: Date: Dealer	Service	Signature/Print:
km: Hours: Date: Dealer no:	Service	Signature/Print:
km: Hours: Date: Dealer no:	Service	Signature/Print:

Mileage / km:		Signature/Print:
Hours:		
Date:		
Dealer no:		
Notes:		
For main	ntenance schedule refer to Maintenar section of this operator's guide	
	Service	
Mileage / km:		Signature/Print:
Hours:		
Date:		
Dealer no:		
Notes:		
For main	ntenance schedule refer to Maintenar section of this operator's guide	

Service

MAINTENANCE RECORDS

	Service	
Mileage / km:		Signature/Print:
Hours:		
Date:		
Dealer no:		
Notes:		
For mai	ntenance schedule refer to Maintenar section of this operator's guide	
	Service	
Mileage / km:		Signature/Print:
Hours:		
Date:		
Dealer no:		
Notes:		
For mai	ntenance schedule refer to Maintenar section of this operator's guide	

Mileage / km:		Signature/Print:
Hours:		
Date:		
Dealer no:		
Notes:		
For main	ntenance schedule refer to Maintenar section of this operator's guide	
	Service	
Mileage / km:		Signature/Print:
Hours:		
Date:		
Dealer no:		
Notes:		
For main	ntenance schedule refer to Maintenar section of this operator's guide	

Service

MAINTENANCE RECORDS


	Service	
Mileage / km:		Signature/Print:
Hours:		
Date:		
Dealer no:		
Notes:		
For main	ntenance schedule refer to Maintenar section of this operator's guide	
		·
	Service	
Mileage / km:	Service	Signature/Print:
	Service	Signature/Print:
km:	Service	Signature/Print:
km: Hours:	Service	Signature/Print:
km: Hours: Date: Dealer	Service	Signature/Print:
km: Hours: Date: Dealer no:	Service	Signature/Print:
km: Hours: Date: Dealer no:	Service	Signature/Print:

TECHNICAL INFORMATION

VEHICLE IDENTIFICATION

Vehicle Description Decal

Vehicle description decal is located on right hand side of tunnel.

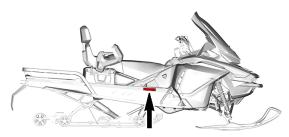

TYPICAL





FOR NORTH AMERICAN MARKET



FOR EUROPEAN MARKET


Identification Numbers

The main components of your snowmobile (engine and frame) are identified by different identification numbers. It may sometimes become necessary to locate these numbers for warranty purposes or to trace your snowmobile in the event of loss. These numbers are required by the authorized BRP snowmobile dealer to complete warranty claims properly. We strongly recommend that you take note of all the identification numbers on your snowmobile and supply them to your insurance company.


Vehicle Identification Number (VIN)

VIN is scribed on vehicle description decal. See above. It is also engraved on tunnel near vehicle description decal.

Model number and model year are part of the information found in the VIN. See illustration.

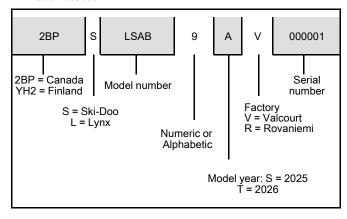

Engine Identification Number Location

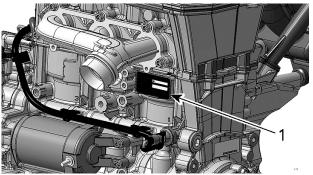

1. Engine identification number

COMPLIANCE LABELS

EPA Compliance Label



EPA COMPLIANCE LABEL




TYPICAL


SSCC Label

Safety standards for snowmobiles have been adopted by the Snowmobile Safety and Certification Committee (SSCC) of which BRP is a proud participating member. Assurance that your snowmobile meets these standards is easily checked by locating the Certification Label on a right vertical portion of the vehicle.

The following label shows that an independent testing laboratory has verified compliance with the SSCC safety standards.

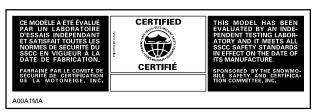

SSCC LABEL

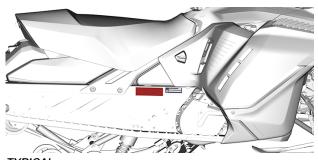


TYPICAL

BAT Compliance Label

This snowmobile complies to National Park Service New BAT requirements

GRAND TOURING SPORT 600 ACE, GRAND TOURING SPORT 900 ACE GRAND TOURING LE 900 ACE, EXPEDITION SE 900 ACE, EXPEDITION LE 900 ACE, SKANDIC LE 600 ACE, SKANDIC LE 900 ACE


YELLOWSTONE NATIONAL PARK - COMPLIANCE LABEL

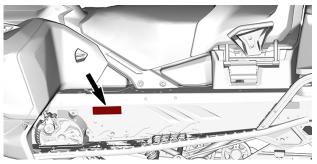


LABEL LOCATION

Regulation (EU) 2016/1628 applicable for Non-Road Mobile Machineries

Vehicles who comply to Regulation (EU) 2016/1628 (NRMM) are identified on the engine.

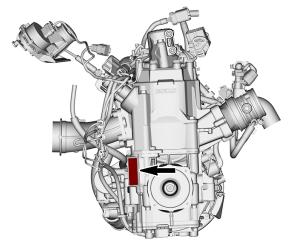

TYPICAL

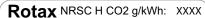

MXXXXXXX

10559

Prod. date: MM-YYYY
Family type: XXXXXX

e13 SMB/P V-####

TYPICAL - NRMM IDENTIFICATION LABEL

NOISE EMISSION AND VIBRATION VALUES

N	10DEL	600 ACE	900 ACE
NOISE EMISSION AND VIBRATION VALUES ¹			
Noise	Sound power level (L _{WA})	90,4 dB @ 3625 RPM (Uncertainty (K _{wa}) 3 dB)	91,2 dB @ 3625 RPM (Uncertainty (K _{wa}) 3 dB)
Vibration	Hand-arm system	<2.5 m/s ² @ 3625 RPM	3.15 m/s ² @ 3625 RPM
VIDIALION	Whole body at seat	<0.5 m/s ² @ 3625 RPM	<0.5m/s ² @ 3625 RPM

^{1:} Noise emission and Vibration values are measured in accordance with Annexes A and B of ISMA 1 regulation on a snow covered or grass surface in neutral or without belt.

EU DECLARATION OF CONFORMITY



505 de la Montagne Street Valcourt (Québec) JOE 21.0 Canada

was become

EU Declaration of Conformity

Authorized Representative: BRP-Rotax GmbH Co. KG, Rotaxstrasse 1, Gunskirchen, A-4623, Austria

This declaration of conformity is issued under the sole responsibility of the manufacturer.

The undersigned, representing the manufacturer, hereby declares that model year 2026 Snowmobiles marked with the C^{ξ} mark and a 17-character vehicle identification number (VIN) structured as 2895xxxxxxTVxxxxxxx or YH2SxxxxxxTRxxxxxx under commercial name SH-Doo comply with all the relevant provisions of the following Directives and Regulations:

Machinery Directive 2006/42/EC as amended up to and including Reg. 2019/1243/EU	ISO 12100:2010
Non-Road Mobile Machinery (NRMM) Regulation (EU) 2016/1628 on gaseous pollutants	Category SMB, Stage V emissions limits
Electromagnetic Compatibility (EMC) Directive 2014/30/EU as amended up to and including Reg. (EU) 2018/1139	CISPR 12:2007/A1:2009 & IEC 61000-6-1:2005 or UN R10.04 or later version
Battery Directive 2006/66/EC as amended up to and including Dir. (EU) 2018/849	EN 50342-7:2015
Radio Equipment (RED) Directive 2014/53/EU as amended up to and including Reg. 2018/1139 (If fitted with radio frequency (RF) D.E.S.S. key)	IEC 62368-1:2014 CISPR 25:2016 ISO 11452-2:2004 ETSI EN 300 330 V2.1.1:2017

Dominic Tessier

Dominic Tessier, Eng.
Director, Vehicle Engineering, Ski-Doo
Bombardier Recreational Products Inc.

Valcourt, QC, Canada Jan 22, 2025

SKI-dog LYNX SEC-400 EVINGUE ROTAX CON-ONL

UK DECLARATION OF CONFORMITY



505 de la Montagne Street Valcourt (Québec) JCE 20,0

was become

UK Declaration of Conformity

Authorized Representative: BRP UK Ltd., (BWM Accountants Limited), Suite 5.1, 12 Tithebarn Street, Liverpool, L2 2DT

This declaration of conformity is issued under the sole responsibility of the manufacturer.

The undersigned, representing the manufacturer, hereby declares that model year 2026

Snowmobile marked with the WAM and a 17-character vehicle identification number (VIN) Structured as 28PSXXXXXVIVXXXXXXX or YH2\$XXXXXXIXXXXXXX under commercial name Ski-Doo comply with all the relevant provisions of the following UK Statutory instrument and Regulations:

The Supply of Machinery (Safety) Regulations 2008, UK Statutory Instrument 2008/1597 as amended up to and including SI 2020/1112	ISO 12100:2010
Non-Road Mobile Machinery (Type-Approval and Emission of Gaseous and Particulate Pollutants) Regulation 2018, UK SI 2018/764 as amended up to and including SI 2020/1393	Category SMB, Stage V emissions limits
Electromagnetic Compatibility Regulations 2016, UK SI 2016/1091 as amended up to and including SI 2020/1112	CISPR 12:2007/A1:2009 & IEC 61000-6-1:2005 or UN R10.04 or later version
Batteries and Accumulators (Placing on the Market) Regulations 2008, UK SI 2008/2164 as amended up to and including UK SI 2020/904	EN 50342-7:2015
Radio Equipment Regulations 2017, UK SI 2017/1206 as amended up to and including SI	IEC 62368-1:2014
2017/1206 as amended up to and including ST 2020/1112	CISPR 25:2016
	ISO 11452-2:2004
	ETSI EN 300 330 V2.1.1:2017

Dominic Tessier

Dominic Tessier, Enq.
Director, Vehicle Engineering, Ski-Doo
Bombardier Recreational Products Inc.

Valcourt, QC, Canada Jan 22, 2025

SKI-dog LYNX SED-ADD EVINNUE ROTAX CON-OTT

EPA CERTIFIED ENGINES

Engine Emissions Information

Manufacturer's Responsibility

Snowmobile manufacturers of snowmobile engines need to determine the exhaust emission levels for each engine horsepower family and certify these engines with the United States of America Environmental Protection Agency (EPA). An emissions control information label, showing emission levels and engine specifications, must be placed on each vehicle at the time of manufacture.

Dealer's Responsibility

When performing service on a certified BRP snowmobiles that carry an emissions control information label, adjustments must be kept within published factory specifications.

Replacement or repair of any emission related component must be executed in a manner that maintains emission levels within the prescribed certification standards.

Dealers are not to modify the engine in any manner that would alter the horsepower or allow emission levels to exceed their predetermined factory specifications.

Exceptions include manufacturer's prescribed changes, such as altitude adjustments for example.

Owner's Responsibility

The owner / operator is required to have engine maintenance performed to maintain emission levels within prescribed certification standards.

The owner / operator is not to, and should not allow anyone to modify the engine in any manner that would alter the horsepower or allow emissions levels to exceed their predetermined factory specifications.

EPA Emission Regulations

All BRP snowmobiles manufactured by BRP are certified to the EPA as conforming to the requirements of the regulations for the control of air pollution from new snowmobile engines. This certification is contingent on certain adjustments being set to factory standards. For this reason, the factory procedure for servicing the product must be strictly followed and, whenever practicable, returned to the original intent of the design.

The responsibilities listed above are general and in no way a complete listing of the rules and regulations pertaining to the EPA requirements on exhaust emissions for snowmobile products. For more detailed information on this subject, you may contact the following locations:

MAIL:

U.S. Environmental Protection Agency Certification Division Gasoline Engine Compliance Center 2000 Traverwood Drive Ann Arbor MI 48105 USA

INTERNET WEB SITE:

www.epa.gov/otaq/

BRP RF DESS POST GEN3 (MOWP)

USA and Canada

This device complies with FCC Part 15 and Industry Canada license exempt RSS standard (s). Operation is subject to the following two conditions:

- 1. this device may not cause interference, and
- 2. this device must accept any interference, including interference that may cause undesired operation of the device.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

Le dispositif a été évalué à satisfaire l'exigence générale de l'exposition aux rf. L'appareil peut être utilisé dans des conditions d'exposition portatif sans restriction.

L'émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence.

- 1. l'appareil ne doit pas produire de brouillage, et
- l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

IC: 12006A-1001317030 For variant 1001316155 (MOWP)

FCC ID: 2ACER 1001317030 For variant 1001316155 (MOWP).

Mexico



IFETEL

Marca: BRP Megatech

Número: BRME1023-28191

BRP Megatech Certificate number: 1450979

Modelo: 1001316155

NOM-208-SCFI-2016 (Disposición Técnica IFT-008-2015)

La operación de este equipo está sujeta a las siguientes dos

condiciones:

 Es posible que este equipo o dispositivo no cause interferencia perjudicial y

 Este equipo o dispositivo debe aceptar cualquier interferencia, incluyendo la que pueda causar su operación no deseada.

Brazil



Número: 05254-23-15603

BRP Megatech Certificate number: 1450991

BRP RF DESS POST GEN3 (MOWP)

Modelo: 1001316155

Este equipamento não tem direito à proteção contra interferência prejudicial e não pode causar interferência em sistemas devidamente autorizados. Para maiores infor- mações, consulte o site da ANATEL.

Japan

This device is granted pursuant to the Japanese Radio Law(電波法)and the Japanese Telecommunications Business Law(

電気通信事業法). This device should not be modified (otherwise the granted designation number will become invalid).

Europe

Declaration of Conformity

Simplified EU Declaration of Conformity according Radio Equipment Directive 2014/53/EU



DE

Hiermit erklärt BRP Megatech, dass der Funkanlagentyp 1001316154 der Richtlinie 2014/53/EU entspricht. Der vollständige Text der EU--Konformitätserklärung ist unter der folgenden Internetadresse verfügbar: https://www. brp. com/en/corporate-social-responsibility/product-safety.html

FR

Le soussigné, BRP Megatech, déclare que l'équipement radioélectrique du type 1001316154 est conforme à la directive 2014/53/UE. Le texte complet de la déclaration UE de conformité est disponible à l'adresse internet suivante: https://www.brp.com/en/corporate-social-responsibility/product-safety.html

BG

С настоящото BRP Megatech декларира, че този тип радиосъоръжение 1001316154 е в съответствие с Директива 2014/53/FC

Цялостният текст на EC декларацията за съответствие може да се намери на следния интернет адрес: https://www.brp.com/en/corporate-social-responsibility/product-safety.html

EL

Με την παρούσα ο/η BRP Megatech, δηλώνει ότι ο ραδιοεξοπλισμός 1001316154 πληροί την οδηγία 2014/53/ΕΕ. Το πλήρες κείμενο της δήλωσης συμμόρφωσης ΕΕ διατίθεται στην ακόλουθη ιστοσελίδα στο διαδίκτυο: https://www.brp.com/en/corporate-social-responsibility/product-safety.html

CS

Tímto BRP Megatech prohlašuje, že typ rádiového zařízení 1001316154 je v souladu se směrnicí 2014/53/EU. Úplné znění EU prohlášení o shodě je k dispozici na této internetové adrese: https://www.brp.com/en/corporate-social-responsibility/product-safety.html

DA

Hermed erklærer BRP Megatech, at radioudstyrstypen 1001316154 er i overensstemmelse med direktiv 2014/53/EU.

EU-overensstemmelseserklæringens fulde tekst kan findes på følgende internetadresse: https://www. brp. com/en/corporate-social-responsibility/product-safety.html

ET

Käesolevaga deklareerib BRP Megatech, et käesolev raadioseadme tüüp 1001316154 vastab direktiivi 2014/53/EL nõuetele.

ELi vastavusdeklaratsiooni täielik tekst on kättesaadav järgmisel internetiaadressil: https://www. brp. com/en/corporate-social-responsibility/product-safety.html

FS

Por la presente, BRP Megatech declara que el tipo de equipo radioeléctrico 1001316154 es conforme con la Directiva 2014/53/UE.

El texto completo de la declaración UE de conformidad está disponible en la dirección Internet siguiente: https://www.brp.com/en/corporate-social-responsibility/product-safety.html

FΙ

BRP Megatech vakuuttaa, että radiolaitetyyppi 1001316154 on direktiivin 2014/53/EU mukainen. EU-vaatimustenmukaisuusvakuutuksen täysimittainen teksti on saatavilla seuraavassa internetosoitteessa: https://www.brp.com/en/corporate-social-responsibility/product-safety.html

ΕN

Hereby, BRP Megatech declares that the radio equipment type 1001316154 is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: https://www.brp.com/en/corporate-social-responsibility/product-safety.html

HR

BRP Megatech ovime izjavljuje da je radijska oprema tipa 1001316154 u skladu s Direktivom 2014/53/EU. Čjeloviti tekst EU izjave o sukladnosti dostupan je na sljedećoj internetskoj adresi:https://www.brp.com/en/corporate-social-responsibility/product-safety.html

HU

BRP Megatech igazolja, hogy a 1001316154 típusú rádióberendezés megfelel a 2014/53/EU irányelvnek. Az EU-megfelelőségi nyilatkozat teljes szövege elérhető a következő internetes címen:https://www.brp.com/en/corporate-social-responsibility/product-safety.html

IT

Il fabbricante, BRP Megatech, dichiara che il tipo di apparecchiatura radio 1001316154 è conforme alla direttiva 2014/53/UE.

Il testo completo della dichiarazione di conformità UE è disponibile al seguente indirizzo Internet: https://www.brp.com/en/corporate-social-responsibility/product-safety.html

ΙT

Aš, BRP Megatech, patvirtinu, kad radijo įrenginių tipas 1001316154 atitinka Direktyvą 2014/53/ES. Visas ES atitikties deklaracijos tekstas prieinamas šiuo interneto adresu: https://www.brp.com/en/corporate-social-responsibility/product-safety.html

ΙV

Ar šo BRP Megatech deklarē, ka radioiekārta 1001316154 atbilst Direktīvai 2014/53/ES. Pilns ES atbilstības deklarācijas teksts ir pieejams šādā interneta vietnē: https://www.brp.com/en/corporate-social-responsibility/product-safety.html

MT

B'dan, BRP Megatech, niddikjara li dan it-tip ta' tagħmir tar-radju 1001316154 huwa konformi mad-Direttiva 2014/53/UE. It-test kollu tad-dikjarazzjoni ta' konformità tal-UE huwa disponibbli f'dan l-indirizz tal-Internet li ġej:https://www.brp.com/en/corporate-social-responsibil-ity/product-safety.html

NL

Hierbij verklaar ik, BRP Megatech, dat het type radioapparatuur 1001316154 conform is met Richtlijn 2014/53/EU.

De volledige tekst van de EU-conformiteitsverklaring kan worden geraadpleegd op het volgende internetadres:https://www.brp.com/en/corporate-social-responsibility/product-safety.html

PL

BRP Megatech niniejszym oświadcza, że typ urządzenia radiowego 1001316154 jest zgodny z dyrektywą 2014/53/UE. Pełny tekst deklaracji zgodności UE jest dostępny pod następującym adresem internetowym: https://www. brp. com/en/corporate-social-responsibility/product-safety.html

PT

O(a) abaixo assinado(a) BRP Megatech declara que o presente tipo de equipamento de rádio 1001316154 está em conformidade com a Diretiva 2014/53/UF

O texto integral da declaração de conformidade está disponível no seguinte endereço de Internet: https://www. brp. com/en/corporate-social-responsibility/product-safety.html

RO

Prin prezenta, BRP Megatech declară că tipul de echipamente radio 1001316154 este în conformitate cu Directiva 2014/53/UE. Textul integral al declaratiei UE de conformitate este disponibil la următoarea adresă internet: https://www.brp.com/en/corporate-social-responsibil-ity/product-safety.html

SV

Härmed försäkrar BRP Megatech att denna typ av radioutrustning 1001316154 överensstämmer med direktiv 2014/53/EU. Den fullständiga texten till EU-försäkran om överensstämmelse finns på följande webbadress: https://www. brp. com/en/corporate-social-responsibility/product-safety.html

SL

BRP Megatech potrjuje, da je tip radijske opreme 1001316154 skladen z Direktivo 2014/53/EU. Celotno besedilo izjave EU o skladnosti je na voljo na naslednjem spletnem naslovu:https://www.brp.com/en/corporate-social-responsibility/product-safety.html

SK

BRP RF DESS POST GEN3 (MOWP)

BRP Megatech týmto vyhlasuje, že rádiové zariadenie typu 1001316154 je v súlade so smernicou 2014/53/EÚ. Úplné EÚ vyhlásenie o zhode je k dispozícii na tejto internetovej adrese: https://www.brp.com/en/corporate-social-responsibility/product-safety.html

IS

BRP Megatech lýsir því hér með yfir að þráðlausi fjarskiptabúnaðurinn 1001316154 er í samræmi við tilskipun 2014/53/ESB. Óstyttan texta ESB-samræmisyfirlýsingarinnar er að finna á veffanginu: https://www.brp.com/en/corporate-social-responsibility/product-safety.html

Liechtenstein

Hiermit erklärt BRP Megatech, dass der Funkanlagentyp 1001316154 der Richtlinie 2014/53/EU entspricht. Der vollständige Text der EU--Konformitätserklärung ist unter der folgenden Internetadresse verfügbar: https://www. brp. com/en/corporate-social-responsibility/product-safety.html

NO

Hermed erklærer BRP Megatech at radioutstyrstypen 1001316154 er i samsvar med direktiv 2014/53/EU. Hele teksten i EU-samsvarserklæringen finnes på følgende internettadresse: https://www.brp.com/en/corporate-social-responsibility/product-safety.html

RU

Компания BRP Megatech настоящим заявляет, что радиотехническое оборудование категории 1001316154 отвечает требованиям Директивы 2014/53/EU.

Полный текст декларации соответствия EC доступен на сайте https://www. brp. com/en/corporate-social-responsibility/product-safety.html

BRP RF DESS POST GEN3 (CAN)

USA and Canada

This device complies with FCC Part 15 and Industry Canada license exempt RSS standard (s). Operation is subject to the following two conditions:

- 1. this device may not cause interference, and
- 2. this device must accept any interference, including interference that may cause undesired operation of the device.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

Le dispositif a été évalué à satisfaire l'exigence générale de l'exposition aux rf. L'appareil peut être utilisé dans des conditions d'exposition portatif sans restriction.

L'émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence.

- 1. l'appareil ne doit pas produire de brouillage, et
- l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

IC: 12006A-1001317030 For variant 1001316154 (CAN)

FCC ID: 2ACER 1001317030 For variant 1001316154 (CAN)

Mexico



IFETEL

Marca: BRP Megatech

Número: BRME1023-28186

BRP Megatech Certificate number: 1450978

Modelo: 1001316154

NOM-208-SCFI-2016 (Disposición Técnica IFT-008-2015)

La operación de este equipo está sujeta a las siguientes dos condiciones:

- Es posible que este equipo o dispositivo no cause interferencia perjudicial y
- Este equipo o dispositivo debe aceptar cualquier interferencia, incluyendo la que pueda causar su operación no deseada.

Brazil



Agência Nacional de Telecomunicações

Número: 05254-23-15603

BRP Megatech Certificate number: 1450991

Modelo: 1001316154

Este equipamento não tem direito à proteção contra interferência prejudicial e não pode causar interferência em sistemas devidamente autorizados. Para maiores informações, consulte o site da ANATEL.

Japan

This device is granted pursuant to the Japanese Radio Law (雪波法

电水本)and the Japanese Telecommunications Business Law(電気通信事業法). This device should not be modified (otherwise the granted designation number will become invalid).

Europe

Declaration of Conformity

Simplified EU Declaration of Conformity according Radio Equipment Directive 2014/53/EU



DF

Hiermit erklärt BRP Megatech, dass der Funkanlagentyp 1001316154 der Richtlinie 2014/53/EU entspricht. Der vollständige Text der EU-Konformitätserklärung ist unter der folgenden Internetadresse verfügbar: https://www.brp.com/en/corporatesocialresponsibility/productsafety.html

FR

Le soussigné, BRP Megatech, déclare que l'équipement radioélectrique du type 1001316154 est conforme à la directive 2014/53/UE. Le texte complet de la déclaration UE de conformité est disponible à l'adresse internet suivante: https://www.brp.com/en/corporatesocial-responsibility/productsafety.html

BG

С настоящото BRP Megatech декларира, че този тип радиосъоръжение 1001316154 е в съответствие с Директива 2014/53/EC.

BRP RF DESS POST GEN3 (CAN)

Цялостният текст на EC декларацията за съответствие може да се намери на следния интернет адрес: https://www.brp.com/en/corporatesocialresponsibility/productsafety.html

EL

Με την παρούσα ο/η BRP Megatech, δηλώνει ότι ο ραδιοεξοπλισμός 1001316154 πληροί την οδηγία 2014/53/ΕΕ. Το πλήρες κείμενο της δήλωσης συμμόρφωσης ΕΕ διατίθεται στην ακόλουθη ιστοσελίδα στο διαδίκτυο: https://www. brp. com/en/corporatesocialresponsibility/productsafety.html

CS

Tímto BRP Megatech prohlašuje, že typ rádiového zařízení 1001316154 je v souladu se směrnicí 2014/53/EU. Úplné znění EU prohlášení o shodě je k dispozici na této internetové adrese: https://www.brp.com/en/corporatesocialresponsibility/productsafety.html

DA

Hermed erklærer BRP Megatech, at radioudstyrstypen 1001316154 er i overensstemmelse med direktiv 2014/53/EU.

EU-overensstemmelseserklæringens fulde tekst kan findes på følgende internetadresse: https://www.brp.com/en/corporatesocialresponsibility/productsafety.html

ET

Käesolevaga deklareerib BRP Megatech, et käesolev raadioseadme tüüp 1001316154 vastab direktiivi 2014/53/EL nõuetele.

ELi vastavusdeklaratsiooni täielik tekst on kättesaadav järgmisel internetiaadressil: https://www.brp.com/en/corporatesocialresponsibility/productsafety.html

FS

Por la presente, BRP Megatech declara que el tipo de equipo radioeléctrico 1001316154 es conforme con la Directiva 2014/53/UE.

El texto completo de la declaración UE de conformidad está disponible en la dirección Internet siguiente: https://www.brp.com/en/corporatesocialresponsibility/productsafety.html

FΙ

BRP Megatech vakuuttaa, että radiolaitetyyppi 1001316154 on direktiivin 2014/53/EU mukainen. EU-vaatimustenmukaisuusvakuutuksen täysimittainen teksti on saatavilla seuraavassa internetosoitteessa: https://www.brp.com/en/corporatesocialresponsibility/productsafety.html

ΕN

Hereby, BRP Megatech declares that the radio equipment type 1001316154 is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: https://www.brp.com/en/corporatesocialresponsibility/product-safety.html

HR

BRP Megatech ovime izjavljuje da je radijska oprema tipa 1001316154 u skladu s Direktivom 2014/53/EU. Cjeloviti tekst EU izjave o sukladnosti dostupan je na sljedećoj internetskoj adresi:https://www.brp.com/en/corporate-social-responsibility/productsafety.html

HU

BRP Megatech igazolja, hogy a 1001316154 típusú rádióberendezés megfelel a 2014/53/EU irányelvnek. Az EU-megfelelőségi nyilatkozat teljes szövege elérhető a következő internetes címen:https://www.brp.com/en/corporate-socialresponsibility/productsafety.html

IT

Il fabbricante, BRP Megatech, dichiara che il tipo di apparecchiatura radio 1001316154 è conforme alla direttiva 2014/53/UE.

Il testo completo della dichiarazione di conformità UE è disponibile al seguente indirizzo Internet: https://www.brp.com/en/corporate-social-responsibility/productsafety.html

ΙT

Aš, BRP Megatech, patvirtinu, kad radijo įrenginių tipas 1001316154 atitinka Direktyvą 2014/53/ES. Visas ES atitikties deklaracijos tekstas prieinamas šiuo interneto adresu: https://www.brp.com/en/corporate-social-responsibility/productsafety.html

١V

Ar šo BRP Megatech deklarē, ka radioiekārta 1001316154 atbilst Direktīvai 2014/53/ES. Pilns ES atbilstības deklarācijas teksts ir pieejams šādā interneta vietnē: https://www.brp.com/en/corporate-social-responsibility/productsafety.html

MT

B'dan, BRP Megatech, niddikjara li dan it-tip ta' tagħmir tar-radju 1001316154 huwa konformi mad-Direttiva 2014/53/UE. It-test kollu tad-dikjarazzjoni ta' konformità tal-UE huwa disponibbli f'dan l-indirizz tal-Internet li gej: https://www.brp.com/en/corporatesocialresponsibility/productsafety.html

NL

Hierbij verklaar ik, BRP Megatech, dat het type radioapparatuur 1001316154 conform is met Richtlijn 2014/53/EU.

De volledige tekst van de EU-conformiteitsverklaring kan worden geraadpleegd op het volgende internetadres: https://www.brp.com/en/corporatesocialresponsibility/productsafety.html

ы

BRP Megatech niniejszym oświadcza, że typ urządzenia radiowego 1001316154 jest zgodny z dyrektywą 2014/53/UE. Pełny tekst deklaracji zgodności UE jest dostępny pod następującym adresem internetowym: https://www. brp. com/en/corporatesocialresponsibility/productsafety.html

PT

O(a) abaixo assinado(a) BRP Megatech declara que o presente tipo de equipamento de rádio 1001316154 está em conformidade com a Diretiva 2014/53/UF

O texto integral da declaração de conformidade está disponível no seguinte endereço de Internet: https://www.brp.com/en/corporatesocialresponsibility/productsafety.html

RO

Prin prezenta, BRP Megatech declară că tipul de echipamente radio 1001316154 este în conformitate cu Directiva 2014/53/UE. Textul integral al declaratiei UE de conformitate este disponibil la următoarea adresă internet: https://www.brp.com/en/corporatesocialresponsibility/productsafety.html

SV

Härmed försäkrar BRP Megatech att denna typ av radioutrustning 1001316154 överensstämmer med direktiv 2014/53/EU. Den fullständiga texten till EU-försäkran om överensstämmelse finns på följande webbadress: https://www. brp. com/en/corporatesocialresponsibility/productsafetv.html

SL

BRP Megatech potrjuje, da je tip radijske opreme 1001316154 skladen z Direktivo 2014/53/EU. Celotno besedilo izjave EU o skladnosti je na voljo na naslednjem spletnem naslovu: https://www.brp.com/en/corporatesocialresponsibility/productsafety.html

SK

BRP Megatech týmto vyhlasuje, že rádiové zariadenie typu 1001316154 je v súlade so smernicou 2014/53/EÚ. Úplné EÚ vyhlásenie o zhode je k dispozícii na tejto internetovej adrese: https://www.brp.com/en/corporatesocialresponsibility/productsafety.html

IS

BRP Megatech lýsir því hér með yfir að þráðlausi fjarskiptabúnaðurinn 1001316154 er í samræmi við tilskipun 2014/53/ESB. Óstyttan texta ESB-samræmisyfirlýsingarinnar er að finna á veffanginu: https://www.brp.com/en/corporatesocialresponsibility/productsafety.html

Liechtenstein

Hiermit erklärt BRP Megatech, dass der Funkanlagentyp 1001316154 der Richtlinie 2014/53/EU entspricht. Der vollständige Text der EU--Konformitätserklärung ist unter der folgenden Internetadresse verfügbar: https://www.brp.com/en/corporatesocialresponsibility/productsafety.html

NO

Hermed erklærer BRP Megatech at radioutstyrstypen 1001316154 er i samsvar med direktiv 2014/53/EU. Hele teksten i EU-samsvarserklæringen finnes på følgende internettadresse: https://www.brp.com/en/corporatesocialresponsibility/productsafety.html

RU

Компания BRP Megatech настоящим заявляет, что радиотехническое оборудование категории 1001316154 отвечает требованиям Директивы 2014/53/EU.

Полный текст декларации соответствия ЕС доступен на сайте : https://www. brp. com/en/corporatesocialresponsibility/productsafety. html

This page is intentionally blank

TECHNICAL SPECIFICATIONS

ENGINE

600 ACE

ENGINE		
Engine type	Rotax 600, liquid cooled, 4-stroke, D.O.H.C., dry sump.	
Number of cylinder	2	
Bore	74 mm (2.91 in)	
Stroke	69.7 mm (2.74 in)	
Displacement	600 cm³ (36.6 in³)	
Maximum power engine speed	7250 RPM	

FUEL SYSTEM		
Fuel delivery		Multi point EFI, 46 mm heated throttle body
Idle speed (not adjustable)	At ECO Mode	1500 ± 200 RPM
idie speed (not adjustable)	STD/ Sport Mode	1700 ± 200 RPM

ELECTRICAL SYSTEM		
Total system output	t	30 A @ 14.5 V 520 W @ 6000 RPM
	Туре	NGK MR7BI-8 or equivalent
Spark plug	Gap	Not adjustable 0.7 to 0.8 mm (.028 to .031 in)

LUBRICATION SYSTEM			
		Recom mended XPS oil	XPS 4T 0W40 Synthetic oil
Engine oil	Туре	If XPS product is not available	Use a 0W40 4-stroke SAE synthetic engine oil meeting or exceeding the following lubricant industry specifications. Always check the API service label certification on the oil container, it must contain at least the indicated standard. - API service classification SN
	Quantity		Oil change with filter: 2.1 I (2.22 qt (liq.,US))

900 ACE

ENGINE	
Engine type	Rotax 903, liquid cooled, 4-stroke, D.O.H.C., dry sump
Number of cylinder	3
Bore	74 mm (2.9 in)
Stroke	69.7 mm (2.74 in)

ENGINE	
Displacement	899 cm³ (54.9 in³)
Maximum power engine speed	7250 ± 200 RPM

FUEL SYSTEM		
Fuel delivery		Multi point EFI, 46 mm heated throttle body
Idle speed (not adjustable)	Standard and ECO mode	1300 ± 200 RPM
	Sport mode	1500 ± 200 RPM

ELECTRICAL SYSTEM		
Total system output	t	30 A @ 14.5 V 650 W @ 6000 RPM
	Туре	NGK MR8BI-8 or equivalent
Spark plug	Gap	Not adjustable 0.7 to 0.8 mm (.028 to .031 in)

LUBRICATION SYSTEM			
Engine oil	Туре	Recom mended XPS oil	XPS 4T 0W40 Synthetic oil

LUBRICATION SYSTEM			
		If XPS product is not available	Use a 0W40 4-stroke SAE synthetic engine oil meeting or exceeding the following lubricant industry specifications. Always check the API service label certification on the oil container, it must contain at least the indicated standard. - API service classification SN
	Quantity		Oil change with filter: 3.3 I (3.5 qt (liq.,US))

900 ACE Turbo

ENGINE		
Engine type	Rotax 903, liquid cooled, 4-stroke, D.O.H.C., dry sump, turbo without intercooler	
Number of cylinder	3	
Bore	74 mm (2.9 in)	
Stroke	69.7 mm (2.74 in)	
Displacement	899 cm³ (54.9 in³)	
Maximum power engine speed	7400 ± 200 RPM	

FUEL SYSTEM		
Fuel delivery		Multi point EFI, 46 mm heated throttle body
Idle speed (not adjustable)	Standard and ECO mode	1300 ± 200 RPM
	Sport mode	1650 ± 200 RPM

ELECTRICAL SYSTEM			
Total system output		30 A @ 14.5 V 650 W @ 6000 RPM	
Spark plug	Туре	NGK LMAR9AI-8D or equivalent	
орак рійу	Gap	Not adjustable 0.7 to 0.8 mm (.028 to .031 in)	

LUBRICATION SYSTEM			
		Recom mended XPS oil	XPS 4T 0W40 Synthetic oil
Engine oil	Туре	If XPS product is not available	Use a 0W40 4-stroke SAE synthetic engine oil meeting or exceeding the following lubricant industry specifications. Always check the API service label certification on the oil container, it must contain at least the indicated standard. - API service classification SN

LUBRICATION SYSTEM			
	Quantity	Oil change with filter: 3.3 I (3.5 qt (liq.,US))	

900 ACE Turbo R

ENGINE			
Engine type	Rotax 903, liquid cooled, 4-stroke, D.O.H.C., dry sump, turbo with intercooler		
Number of cylinder	3		
Bore	74 mm (2.9 in)		
Stroke	69.7 mm (2.74 in)		
Displacement	899 cm³ (54.9 in³)		
Maximum power engine speed	7900 ± 200 RPM		

FUEL SYSTEM			
Fuel delivery		Multi point EFI, 46 mm heated throttle body	
Idle speed (not adjustable)	Standard and ECO mode	1300 ± 200 RPM	
	Sport mode	1650 ± 200 RPM	

ELECTRICAL SYSTEM			
Total system output		30 A @ 14.5 V 650 W @ 6000 RPM	
	Туре	NGK LMAR9AI-8D or equivalent	
Spark plug	Gap	Not adjustable 0.7 to 0.8 mm (.028 to .031 in)	

LUBRICATION SYSTEM				
		Recom mended XPS oil	XPS 4T 0W40 Synthetic oil	
Engine oil	Туре	If XPS product is not available	Use a 0W40 4-stroke SAE synthetic engine oil meeting or exceeding the following lubricant industry specifications. Always check the API service label certification on the oil container, it must contain at least the indicated standard. - API service classification SN	
	Quantity		Oil change with filter: 3.3 I (3.5 qt (liq.,US))	

VEHICLE

Tundra

COOLING SYSTEM			
	Recommended	XPS Extended life pre-mixed coolant	
Coolant type	Alternative, or if not available	OAT-type long life antifreeze or coolant specifically formulated for aluminum engines	

FUEL SYSTEM			
Fuel pump		In-tank electrical	
Fuel	Туре	Regular unleaded gasoline (fuel which may contain up to 10% MAX ethanol)	
	Octane Rating	87 Pump posted AKI (R+M)/2) 92 RON	
Fuel tank capacity		36 I (9.5 gal (US))	

ELECTRICAL SYSTEM			
Battery			12 V, 18 A•h
Headlamp			2 x 60/55 W (H-13)
Taillight and stoplight			2.6 W / 139 mW LED
	FA	Main	40 A
	F1	Start / Relays	5 A
Fuses F2		Accessory	15 A
	F3	Taillight / Brake / PAC	10 A

ELECTRICAL SYSTEM			
	F4	ECM / RFID / O2 Sensor / CAPS	15 A
	F7	Fuel Pump / Engine	10 A
	F8	Cluster	15 A
	F9	Fan	15 A
	F10	Headlamps	20 A
Relays	RY1	Main	-
	RY2	Accessory	-
	RY3	Fan	_
	RY4	Lighting	-

DRIVE SYSTEM - CHAINCASE			
	Туре	Recommended	XPS Synthetic chaincase oil
Chaincase oil		Alternative, or if not available	75W140 gear oil that meets the API GL-5 specification
Oil	Capacity		350 ml (12 fl oz (US))
Chain drive ratio		21/53	

DRIVE SYSTEM - PULLEYS AND TRACK		
Drive pulley	Туре	eDrive 2
	Engagement RPM	2200 ± 100 RPM

DRIVE SYSTEM - PULLEYS AND TRACK			
Driven pulley	Туре		QRS
Drive sprocke	Drive sprocket number of teeth		8
	Width	Sport	38.1 cm (15 in)
		LE	41 cm (16 in)
Track	Length	Sport	370.8 cm (146 in)
Тгаск		LE	392.3 cm (154 in)
	Profile height	Sport	40.6 mm (1.6 in)
		LE	38.1 mm (1.5 in)
Track adjust ment ⁽³⁾	Deflec tion	Sport	32 mm (1.26 in)
		LE	45 mm (1.77 in)
	Force		7.3 kgf (16 lbf)

BRAKE SYSTEM			
Brake	Туре	Single 200-mm cross-drilled carbon steel disc	
	Туре	DOT 4	
Brake fluid	Quantity	65 ml (2.2 fl oz (US))	

BRAKE SYSTEM		
Caliper	Fixed twin pistons (2 x 40 mm)	
Brake pad material	Organic	
Minimum brake pad thickness (includes backing plate)	5.0 mm (.20 in)	
Minimum brake disc thickness	4.5 mm (.177 in)	
Maximum brake disc warpage	0.25 mm (.010 in)	

FRONT SUSPENSION		
Suspension type	LTS	
Suspension maximum travel	150 mm (5.9 in)	
Shock absorber type	Motion Control	

REAR SUSPENSION			
Suspension type	Sport	cMotion	
ouspension type	LE	SC-5U	
Suspension maximum travel Measured at rear arm	Sport	245 mm (9.6 in)	
	LE	239 mm (9.4 in)	
Shock absorber type	Center	Motion Control	
onook absorber type	Rear	KYB 36	

WEIGHT AND DIMENSIONS			
Mass (dry)	Sport	221 kg (488 lb)	
wass (dry)	LE	230 kg (507 lb)	
Overall length	Sport	311 cm (122.4 in)	
Overall length	LE	325.9 cm (129.3 in)	
Overall width	All Models	99.4 cm (39.1 in)	
Overall height	Sport	136.9 cm (53.9 in)	
Overall neight	LE	151.3 cm (59.6 in)	
Ski stance	All Models	81.3 cm (32 in)	
Total vehicle load allowed (including occupant(s), all other loads and added accessories)	All Models	206 kg (454.2 lb)	
Towing capacity	LE	260 kg (573 lb)	
Tongue capacity	LE	16 kg (35 lb)	

(1)	NOTICE	Do not attempt to adjust gap on this spark plug.
(2)	Refer to Engir	ne Oil for detailed information.

(3) Refer to *Track Tension Verification* in *Maintenance Procedures* for detailed procedure.

Skandic

COOLING SYSTEM			
	Recommended	XPS Extended life pre-mixed coolant	
Coolant type	Alternative, or if not available	OAT-type long life antifreeze or coolant specifically formulated for aluminum engines	

FUEL SYSTEM			
Fuel pump		In-tank electrical	
Fuel	Туре	Regular unleaded gasoline (fuel which may contain up to 10% MAX ethanol)	
	Octane Rating	87 Pump posted AKI (R+M)/2) 92 RON	
Fuel tank capacity		42 l (11.1 gal (US))	

ELECTRICAL SYSTEM			
Battery			12 V, 18 A•h
Headlamp			2 x 60/55 W (H-13)
Taillight and stoplight			2.6 W / 139 mW LED
	FA	Main	40 A
Fuses F1		Start / Relays	5 A
	F2	Accessory	15 A

ELECTRICAL SYSTEM			
	F3	Taillight / Brake / PAC	10 A
	F4	ECM / RFID / O2 Sensor / CAPS (with compact digital display)	15 A
		ECM / RFID / O2 Sensor / CAPS (with 7.2" display)	10 A
	F5	ACS	15 A
	F7	Fuel Pump / Engine / Starter	10 A
	F8	Cluster	15 A
	F10	Headlamp	20 A
	F11	Reverse	30 A
	RY1	Main	-
Relays	RY2	Accessory	_
	RY3	Fan	-
	RY4	Lighting	-
	RY5	Forward	-
	RY6	Reverse	-

DRIVE SYSTEM - GEARBOX			
Gearbox oil (if equipped)	Туре	Recommended	XPS Synchromesh transmission synthetic oil

DRIVE SYSTEM - GEARBOX			
		Alternative, or if not available	75W140 gear oil that meets the API GL-5 specification
	Capacity		700ml (23.7 fl oz (US))
Chain drive ratio		600 ACE	21/49
		900 ACE 20"	21/45
		900 ACE 24"	21/51
	COO A CE	Low	4.62:1
Gearbox ratio	600 ACE	High	2.57:1
	900 ACE	Low	4.24:1
		High	2.36:1

DRIVE SYSTEM - PULLEYS AND TRACK			
D.C II.	Туре		pDrive
Drive pulley	Engageme	nt RPM	2200 ± 100 RPM
Driven pulley	Туре		QRS
Drive sprocket number of teeth			8
Track	Width	20" models	50 cm (20 in)
		24" models	60 cm (24 in)
	Length	All Models	392.3 cm (154 in)
	Profile height	LE	38.1 mm (1.5 in)

DRIVE SYSTEM - PULLEYS AND TRACK			
		SE	38.1 mm (1.5 in) or 45.7 mm (1.8 in)
Track adjust ment ⁽³⁾	Deflec tion	600 ACE	45 mm (1.77 in)
		900 ACE	35 mm (1.38 in)
	Force	-	7.3 kgf (16 lbf)

BRAKE SYSTEM		
Brake	Туре	Single 200-mm cross-drilled carbon steel disc
	Туре	DOT 4
Brake fluid	Quantity	65 ml (2.2 fl oz (US))
Caliper		Fixed twin pistons (2 x 40 mm)
Brake pad material		Organic
Minimum brake pad thickness (includes backing plate)		5.0 mm (.20 in)
Minimum brake disc thickness		4.5 mm (.177 in)
Maximum brake disc warpage		0.25 mm (.010 in)

FRONT SUSPENSION		
Suspension type	LTS	
Suspension maximum travel	150 mm (5.9 in)	
Shock absorber type	Motion Control	

REAR SUSPENSION			
Suspension type		SC-5U	
Suspension maximum travel Measured at rear arm		239 mm (9.4 in)	
Shock Center		LE	Motion Control
absorber	Center	SE	KYB 36
type	Rear		KYB 36

WEIGHT AND DIMENSIONS			
Mass (dry)	600 ACE		283 kg (623 lb)
	900 ACE	LE 20" track	293 kg (645 lb)
		LE 24" track	302 kg (666 lb)
		SE 20" track	306 kg (675 lb)
		SE 24" track	315 kg (695 lb)
Overall length			322.2 cm (126.9 in)
Overall width		108.7 cm (42.8 in)	

WEIGHT AND DIMENSIONS			
Overall height	151.3 cm (59.6 in)		
Ski stance	88.9 cm (35 in)		
Rear storage compartment loading capacity	15 l (4 gal (US)) or 10 kg (22 lb)		
Rear rack capacity (including tongue weight)	57 kg (125 lb)		
Total vehicle load allowed (including occupant(s), all other loads and added accessories)	238 kg (525 lb)		
Towing capacity	680 kg (1,500 lb)		
Tongue capacity	16 kg (35 lb)		

NOTICE Do not attempt to adjust gap on this spark plug.

- (2) Refer to Engine Oil for detailed information.
- (3) Refer to *Track Tension Verification* in *Maintenance Procedures* for detailed procedure.



This page is intentionally blank

TROUBLESHOOT-ING

TROUBLESHOOTING-GUIDELINES

1 FLECTRIC STARTER DOES NOT WORK

Emergency engine stop switch in OFF position or tether cord cap not installed on engine cut-off switch.

 Place the emergency engine stop switch in the ON position and install tether cord cap (on engine cut-off switch.

Throttle applied while attempting an engine start.

Release throttle while cranking.

2. ENGINE IS CRANKED BUT FAILS TO START

No fuel to the engine.

Check fuel tank level, add fuel if necessary.

System voltage too low.

Contact an authorized BRP snowmobile dealer.

3. ENGINE RPM DOES NOT REACH CLUTCH ENGAGEMENT POINT

D.E.S.S. did not read D.E.S.S. key code in the tether cord cap.

Properly install tether cord cap.

D.E.S.S. has read a different code than the one programmed.

Install a tether cord cap for which this snowmobile was programmed.

ECM does not recognize the D.E.S.S. key.

Refer to an authorized BRP snowmobile dealer.

4. ENGINE LACKS ACCELERATION OR POWER

Engine warm-up in progress.

Drive vehicle at low speeds for a few minutes.

Engine break-in period not completed.

Complete break-in period.

Drive and driven pulleys require servicing.

Contact an authorized BRP snowmobile dealer.

v	4	_

Engine overheats.

- Check coolant level, see Maintenance Procedures.
- Check heat exchangers cleanliness. Clean if necessary.

Drive belt worn too thin.

- If the drive belt has lost more than 3 mm (1/8 in) of its original width, it will affect vehicle performance.
- Replace drive belt.

Incorrect track adjustment.

 See Maintenance Procedures and/or an authorized BRP snowmobile dealer for proper alignment and tension adjustments.

Fuel pressure too low.

 Seek service from an authorized BRP snowmobile dealer, repair shop, or person of your own choosing for maintenance, repair, or replacement. Please refer to the US EPA EMISSION-RELATED WARRANTY contained herein for information about warranty claims.

5. ENGINE BACKFIRES

Engine is running too hot.

See item 4 of FNGINF LACKS POWER

Ignition timing is incorrect or there is an ignition system failure.

 Seek service from an authorized BRP snowmobile dealer, repair shop, or person of your own choosing for maintenance, repair, or replacement. Please refer to the US EPA EMISSION-RELATED WARRANTY contained herein for information about warranty claims.

Exhaust system leak.

 Seek service from an authorized BRP snowmobile dealer, repair shop, or person of your own choosing for maintenance, repair, or replacement. Please refer to the US EPA EMISSION-RELATED WARRANTY contained herein for information about warranty claims.

Fuel pressure too low.

 Seek service from an authorized BRP snowmobile dealer, repair shop, or person of your own choosing for maintenance, repair, or replacement. Please refer to the US EPA EMISSION-RELATED WARRANTY contained herein for information about warranty claims

6. ENGINE MISFIRES

Water in fuel.

Drain fuel system and refill with fresh fuel.

HEATED GRIPS/THUMB WARMERS ARE NOT WORKING

Engine RPM is too low.

Make sure engine RPM is above 2000.

ENGINE HAS SHUT DOWN

The engine shuts down after long periods of idling.

Do not let engine idle too long. Refer to Vehicle Warm-up in Operating Instruction.

MONITORING SYSTEM

Pilot Lamps, Messages and Beeper Codes Pilot Lamps – 4.5" Digital Display

Gauge pilot lamp(s) will inform you if an anomaly occurs or to inform you of a particular condition.



Pilot lamp can flash alone or in combination with another lamp.

The lower display is used as a complement of the pilot lamps to give you a brief description if an anomaly occurs or to inform you of a particular condition.



4.5" DIGITAL LOWER DISPLAY

Messages will be displayed with a beep code and pilot lamp(s).

Beeper codes will be heard, and messages will be displayed to catch your attention.

See table below for details.

NOTE:

Some of the listed pilot lamps and messages do not apply to all models.

Pilot lamp ON	BEEPER	Message Display	Description
##. ***	4 short beeps every 30 seconds	HIGH ENGINE TEMPERA TURE	Engine is overheating, reduce snowmobile speed and run in loose snow or stop engine immediately and let engine cool down. Check coolant level, refer to Maintenance. If coolant level is correct and overheating persists, contact an authorized BRP snowmobile dealer. Do not run the engine if condition persists.
		MUFFLER OVERHEAT	Reduce speed or stop engine. Let engine cool down and restart. If overheating persists, contact an authorized BRP snowmobile dealer. Do not run the engine if condition persists.
₽	Short beeps repeating rapidly	HIGH ENGINE TEMPERA TURE	Critical overheat. Stop engine immediately and let engine cool down. Check coolant level, refer to <i>Maintenance</i> . If coolant level is correct and overheating persists, contact an authorized BRP snowmobile dealer. Do not run the engine if condition persists.
		MUFFLER OVERHEAT	Critical overheat. Stop engine immediately and

Pilot lamp ON	BEEPER	Message Display	Description
		ECM OVERHEAT	let engine cool down. If overheating persists, contact an authorized BRP snowmobile dealer. Do not run the engine if condition persists.
-+	4 short beeps every 5 minutes	BATT VOLT	Indicate a low or high battery voltage condition. Visit an authorized BRP snowmobile dealer as soon as possible.
\bigcirc	4 short beeps	CHECK ENGINE	Engine fault, see an authorized BRP snowmobile dealer, repair shop or person of your own choosing as soon as possible.
		_	Displayed when brake is applied for more than 15 seconds while throttle lever is squeezed and vehicle is moving at more than 5 km/h (3 mph).
_	4 short beeps every 5 minutes	KNOCK	Engine detonation (RPM is limited when this condition occurs). - Ensure recommended fuel is used. - Check fuel quality, replace if necessary.

Pilot lamp ON	BEEPER	Message Display	Description
			If fault still occurs, contact an authorized BRP snowmobile dealer, repair shop, or person of your own choosing.
_	4 short beeps every 5 minutes	REV LIMIT	Engine RPM limited for protection when certain faults occur.
_		OVER REV	Indicates that maximum engine RPM is reached. Check clutch calibration.
_	Short beeps repeating rapidly	SHUTDOWN	Shutdown procedure in force due to engine overheating or fuel pump problem.
_	2 short beeps every 10 seconds	BELT OVERHEAT	The belt temperature reaches 75 C 167 F. Message and beeps disappears when the temperature drops below 75 C 167 F.
_	2 short beeps every 15 seconds	BELT OVERLOAD	If a critical condition is detected over 1 minute. Message and beeps disappears if the driver reduces critical style of riding.
_	2 short beeps every 10 seconds	BELT OVERLOAD	If it stills in critical condition over 10 minutes. Message will

Pilot lamp ON	BEEPER	Message Display	Description	
			not disappear until the engine shutdown.	
	2 short beeps	1	Good key, vehicle ready to operate.	
DESS	snort beeps, repeating WRONG KEY connect	Unable to read key (bad connection). Make sure the key is clean and correctly snapped on post.		
	Short beeps repeating rapidly	BAD KEY	Invalid key or key not programmed. Use the proper key for the vehicle or have the programmed.	
(blinking)	_	_	Fuel level sensor problem.	

Pilot Lamps, Messages and Beeper Codes Pilot Lamps – 7.2" Digital Display



Pilot lamp can flash alone or in combination with another lamp.

The lower display is used as a complement of the pilot lamps to give you a brief description if an anomaly occurs or to inform you of a particular condition.



7.2" DIGITAL LOWER DISPLAY

Messages will be displayed with a beep code and pilot lamp(s).

Beeper codes will be heard, and messages will be displayed to catch your attention.

See table below for details.

NOTE:

Some of the listed pilot lamps and messages do not apply to all models

Pilot lamp ON	BEEPER	Message Display	Description
**************************************	4 short beeps every 30 seconds	HIGH ENGINE TEMPERA TURE	Engine is overheating, reduce snowmobile speed and run in loose snow or stop engine immediately and let engine cool down. Check coolant level, refer to Maintenance. If coolant level is correct and overheating persists, contact an authorized BRP snowmobile dealer. Do not run the engine if condition persists.
		MUFFLER OVERHEAT	Reduce speed or stop engine. Let engine cool down and restart. If overheating persists, contact an authorized

Pilot lamp ON	BEEPER	Message Display	Description	
			BRP snowmobile dealer. Do not run the engine if condition persists.	
~ <u>E</u> 5	Short beeps repeating rapidly	HIGH ENGINE TEMPERA TURE	Critical overheat. Stop engine immediately and let engine cool down. Check coolant level, refer to <i>Maintenance</i> . If coolant level is correct and overheating persists, contact an authorized BRP snowmobile dealer. Do not run the engine if condition persists.	
		MUFFLER OVERHEAT	Critical overheat. Storengine immediately and	
		ECM OVERHEAT	let engine cool down. If overheating persists, contact an authorized BRP snowmobile dealer. Do not run the engine if condition persists.	
- +	4 short beeps every 5 minutes	BATT VOLT	Indicate a low or high battery voltage condition. Visit an authorized BRP snowmobile dealer as soon as possible.	
٦	4 short beeps	CHECK ENGINE	Engine fault, see an authorized BRP snowmobile dealer, repair shop or person of your own choosing as soon as possible.	

Pilot lamp ON	BEEPER	Message Display	Description	
	ı	I	Displayed when brake is applied for more than 15 seconds while throttle lever is squeezed and vehicle is moving at more than 5 km/h (3 mph).	
	4 short beeps every 5 minutes	KNOCK	Engine detonation (RPM is limited when this condition occurs). - Ensure recommended fuel is used. - Check fuel quality, replace if necessary. - If fault still occurs, contact an authorized BRP snowmobile dealer, repair shop, or person of your own choosing.	
_	4 short beeps every 5 minutes	REV LIMIT	Engine RPM limited for protection when certain faults occur.	
_	_	OVER REV	Indicates that maximum engine RPM is reached. Check clutch calibration.	
_	Short beeps repeating rapidly	SHUTDOWN	Shutdown procedure in force due to engine overheating or fuel pump problem.	

Pilot lamp ON	BEEPER	Message Display	Description	
_	2 short beeps every 10 seconds	BELT OVERHEAT	The belt temperature reaches 75 C 167 F. Message and beeps disappears when the temperature drops below 75 C 167 F.	
_	2 short beeps every 15 seconds	BELT OVERLOAD	If a critical condition is detected over 1 minute Message and beeps disappears if the driver reduces critical style or riding.	
_	2 short beeps every 10 seconds	BELT OVERLOAD	If it stills in critical condition over 10 minutes. Message will not disappear until the engine shutdown.	

Pilot lamp ON	BEEPER	Message Display	Description
	2 short beeps	1	Good key, vehicle ready to operate.
Short beeps, repeating slowly WRONG KE	WRONG KEY	Unable to read key (bad connection). Make sure the key is clean and correctly snapped on post.	
	Short beeps repeating rapidly	BAD KEY	Invalid key or key not programmed. Use the proper key for the vehicle or have the programmed.
(blinking)	_	_	Fuel level sensor problem.

Fault Codes

The fault codes can be displayed on the center display.

The fault codes are accessible in the setting menu.

Contact an authorized BRP snowmobile dealer for code signification.

WARRANTY

BRP LIMITED WARRANTY USA AND CANADA: 2026 SKI-DOO® SNOWMOBILES

1) SCOPE OF THE LIMITED WARRANTY

Bombardier Recreational Products Inc. ("BRP") warrants its 2026 Ski-Doo ® snowmobiles (the "Product") sold by a BRP dealers authorized to distribute the Product in the United States of America ("USA") and in Canada (a "BRP Dealer") from defects in material or workmanship for the period and under the conditions described below. This limited warranty will become null and void if:

- The Product was used for racing or any other competitive activity, at any point, even by a previous owner; or
- The Product has been altered or modified in such a way so as to adversely affect its operation, performance or durability, or has been altered or modified to change its intended use.

Non-factory installed parts and accessories are not covered under this limited warranty. Please refer to the applicable parts and accessories limited warranty text.

2) LIMITATIONS OF LIABILITY

TO THE EXTENT PERMITTED BY LAW. THIS WARRANTY IS EX-PRESSLY GIVEN AND ACCEPTED IN LIEU OF ANY AND ALL OTH-ER WARRANTIES, EXPRESSED OR IMPLIED, WITHOUT LIMITATION ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. TO THE EXTENT THAT THEY CANNOT BE DISCLAIMED, THE IMPLIED WARRAN-TIES ARE LIMITED IN DURATION TO THE LIFE OF THE EXPRESS WARRANTY. INCIDENTAL AND CONSEQUENTIAL DAMAGES ARE EXCLUDED FROM COVERAGE UNDER THIS WARRANTY. SOME STATES/PROVINCES DO NOT ALLOW FOR THE DIS-CLAIMERS, LIMITATIONS AND EXCLUSIONS IDENTIFIED ABOVE. AS A RESULT, THEY MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU SPECIFIC RIGHTS, AND YOU MAY ALSO HAVE OTH-ER LEGAL RIGHTS WHICH MAY VARY FROM STATE TO STATE, OR PROVINCE TO PROVINCE

Neither the distributor, any BRP Dealer nor any other person has been authorized to make any affirmation, representation or warranty regarding the Product, other than those contained in this limited warranty, and if made, shall not be enforceable against BRP. BRP reserves the right to modify this limited warranty at any time, being under-stood that such modification will not alter the warranty conditions applicable to the Product sold while this warranty is in effect.

3) EXCLUSIONS - ARE NOT WARRANTED

The following are not warranted under any circumstances:

- Normal wear and tear:
- Routine maintenance items, tune ups, adjustments;

J	J	u

- Damage caused by negligence or failure to provide proper maintenance and/or storage, as described in the Operator's Guide;
- Damage resulting from removal of parts, improper repairs, service, maintenance, modifications or use of parts or accessories not manufactured or approved by BRP or resulting from repairs done by a person that is not an authorized servicing BRP Dealer;
- Damage caused by abuse, abnormal use, neglect, use of the Product on surfaces other than snow, or operation of the Product in a manner inconsistent with the recommended operation described in the Operator's Guide:
- Damage resulting from accident, submersion, fire, snow or water ingestion, theft, vandalism or any act of God;
- Damages from rust, corrosion or exposure to the elements;
- Operation with fuels, oils or lubricants which are not suitable for use with the Product (see the Operator's Guide);
- Incidental or consequential damages, or damages of any kind including without limitation transportation expenses, towing, storage, telephone, rental, taxi, inconvenience, insurance coverage, loan payments, loss of time, loss of income or time missed for downtime experience due to service work; and
- Damage resulting from studs installed on tracks if the installation does not conform to BRP's instructions.

4) WARRANTY COVERAGE PERIOD

This limited warranty will be in effect from (1) the date of delivery to the first retail consumer, or (2) the date the Product is first put into use, whichever occurs first and for the applicable period below:

- TWELVE (12) consecutive months, for private use or commercial use owners. However, the warranty coverage period on a snowmobile delivered between June 1st and December 1st of a given year will expire November 30th of the following year.
- For emission-related components, please also refer to the US EPA Emission-Related Warranty.

The repair or replacement of parts or the performance of service under this warranty does not extend the life of this limited warranty beyond its original expiration date.

5) CONDITIONS REQUIRED FOR WARRANTY COVERAGE

This warranty coverage is available only if each of the following conditions has been fulfilled:

 The Product must be purchased as new and unused by its first owner from a BRP dealer authorized to distribute Product in the country in which the sale occurred;

BRP LIMITED WARRANTY USA AND CANADA: 2026 SKI-DOO® SNOWMOBILES

- The BRP specified pre-delivery inspection process must be completed and documented and signed by the purchaser:
- pleted and documented and signed by the purchaser;
 The Product must have undergone proper registration by an authorized BRP Dealer;
- The Product must be purchased in the country in which the purchaser resides; and
- Routine maintenance outlined in the Operator's Guide must be timely performed in order to maintain warranty coverage. BRP reserves the right to make warranty coverage contingent upon proof of proper maintenance.

BRP will not honor this limited warranty to any private use owner or commercial use owner if one of the preceding conditions has not been met. Such limitations are necessary in order to allow BRP to preserve both the safety of its products, and also that of its consumers and the general public.

6) WHAT TO DO TO OBTAIN WARRANTY COVERAGE

The customer must cease using the Product upon the appearance of an anomaly, notify a servicing BRP Dealer within two (3) days of the appearance of the anomaly and provide the Dealer with reasonable access to the Product and reasonable opportunity to repair it.

The customer must also present to the BRP Dealer, proof of purchase of the Product and must sign the repair/work order prior to starting the repair in order to validate the warranty repair.

All parts replaced under this limited warranty become the property of BRP.

7) WHAT BRP WILL DO

BRP's obligations under this warranty are limited to, at its sole discretion, repairing parts found defective under normal use, maintenance and service, or replacing such parts without charge for parts and labor, at any authorized BRP Dealer during the warranty coverage period under the conditions described herein. No claim of breach of warranty shall be cause for cancellation or rescission of the sale of the Product to the owner.

In the event that service is required outside of the country of original sale, the owner will bear responsibility for any additional charges due to local practices and conditions, such as, but not limited to, freight, insurance, taxes, license fees, import duties, and any and all other financial charges, including those levied by governments, states, territories and their respective agencies.

BRP LIMITED WARRANTY USA AND CANADA: 2026 SKI-DOO® SNOWMOBILES

BRP reserves the right to improve or modify products from time to time without assuming any obligation to modify products previously manufactured.

8) TRANSFER

If the ownership of a Product is transferred during the warranty coverage period, this limited warranty, subject to its terms and conditions, shall also be transferred and be valid for the remaining coverage period provided BRP or an authorized BRP Dealer receives a proof that the former owner agreed to the transfer of ownership, in addition to the coordinates of the new owner.

9) CONSUMER ASSISTANCE

In the event of a controversy or a dispute in connection with this limited warranty, BRP suggests that you try to resolve the issue at the dealership level. We recommend discussing the issue with the authorized BRP Dealer's service manager or owner.

If the matter still remains unresolved, contact BRP by filling out the customer contact form at **www.brp.com** or contact BRP by mail at one of the addresses listed under the *CONTACT US* section of this guide.

US EPA EMISSION-RELATED WARRANTY

Bombardier Recreational Products Inc. ("BRP") warrants to the ultimate purchaser and each subsequent purchaser that this new engine, including all parts of its exhaust emission-control system and its evaporative emission-control system, meets two conditions:

- It is designed, built, and equipped so it conforms at the time of sale to the ultimate purchaser with the requirements of 40 CFR 1051 and 40 CFR 1060.
- It is free from defects in materials and workmanship that may keep it from meeting the requirements of 40 CFR 1051 and 40 CFR 1060.

Where a warrantable condition exists, BRP will repair or replace, as it elects, any part or component with a defect in materials or workmanship that would increase the engine's emissions of any regulated pollutant within the stated warranty period at no cost to the owner, including expenses related to diagnosing and repairing or replacing emission-related parts. All defective parts replaced under this warranty become the property of BRP.

For all emission-related warranty claims, BRP is limiting the diagnosis and repair of emission-related parts to the authorized Ski-Doo dealers, unless for emergency repairs as required by item 2 of the following list

As a certifying manufacturer, BRP will not deny emission-related warranty claims based on any of the following:

- Maintenance or other service BRP or BRP's authorized facilities performed.
- Engine/equipment repair work that an operator performed to correct an unsafe, emergency condition attributable to BRP as long as the operator tries to restore the engine/equipment to its proper configuration as soon as possible.
- Any action or inaction by the operator unrelated to the warranty claim.
- Maintenance that was performed more frequently than BRP specify.
- Anything that is BRP fault or responsibility.
- 6. The use of any fuel that is commonly available where the equipment operates unless BRP written maintenance instructions state that this fuel would harm the equipment's emission control system and operators can readily find the proper fuel. See maintenance information section and fuel requirements of fueling section.

Emission-Related Warranty Period

The emission-related warranty is valid for the following period whichever comes first:

	HOUR	MONT	KILOME
	S	HS	TERS
Exhaust and evaporative emission-related components	200	30	4000

Components Covered

The emission-related warranty covers all components whose failure would increase an engine's emissions of any regulated pollutant, including the following listed components:

- For exhaust emissions, emission-related components include any engine parts related to the following systems:
 - Air-induction system
 - Fuel system
 - Ignition system
 - Exhaust gas recirculation systems
- The following parts are also considered emission-related components for exhaust emissions:
 - Aftertreatment devices
 - Crankcase ventilation valves
 - Sensors
 - Electronic control units
- 3. The following parts are considered emission-related components for evaporative emissions:
 - Fuel tank
 - Fuel cap
 - Fuel line
 - Fuel line fittings
 - Clamps*
 - Pressure relief valves*
 - Control valves*
 - Control solenoids*
 - Electronic controls*
 - Vacuum control diaphragms*
 - Control cables*
 - Control linkages*
 - Purge valves
 - Vapor hoses
 - Liquid/vapor separator
 - Carbon canister
 - Canister mounting brackets

US EPA EMISSION-RELATED WARRANTY

Carburetor purge port connector

NOTE:

*As related to the evaporative emission control system

 Emission-related components also include any other part whose only purpose is to reduce emissions or whose failure will increase emissions without significantly de- grading engine/equipment performance.

Limited Applicability

As a certifying manufacturer, BRP may deny emission-related warranty claims for failures that have been caused by the owner's or operator's improper maintenance or use, by accidents for which the manufacturer has no responsibility, or by acts of God.

For example, an emission-related warranty claim need not be honored for failures that have been directly caused by the operator's abuse of the engine/equipment or the operator's use of the engine/equipment in a manner for which it was not designed and are not attributable to the manufacturer in anyway.

If you have any question regarding your warranty rights and responsibility or for the name and location of the nearest authorized BRP dealer, you should contact BRP by filling out the customer contact form at **www.brp.com** or contact BRP by mail at one of the addresses listed under the *CONTACT US* section of this guide, or call at 1-888-272-9222.

BRP INTERNATIONAL LIMITED WARRANTY: 2026 SKI-DOO® SNOWMOBILES

1) SCOPE OF THE LIMITED WARRANTY

Bombardier Recreational Products Inc. ("BRP") warrants its 2026 Ski-Doo ® snowmobiles (the "Product") sold by distributors or dealers authorized by BRP to distribute Ski-Doo snowmobiles ("BRP") Distributor/Dealer") outside of the United States of America, Canada, members of the European Economic Area (which is comprised of the member states of the European Union plus the United Kingdom, Norway, Iceland and Liechtenstein) ("EEA"), members states of the Commonwealth of the Independent States (including Ukraine and Turkmenistan) ("CIS") and Turkey, from defects in material or workmanship for the period and under the conditions described below.

Non-factory installed parts and accessories are not covered under this limited warranty. Please refer to the applicable parts and accessories limited warranty text.

This limited warranty will become null and void if:

- The Product was used for racing or any other competitive activity, at any point, even by a previous owner; or
- The Product has been altered or modified in such a way so as to adversely affect its operation, performance or durability, or has been altered or modified to change its intended use.

2) LIMITATIONS OF LIABILITY

TO THE EXTENT PERMITTED BY LAW. THIS WARRANTY IS EX-PRESSLY GIVEN AND ACCEPTED IN LIEU OF ANY AND ALL OTH-ER WARRANTIES, EXPRESSED OR IMPLIED, **INCLUDING** WITHOUT LIMITATION ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. TO THE EXTENT THAT THEY CANNOT BE DISCLAIMED, THE IMPLIED WARRANTIES ARE LIMITED IN DURATION TO THE LIFE OF THE EXPRESS WARRANTY, INCIDENTAL AND CONSEQUENTIAL DAMAGES ARE EXCLUDED FROM COVERAGE UNDER THIS WARRANTY. SOME JURISDICTIONS DO NOT ALLOW FOR THE DISCLAIMERS. LIMITATIONS AND EXCLUSIONS IDENTIFIED ABOVE. AS A RE-SULT. THEY MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU SPECIFIC RIGHTS, AND YOU MAY ALSO HAVE OTHER LE-GAL RIGHTS WHICH MAY VARY FROM COUNTRY TO COUNTRY. BRP SHALL NOT BE HELD LIABLE IF PRODUCTS OR WARRANTY PARTS ARE NOT AVAILABLE IN CERTAIN COUNTRIES FOR REA-SONS OUTSIDE OF BRP'S CONTROL. (FOR PRODUCTS PUR-CHASED IN AUSTRALIA REFER TO "FOR PRODUCTS SOLD IN AUSTRALIA ONLY", BELOW).

Neither the BRP Distributor/Dealer nor any other person has been authorized to make any affirmation, representation or warranty regarding

BRP INTERNATIONAL LIMITED WARRANTY: 2026 SKI-DOO® SNOWMOBILES

the product, other than those contained in this limited warranty, and if made, shall not be enforceable against BRP.

BRP reserves the right to modify this warranty at any time, being understood that such modification will not alter the warranty conditions applicable to the Products sold while this warranty is in effect.

3) EXCLUSIONS - ARE NOT WARRANTED

The following are not warranted under this limited warranty under any circumstances:

- Normal wear and tear:
- Routine maintenance items, tune ups, adjustments;
- Damage caused by negligence or failure to provide proper maintenance and/or storage, as described in the operator's guide;
- Damage resulting from removal of parts, improper repairs, service, maintenance, modifications or use of parts or accessories not manufactured or approved by BRP which in its reasonable judgement are either incompatible with the product or adversely affect its operation, performance and durability, or resulting from repairs done by a person that is not an authorized servicing Ski-Doo Distributor/ Dealer:
- Damage caused by abuse, abnormal use, neglect, racing or operation of the Product on surfaces other than snow, or operation of the Product in a manner inconsistent with the recommended operation described in the Operator's Guide;
- Damage resulting from accident, submersion, fire, snow or water ingestion, theft, vandalism or any act of God;
- Operation with fuels, oils or lubricants which are not suitable for use with the Product (see the Operator's Guide):
- Damage resulting from rust, corrosion or exposure to the elements:
- Incidental or consequential damages, or damages of any kind including without limitation towing, storage, transportation expenses, telephone, rental, taxi, inconvenience, insurance coverage, loan payments, loss of time, loss of income; or time missed for downtime experience due to service work, and;
- Damage resulting from studs installed on tracks if the installation does not conform to BRP's instructions.

4) WARRANTY COVERAGE PERIOD

This warranty will be in effect from (1) the date of delivery to the first retail consumer or (2) the date the Product is first put into use, whichever occurs first and for a period of:

TWELVE (12) CONSECUTIVE MONTHS, for private or commercial use owners. However, the warranty coverage period on a snowmobile delivered between June 1st and December 1st of a given year will expire November 30th of the following year.

The repair or replacement of parts or the performance of service under this warranty does not extend the life of this warranty beyond its original expiration date.

The warranty coverage period identified above are a minimal limited warranty period which can be extended by any applicable warranty promotional program, as the case may be.

Note that the duration and any other modalities of the warranty coverage are subject to the applicable national or local legislation in the customer's country.

FOR PRODUCTS SOLD IN AUSTRALIA ONLY

Nothing in these warranty terms and conditions should be taken to exclude, restrict or modify the application of any condition, warranty, guarantee, right or remedy conferred or implied under the Competition and Consumer Act 2010 (Cth), including the Australian Consumer Law or any other law, where to do so would contravene that law, or cause any part of these terms and conditions to be void. The benefits given to you under this limited warranty are in addition to other rights and remedies that you have under Australian law.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

5) CONDITIONS TO HAVE WARRANTY COVERAGE

This warranty coverage is available only if each of the following conditions has been fulfilled:

- The Product must be purchased as new and unused by its first owner from a BRP Distributor/Dealer authorized to distribute Product in the country in which the sale occurred;
- The BRP specified pre-delivery inspection process must be completed, documented and signed by the purchaser;
- The Product must have undergone proper registration by an authorized BRP Distributor/Dealer;
- The Product must be purchased in the country in which the purchaser resides.
- Routine maintenance outlined in the Operator's Guide must be timely performed in order to maintain warranty coverage. BRP reserves the right to make warranty coverage contingent upon proof of proper maintenance.

BRP INTERNATIONAL LIMITED WARRANTY: 2026 SKI-DOO® SNOWMOBILES

BRP will not honour this limited warranty to any private use owner or commercial use owner if one of the preceding conditions has not been met. Such limitations are necessary in order to allow BRP to preserve both the safety of its products, and also that of its consumers and the general public.

6) WHAT TO DO TO OBTAIN WARRANTY COVERAGE

The customer must cease using the Product upon the appearance of an anomaly. The customer must notify a servicing BRP Distributor/ Dealer within two (2) months of the appearance of a defect, and provide it with reasonable access to the Product and reasonable opportunity to repair it. The customer must also present to the authorized BRP Distributor/ Dealer, proof of purchase of the Product and must sign the repair/work order prior to starting the repair in order to validate the warranty repair. All parts replaced under this limited warranty become the property of BRP.

Note that the notification period is subject to the applicable national or local legislation in customer's country.

7) WHAT BRP WILL DO

To the extent permitted by law, BRP's obligations under this warranty are limited to, at its sole discretion, repairing parts found defective under normal use, maintenance and service, or replacing such parts without charge for parts and labour, at any authorized BRP Distributor/ Dealer during the warranty coverage period under the conditions described herein. BRP's responsibility is limited to making the required repairs or replacements of parts. No claim of breach of warranty shall be cause for cancellation or rescission of the sale of the Product to the owner. You may have other legal rights which may vary from country to country.

In the event that service is required outside of the country of original sale, the owner will bear responsibility for any additional charges due to local practices and conditions, such as, but not limited to, freight, insurance, taxes, license fees, import duties, and any and all other financial charges, including those levied by governments, states, territories and their respective agencies.

BRP reserves the right to improve or modify products from time to time without assuming any obligation to modify products previously manufactured.

8) TRANSFER

If the ownership of a Product is transferred during the warranty coverage period, this limited warranty, subject to its terms and conditions,

BRP INTERNATIONAL LIMITED WARRANTY: 2026 SKI-DOO® SNOWMOBILES

shall also be transferred and be valid for the remaining coverage period provided BRP or an authorized BRP Distributor/Dealer receives a proof that the former owner agreed to the transfer of ownership, in addition to the coordinates of the new owner.

9) CONSUMER ASSISTANCE

In the event of a controversy or a dispute in connection with this limited warranty, BRP suggests that you try to resolve the issue at the BRP Distributor/Dealer level. We recommend discussing the issue with the authorized BRP Distributor/Dealer's service manager or owner.

If the matter still remains unresolved, contact BRP by filling out the customer contact form at **www.brp.com** or contact BRP by mail at one of the addresses listed under the *CONTACT US* section of this guide.

BRP LIMITED WARRANTY FOR THE EUROPEAN ECONOMIC AND THE COMMONWEALTH OF THE INDEPENDENT STATES (CIS) AREAS AND TURKEY: 2026 SKI-DOO® SNOWMOBILES

1) SCOPE OF THE LIMITED WARRANTY

Bombardier Recreational Products Inc. ("BRP") warrants its 2026 Ski-Doo® snowmobiles (the "Product") sold by distributors or dealers authorized by BRP to distribute Ski-Doo snowmobiles ("BRP Distributor/Dealer") in member states of the European Economic Area (which is comprised of the member states of the European Union plus the United Kingdom, Norway, Iceland and Liechtenstein) ("EEA"), in member states of the Commonwealth of the Independent States (including Ukraine and Turkmenistan) ("CIS") and Turkey from defects in material or workmanship for the period and under the conditions described below.

Non-factory installed parts and accessories are not covered under this limited warranty. Please refer to the applicable parts and accessories limited warranty text.

This limited warranty will become null and void if:

- The Product was used for racing or any other competitive activity, at any point, even by a previous owner; or
- The Product has been altered or modified in such a way so as to adversely affect its operation, performance or durability, or has been altered or modified to change its intended use.

2) LIMITATIONS OF LIABILITY

TO THE EXTENT PERMITTED BY LAW. THIS WARRANTY IS EX-PRESSLY GIVEN AND ACCEPTED IN LIEU OF ANY AND ALL OTH-ER WARRANTIES. EXPRESSED OR IMPLIED. WITHOUT LIMITATION ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. TO THE EXTENT THAT THEY CANNOT BE DISCLAIMED, THE IMPLIED WARRANTIES ARE LIMITED IN DURATION TO THE LIFE OF THE EXPRESS WARRANTIES. INCIDENTAL AND CONSEQUENTIAL DAMAGES ARE EXCLUDED FROM COVERAGE UNDER THIS WARRANTY. SOME JURISDICTIONS DO NOT ALLOW FOR THE DISCLAIMERS. LIMITATIONS AND EXCLUSIONS IDENTIFIED ABOVE. AS A RE-SULT. THEY MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU SPECIFIC RIGHTS, AND YOU MAY ALSO HAVE OTHER LE-GAL RIGHTS WHICH MAY VARY FROM COUNTRY TO COUNTRY. BRP SHALL NOT BE HELD LIABLE IF PRODUCTS OR WARRANTY PARTS ARE NOT AVAILABLE IN CERTAIN COUNTRIES FOR REA-SONS OUTSIDE OF BRP'S CONTROL

For Products purchased in France, refer to the France specific section below.

Neither the BRP Distributor/Dealer nor any other person has been authorized to make any affirmation, representation or warranty regarding the Product, other than those contained in this limited warranty, and if made, shall not be enforceable against BRP.

BRP reserves the right to modify this warranty at any time, being understood that such modification will not alter the warranty conditions applicable to the Products sold while this warranty is in effect.

3) EXCLUSIONS – ARE NOT WARRANTED

The following are not warranted under this limited warranty under any circumstances:

- Normal wear and tear:
- Routine maintenance items, tune ups, adjustments;
- Damage caused by negligence or failure to provide proper maintenance and/or storage, as described in the Operator's Guide:
- Damage resulting from removal of parts, improper repairs, service, maintenance, modifications or use of parts not manufactured or approved by BRP or resulting from repairs done by a person that is not an authorized servicing BRP Distributor/Dealer;
- Damage caused by abuse, abnormal use, neglect, racing or operation of the Product on surfaces other than snow, or operation of the Product in a manner inconsistent with the recommended operation described in the Operator's Guide;
- Damage resulting from accident, submersion, fire, snow or water ingestion, theft, vandalism or any act of God;
- Operation with fuels, oils or lubricants which are not suitable for use with the Product (see the Operator's Guide);
- Damage resulting from rust, corrosion or exposure to the elements;
- Incidental or consequential damages, or damages of any kind including without limitation towing, storage, transportation expenses, telephone, rental, taxi, inconvenience, insurance coverage, loan payments, loss of time, loss of income; or time missed for downtime experience due to service work.
- And damage resulting from studs installed on tracks if the installation does not conform to BRP's instructions.

4) WARRANTY COVERAGE PERIOD

This warranty will be in effect from (1) the date of delivery to the first retail consumer or (2) the date the Product is first put into use, whichever occurs first and for a period of:

 TWENTY-FOUR (24) CONSECUTIVE MONTHS, for private use owners and TWELVE (12) CONSECUTIVE MONTHS for commercial use owners. However, the warranty coverage period on a snowmobile delivered between June 1st and December 1st of a given year will expire November 30th of the applicable year. A Product is used commercially when it is used in connection with generating income or any work or employment during any part of the warranty period. A Product is also used commercially when, at any point during the warranty period, it has commercial tags or is licensed for commercial use.

The repair or replacement of parts or the performance of service under this warranty does not extend the life of this warranty beyond its original expiration date.

The warranty coverage period identified above are a minimal limited warranty period which can be extended by any applicable warranty promotional program, as the case may be.

Note that the duration and any other modalities of the warranty coverage are subject to the applicable national or local legislation in the customer's country.

CONDITIONS HAVE WARRANTY TO COVERAGE

This warranty coverage is available only if each of the following conditions has been fulfilled:

- The Product must be purchased as new and unused by its first owner from a BRP Distributor/Dealer authorized to distribute products in the country or in the case of the EEA union of countries in which the sale occurred:
- The BRP specified pre-delivery inspection process must be completed, documented and signed by the purchaser; The Product must have undergone proper registration by an au-
- thorized BRP Distributor/Dealer:
- The Product must be purchased within the country or in the case of the EEA, union of countries in which the purchaser resides; and
- Routine maintenance outlined in the Operator's Guide must be timely performed in order to maintain warranty coverage. BRP reserves the right to make warranty coverage contingent upon proof of proper maintenance.

BRP will not honour this limited warranty to any private use owner or commercial use owner if one of the preceding conditions has not been met. Such limitations are necessary in order to allow BRP to preserve both the safety of its products, and also that of its consumers and the general public.

6) WHAT TO DO TO OBTAIN WARRANTY COVERAGE

The customer must cease using the snowmobile upon the appearance of an anomaly. The customer must notify a servicing BRP snowmobile distributor/ dealer within two (2) months of the appearance of a defect, and provide it with reasonable access to the product and reasonable opportunity to repair it. The customer must also present to the authorized BRP Distributor/ Dealer, proof of purchase of the Product and must sign the repair/work order prior to starting the repair in order to validate the warranty repair. All parts replaced under this limited warranty become the property of BRP.

Note that the notification period is subject to the applicable national or local legislation in customer's country.

7) WHAT BRP WILL DO

To the extent permitted by law, BRP's obligations under this warranty are limited to, at its sole discretion, repairing parts found defective under normal use, maintenance and service, or replacing such parts without charge for parts and labour, at any authorized BRP Distributor/ Dealer during the warranty coverage period under the conditions described herein. BRP's responsibility is limited to making the required repairs or replacements of parts. No claim of breach of warranty shall be cause for cancellation or rescission of the sale of the Product to the owner. You may have other legal rights which may vary from country to country.

In the event that service is required outside of the country of original sale, or for EEA residents, if a service is required outside of the EEA, the owner will bear responsibility for any additional charges due to local practices and conditions, such as, but not limited to, freight, insurance, taxes, license fees, import duties, and any and all other financial charges, including those levied by governments, states, territories and their respective agencies.

BRP reserves the right to improve or modify products from time to time without assuming any obligation to modify products previously manufactured

8) TRANSFER

If the ownership of a Product is transferred during the warranty coverage period, this limited warranty, subject to its terms and conditions, shall also be transferred and be valid for the remaining coverage period provided BRP or an authorized BRP Distributor/Dealer receives a proof that the former owner agreed to the transfer of ownership, in addition to the coordinates of the new owner.

9) CONSUMER ASSISTANCE

In the event of a controversy or a dispute in connection with this limited warranty, BRP suggests that you try to resolve the issue at the BRP

Distributor/Dealer level. We recommend discussing the issue with the authorized BRP Distributor/Dealer's service manager or owner.

If the matter still remains unresolved, contact BRP by filling out the customer contact form at **www.brp.com** or contact BRP by mail at one of the addresses listed under the *CONTACT US* section of this guide.

10) ADDITIONAL TERMS AND CONDITIONS FOR FRANCE ONLY

The following terms and conditions are applicable to products sold in France only:

The seller shall deliver goods that are complying with the contract and shall be responsible for defects existing upon delivery. The seller shall also be responsible for defects resulting from packaging, assembling instructions or the installation when it is its responsibility per the contract or if accomplished under its responsibility. To be compliant with the contract, the good shall:

- 1. Be fit for normal use for goods similar thereto and, if applicable:
 - Correspond to the description provided by the seller and have the qualities presented to the buyer though sample or model:
 - Have the qualities that a buyer may legitimately expect considering the public declarations of the seller, the manufacturer of its representative, including in advertising or labeling; or
- Have the characteristics mutually agreed upon as between the parties or be fit for the specific use intended by the buyer and brought to the attention of the seller and which were accepted

The action for failure to comply is prescribed after two years after delivery of the goods. The seller is responsible for the warranty for hidden defects of the good sold if such hidden defects are rendering the good unfit for the intended use, or if they diminish its use in such a way that the buyer would not have acquired the good or would have given a lesser price, had he known. The action for such hidden defects shall be taken by the buyer within 2 years of the discovery of the defect.

CUSTOMER INFORMATION

DATA PRIVACY INFORMATION

DATA PRIVACY INFORMATION

Bombardier Recreational Products inc., its affiliates and subsidiaries ("BRP") is committed to protecting your privacy. This notice is to inform you about how we collect, use and disclose your personal information in the course of managing our relationship with you. More details can be found by visiting BRP's Privacy Policy at: https://brp.com/en/privacy-policy.html or by scanning the QR Code below.

Please be assured that we have appropriate measures in place to ensure that your personal information is kept secured and protected against unauthorized access, use or disclosure.

The personal information we hold about you is collected either directly from you or through our authorized dealers and third parties (e.g. with whom we offer services or engage in joint-marketing activities), and includes:

- Contact, Demographic & Registration Information (e.g., name, full address, phone number, email, ownership history, language of communication)
- Transactional Information (e.g., information necessary to handle returns, payment information when you purchase our products or services through our websites or mobile applications and other issues related to your purchase of BRP products).
- Vehicle Information (e.g., serial number, vehicle identification number, mileage, purchase and delivery date, unit usage, vehicle location and movements)
- Your comments, opinions and reviews of our products and services
- Information collected automatically when you navigate on BRP or dealer's websites or mobile apps collected via cookies and similar technologies (e.g., IP address, type of device, operating system, browser type, webpages you view).

We may also receive information about you from social media platforms when you interact with us on those platforms.

We use your personal information for various reasons, mostly to:

- Manage your order of BRP products and services (e.g., to complete or deliver your order, or service your BRP product)
- Provide customer support, assistance, and after-sales (e.g., complete or follow up with you about your order or maintenance, help with any delivery issues, handle returns, and other issues related to your purchase of BRP products)
- Manage your BRP products registration, warranty, security, safety recall, and dispute resolution (e.g. to offer warranty and after-sales service to you, protect your security and safety, perform safety recalls)
- Send you commercial communications about our products and services (e.g. inform you about new BRP products, services or features; share news about contests, promotions, and events or

discuss products or services offered by BRP that may be of interest to you)—Offer you personalized experience, content, or offers and services based on profiling or geolocation technologies (e.g. to notify you when your vehicle may need servicing, to locate your nearest dealership)

 Perform data analytics and statistics data that no longer identifies you personally, for business intelligence and have insights on how

to improve our products and services

 Prevent, detect, and control fraud and any unauthorized or illegal activities (e.g., to detect and control fraud in relation to BRP products or services purchase; manage illegal or unauthorized activities and cyberthreats)

Comply with applicable laws and regulations.

Your personal information may be disclosed to the following: BRP, BRP's authorized dealerships, distributors, service providers, advertising & market research partners and other authorized third parties.

Depending on the circumstances, your personal information may be communicated outside the region where you reside. Your personal information is retained only for as long as necessary for the purpose for which we obtained it and according to our retention policies.

To exercise your data privacy rights (e.g. right of access, right of rectification), to withdraw your consent in order to be removed from the address list for marketing purposes or for the satisfaction survey or for general data privacy questions, please contact BRP's Data Protection Officer at or by mail at privacyofficer@brp.com or by mail at BRP Legal Service, 726 St-Joseph, Valcourt, Quebec, Canada, J0E 2L0.

When BRP processes your personal information, they do so in compliance with its Privacy Policy available at: https://www.brp.com/en/privacy-policy.html or by using the following QR Code.



CONTACT US

www.brp.com

Asia Pacific

BRP Asia

107D and 107E, 17/F, Tower 1, Grand Century Place, Mongkok, Kowloon, Hong Kong

Australia

Level 26 477 Pitt Street Svdnev. NSW 2020

China

上海市徐汇区衡山路10号6号楼301 Rm 301, Building 6, No.10 Heng Shan Rd, Shanghai, China

Japan

21F Shinagawa East One Tower 2–16–1 Konan, Minato-ku-ku, Tokyo 108–0075

New Zealand

Suite 1.6, 2–8 Osborne Street, Newmarket. Auckland 2013

Europe, Middle East and Africa

Belgium

Oktrooiplein 1 9000 Gent

Czech Republic

Stefanikova 43a Prague 5 150 00

Germany

Alte Papierfabrik 16 D-40699 Erkrath

Finland

Isoaavantie 7 PL 8040 96101 Rovaniemi

France

Arteparc Bâtiment B Route de la côte d'Azur, 13 590 Meyreuil

Norway

Ingvald Ystgaardsvei 15 N-7484 Trondheim Salg, marketing, ettermarked

Sweden

Spinnvägen 15 903 61 Umeå Sweden 90821

Switzerland

Avenue d'Ouchy 4-6 1006 Lausanne

Latin America

Brazil

Rua Odila Maia Rocha Brito, 25 Edificio Beaumont, andar 1 ao 5 CEP 13092-110 Campinas -SP

Mexico

Av. Ferrocarril 202 Parque Industrial Querétaro Santo Rosa Jauregui, Querétaro C.P. 76220

North America

Canada

3200A, rue King Ouest, Suite 300 Sherbrooke (Québec) J1L 1C9

United States of America

10101 Science Drive Sturtevant, Wisconsin 53177

CHANGE OF ADDRESS/OWNERSHIP

If your address has changed or if you are the new owner of the snow-mobile, be sure to notify BRP by either:

- Notifying an authorized BRP snowmobile dealer or distributor.
- North America Only: calling at 1 888 272-9222.
- Mailing one of the change of address cards on the following pages at one of the BRP addresses indicated in the Contact Us section of this guide.

In case of change of ownership, please join a proof that the former owner agreed to the transfer.

Notifying BRP, even after the expiration of the limited warranty, is very important as it enables BRP to reach the snowmobile owner if necessary, like when safety recalls are initiated. It is the owner's responsibility to notify BRP.

STOLEN UNITS: If your personal snowmobile is stolen, you should notify BRP or an authorized BRP snowmobile dealer. We will ask you to provide your name, address, phone number, the vehicle identification number and the date it was stolen

CHANG	GE OF ADDR	ESS/O	WNER		TELEPHONE		APT	CODE	TELEPHONE	
, 				ZIP/POSTAL CODE	TELEP			ZIP/POSTAL CODE	TELEP	
CHANGE OF OWNERSHIP	Vehicle Identification Number (V.I.N.)	NAME	STREET	STATE/PROVINCE		NAME	STREET	STATE/PROVINCE		
CHANGE OF ADDRESS	ION NUMBER	OLD ADDRESS OR PREVIOUS OWNER:	NO.	CITY	COUNTRY	NEW ADDRESS OR NEW OWNER:	NO.	CITY	COUNTRY	

CHANG	GE OF ADDR	ESS/O	WNEF	ZIP/POSTAL CODE	TELEPHONE		APT	ZIP/POSTAL CODE	TELEPHONE	
CHANGE OF OWNERSHIP	Vehicle Identification Number (V.I.N.)	NAME	STREET	STATE/PROVINCE		NAME	STREET	STATE/PROVINCE		
CHANGE OF ADDRESS	ION NUMBER	OLD ADDRESS OR PREVIOUS OWNER:	NO.	CITY	COUNTRY	NEW ADDRESS OR NEW OWNER:	NO.	CITY	COUNTRY	

CHANGE OF ADDRESS/OWNERSHIP									
		APT	ZIP/POSTAL CODE	TELEPHONE		APT	ZIP/POSTAL CODE	TELEPHONE	
CHANGE OF OWNERSHIP	Vehicle Identification Number (V.I.N.)	NAME STREET	STATE/PROVINCE		NAME	STREET	STATE/PROVINCE		SS
CHANGE OF ADDRESS	VEHICLE IDENTIFICATION NUMBER	OR PREVIOUS OWNER:	СПУ	COUNTRY	NEW ADDRESS OR NEW OWNER:	NO.	CITY	COUNTRY	E-MAIL ADDRESS

CHANGE OF ADDRESS/OWNERSHIP **NOTES**

CHANGE OF ADDRESS/OWNERSHIP

NOTES			
_			
	_		

CHANGE OF ADDRESS/OWNERSHIP **NOTES**

CHANGE OF ADDRESS/OWNERSHIP

NOTES			
	-		
	-		

CHANGE OF ADDRESS/OWNERSHIP **NOTES**

CHANGE OF ADDRESS/OWNERSHIP

NOTES			

CHANGE OF ADDRESS/OWNERSHIP **NOTES**

CHANGE OF ADDRESS/OWNERSHIP

NOTES			
	-		
	-		
			
			

CHANGE OF ADDRESS/OWNERSHIP **NOTES**

M = - -	NI -		
VEHICL VEHICL	No		
		R (V.I.N.)	
ENGINI IDENTII		R (E.I.N.)	
Owner:	i		
		NAME	
	No.	APT	
	CITY	ZIP/POSTAL CODE	
Purchas	se Date	YEAR MONTH	DAY
Warran	ty Expiry Date		1
		YEAR MONTH	DAY
	To be completed	d by the dealer at the	time of the sale.
		DEALER IMPRINT AREA	4



A WARNING

Disregarding any of the safety precautions and instructions contained in the operators's guide, safety video and on product safety labels could cause injury including the possibility of death.



®TM and the BRP logo are trademarks of BOMBARDIER RECREA-TIONAL PRODUCTS INC. or its affiliates. ©2025 BOMBARDIER RECREATIONAL PRODUCTS INC. ALL RIGHTS RESERVED.

www.brp.com

ALUMACRAFT®	CAN-AM®	LYNX®
MANITOU®	QUINTREX®	ROTAX®
SFA-DOO®	SKI-DOO®	