
SUPPLEMENT FOR MODEL: 3352 This correction sheet must be used in conjunction with the 1991 Alpine II Operator's Guide (P/N 414 7113 00)

REFERENCE: U.S. ARMY

CONTRACT DAA E07-91-C-1424

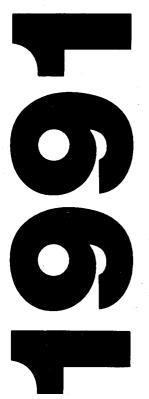

OPERATOR'S GUIDE




ALPINE® II

Litho'd in Canada **Trademarks of Bombardier Inc.
All rights reserved *Bombardier Inc.

> 414 7832 00 (MMO-9114SH)

WARNING: The engine and the corresponding components identified in the operator's guide should not be utilized on product(s) other than that mentioned on the cover page of the operator's guide.

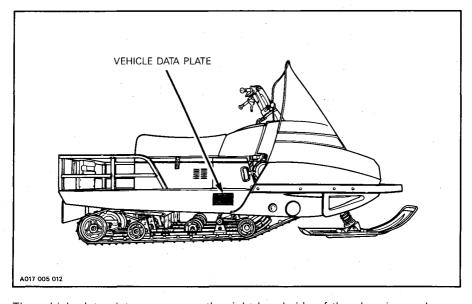


The vehicle data plate appears on the right hand side of the chassis, as shown.

CONTROLS/INSTRUMENTS


Black Out Switch

Turns off lights.

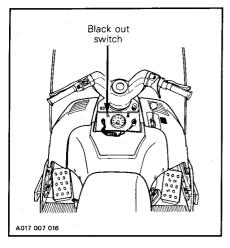


Seat Compartment

Unfasten spring catch and tip seat over from right side. Two jacks and a spare drive belt are hold by brackets on left side of seat compartment, note their positions for proper storage. Two spare spark plugs are screwed on a support on right side of seat compartment. The storage cover and high altitude kit are also located in seat compartment.

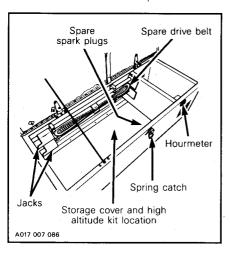

Backrest

Adjust backrest to desired position and lock in place using adjustment knobs. Periodically during use, check tightness of adjustment knobs.

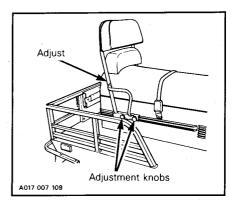


Hour Meter

The hour meter and its filter are located in battery compartment at front of seat compartment. The hour meter indicates the total number of engine running hours.


Ski Tie Downs

On each side of rack, two ski tie downs are riveted.

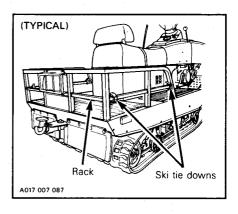


Jack Utilization

Install jacks (one on each side) as illustrated to support rear portion of vehicle off the ground.

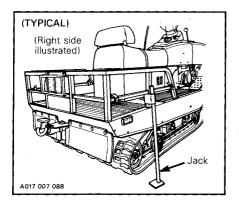

WIRING DIAGRAM.


Alpine II military (Army 1991)

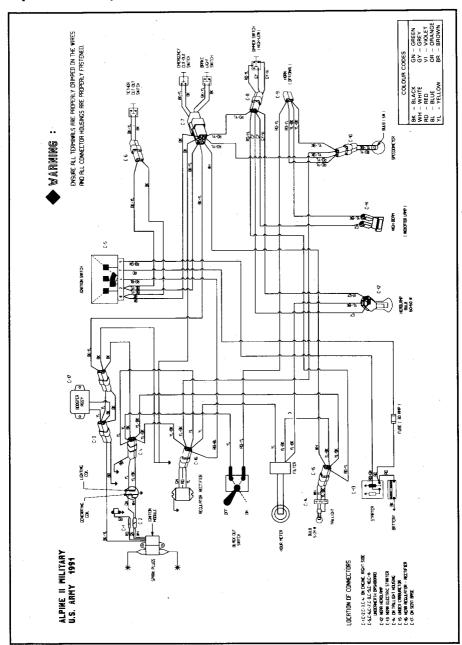

TOOLS_

As standard equipment each new snowmobile is supplied with basic tools such as screwdriver, wrenches, emergency starting rope, etc.

Standard Tools

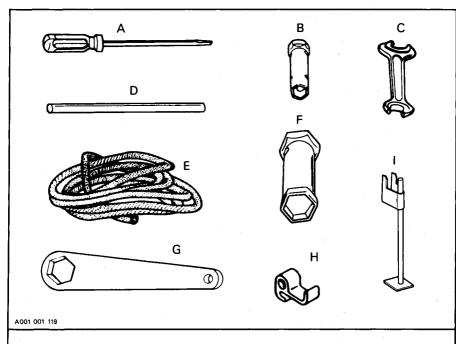

- A. Screwdriver
- B. Socket 10/13 mm
- C. Open end wrench 10/13 mm
- D. Socket wrench handle
- E. Emergency starting rope
- F. Socket 21/26 mm
- G. Hexagonal wrench (adjuster blocks)
- H. Emergency starter clip
- I. Jack (2)

