

***can-am***



**COMMANDER SERIES**

# OPERATOR'S GUIDE

Includes Safety, Vehicle and Maintenance Information

**NO  
ON**

## **⚠ WARNING**

Read this operator's guide thoroughly. It contains important safety information.

Minimum recommended operator age: 16 or older with a valid driver's license.

Keep this operator's guide with the vehicle at all times.

The removal or modification of evaporative emission-related parts on this OHRV is illegal.

Violators may be subject to civil and/or criminal penalties under California and federal law.

### **WARNING**

**YOUR VEHICLE CAN BE HAZARDOUS TO OPERATE.** A collision or roll-over can occur quickly, if you fail to take proper precautions, even during routine maneuvers such as turning and driving on hills or over obstacles. For your safety, understand and follow all the warnings contained in this operator's guide and on the labels on your vehicle. Failure to follow these warnings can result in **SEVERE INJURY OR DEATH**. Keep this operator's guide with the vehicle at all times.

### **WARNING**

Disregarding any of the safety precautions and instructions contained in the Operators's Guide, Safety video and on product safety labels could cause injury including the possibility of death.

### **WARNING**

This vehicle may exceed the performance of other vehicles you may have ridden in the past. Take time to familiarize yourself with your new vehicle.

## **CALIFORNIA PROPOSITION 65 WARNING**

### **WARNING**

Operating, servicing and maintaining an off-road vehicle can expose you to chemicals including engine exhaust, carbon monoxide, phthalates, and lead, which are known to the State of California to cause cancer and birth defects or other reproductive harm. To minimize exposure, avoid breathing exhaust, do not idle the engine except as necessary, service your vehicle in a well-ventilated area and wear gloves or wash your hands frequently when servicing your vehicle. For more information go to [www.p65warnings.ca.gov/products/passenger-vehicle](http://www.p65warnings.ca.gov/products/passenger-vehicle).

™® Trademarks of BRP or its affiliates.

This is a non-exhaustive list of trademarks that are the property of Bombardier Recreational Products Inc. or its affiliates.

Trademarks may not be registered in every jurisdiction.

Can-Am®

D.E.S.S.™

DPST™

ROTAX®

XPS®

Commander®

All rights reserved. No parts of this Operator's guide may be reproduced in any form without the prior written permission of Bombardier Recreational Products Inc.

©Bombardier Recreational Products Inc. (BRP) 2025

|            |                                                                                                                                                                                                             |
|------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Deutsch    | Dieses Handbuch ist möglicherweise in Ihrer Landessprache verfügbar. Bitte wenden Sie sich an Ihren Händler oder besuchen Sie: <a href="http://www.operatorsguides.brp.com">www.operatorsguides.brp.com</a> |
| English    | This guide may be available in your language. Check with your dealer or go to: <a href="http://www.operatorsguides.brp.com">www.operatorsguides.brp.com</a>                                                 |
| Español    | Es posible que este manual esté disponible en su idioma. Consulte a su distribuidor o visite: <a href="http://www.operatorsguides.brp.com">www.operatorsguides.brp.com</a>                                  |
| Français   | Ce guide peut être disponible dans votre langue. Vérifier avec votre concessionnaire ou aller à: <a href="http://www.operatorsguides.brp.com">www.operatorsguides.brp.com</a>                               |
| Italiano   | Questa guida potrebbe essere disponibile nella propria lingua. Contattare il concessionario o consultare: <a href="http://www.operatorsguides.brp.com">www.operatorsguides.brp.com</a>                      |
| 中文         | 本手册可能有您的语种的翻译版本。请向经销商询问，或者登录 <a href="http://www.operatorsguides.brp.com">www.operatorsguides.brp.com</a> 查询。                                                                                               |
| 日本語        | このガイドは、言語によって翻訳版が用意されています。<br>ディーラーに問い合わせるか、次のアドレスでご確認ください：<br><a href="http://www.operatorsguides.brp.com">www.operatorsguides.brp.com</a>                                                                 |
| Nederlands | Deze handleiding kan beschikbaar zijn in uw taal. Vraag het aan uw dealer of ga naar: <a href="http://www.operatorsguides.brp.com">www.operatorsguides.brp.com</a>                                          |
| Norsk      | Denne boken kan finnes tilgjengelig på ditt eget språk. Kontakt din forhandler eller gå til: <a href="http://www.operatorsguides.brp.com">www.operatorsguides.brp.com</a>                                   |
| Português  | Este manual pode estar disponível em seu idioma. Fale com sua concessionária ou visite o site: <a href="http://www.operatorsguides.brp.com">www.operatorsguides.brp.com</a>                                 |
| Русский    | Воспользуйтесь руководством на вашем языке. Узнайте о его наличии у дилера или на странице по адресу <a href="http://www.operatorsguides.brp.com">www.operatorsguides.brp.com</a>                           |
| Suomi      | Käyttöohjekirja voi olla saatavissa omalla kielelläsi. Tarkista jälleenmyyjältä tai käy osoitteessa: <a href="http://www.operatorsguides.brp.com">www.operatorsguides.brp.com</a>                           |
| Svenska    | Denna bok kan finnas tillgänglig på ditt språk. Kontakta din återförsäljare eller gå till: <a href="http://www.operatorsguides.brp.com">www.operatorsguides.brp.com</a>                                     |

|                                          |
|------------------------------------------|
| Covered Models                           |
| Commander DPS 700<br>Commander DPS 1000R |
| Commander XT 700<br>Commander XT 1000R   |
| Commander XT-P 1000R                     |

In Canada, products are distributed and serviced by Bombardier Recreational Products Inc. (BRP).

In the USA, products are distributed and serviced by BRPUS Inc.

In the European Economic Area (which is comprised of the member states of the European Union plus the United Kingdom, Norway, Iceland and Liechtenstein), the Commonwealth of the Independent States (including Ukraine and Turkmenistan) and Turkey, products are distributed and serviced by BRP European Distribution S.A. and other affiliates or subsidiaries of BRP.

For all other countries, products are distributed and serviced by Bombardier Recreational Products Inc. (BRP) or its affiliates.

# TABLE OF CONTENTS

## GENERAL INFORMATION

|                                  |           |
|----------------------------------|-----------|
| <b>GENERAL INFORMATION .....</b> | <b>10</b> |
| Know Before you Go .....         | 10        |
| Safety Messages .....            | 10        |
| About this Operator's Guide..... | 11        |

## SAFETY INFORMATION

|                                                |           |
|------------------------------------------------|-----------|
| <b>GENERAL PRECAUTIONS.....</b>                | <b>14</b> |
| Avoid Carbon Monoxide Poisoning.....           | 14        |
| Avoid Gasoline Fires and Other Hazards .....   | 14        |
| Avoid Burns from Hot Parts .....               | 14        |
| Be A Responsible Rider .....                   | 14        |
| Respect of the Environment.....                | 15        |
| Accessories and Modifications.....             | 16        |
| <b>BEFORE YOU GO.....</b>                      | <b>18</b> |
| Operating Age and Ability .....                | 18        |
| Drugs and Alcohol .....                        | 18        |
| Protective Gear .....                          | 18        |
| Required Equipment .....                       | 21        |
| <b>SAFE OPERATION - RESPONSIBILITIES .....</b> | <b>22</b> |
| Owner - Be Responsible.....                    | 22        |
| Operator - Be Qualified and Responsible .....  | 22        |
| Riding Carefully .....                         | 23        |
| Occupant Restraint System .....                | 24        |
| Terrain Condition .....                        | 24        |
| <b>GET FAMILIAR WITH THE VEHICLE.....</b>      | <b>26</b> |
| Off-Road Operation .....                       | 26        |
| Steering .....                                 | 26        |
| Braking .....                                  | 27        |
| Programmable D.E.S.S. Key .....                | 27        |
| <b>AVOID ACCIDENTS.....</b>                    | <b>28</b> |
| Avoid Rollovers and Tipovers .....             | 28        |
| Avoid Collisions .....                         | 29        |
| <b>RIDING YOUR VEHICLE .....</b>               | <b>30</b> |
| Practice Exercises .....                       | 30        |
| Off-Road Operation .....                       | 31        |
| General Riding Techniques .....                | 31        |
| Environment.....                               | 36        |
| <b>MOVING LOADS AND DOING WORK .....</b>       | <b>37</b> |
| Working with Your Vehicle.....                 | 37        |
| Carrying Loads.....                            | 37        |
| Vehicle Settings When Carrying Load .....      | 37        |
| Loading the Cargo Box.....                     | 38        |
| Operating While Carrying a Load .....          | 39        |
| Tilting the Cargo Box.....                     | 39        |
| Hauling a Load .....                           | 40        |
| Pulling a Trailer .....                        | 40        |

|                                                                                       |           |
|---------------------------------------------------------------------------------------|-----------|
| <b>IMPORTANT ON-PRODUCT LABELS(CANADA/UNITED STATES)</b> .....                        | <b>42</b> |
| Safety Hang Tag .....                                                                 | 42        |
| Safety Labels .....                                                                   | 43        |
| Compliance Hang Tag .....                                                             | 56        |
| <b>IMPORTANT ON-PRODUCT LABELS (COUNTRIES OUTSIDE CANADA AND UNITED STATES)</b> ..... | <b>57</b> |
| Safety Labels .....                                                                   | 58        |
| <b>PRE-RIDE INSPECTION</b> .....                                                      | <b>73</b> |
| Pre-Ride Inspection Check List .....                                                  | 73        |
| <b>REPORTING SAFETY DEFECTS</b> .....                                                 | <b>76</b> |

## **VEHICLE INFORMATION**

|                                            |           |
|--------------------------------------------|-----------|
| <b>PRIMARY CONTROLS</b> .....              | <b>78</b> |
| Steering Wheel .....                       | 79        |
| Accelerator Pedal .....                    | 79        |
| Brake Pedal .....                          | 79        |
| Shift Lever .....                          | 79        |
| <b>SECONDARY CONTROLS</b> .....            | <b>81</b> |
| RF D.E.S.S Key and RF D.E.S.S. Post .....  | 82        |
| Engine Start/Stop Button .....             | 83        |
| Headlight Dimmer Switch .....              | 83        |
| Headlight Dimmer Switch (700 Engine) ..... | 83        |
| Keypad .....                               | 83        |
| 2WD/4WD Switch .....                       | 84        |
| 2WD/4WD/Front Diff Lock Switch .....       | 84        |
| Rear Differential Lock Switch .....        | 85        |
| Riding Mode Switch .....                   | 85        |
| Winch Switch .....                         | 86        |
| <b>EQUIPMENT</b> .....                     | <b>87</b> |
| Tilt Steering .....                        | 87        |
| Cup Holders .....                          | 87        |
| Passenger's Handhold .....                 | 87        |
| Storage Compartments .....                 | 88        |
| Tool Kit .....                             | 89        |
| Footrests .....                            | 89        |
| Half Doors .....                           | 89        |
| Seat Belts .....                           | 90        |
| Driver's Seat .....                        | 91        |
| Passenger's Seat .....                     | 92        |
| Fuel Reservoir Cap .....                   | 92        |
| Winch .....                                | 92        |
| Cargo Box .....                            | 92        |
| Trailer Hitch .....                        | 93        |
| 12-Volt Power Outlet .....                 | 93        |
| Central Rearview Mirror .....              | 94        |
| <b>4.5" DIGITAL DISPLAY</b> .....          | <b>95</b> |
| MULTIFUNCTION DISPLAY .....                | 95        |
| SETTINGS .....                             | 97        |
| <b>7.6" DIGITAL DISPLAY</b> .....          | <b>99</b> |
| Multifunction Display .....                | 99        |
| Settings .....                             | 101       |

|                                                         |            |
|---------------------------------------------------------|------------|
| <b>FUEL</b>                                             | <b>103</b> |
| Fuel Requirements                                       | 103        |
| Vehicle Fueling Procedure                               | 104        |
| <b>BREAK-IN PERIOD</b>                                  | <b>105</b> |
| Operation During Break-In                               | 105        |
| <b>BASIC PROCEDURES</b>                                 | <b>106</b> |
| Starting the Engine                                     | 106        |
| Waking Up the Electrical System                         | 106        |
| Operating the Shift Lever                               | 106        |
| Choosing the Correct Range (Low or High)                | 106        |
| Stopping the Engine and Parking the Vehicle             | 107        |
| Tips for Maximizing Drive Belt Durability               | 107        |
| <b>SPECIAL PROCEDURES</b>                               | <b>109</b> |
| Fuel Flooded Engine                                     | 109        |
| What to do if Water is Suspected to be in the CVT       | 109        |
| What to do if Battery is Drained Out                    | 109        |
| What to Do if Vehicle Rolled Over                       | 109        |
| What to do if Vehicle is Submerged                      | 110        |
| <b>TUNE YOUR RIDE</b>                                   | <b>111</b> |
| Suspension Adjustment Guidelines                        | 111        |
| Suspension Factory Settings                             | 111        |
| Suspension Adjustments                                  | 111        |
| DPS Function                                            | 112        |
| <b>TRANSPORTING THE VEHICLE</b>                         | <b>113</b> |
| Using Vehicle Power to Climb Onto Trailering Equipment  | 114        |
| Using a Winch to Pull Vehicle Onto Trailering Equipment | 114        |
| Securing Vehicle for Transport                          | 115        |
| Getting Vehicle Out of Trailer                          | 115        |
| <b>LIFTING AND SUPPORTING THE VEHICLE</b>               | <b>116</b> |
| Front of Vehicle                                        | 116        |
| Rear of Vehicle                                         | 116        |

## **MAINTENANCE**

|                                                      |            |
|------------------------------------------------------|------------|
| <b>MAINTENANCE SCHEDULE</b>                          | <b>118</b> |
| EPA Regulation - Canadian and USA Vehicles           | 118        |
| Air Filter Maintenance Guideline                     | 118        |
| Severe Duty Use                                      | 119        |
| Deep Mud / Water Use                                 | 119        |
| Maintenance Schedule                                 | 120        |
| Maintenance Records                                  | 131        |
| <b>MAINTENANCE PROCEDURES</b>                        | <b>136</b> |
| Accessing the Maintenance Components                 | 136        |
| Engine Air Filter                                    | 137        |
| CVT Air Filter                                       | 139        |
| Evaporative Emission System Pre-Filter (if Equipped) | 140        |
| Engine Oil                                           | 140        |
| Engine Oil                                           | 142        |
| Engine Oil Filter (Mono-cylinder Engines)            | 144        |
| Engine Oil Filter (V-Twin Engines)                   | 145        |
| Engine Coolant                                       | 146        |
| Radiator                                             | 148        |

|                                                   |            |
|---------------------------------------------------|------------|
| Muffler and Spark Arrester.....                   | 148        |
| GEARBOX.....                                      | 149        |
| GEARBOX.....                                      | 151        |
| FRONT DIFFERENTIAL.....                           | 152        |
| Rear Final Drive (Mono Cylinder Models Only)..... | 154        |
| SPARK PLUGS.....                                  | 155        |
| CVT COVER.....                                    | 156        |
| Drive Belt.....                                   | 157        |
| Drive and Driven Pulleys.....                     | 159        |
| BATTERY.....                                      | 159        |
| Fuses and Fusible Links.....                      | 160        |
| Lights.....                                       | 162        |
| Drive Shaft Bellows and Protectors.....           | 163        |
| Wheel Bearing.....                                | 163        |
| Wheels and Tires.....                             | 164        |
| SUSPENSION.....                                   | 167        |
| BRAKES.....                                       | 169        |
| SEAT BELTS.....                                   | 170        |
| Doors.....                                        | 170        |
| CAGE.....                                         | 170        |
| Cargo Box Release Handle.....                     | 171        |
| <b>VEHICLE CARE.....</b>                          | <b>172</b> |
| Vehicle Cleaning and Protection.....              | 172        |
| <b>STORAGE AND PRESEASON PREPARATION.....</b>     | <b>173</b> |

## **TECHNICAL INFORMATION**

|                                                                                                    |            |
|----------------------------------------------------------------------------------------------------|------------|
| <b>VEHICLE IDENTIFICATION.....</b>                                                                 | <b>176</b> |
| Vehicle Identification Number.....                                                                 | 176        |
| Engine Identification Number (EIN).....                                                            | 176        |
| <b>COMPLIANCE LABELS.....</b>                                                                      | <b>177</b> |
| ROHVA Compliance Label.....                                                                        | 177        |
| Emission Control Information.....                                                                  | 178        |
| Ethanol Compliance Pictogram.....                                                                  | 179        |
| <b>TECHNICAL INFORMATION LABEL.....</b>                                                            | <b>180</b> |
| Air Filter Maintenance Label.....                                                                  | 180        |
| <b>BRP RF DESS POST GEN3 (CAN).....</b>                                                            | <b>182</b> |
| USA and Canada.....                                                                                | 182        |
| Mexico.....                                                                                        | 183        |
| Brazil.....                                                                                        | 183        |
| Japan.....                                                                                         | 184        |
| Europe.....                                                                                        | 184        |
| <b>EVAPORATIVE EMISSION CONTROL SYSTEM.....</b>                                                    | <b>188</b> |
| <b>NOISE EMISSION CONTROL SYSTEM REGULATION.....</b>                                               | <b>189</b> |
| <b>NOISE EMISSION AND VIBRATION VALUES (MACHINERY DIRECTIVE 2006/42/EC COMPLIANCE MODELS).....</b> | <b>190</b> |
| <b>DECLARATION OF CONFORMITY.....</b>                                                              | <b>191</b> |
| EU Declaration of Conformity.....                                                                  | 191        |
| UK Declaration of Conformity.....                                                                  | 192        |

|                                     |     |
|-------------------------------------|-----|
| EAC DECLARATION OF CONFORMITY ..... | 193 |
|-------------------------------------|-----|

## *TECHNICAL SPECIFICATIONS*

|                                |     |
|--------------------------------|-----|
| TECHNICAL SPECIFICATIONS ..... | 196 |
|--------------------------------|-----|

## *TROUBLESHOOTING*

|                                  |     |
|----------------------------------|-----|
| TROUBLESHOOTING GUIDELINES ..... | 210 |
| DIGITAL DISPLAY MESSAGES .....   | 214 |

## *WARRANTY*

|                                                                                                                                                   |            |
|---------------------------------------------------------------------------------------------------------------------------------------------------|------------|
| <b>BRP LIMITED WARRANTY FOR CANADA AND USA: 2026 CAN-AM®</b>                                                                                      |            |
| SSV .....                                                                                                                                         | 216        |
| 1) Scope of the Limited Warranty .....                                                                                                            | 216        |
| 2) Limitations of Liability .....                                                                                                                 | 216        |
| 3) EXCLUSIONS – Are Not Warranted .....                                                                                                           | 216        |
| 4) Warranty Coverage Period .....                                                                                                                 | 217        |
| 5) Conditions to Have Warranty Coverage .....                                                                                                     | 217        |
| 6) What to Do to Obtain Warranty Coverage .....                                                                                                   | 218        |
| 7) What BRP Will Do .....                                                                                                                         | 218        |
| 8) Transfer .....                                                                                                                                 | 218        |
| 9) Consumer Assistance .....                                                                                                                      | 218        |
| <b>US EPA EMISSION - RELATED WARRANTY .....</b>                                                                                                   | <b>219</b> |
| Emission-Related Warranty Period .....                                                                                                            | 219        |
| Components Covered .....                                                                                                                          | 219        |
| Limited Applicability .....                                                                                                                       | 220        |
| <b>CALIFORNIA EVAPORATIVE EMISSIONS CONTROL WARRANTY</b>                                                                                          |            |
| <b>STATEMENT .....</b>                                                                                                                            | <b>222</b> |
| Your Warranty Rights And Obligations .....                                                                                                        | 223        |
| OHRV Manufacturer's Warranty Coverage .....                                                                                                       | 223        |
| Owner's Warranty Responsibilities .....                                                                                                           | 224        |
| <b>BRP LIMITED WARRANTY FOR INTERNATIONAL: 2026 CAN-AM®</b>                                                                                       |            |
| SSV .....                                                                                                                                         | 225        |
| 1) Scope of the Limited Warranty .....                                                                                                            | 225        |
| 2) Limitation of Liability .....                                                                                                                  | 225        |
| 3) EXCLUSIONS – Are Not Warranted .....                                                                                                           | 226        |
| 4) Warranty Coverage Period .....                                                                                                                 | 226        |
| 5) For Products Sold In Australia Only .....                                                                                                      | 227        |
| 6) Conditions to Have Warranty Coverage .....                                                                                                     | 227        |
| 7) What to Do to Obtain Warranty Coverage .....                                                                                                   | 228        |
| 8) What BRP Will Do .....                                                                                                                         | 228        |
| 9) Transfer .....                                                                                                                                 | 228        |
| 10) Consumer Assistance .....                                                                                                                     | 228        |
| <b>BRP LIMITED WARRANTY FOR THE EUROPEAN ECONOMIC AREA,<br/>THE COMMONWEALTH OF THE INDEPENDENT STATES AND TURKEY:<br/>2026 CAN-AM® SSV .....</b> | <b>230</b> |
| 1) Scope of the Limited Warranty .....                                                                                                            | 230        |
| 2) Limitations of Liability .....                                                                                                                 | 230        |
| 3) EXCLUSIONS – Are Not Warranted .....                                                                                                           | 231        |

4) Warranty Coverage Period ..... 231

5) For Products Sold In France Only..... 232

6) Conditions to Have Warranty Coverage ..... 232

7) What to Do to Obtain Warranty Coverage ..... 233

8) What BRP Will Do..... 233

9) Transfer ..... 233

10) Consumer Assistance ..... 234

**CUSTOMER INFORMATION**

**DATA PRIVACY INFORMATION ..... 236**

**CONTACT US ..... 238**

    Asia Pacific ..... 238

    Europe, Middle East and Africa ..... 238

    Latin America ..... 239

    North America ..... 239

**CHANGE OF ADDRESS AND OWNERSHIP ..... 240**

# GENERAL INFORMATION

---

## GENERAL INFORMATION

Congratulations on your purchase of a new Can-Am® side-by-side vehicle. It's backed by the BRP limited warranty and a network of authorized Can-Am Off-road dealers ready to provide the parts, accessories or service you may require.

At delivery, you were informed of the warranty coverage and signed the Pre-delivery Check List to ensure your new vehicle was prepared to your entire satisfaction.

Your dealer is committed to your satisfaction. If you need more information, please ask your dealer.


### Know Before you Go

To learn how to reduce the risk of accident for you or bystanders, read this Operator's Guide before you operate the vehicle.

Also, read all safety labels on your vehicle and watch the *Safety Video* located at:

<https://can-am.brp.com/off-road/safety>

Or use the following QR code.

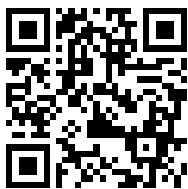

This vehicle is for off-road use only. It is mainly for general recreational use but it may also be used for utility purposes.

Failure to follow the warnings contained in this Operator's Guide can result in **SERIOUS INJURY** or **DEATH**.

### Safety Messages

The types of safety messages, what they look like and how they are used in this guide are explained as follows:

The safety alert symbol ⚠ indicates a potential injury hazard.

| ⚠ <b>WARNING</b>                                                                             |
|----------------------------------------------------------------------------------------------|
| Indicates a potential hazard which, if not avoided, could result in serious injury or death. |

| ⚠ <b>CAUTION</b>                                                                                 |
|--------------------------------------------------------------------------------------------------|
| Indicates a hazardous situation which, if not avoided, could result in minor or moderate injury. |

**NOTICE**

**Indicates an instruction which, if not followed, could result in severely damaged vehicle components or other property.**

**About this Operator's Guide**

This Operator's Guide has been prepared to acquaint the owner/operator of a new vehicle with the various vehicle controls, maintenance and safe operating instructions. It is indispensable for the proper use of the product.

Keep this Operator's Guide in the vehicle as you can refer to it for things such as maintenance, troubleshooting and instructing others.

Note that this guide is available in several languages. In the event of any discrepancy, the English version shall prevail.

If you want to view and/or print an extra copy of your Operator's Guide, simply visit the following website:

**[www.operatorsguides.brp.com](http://www.operatorsguides.brp.com)**

The information contained in this document is correct at the time of publication. BRP, however, maintains a policy of continuous improvement of its products without imposing upon itself any obligation to install them on products previously manufactured. Due to late changes, some differences between the manufactured product and the descriptions and/or specifications in this guide may occur. BRP reserves the right at any time to discontinue or change specifications, designs, features, models or equipment without incurring any obligation upon itself.

This Operator's Guide should remain with the vehicle when it is sold.

This page is intentionally blank

# **SAFETY INFORMATION**

---

# GENERAL PRECAUTIONS

## Avoid Carbon Monoxide Poisoning

All engine exhaust contains carbon monoxide, a deadly gas. Breathing carbon monoxide can cause headaches, dizziness, drowsiness, nausea, confusion and eventually death.

Carbon monoxide is a colorless, odorless, tasteless gas that may be present even if you do not see or smell any engine exhaust. Deadly levels of carbon monoxide can collect rapidly, and you can quickly be overcome and unable to save yourself. Also, deadly levels of carbon monoxide can linger for hours or days in enclosed or poorly ventilated areas. If you experience any symptoms of carbon monoxide poisoning, leave the area immediately, get fresh air and seek medical treatment.

To prevent serious injury or death from carbon monoxide:

- Never run the vehicle in poorly ventilated or partially enclosed areas such as garages, carports or barns. Even if you try to ventilate engine exhaust with fans or open windows and doors, carbon monoxide can rapidly reach dangerous levels.
- Never run the vehicle outdoors where engine exhaust can be drawn into a building through openings such as windows and doors.

## Avoid Gasoline Fires and Other Hazards

Gasoline is extremely flammable and highly explosive. Fuel vapors can spread and be ignited by a spark or flame many feet away from the engine. To reduce the risk of fire or explosion, follow these instructions:

- Use only an approved gasoline container to store fuel.
- Never fill the gasoline container in the vehicle cargo box or on the vehicle - an electrical static discharge may ignite the fuel.
- Strictly adhere to instructions in *Vehicle fueling procedure*.
- Never start or operate the engine if the fuel cap is not properly installed.

Gasoline is poisonous and can cause injury or death.

- Never siphon gasoline by mouth.
- If you swallow gasoline, get any in your eye(s), or inhale gasoline vapor, see a doctor immediately.

If gasoline spills on you, wash with soap and water and change your clothes.

## Avoid Burns from Hot Parts

Certain components like brake rotors and exhaust components become hot during operation. Avoid contact with those parts during and shortly after operation to avoid burn wounds.

## Be A Responsible Rider

At BRP, we believe there's an opportunity for everyone in the powersports and marine communities to come together and rethink how we approach safety, riding etiquette, and the environment. We believe that when we empower all riders to ride responsibly — to look out for each other and safeguard our trails and playgrounds — we inspire an industry to welcome newcomers, build a more caring community and generate positive experiences.

Whether you ride on trails, roads, water or snow, BRP is committed to driving positive change. That's why we're making the Responsible Rider program a key part of our Corporate Social Responsibility initiative through action, education and community empowerment.

To learn more about Responsible Rider, including tips and tricks on safety, riding etiquette and the environment, visit:

– [CANAMOFFROAD.COM/RESPONSIBLE-RIDER/](https://CANAMOFFROAD.COM/RESPONSIBLE-RIDER/)



## Respect of the Environment

The guidelines that we support are not designed to limit your fun, but to preserve the beautiful freedom that you can experience only with an off-road vehicle!

These guidelines will keep operators and passengers healthy, happy and able to introduce others to what they know and enjoy about their favorite pastime. So, the next time you hit the trails, we ask you to remember that you are paving the way for the future of our sport. Help us lead it down the right path! From all of us at BRP, thank you for doing your share.

There is nothing more exhilarating than off-road adventures. Venturing onto trails that cross wild areas is an exciting and healthy sport. However, as the number of people using these recreational parks increases, so does the potential for damage to the environment. Abuse of land, facilities and resources inevitably leads to restrictions and closures of both private and public land.

In essence, the greatest threat to our sport, is all around us. Which leaves us with one logical choice. We must always ride responsibly.

The vast majority respect the law and the environment. Each of us must set an example for those who are new to the sport, young and old alike.

It is in every one's best interest to tread lightly into our recreational areas. Because, in the long run, to protect the sport we must preserve the environment.

Recognizing the importance of this issue and the need for off-road riders to do their share in preserving areas that make it possible to enjoy our sport, BRP invite all off-road riders to remember that respecting the environment is not only critical to the future of our industry but to future generations.

You are a good ambassador for your sport when you follow the principles below.

**Become informed.** Obtain maps, regulations and other information from the Off-road clubs, the Forest Service or from other public land agencies. Learn the rules and follow them and that goes for speed limits, too!

**Avoid** running over young trees, shrubs, and grasses and don't cut wood. On flatlands or areas where trail riding is popular, it's important to ride only where authorized. Remember, there is a link between protecting your environment and your own safety.

**Respect wildlife** and be particularly sensitive of animals that are rearing young or suffering from food shortage. Stress can sap scarce energy reserves. Refrain from riding in areas where only animals are intended to tread!

**Obey** gate closures and regulatory signs and remember, light treaders don't litter!

**Stay out** of wilderness areas. They're closed to all vehicles. Know where the boundaries are.

**Obtain permission** to travel across private land. Respect the rights of land-owners and other people's privacy. Remember, the technology has lowered the noise factor considerably, but you still shouldn't rev your engines where quiet "is the order of the day".

Off-road riders know all too well the efforts that have been made throughout the sport's history to enjoy access to areas where people can ride safely and responsibly. This effort continues today, as strong as ever.

Respecting the areas where we ride... wherever they may be... is the principal way to ensure future enjoyment for all.

Take the opportunity to admire nature and all its wonders, is an experience cherished by off-road riders. Respect the nature and wildlife will help our sport to grow!

Finally, you don't have to leave big tracks or careen through a virgin forest to show you can ride. So whether you're driving a high performance BRP off-road vehicle or any other make or model, show you know what you're doing.

## Accessories and Modifications

Any modifications or addition of accessories approved by BRP may affect the handling of your vehicle. It is important to take the time to get familiar with the vehicle once modifications are made to understand how to adapt your driving behavior accordingly.

Avoid installing equipment not specifically approved by BRP for the vehicle and avoid unauthorized modifications. These modifications and equipment have not been tested by BRP and may create hazards. For example, they could:

- Create a loss of control and increase risk of crash.
- Cause overheating or short circuits increasing the risk of fire or burn injuries.
- Affect the protection features provided by the vehicle.
- Affect the behavior of the trailer when the vehicle is transported.
- Cause a risk of losing objects on the road when transported.

Your vehicle may also become illegal to ride.

See your authorized BRP Off-road dealer for available BRP accessories for your vehicle.

For safety reasons, some BRP accessories must be installed by a BRP dealer but if you decide to install the accessory by yourself, when not required to be done by the dealer, it is important to follow all the instructions carefully and, if applicable, understand all the information on how to use the product or for servicing.

If the accessory has been installed on your vehicle by another person than you, BRP strongly recommends you to read the corresponding instruction sheet as there may be more for information on how to use it safely or for the servicing.

The instruction sheets can be found at this address:

– [HTTPS://INSTRUCTIONS.BRP.COM](https://instructions.brp.com)

# BEFORE YOU GO

## **WARNING**

Disregarding any of the safety precautions and instructions contained in this section could cause injury including the possibility of death.

### **Operating Age and Ability**

Operators must be qualified.

Make sure the operator is 16 or older. Your state (or province) may have additional requirements.

Laws regarding the minimum age and licensing requirements vary from one jurisdiction to another. Be sure to contact the local authorities for information regarding the legal operation of an off-road vehicle in the intended jurisdiction of use.

BRP highly recommends that you take a safety riding course. Basic training is required for the safe operation of any off-road vehicles.

Operation of this vehicle with a disability that impairs vision, reaction time, judgment, or operation of the controls is not recommended.

The safe use of this vehicle depends on many conditions such as visibility, speed, weather, environment, traffic, vehicle condition and the condition of the operator.

The performance of this vehicle may significantly exceed that of other off-road vehicles you have operated. Therefore, use by novice or inexperienced operators is not recommended.

Each passenger must be tall enough to always be properly seated: back against the backrest with seat belt fastened, holding both handholds, and feet firmly planted on the floor.

### **Drugs and Alcohol**


Never ride after consuming alcohol or drugs.

Riding this vehicle requires the operator and passenger(s) to be sober, attentive and alert.

The use of drugs and alcohol, singly or in combination, decreases reaction time, impedes judgment, impairs vision, and inhibits your ability to safely ride.

### **Protective Gear**

It is important that the operator and passenger always wears appropriate protective clothing and apparel, including:

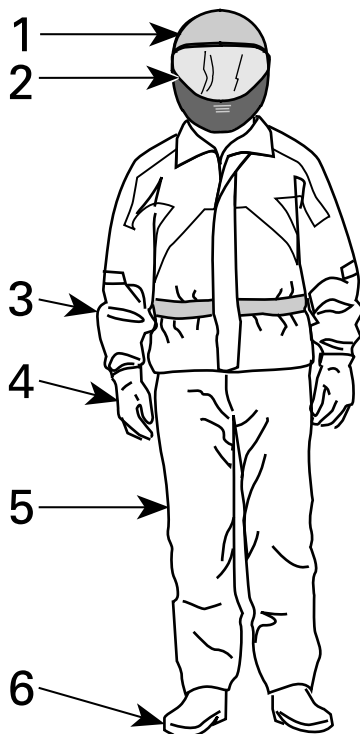

1. *Approved helmet*
2. *Eye and face protection*
3. *Long sleeves shirt or jacket*
4. *Gloves*
5. *Long pants*
6. *Boots (over-the-ankle footwear)*

Depending on conditions, anti-fogging goggles may be required.

Weather conditions should help you decide how to dress. To maximize comfort and avoid frostbites in winter, dress for the coldest weather expected. Thermal underwear next to the skin also provides good insulation.

Never wear any loose clothing that may get entangled in the vehicle or on tree branches and shrubs.

### ***Helmets and Eye Protection***

Helmets protect the head and brain from injury. Even with the vehicle's cage and doors, objects can enter the cockpit and strike the head, or the head can strike the cage itself or objects outside the vehicle. Even the best helmet is no guarantee against injury, but statistics indicate that helmet use significantly reduces the risk of brain injury. So, be safe and always wear a helmet while riding.

## **Choosing a Helmet**

Helmets should be manufactured to meet the appropriate standard in your state, province or country and should fit properly.

A helmet with face protection is a better choice as it protects also against frontal impacts. It can also protect against debris, stones, insects, the elements, etc.

An open-face helmet does not offer the same protection for the face and chin. If you wear an open-face helmet, you should use a snap-on face shield and/or a pair of goggles. Ordinary glasses or sunglasses are not sufficient eye protection for riders. They can shatter or fly off, and they allow wind and airborne objects to reach the eyes.

For winter riding conditions, a stocking type cap, balaclava and face mask should always be carried or worn.

Use tinted face shields or goggles in the daytime only; do not use them at night or in poor illumination. Do not use them if they impair your ability to discern color.

## ***Other Riding Gear***

### **Footwear**

Always wear closed toe footwear. Sturdy over-the-ankle boots with non-slip soles offer more protection and allow you to plant your foot properly on footrest.

Avoid long shoelaces that can be tangled in the accelerator or brake pedals.

For winter riding conditions, rubber soled boots with either a nylon or leather uppers, with removable felt liners are best suited.

Avoid rubber boots. Rubber boots may get trapped behind or between pedals, impairing the proper operation of brake and accelerator pedals.

### **Gloves**

Full-fingered gloves protect hands from the wind, sun, heat, cold and flying objects. Gloves that fit snugly will improve grip on the steering wheel and help reduce hand fatigue. Sturdy, reinforced motorcycle or ATV gloves help protect hands better in the event of an accident or a rollover. If gloves are too bulky, it may be difficult to operate the controls.

For winter riding conditions, hands should be protected by a pair of snowmobile gloves which have sufficient insulation and allow use of thumbs and fingers for operation of controls.

## **Jackets, Pants and Riding Suits**

Wear a jacket or a long sleeved shirt and long pants, or a full riding suit. Quality ATV-type protective gear will provide comfort, and it can help you avoid being distracted by adverse environmental elements. In case of a crash, good quality protective gear made of sturdy material may prevent or reduce injury.

In cool-weather riding, protect yourself against hypothermia. Hypothermia, a condition of low body temperature, can cause loss of concentration, slowed reactions and loss of smooth, precise muscle movement. In cool conditions, proper protective gear like a windproof jacket and insulated layers of clothing are

essential. Even while riding at moderate temperatures, you can feel very cold due to the wind.

Protective gear that is appropriate for cold-weather riding may be too hot when stopped. Dress in layers so that clothing can be removed as desired. Topping the protective gear with a windproof outer layer can prevent cold air from reaching the skin.

### **Rain Gear**

If you must ride in wet weather, a rain suit or a waterproof riding suit is recommended. On long rides, it is a good idea to carry rain gear. A dry rider will be much more comfortable and alert.

### **Hearing Protection**

Long-term exposure to wind and engine noise when riding can cause permanent hearing loss. Properly worn hearing protective devices such as earplugs can help prevent hearing loss. Check local laws before using any hearing protective devices.

## **Required Equipment**

As the owner of an off-road vehicle, you are responsible for ensuring that all required safety equipment is aboard. Check your local regulations about requirements.

This could include:

- First aid kit
- Sling: to help a defective or stuck vehicle
- Tool kit
- Phone in a watertight compartment designed for this application
- Current local map.

For a long ride, you should also include the following:

- Snack
- Flashlight.

---

# SAFE OPERATION - RESPONSIBILITIES

This is a high performance off-road vehicle. Operators must be responsible and use care to avoid rollovers, tipovers, collisions, and other accidents. Even with vehicle safety features (such as protective structure, seat belts, side nets, doors) and protective gear (such as a helmet), there is always a risk of injury or death in these accidents. To reduce the risk of serious injury or death, follow the rules in this section.

## Owner - Be Responsible

Read this Operator's Guide and watch the *Safety Video*. Refer to the link at the beginning of the Operator's Guide.

Always inspect and confirm the safe operating condition of your vehicle prior to ride. Always follow the maintenance schedule described in this Operator's Guide.

Never allow anyone to operate your vehicle unless they are responsible and can be trusted with a high performance vehicle. Consider supervising new or young operators and setting rules and limits (e.g., whether they can carry passengers, what they may do with the vehicle, where they may ride, etc.) for anyone using your vehicle.

**If equipped with optional D.E.S.S. keys**, select the appropriate key (see *Ignition Switch and Keys*) based on the operator's experience, vehicle use and environment.

Discuss the safety information with anyone who will be using the vehicle. Be sure that all operators and passengers meet the qualifications below and agree to follow the safety information. Help users become familiar with the vehicle.

We encourage you to have an Annual Safety Inspection of your vehicle. Please contact an authorized BRP dealer for further details. Though not required, it is recommended that an authorized BRP dealer performs the preseason preparation of your vehicle. Each visit to your authorized BRP dealer is a great opportunity for your dealer to verify if your vehicle is included in any safety campaign. We also urge you to visit your authorized BRP dealer in a timely manner if you become aware of any safety related campaigns.

See an authorized BRP dealer for available accessories you may require.

## Operator - Be Qualified and Responsible

Read this Operator's Guide and watch the safety video. Refer to the link at the beginning of the Operator's Guide.

Become completely familiar with the operational controls and the general operation of the vehicle.

Get familiar with this Off-Highway Vehicle (OHV); it may exceed the performance of other OHV you may have ridden. This is a high performance vehicle. Inexperienced riders may overlook risks and be surprised by the specific behavior of this vehicle in any terrain condition.

Take a training course if available (contact an authorized Can-Am Off-road dealer to find out about training course availability as well as on the internet at <http://www.rohva.org/>), and perform the practice exercises in *Practice Exercises*. Practice driving in a suitable area free of hazards and feel the response of each

control. Drive at low speeds. Higher speeds require greater experience, knowledge and suitable riding conditions.

Be at least 16 years of age.

Be tall enough to be properly seated: back against the backrest with the seat belt fastened, to hold the steering wheel with both hands and still be able to reach the full stroke of brake and accelerator pedals with the right foot and to firmly plant left foot on the footrest.

Have a proper driver's license in accordance with local laws.

Never use this vehicle with drugs or alcohol, or if tired or ill. These slow reaction time and impair judgment.

### ***Carrying Passengers***

Only carry one passenger per available seat. All passengers must be properly seated in the cockpit.

The passengers must be tall enough to always be properly seated: back against the backrest with seat belt fastened, holding both handholds, and feet firmly planted on the footrests.

Never carry passengers who has used drugs or alcohol, or is tired or ill. These slow reaction time and impair judgment.

Instruct the passengers to read the vehicle's safety labels.

Never carry passengers if you judge his ability or judgement insufficient to concentrate on the terrain conditions and adapt accordingly. More specifically for side-by-side vehicles, the passengers must also pay constant attention to the terrain ahead and be able to brace for bumps.

### **Riding Carefully**

- This vehicle handles differently from other vehicles. A collision or rollover can occur quickly, during abrupt maneuvers such as doing sharp turns, acceleration or deceleration and driving on hills or over obstacles, if you fail to take proper precautions.
- Never operate at excessive speeds. Always go at a speed that is proper for the terrain, visibility, and operating conditions, and your experience.
- Never attempt jumps, side slides, donuts or any other stunts.
- Never attempt rapid acceleration or deceleration when performing a sharp turn. This may result in a roll over.
- Never attempt skidding or sliding. If vehicle starts to skid or slide, counter steer in the direction of skidding or sliding. On extremely slippery surfaces, such as ice, go slowly and be very cautious in order to reduce the chance of skidding out of control.
- Always be sure there are no obstacles or people behind the vehicle when you operate in reverse. Pay attention to blind spots. When it is safe to proceed in reverse, go slowly.
- Never exceed the stated load limits for this vehicle. Cargo must be properly secured. Reduce speed, allow for greater braking distance and follow other instructions in *Moving Loads and Doing Work*.

- Always remember that this vehicle is heavy! Its pure weight alone may entrap you should it tip or rollover.

## Occupant Restraint System

- This vehicle is designed to carry one driver and a passenger, all wearing proper protective gears (refer to *Riding Gear* in this section).
- All occupants must latch the doors or the side nets and wear the seat belts at all times when riding.
- Before riding, everyone aboard should know how to unbuckle their seat belt rapidly. Knowing how to properly detach your seat belt is a crucial skill that can save your life in an emergency situation. In the event of an accident or vehicle malfunction, being able to quickly release your seat belt can help you escape the vehicle and avoid potential hazards such as fire or sinking. Additionally, knowing to quickly release your seat belt can also help you assist others such as children or older persons.

## Terrain Condition

- This vehicle is not designed to ride on paved surfaces; if you must shortly use the vehicle on such surfaces, avoid abrupt inputs to steering wheel, accelerator and brake pedals.
- Always go slowly and be extra careful when operating on unfamiliar terrain. Always be alert to changing terrain conditions when operating this vehicle. Take the time to learn how the vehicle performs in different environments.
- Never operate on excessively rough, slippery or loose terrain until you have learned and practiced the skills necessary to control this vehicle on such terrain. Always be especially cautious on these kinds of terrain.
- Never operate this vehicle on hills too steep for the vehicle or your abilities. Practice on small inclines.
- Always follow proper procedures for climbing or going down hills as described in *Riding Your Vehicle*. Check the terrain carefully before you start up or down any hill. Never climb or descend hills with excessively slippery or loose surfaces. Never go over the top of any hill at high speed.
- Never attempt steep hills or side hilling when pulling a trailer.
- Always check for obstacles before operating in a new area. Always follow proper procedures when operating over obstacles as described in *Riding Your Vehicle*.
- Never operate this vehicle in fast flowing water or in water deeper than specified in *Riding Your Vehicle*. Remember that wet brakes may have reduced stopping ability. Test your brakes after leaving water. If necessary, apply them several times to let friction dry out the brakes.
- Always ensure to properly park the vehicle on the flattest terrain section available. Put shift lever in PARK, stop engine and remove key before leaving the vehicle.
- If parking on a slope is inevitable, Placing a large rock or similar object behind a wheel to block it from moving is recommended.
- Never assume that the vehicle will go everywhere safely. Sudden changes in terrain caused by holes, depressions, banks, softer or harder “ground” or other irregularities may cause the vehicle to topple or become unstable. To avoid this, slow down and always observe the terrain ahead. If the vehicle does begin to topple or rollover, the best advice is to immediately steer in the direction of the rollover! Never attempt to prevent a rollover with your arms or legs. You

should keep your limbs inside the cage or ROPS (rollover protective structure).

---

# GET FAMILIAR WITH THE VEHICLE

This vehicle may exceed the performance of other vehicles you may have ridden. Take time to familiarize yourself with your new vehicle.

Inexperienced operators may overlook risks and be surprised by vehicle's specific behavior and terrain conditions. Ride slowly. Excessive speed and reckless driving can kill.

Make sure you read and understand the content of this operator's guide to become completely familiar with the controls and operation of this vehicle before embarking on your first trip or taking on a passenger(s).

Take time to practice driving solo in a suitable traffic-free area to become accustomed to the feel and response of each control.

It is very important to inform any operator, regardless of his experience, of the handling characteristics of this vehicle. The configuration, such as vehicle height, width, suspension type, tires type, and type vary from a model to another. The vehicle handling is greatly influenced by these characteristics.

## Off-Road Operation

The very nature of off-road operation is dangerous. Any terrain, which has not been specially prepared to carry vehicles, presents an inherent danger where terrain substance, shape and steepness are unpredictable. The terrain itself presents a continual element of danger, which must be knowingly accepted by anyone venturing over it.

An operator who takes a vehicle off-road should always exercise the utmost care in selecting the safest path and keeping close watch on the terrain ahead of him. The vehicle should never be operated by anyone who is not completely familiar with the driving instructions applicable to the vehicle, nor should it be operated on steep or treacherous terrain.

The traction of the tires will vary depending on the surface conditions and the tread pattern.

The traction may be reduced on many surfaces (rock, sand, mud, snow, ice, etc.). Reduce your speed and allow more space to turn.

### **WARNING**

**Never stand behind or near a rotating tire. Debris could be projected causing severe injuries.**

## Steering

The front wheels are steered by the steering wheel.

Steering behavior will vary depending of the grip of the tires on the ground.

The Dynamic Power Steering (DPS) to reduce the effort to turn the steering wheel.

Riding with passenger(s) or when carrying loads will affect the steering control and vehicle handling. Pay attention and reduce the speed.

## Braking

Braking performances may vary suddenly under certain conditions.

Always remember that the vehicle braking distance may be affected when riding with passenger(s) and when loaded with cargo at the rear.

Never jam the brakes. Be sure to use restraint in braking to keep from blocking the wheels in order to avoid surprises that could lead to a loss of control.

## Programmable D.E.S.S. Key

The D.E.S.S. key can be programmed to limit the speed of the vehicle and the engine torque.

Enabling first time users and less experienced operators to learn how to operate while gaining the necessary confidence and control.

---

# AVOID ACCIDENTS

## Avoid Rollovers and Tipovers

Side-by-side vehicles handle differently from other vehicles. Side-by-side vehicles are designed to handle off-road terrain (for example, their wheel base and track width, ground clearance, suspension, drivetrain, tires, etc.), and, as a result, can overturn in situations where vehicles designed for use primarily on paved or smooth terrain may not.

A rollover or other accident can occur quickly during abrupt maneuvers such as sharp turns or hard acceleration or deceleration when turning, or when driving on hills or over obstacles. Abrupt maneuvers or aggressive driving can cause rollovers or loss of control even in flat open areas. If the vehicle rolls over, any part of your body (such as arms, legs, or head) outside of the cockpit can be crushed and trapped by the cage or other parts of the vehicle. You can also be injured by impact with the ground, cockpit or other objects.

To reduce the risk of rollovers:

- Use care when turning.
  - Do not turn the steering wheel too far or too fast for your speed and environment. Adjust steering inputs according to your speed and environment.
  - Slow down before entering a turn. Avoid hard braking during a turn.
  - Avoid sudden or hard acceleration when turning, even from a stop or low speed.
- Never attempt donuts, skids, slides, fishtails, jumps, or other stunts. If vehicle starts to skid or slide, steer in the direction of the skid or slide. Never slam the brakes and lock the wheels.
- Avoid paved surfaces. This vehicle is not designed to operate on paved surfaces and is more likely to roll over. If you must drive on pavement, turn gradually, go slowly, and avoid abrupt acceleration and braking.

This vehicle can roll over sideways or tip over forward or backwards on slopes or uneven terrain.

- Avoid side hilling (driving along the slope rather than up or down a hill). When possible, drive straight up and down inclines rather than across them. If you must side hill, use extreme caution and avoid slippery surfaces, objects, or depressions. If you feel the vehicle start to rollover or slide sideways, steer downhill if possible.
- Avoid steep hills and follow procedures in this guide for climbing and descending hills.
- Sudden changes in terrain such as holes, depressions, banks, softer or harder ground or other irregularities may cause the vehicle to tip or become unstable. Observe the terrain ahead and slow down in areas of uneven terrain.

This vehicle will handle differently when carrying or pulling a load.

- Reduce speed and follow instructions in this manual for carrying cargo or pulling a trailer.
- Avoid hills and rough terrain.
- Allow more distance to stop.

## Be Prepared in Case of Rollover

- Fasten side nets and fasten seat belt to help you avoid sticking out arms or legs.

- Close both doors and fasten seat belt to help you avoid sticking out arms or legs.
- Never grab the cage while riding. Hands can be crushed between the cage and the ground in a rollover. Keep hands on the steering wheel or handholds.
- Never try to stop a rollover using your arms or legs. If you think that the vehicle may tip or roll, the driver should keep both hands on the steering wheel and the left foot firmly planted on the footrest. The passenger should keep both hands on the handholds and both feet firmly planted on the floor.

## Avoid Collisions

This vehicle can reach high speeds. At higher speeds, there is an increased risk of losing control, particularly in challenging off-road conditions, and the risk of injury in a collision is greater. Never operate at excessive speeds. Always go at a speed that is proper for the terrain, visibility, and operating conditions, and your experience. Consider reserving use of the performance key for situations in which full speed and acceleration capability are appropriate.

Driving on public street, road or highway, even dirt or gravel ones poses risks such as collisions and may be illegal in your jurisdiction. Only proceed with caution on roads and road segments where the usage of your vehicle is permitted. This vehicle is not designed for operation on roads. For example, it does not meet motor vehicle safety standards that apply to automobiles. In many jurisdictions it is not legal to operate this vehicle on public roads.

This vehicle does not have the same kind of protection for collisions as a car; for example, there are no air bags, the cockpit is not fully enclosed, and it is not designed for collisions with other vehicles. Therefore, it is particularly important to fasten seat belts and close doors and wear an approved helmet.

---

# RIDING YOUR VEHICLE

## Practice Exercises

Before you go out for a ride, it is very important to familiarize yourself with the handling of your vehicle by practicing in a controlled environment. If possible, it is also a very good idea to take a more formal training course to sharpen your skills and increase your knowledge of the vehicle.

Find a suitable area to practice and perform the following exercises. It should be at least 45 x 45 m (150 x 150 ft) free of obstacles like trees and rocks. Once you've selected a suitable permitted location, proceed with the following exercises.

### *Turning Exercises*

Turning is one of the most frequent causes of accidents. It is easier for the vehicle to lose traction or rollover if you turn too sharply, or go too fast. Slow down when you approach a turn.

- First learn how to perform slight right turns at very low speeds. Release the throttle before turning and slowly reapply the throttle when turning.
- Repeat turning exercise but this time maintain the throttle at the level while turning.
- Finally, repeat turning exercise while accelerating slowly.
- Practice exercises turning on the other side.

Note how your vehicle reacts in these different exercises. We recommend releasing the throttle before entering a turn to help initiate directional change. You will feel the lateral force increasing with the speed and with your steering input. The lateral force should be maintained as low as possible to make sure it does not cause the vehicle to roll over.

### *U Turn Exercises*

Practice doing U turns.

- Accelerate slowly and while remaining at low speed, then gradually turn the steering wheel to the right until you have completed the U turn.
- Repeat U turn exercise with different steering inputs and always at a very low speed.
- Repeat U turn exercise on the other side.

As mentioned before in this guide, do not ride on paved surfaces as the vehicle behavior will not be the same, increasing the risk of rollover.

### *Braking Exercises*

Practice braking to get familiar with the brake response.

- Do it at low speed first, then increase the speed.
- Practice braking in straight line at different speeds and different braking force.
- Practice emergency braking; optimal braking is obtained in straight line, with high force applied, without locking the wheels.

Remember, braking distance depends on vehicle speed, load and the type of surface. Also, the tires and brakes conditions play a major role.

### *Reverse Exercises*

The next step involves using the reverse.

- Install 1 cone marker on both sides of the vehicle beside each rear wheel. Move the vehicle forward until you can see the cone markers, then stop the vehicle. Acknowledge the distance required to see obstacles behind you.
- Learn how the vehicle handles itself in reverse and reacts with steering inputs.
- Always perform this reverse exercise at slow speeds.
- Become familiar with the usage of the override function. Do not steer while using the override as it increases the risks of rollover.

### ***Emergency Engine Stopping Exercise***

Learn how to stop your engine quickly in an emergency situation.

- While running at low speed, simply remove the RF D.E.S.S. key from the D.E. S.S. post.

This is to familiarize you with the vehicle's reaction when the engine is turned off while driving and to develop this reflex.

## **Off-Road Operation**

The very nature of off-road operation is dangerous. Any terrain, which has not been specially prepared to carry vehicles, presents an inherent danger where terrain substance, shape and steepness are unpredictable. The terrain itself presents a continual element of danger, which must be knowingly accepted by anyone venturing over it.

An operator who takes a vehicle off-road should always exercise the utmost care in selecting the safest path and keeping close watch on the terrain ahead of him. The vehicle should never be operated by anyone who is not completely familiar with the driving instructions applicable to the vehicle, nor should it be operated on steep or treacherous terrain.

## **General Riding Techniques**

### ***General Driving Tips***

Care, caution, experience and driving skill are the best precautions against the hazards of vehicle operation.

Whenever there is the slightest doubt that the vehicle can safely negotiate an obstacle or a particular piece of terrain, always choose an alternate route.

In off-road operation, power and traction, not speed, are important. Never drive faster than visibility and your own ability to select a safe route permit. Always go slowly and be extra careful when operating on unfamiliar terrain. Always be alert to changing terrain conditions when operating this vehicle. Be especially cautious on excessively rough, slippery, icy or loose terrain.

Constantly watch the terrain ahead for sudden changes in slopes or obstacles, such as rocks or stumps, that may cause loss of stability, resulting in tip over or rollover.

Never operate the vehicle if the controls do not function normally. See an authorized Can-Am Off-road dealer.

To maintain proper control it is strongly advised that you keep your hands on the steering wheel and within easy reach of all controls. The same holds true for your feet. To minimize the possibility of any leg or foot injury, keep your left foot on the footrest and right foot on the floor at all times. Staying completely within the cockpit will also help keep you from striking objects outside the vehicle.

Watch for and avoid branches and other objects that could enter the passenger compartment and strike you or your passengers.

### ***Operating in Reverse***

When operating in reverse, check that the path behind the vehicle is free of people or obstacles. Pay attention to blind spots. When it is safe to proceed in reverse, go slowly and avoid sharp turns.

#### **WARNING**

**Steering inputs in reverse operation increase the risk of rollover.**

#### **NOTE:**

In reverse operation, the engine RPM is limited thus limiting the vehicle reverse speed.

#### **WARNING**

**When driving downhill in reverse, gravity can increase the vehicle speed above safe reverse speed.**

### ***Crossing Roads***

If you have to cross a road, ensure to have complete visibility on both sides for incoming traffic and decide on exit point on other side of road. Drive in a straight line toward that point. Do not make sharp direction changes or abrupt accelerations as it may result in a rollover situation. Do not travel on sidewalks or bicycle trails as they are designated specifically for those uses.

### ***Riding on Paved Surfaces***

Avoid paved surfaces. This vehicle is not designed to operate on paved surfaces and is more likely to roll over. If you must drive on pavement, turn gradually, go slowly, and avoid abrupt acceleration and braking.

### ***Shallow Water Crossing***

Water can be a unique hazard. If it is too deep the vehicle may “float” and topple. Check the water depth and current before you attempt to cross any water. Water depth should not exceed the center of the wheel for vehicle to safely cross the obstacle. Beware of slippery surfaces such as rocks, grass, logs, etc., both in the water and on its banks. A loss of traction may occur. Do not attempt to enter the water at high speed.

Mud or marsh lands may be encountered near water. Be prepared for sudden “holes” or changes in depth. Similarly so, be watchful of hazards such as rocks, logs, etc., partially covered by vegetation.

Water will affect the braking ability of your vehicle. Make sure you dry the brakes by applying them several times after the vehicle leaves the water.

Water and mud can also cause overheating problems.

- Check if the front cooling fans are not obstruct or damages.
- After that, check the cooling fan fuses. If burnt, replace them with fuses with the same rate.

### ***Riding on Snow or Ice***

When performing pre-ride inspection, pay special attention to locations on the vehicle where snow and/or ice accumulations may obstruct visibility of the tail lamp, clog ventilation openings, block the radiator, fan, engine air intake and CVT air intake, and interfere with the movement of controls. Before starting with your vehicle, check the steering, accelerator and brake pedals for interference free operation.

Whenever this vehicle is ridden on a snow covered drive path, the tire grip is generally reduced causing the vehicle to react differently to control inputs from the operator. On low grip surfaces, the steering responses are not as crisp and precise, stopping distances are lengthened and acceleration is also affected. Slow down and do not "gun" the accelerator. This will only result in spinning of the tires and possibly in an over steering slide of the vehicle. Avoid hard braking. This will possibly result in a straight line slide of the vehicle. Again, the best advice is to safely reduce speed in anticipation of a maneuver to give yourself time and distance in order to keep control of the vehicle.

As you drive your vehicle over a loose snow covered surface, snow dust will be picked up in the wake turbulence of the moving vehicle and transported to contact and accumulate or melt on some exposed components including rotating parts like brake discs. Water, snow or ice may affect the response time of the brake system of your vehicle. Even when not required to reduce vehicle speed apply brakes frequently to prevent ice or snow accumulation and to dry brake pads and discs. While doing so in low risk driving situations you will test for grip level and keep yourself alerted to how the vehicle reacts to your control inputs. Always keep brake and accelerator pedals and floor boards free of snow and ice. Frequently wipe snow off seat, steering wheel, headlights and tail lamps.

The depth of the snow cover may hide rocks, tree stumps or other objects and if it is wet may totally impede the drivability as the vehicle becomes bogged down or completely loses traction in slushy snow. Look far ahead and always be watchful of any visible clues that might indicate the presence of such obstacles. In doubt steer clear. Avoid driving on any frozen waterways before checking that the ice will safely support the vehicle, its riders and its load of cargo.

At the end of each ride it is a good practice to clean the vehicle and all moving components (brakes, steering components, drivelines, controls, radiator fan etc.) from any snow or ice accumulations. Wet snow will turn to ice during the shut down period and become more difficult to remove at the next pre-ride inspection.

### ***Riding on Sand***

Riding on sand or sand dunes is another unique experience, but there are some basic precautions that should be observed. Wet, deep or fine sand may create a

loss of traction and cause the vehicle to slide, drop off or become “bogged” down. If this occurs look for a firmer base. Again, the best advice is to slow down and be watchful of the conditions. Slow down even more when riding with a passenger.

When riding in sand dunes it is advisable to equip the vehicle with an antenna--type safety flag. This will help make your location more visible to others over the next sand dune. Proceed carefully should you see another safety flag ahead. Since the antenna type safety flag can snag and rebound on your body if caught, do not use it in areas where there are low hanging branches or obstacles. Always remember when riding that the vehicle handling and stability may be affected when riding with a passenger.

### ***Riding on Gravel, Loose Stones or Other Slippery Surfaces***

Riding on loose stones or gravel is very similar to riding on ice. They will affect the steering of vehicle, possibly causing it to slide and tip over especially at high speeds. In addition, braking distance may be affected. Remember that “gunning” the throttle or sliding may cause loose stones to be ejected rearwards into the path of another rider's way. Never do it deliberately.

If you do get into a slide or skid, it may help to turn the steering wheel into the direction of the skid until you regain control. Never jam the brakes and lock the wheels.

### ***Crossing Obstacles***

Use the low range (L) for crossing obstacles.

Obstacles on the “trail” should be traversed with caution. This includes rocks, fallen trees, and depressions. You should avoid them whenever possible. Remember that some obstacles are too large or dangerous to cross and should be avoided. As a guideline, never attempt to cross an obstacle higher than the ground clearance of the vehicle. Small rocks or small fallen trees may be safely crossed - approach obstacle at low speed and as much as possible at a right angle. Adjust speed without losing momentum and do not accelerate abruptly. Passenger must grasp both handholds firmly and brace feet on the floor. Hold steering firmly without closing your fists around it and proceed. Be aware that the obstacle may be slippery or may move while crossing.

### ***Hill Driving Conditions***

When driving on hills or slopes, two things are highly important: be prepared for slippery surfaces or terrain variations and obstacles and brace yourself properly inside vehicle. If you climb or descend a hill that is too slippery or has too loose a surface, you can lose control. If you go over the top of a hill at high speed, you may not have time to prepare for the terrain on the other side. Avoid parking on a slope. Always put the shift lever in PARK when stopped or parked, especially on an incline, to avoid rolling. If you must park on a steep incline, block the wheels using rocks or bricks.

### ***Uphill Driving***

Use the low range (L) for uphill driving.

Due to its configuration, this vehicle has very good traction even while climbing, so much so that tip over is possible before traction is lost. For example, it is common to encounter terrain situations where the top of the hill has eroded to a point that the hill peak rises very sharply. This vehicle is not designed to negotiate such a condition. Take an alternate route.

It is also wise to know the terrain condition on the other side of the hill or bank. All too often there exists a sharp drop-off that is impossible to negotiate or descend.

If you feel that the slope is getting too steep to climb, apply brakes to immobilize vehicle. Put shift lever in reverse (R), and back down the hill, barely releasing brakes to remain at low speed. Do not attempt to turn around. Never coast down hill while vehicle is in neutral. Do not perform hard braking as it increases the risk of tipover.

### Downhill Driving

This vehicle can climb steeper slopes than it can descend safely. Therefore, it is essential to assure that a safe route exists to descend a slope before you climb it.

Decelerating while negotiating a slippery downhill slope could “toboggan” the vehicle, causing it to slide. Maintain steady speed and/or accelerate slightly to regain control. Never slam brakes and lock the wheels.

### Side Hilling

This is one of the **most risky** types of riding since it may drastically change the balance of the vehicle. It should be avoided whenever possible. However, if it is necessary to do so, it is important that you **ALWAYS** keep your body weight on the upside of the slope and be prepared to dismount on that side should the vehicle begin to topple. **Do not try to stop or save the vehicle from damage.**

Avoid all objects or depressions that will intensify the raising of one side of the vehicle higher than the other, thus causing rollover.

### **WARNING**

**Be careful when loading and transporting liquid reservoirs. They can affect vehicle stability when side hilling by pulling downhill and increasing the risk of a roll over.**

### Drop-Offs

This vehicle is not designed to negotiate drop-offs. It will “bottom-out” and usually stop if either the front or rear wheels are driven over a drop-off. If the drop is sharp or deep, the vehicle will nose dive and tip over.

Avoid negotiating drop-offs. Reverse and select an alternate route.

### Recreational, Group and Distance Riding

Respect the rights and limitations of others. Stay away from areas designated for other types of off road use. This includes snowmobile trails, equestrian trails, cross country ski trails, mountain bike trails, etc. Never assume there are no other users on the trail. Always stay to the right of the trail and do not zig zag to one

side of the trail then the other. Be prepared to stop or pull off to the side if another trail user appears in front of you.

Join a local side-by-side vehicle club. It will provide you with a map and advice or inform you where you can ride. If a club does not exist in your area, help to start one. Group riding and club activities provide a pleasurable, social experience. Never use this vehicle with drugs or alcohol, or tired or ill.

Always keep a safe distance from other riders. Your judgment of speed, terrain conditions, weather, mechanical condition of your vehicle and the "trust in judgment" you have in others around you will help you make a better choice of appropriate safe distance. This vehicle, like any other motorized vehicle, cannot stop "on a dime".

Before you ride, tell someone where you are planning to travel and your expected time of return.

Depending on the length of your ride, carry additional tools or emergency equipment. Find out where you can get additional gasoline. Be prepared for the possible conditions you may encounter. An emergency first aid kit should always be a consideration.

## Environment

One of the benefits of this vehicle is that it can take you off the beaten path away from most communities. However, you should always respect nature and the rights of others to enjoy it. Do not ride in environmentally sensitive areas. Do not drive over forest crops or shrubs, nor cut down trees or take down fencing, nor spin your wheels and destroy the terrain. "Tread Lightly".

This vehicle can cause OHV wildfires if debris builds up near the exhaust or other engine hot spots and ignites then falls off into dry grass. Avoid riding in wet areas, through muskeg or tall grass, where debris can build up. Should you ride in those areas, inspect and remove all debris from your engine and hot spots. Refer to *Vehicle Care* for details.

Chasing wildlife is in many areas illegal. Wildlife can die of exhaustion after being chased by a motorized vehicle. If you encounter animals on the trail, stop and observe quietly and with caution. It will be one of the better memories of your life.

Observe the rule "what you take in, carry out". Do not litter. Do not start campfires unless you have permission to do so, and then only away from dry areas. The hazards you may create on the trail may cause injury to others or yourself, even at a later date.

Respect farmlands. Always obtain the permission of the landowner before riding on private land. Respect crops, farm animals and property lines.

Finally, do not pollute streams, lakes or rivers and do not modify the engine or exhaust system, or remove any of its components as it will alter the vehicle emissions.

# MOVING LOADS AND DOING WORK

## Working with Your Vehicle

Your vehicle can help you perform a number of different LIGHT tasks ranging from snow removal to pulling wood or carrying cargo. A variety of accessories are available from your authorized Can-Am Off-road dealer. To prevent possible injury, follow the instructions and warnings that accompany the accessory. Always respect the load limits of the vehicle. Overloading the vehicle can overstress the components and cause failure. Avoid overexerting yourself if you lift or pull heavy loads or manually push the vehicle.

### **WARNING**

**Mounted machinery must be lowered on the ground before leaving the vehicle.**

## Carrying Loads

Any load carried on the vehicle will affect the handling, stability and braking distance of the vehicle. Do not exceed the load limits of the vehicle, including the weight of operator, passenger(s), cargo, accessories and trailer tongue weight.

Always be aware that the cargo may slide or fall off and cause an accident.

### **Load Limit of the Vehicle**

581 kg  
(1030 lb)

Includes occupants, cargo, tongue weight  
and added accessories

The following is an example of suitable total vehicle load distribution:

### **Example of Suitable Loads (Must Be Adjusted Accordingly to the Model Load Limit)**

| <b>Operator<br/>and<br/>Passenger</b> | <b>Cargo Box<br/>Load</b> | <b>Accessories</b> | <b>Tongue<br/>Weight</b> | <b>Total<br/>Vehicle<br/>Load</b> |
|---------------------------------------|---------------------------|--------------------|--------------------------|-----------------------------------|
| 293 kg<br>(647 lb)                    | 150 kg<br>(331 lb)        | 57 kg<br>(126 lb)  | 80 kg<br>(176 lb)        | 581 kg<br>(1280 lb)               |

To reduce the risk to lose control or the load carried, follow these recommendations.

## Vehicle Settings When Carrying Load

When carrying heavy loads or passenger(s), readjust suspension accordingly.

When carrying heavy loads in cargo box or pulling a loaded trailer, operate with the shift lever in L (low range).

## Loading the Cargo Box

### **WARNING**

**Avoid operate the vehicle with the tailgate open. Except when a tailgate extender is installed.**

**Taillights and brake lights are not visible when tailgate is opened.**

### **NOTICE**

**Be careful to not exceed the weight limit on the tailgate when loading or unloading the cargo box.**

In general, ensure no item protrudes outside the cargo box.

Be particularly vigilant if cargo box wall extensions are installed and items are attached on the outside of them. In this case, selection items with a small thickness (shovel, ramps, hi-lift jack, etc.) and avoid items like chainsaw, gun boot, fuel tanks, etc.

Items that protrude sideways can get snagged or caught in bush, branches, or other obstacles.

Avoid covering and obstructing the brake lights with the cargo.

Position cargo toward the front and center of the cargo box and as evenly distributed as possible.

Secure the load to the tie down hooks inside cargo box. Use only the tie down hooks on the floor of the cargo box; do not secure cargo to the cage or other part of the vehicle.

Load cargo as low as possible – a higher load can raise the vehicle's center of gravity, which can reduce stability.

Objects that are higher than the walls of the cargo box may act as projectiles in case of an accident.

If it is not properly secured, a load may slide or fall off, possibly striking occupants or bystanders; or it may shift during riding, affecting the handling of the vehicle.

Do not overload cargo box.

Close tailgate before operating the vehicle.


| Maximum Cargo Box Loads |                 |                                                                                                         |
|-------------------------|-----------------|---------------------------------------------------------------------------------------------------------|
| Cargo box               | 272 kg (600 lb) | Evenly distributed and safely secured. Loaded as low as possible to reduce height of center of gravity. |
| Tailgate                | 113 kg (250 lb) | Only while loading cargo into cargo box. Never operate with an open tailgate.                           |

### Operating While Carrying a Load

Reduce your speed when carrying cargo and turn gradually. Avoid hills and rough terrain. Allow more distance for braking. This vehicle may require additional stopping distance if carrying heavy loads, especially on inclined surfaces.

### Tilting the Cargo Box

The cargo box can be tilted to ease unloading. Use release handles on either side of cargo box.

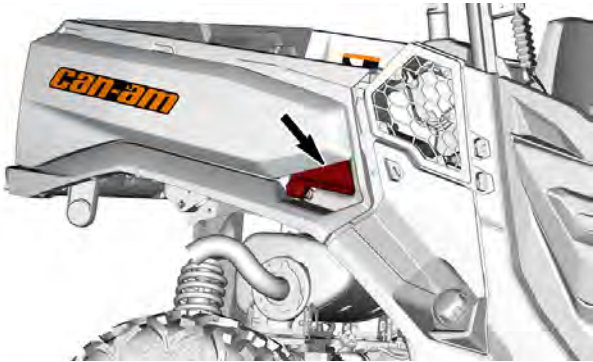

#### **WARNING**

**Always ensure no one is standing behind the cargo box before you actuate the release handle.**  
**The load weight may affect the operation of the cargo box tilting feature (tilting or lowering).**  
**Some accessories assembled on the cargo box may affect his behavior during the opening and closure. Always keep attention during this operation.**

Be very careful with the operation of the tailgate and the cargo box as the load may have moved during transport.

To lower the cargo box, simply push it down into place.

**⚠ WARNING**

**Keep yourself and others clear of the cargo box and vehicle frame junction when lowering cargo box.**

**Ensure to properly latch the cargo box and the tailgate before riding.**

**Make sure you do not leave objects between lifted cargo box and vehicle frame to ensure proper latching of the cargo box when lowered.**

## Hauling a Load

Never pull a load by attaching it to the cage or other accessories; this can cause the vehicle to tip over. Use only the trailer hitch or winch (if installed) to pull a load.

When pulling loads with a chain or cable, ensure that there is no slack before starting and maintain tension while pulling.

When pulling loads with a chain or cable, be sure to brake progressively. The inertia of the load could lead to an impact.

When hauling a load, respect the maximum hauling capacity. Refer to *Pulling a Trailer*.

**⚠ WARNING**

**A slack can cause the chain or cable to break and snap back.**

When pulling another vehicle, be sure that someone is controlling the pulled vehicle. They must brake and steer to prevent the vehicle from going out of control.

Before pulling loads with a winch, refer to the winch manufacturer's instructions.

Reduce your speed when hauling a load and turn gradually. Avoid hills and rough terrain. Never attempt steep hills. Allow more distance for braking, especially on inclined surfaces and when passengers are on board. Be careful not to skid or slide.

## Pulling a Trailer

Riding this vehicle with a trailer substantially increases the risk of toppling, especially on inclined slopes. If a trailer is used behind the vehicle make sure that its hitch is compatible with the one on the vehicle. Make sure the trailer is horizontal with the vehicle. (In some instances a special extension may have to be installed on the vehicle hitch). Use security chains or cables to secure the trailer to the vehicle.

Reduce your speed when pulling a trailer and turn gradually. Avoid hills and rough terrain. Never attempt steep hills. Allow more distance for braking, especially on inclined surfaces and when passengers are on board. Be careful not to skid or slide.

Improperly loading a trailer may cause loss of control.

Always make sure load is evenly distributed and safely secured on the trailer; an evenly balanced trailer is easier to control.

Always put the shift lever to L (low range) for hauling a trailer – in addition to providing more torque, operating in low range helps account for the increased load on the rear tires.

When stopped or parked, block the vehicle and trailer wheels from possible movement.

Use caution when disconnecting a loaded trailer; it or its load may topple on you or others.

When hauling a trailer, respect the maximum tongue weight and towing capacity indicated on the label affixed to the hitch.

Make sure there is at least some weight on the tongue.

# IMPORTANT ON-PRODUCT LABELS (CANADA/UNITED STATES)

## Safety Hang Tag

This vehicle comes with a hang tag and labels containing important safety information.

Any person who rides this vehicle should read and understand this information before riding.

**WARNING**

**THIS VEHICLE IS INTENDED FOR RECREATIONAL USE  
AND SECONDARY GENERAL UTILITY APPLICATIONS  
NO OPERATOR UNDER AGE 16**

**TRAINING COURSES TO TEACH ROV DRIVING  
ARE AVAILABLE. FOR INFORMATION CONTACT  
YOUR DEALER.**

**Read the Operator's Guide and Safety Labels  
and Watch the Safety Video.  
Follow All Instructions and Warnings.**

**CHECK WITH YOUR DEALER TO FIND OUT ABOUT  
STATE OR LOCAL LAWS REGARDING ROV OPERATION.**

Improper Use of Off-Highway Vehicles Can  
Cause Severe Injury or Death

Be Prepared

- Fasten seat belts and make sure nets or doors are securely latched in place.
- Wear an approved helmet and protective gear.
- Each rider must be able to sit with back against seat, foot flat on the floor or on footrest, and hands on steering wheel or handholds. Stay completely inside the vehicle.

Drive Responsibly

Avoid loss of control and rollovers:

- Avoid abrupt maneuvers, sideways sliding, skidding or fishtailing, and never do donuts.
- Avoid hard acceleration when turning, even from a stop.
- Slow down before entering a turn.
- Plan for hills, rough terrain, ruts, and other changes in traction and terrain. Avoid paved surfaces.
- Avoid side hilling (riding across slopes).

Rollovers have caused severe injuries and death, even on flat, open areas.

Be Sure Riders Pay Attention and Plan Ahead

If you think or feel the vehicle may tip or roll, reduce your risk of injury :

- Keep a firm grip on the steering wheel or handholds and brace yourself.
- Do not put any part of your body outside of the vehicle for any reason.

Require Proper Use of Your Vehicle

- Do your part to prevent injuries.
- Do not allow careless or reckless driving.
- Make sure operators are 16 or older with a valid driver's license.
- Do not let people drive or ride after using alcohol or drugs.
- Do not allow operation on public roads (unless designated for off-highway vehicle access) – collisions with cars and trucks can occur.
- Do not exceed seating capacity: see information on back side of this card



**THIS HANG TAG CAN'T BE REMOVED BEFORE SALE.**

# Tilt Table Test Result

BOMBARDIER RECREATIONAL PRODUCTS INC.  
VEHICLE MODEL  
TILT TABLE RESULT

Measurement of lateral stability, in degrees, of a sample, standard condition vehicle (with an operator and a passenger load - 430 pounds) as measured by the manufacturer in accordance with the tilt table lateral stability test in the ANSI/ROHVA standard for Recreational Off-Highway Vehicles. Vehicle modification, accessories, and loading can affect lateral stability.

Training courses to teach ROV driving are available. For information contact your dealer and/or [rohva.org](http://rohva.org).

Check with your dealer to find out about state or local laws regarding ROV operation.

THIS HANG TAG IS NOT TO BE REMOVED BEFORE SALE.

VEHICLE MODEL NAME:

ENGINE DESCRIPTION:

**EPA CERTIFIED**  
NER (NORMALIZED EMISSION RATE) =   
(ON A 10 TO 10 SCALE, 0 BEING THE CLEANEST)

BOMBARDIER RECREATIONAL PRODUCTS INC  
\*NO TO BE REMOVED PRIOR SALE.

Vehicle seating capacity:  Occupants



## **Safety Labels**

Read and understand all the safety labels on your vehicle.

These labels are affixed to the vehicle for the safety of the operator, passengers or bystanders.

The following labels are on your vehicle, and they should be considered permanent parts of the vehicle. They need to be clean and visible at all times. If missing or damaged, they need to be replaced. Safety labels are free of charge. See an authorized Can-Am Off-road dealer.

Upon replacement of parts that have warnings on them, make sure to order (free of charge) the applicable safety warnings if not already installed on the replacement part.

### **NOTE:**

In the event of any discrepancy between this guide and the vehicle, the safety labels on the vehicle have precedence over the labels in this guide.

## ⚠ WARNING

## Be Prepared

- Fasten seat belts and make sure nets or doors are securely latched in place.
  - Wear an approved helmet and protective gear.
  - Each rider must be able to sit with back against seat, foot flat on the floor or on footrest, and hands on steering wheel or handholds.
- Stay completely inside the vehicle.

**Drive Responsibly**

- Avoid abrupt maneuvers, sideways sliding, skidding or fishtailing, and never do donuts.
- Avoid hard acceleration when turning, even from a stop.
- Slow down before entering a turn.
- Plan for hills, rough terrain, ruts, and other changes in traction and terrain. Avoid paved surfaces.

## Be Sure Riders Pay Attention and Plan Ahead


- Be Sure Riders Pay Attention and Plan Ahead**  
If you think or feel the vehicle may tip or roll, reduce your risk of injury:
- Keep a firm grip on the steering wheel or handholds and brace yourself.
  - Do not put any part of your body outside of the vehicle for any reason.

**Require Proper Use of Your Vehicle** – Do your part to prevent injuries:

- Do not allow careless or reckless driving.
- Make sure operators are 16 or older with a valid driver's license.
- Do not let people drive or ride after using alcohol or drugs.
- Do not allow operation on public roads (unless designated for off-highway vehicle access) – collisions with cars and trucks can occur.
- Do not exceed seating capacity: 2 occupants.

**Read and understand all safety labels, locate and read operator's guide. Watch the safety video using the QR code link or visit Can-am web site before operation.**

Patent : [www.brp.com/en/about-brp/patents.html](http://www.brp.com/en/about-brp/patents.html)

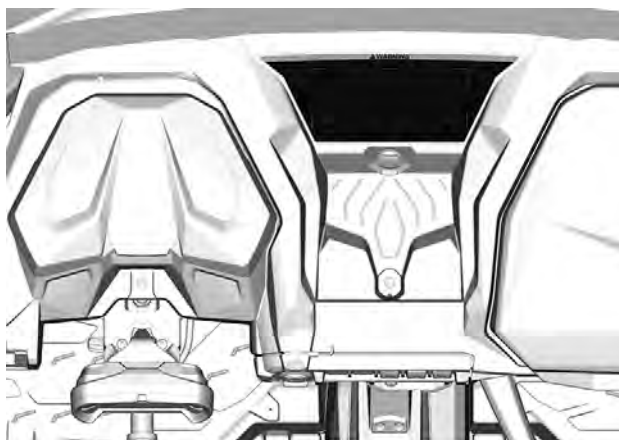

## Passenger Warning Label

⚠ WARNING

**PASSENGER(S)**  
Improper Use of this Vehicle Can Cause Severe Injury or Death

**Be Prepared**

- Fasten seat belt and make sure nets or doors are securely latched in place.
- Wear an approved helmet and protective gear.

You must be able to sit with back against seat, foot flat on the floor or on footrest, and hands on handholds. Stay completely inside the vehicle.

**PASSENGER QUALIFICATIONS AND RESPONSIBILITIES**

**Be Sure Riders Pay Attention and Plan Ahead**  
If you think or feel the vehicle may tip or roll, reduce your risk of injury:

- Keep a firm grip on handholds and brace yourself.
- Do not put any part of your body outside of the vehicle for any reason.



72989276



Tire Pressure and Maximum Load — Warning Label

NEVER

NEVER

NEVER

NEVER

ALWAYS

carry passenger in cargo box or on gate.

place gasoline container inside cargo box when filling it. This can lead to an explosion

exceed the vehicle load capacity (refer table), including weight of operator, passenger, cargo, accessories and trailer tongue weight if applicable.

exceed CARGO LOAD CAPACITY (Refer to label below), evenly distributed (includes trailer tongue weight if applicable).

secure the load.

⚠ WARNING

To reduce the risk of loss of control or loss of load:  
When loading cargo:

- Position cargo towards front and center and as low as possible
- Latch tail gate.

Improper tire pressure or overloading can cause loss of control.  
Loss of control can result in severe injury or death.

- An underinflated tire can come off the rim

When carrying a load:

- Reduce your speed and turn gradually
- Avoid hills and rough terrain.
- Allow more distance to stop.


| MODEL                               |       | 2 OCCUPANTS         |                     |            |            | 4 OCCUPANTS  |            |            |            |
|-------------------------------------|-------|---------------------|---------------------|------------|------------|--------------|------------|------------|------------|
|                                     |       | XT                  | XTP                 | XMR        | OTHERS     | XT           | XTP        | XMR        | OTHERS     |
| COLD TIRE PRESSURE                  | Front | Minimum: 97 ( 14 )  | Maximum: 76 ( 11 )  | 103 ( 15 ) | 103 ( 15 ) | 131 ( 19 )   | 103 ( 15 ) | 131 ( 19 ) | 138 ( 20 ) |
|                                     |       |                     |                     | 103 ( 15 ) | 110 ( 16 ) | 165 ( 24 )   | 124 ( 18 ) | 159 ( 23 ) | 179 ( 26 ) |
|                                     | Rear  | Minimum: 138 ( 20 ) | Maximum: 138 ( 20 ) | 145 ( 21 ) | 152 ( 22 ) | 165 ( 24 )   | 145 ( 21 ) | 152 ( 22 ) | 179 ( 26 ) |
|                                     |       |                     |                     | 214 ( 31 ) | 221 ( 32 ) | 262 ( 38 )   | 248 ( 36 ) | 262 ( 38 ) | 290 ( 42 ) |
| MAX. VEHICLE LOAD CAPACITY: kg (lb) |       | 467 ( 1030 )        |                     |            |            | 581 ( 1280 ) |            |            |            |
| MAX. CARGO LOAD CAPACITY: kg (lb)   |       | 272 ( 600 )         |                     |            |            |              |            |            |            |

• Use Max pressure if total vehicle load exceeds 195 kg (430 lb).

46

SAFETY INFORMATION

## 2WD/4WD Selection – Warning Label
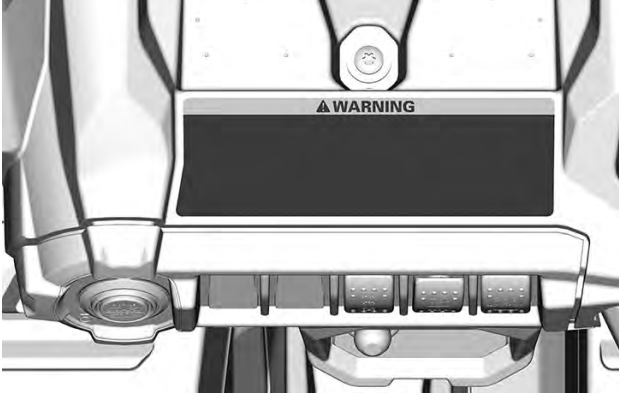
| Models with Visco-Lok differential                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      | Models with Smart-Lok differential                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <div> <div> <p><b>▲ WARNING</b></p> <p>This vehicle is an off road vehicle not intended for use on public roads.</p> <p><b>▲ AVERTISSEMENT</b></p> <p>Ce véhicule est conçu pour un usage hors route et n'est pas destiné aux voies publiques.</p> </div> <div> <p><b>▲ WARNING</b></p> <p>Put the Shift Lever to PARK (P) before exiting vehicle. The vehicle can roll if not in PARK.</p> <p>Stop the vehicle and apply the Brake before using the Shift Lever, the 2WD/4WD Switch and the Rear Diff Lock Switch.</p>  </div> </div> | <div> <div> <p><b>▲ WARNING</b></p> <p>This vehicle is an off road vehicle not intended for use on public roads.</p> <p><b>▲ AVERTISSEMENT</b></p> <p>Ce véhicule est conçu pour un usage hors route et n'est pas destiné aux voies publiques.</p> </div> <div> <p><b>▲ WARNING</b></p> <p>Put the Shift Lever to PARK (P) before exiting vehicle. The vehicle can roll if not in PARK.</p> <p>Stop the vehicle and apply the Brake before using the Shift Lever, the 2WD/4WD Switch and the Rear Diff Lock Switch.</p> <p>Turning in 4WD- Lock (Front Diff. Lock) requires more steering effort. Allow more room to turn.</p>  </div> </div> |
|                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |

Half Door – Warning Labels

| <div>⚠ <b>WARNING</b></div> <div>Do NOT put your arm outside of the vehicle, there is a risk of SEVERE INJURY.</div>                                                                                         |                                                                                                                                                                                                               |
|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <div>LH Side</div> <div></div> <div></div> | <div>RH Side</div> <div></div> <div></div> |

## Rollover — Warning Labels

### LH side

**⚠ WARNING**

Be prepared in case of rollover.  
If the vehicle rolls over, any part of your body (such as arms, legs, or head) outside of the cockpit can be crushed by the cage or other parts of the vehicle. Fasten seat belt and make sure net and/or door is securely latched in place to help you avoid sticking out arms or legs.




**NEVER** hold the cage while riding.  
**NEVER** try to stop a rollover using your arm or leg.



9028



### RH Side

**⚠ WARNING**


Be prepared in case of rollover.  
If the vehicle rolls over, any part of your body (such as arms, legs, or head) outside of the cockpit can be crushed by the cage or other parts of the vehicle. Fasten seat belt and make sure net and/or door is securely latched in place to help you avoid sticking out arms or legs.




**NEVER** hold the cage while riding.  
**NEVER** try to stop a rollover using your arm or leg.



9030

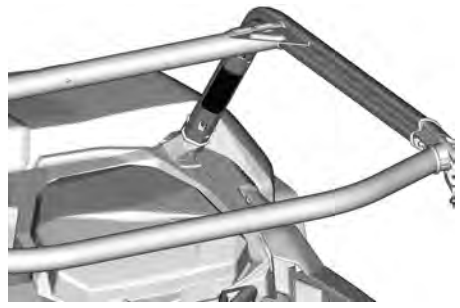*Pulling a Load Using the Cage – Warning Label*

**WARNING**

NEVER attach to the cage to pull a load.This can cause the vehicle to tip over. Use only the trailer hitch to pull a load.

  
8188




*Winch Installation - Warning Label*

**WARNING**

Always use the battery post to ground the winch. Doing otherwise may induce an undesired power steering signal resulting in an unintended steering input. In certain circumstances, some unintended steering input could lead to a loss of vehicle control increasing the risk of a crash.

  
704906951

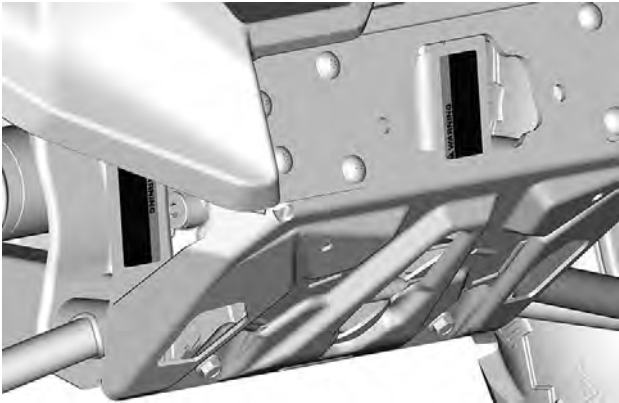

## Towing and Tongue Weight - Warning Label




# WARNING

Improperly loading a trailer may  
cause loss of control.  
Evenly balance the load.

|                     |        |         |
|---------------------|--------|---------|
| MAX. TOWING WEIGHT: | 907 kg | 2000 lb |
| MAX. TONGUE WEIGHT: | 91 kg  | 200 lb  |

When pulling a trailer:


- Reduce your speed and turn gradually.
- Allow more distance to stop.
- Avoid hills and rough terrain.
- Set the shift lever to low gear range (L).

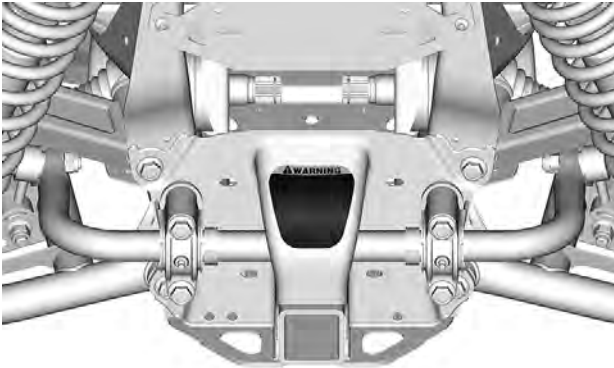


Cargo Box Pinch Point - Warning Label





LH Side

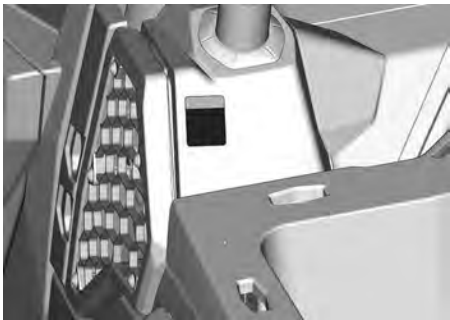

RH Side

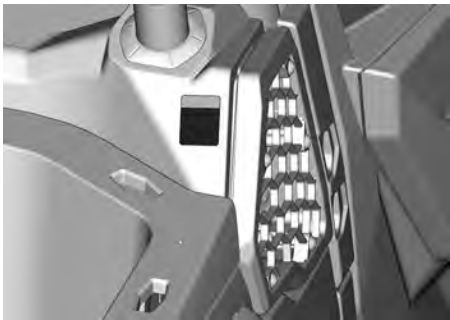


## Jump-Start Information – Notice Label

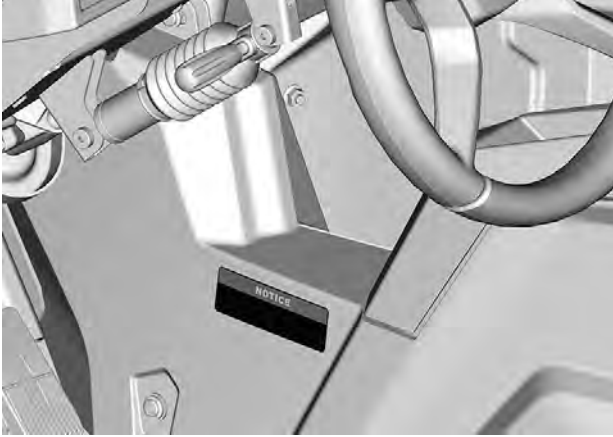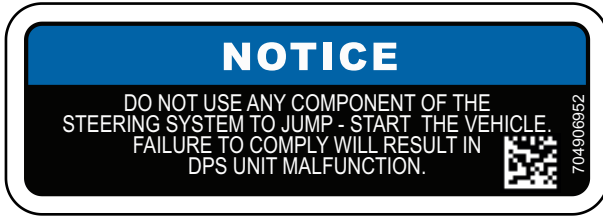

Exhaust — Hot Part Pictogram

 **CAUTION**

Do not touch when hot.

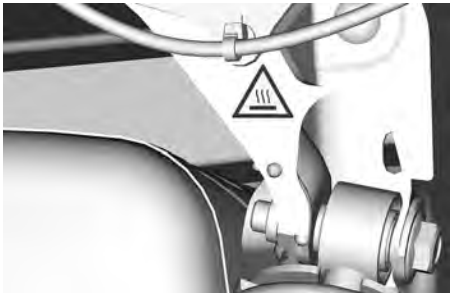

*LH SIDE*



*RH SIDE*

***Do Not Open, Coolant Hot - Warning Label***



## Compliance HangTag

### *California Proposition 65 Warning - Hang Tag*

Applicable for all models in Canada and United States of America or everywhere except Canada and United States of America when equivalent to a model certified to US EPA Standards.

 **WARNING.** Operating, servicing and maintaining an off-road vehicle can expose you to chemicals including engine exhaust, carbon monoxide, phthalates, and lead, which are known to the State of California to cause cancer and birth defects or other reproductive harm.

To minimize exposure, avoid breathing exhaust, do not idle the engine except as necessary, service your vehicle in a well-ventilated area and wear gloves or wash your hands frequently when servicing your vehicle.

For more information go to  
[www.P65Warnings.ca.gov/products/  
passenger-vehicle](http://www.P65Warnings.ca.gov/products/passenger-vehicle)



704906872

---

## IMPORTANT ON-PRODUCT LABELS (COUNTRIES OUTSIDE CANADA AND UNITED STATES)

Read and understand all the safety labels on your vehicle.

These labels are affixed to the vehicle for the safety of the operator, passengers or bystanders.

The following labels are on your vehicle, and they should be considered permanent parts of the vehicle. They need to be clean and visible at all times. If missing or damaged, they need to be replaced. Safety labels are free of charge. See an authorized Can-Am Off-road dealer.

Upon replacement of parts that have warnings on them, make sure to order (free of charge) the applicable safety warnings if not already installed on the replacement part.

### **NOTE:**

In the event of any discrepancy between this guide and the vehicle, the safety labels on the vehicle have precedence over the labels in this guide.

## Safety Labels

Read and understand all the safety labels on your vehicle.

These labels are affixed to the vehicle for the safety of the operator, passengers or bystanders.

Any person who rides this vehicle should read and understand this information before riding.

The following labels are on your vehicle, and they should be considered permanent parts of the vehicle. They need to be clean and visible at all times. If missing or damaged, they need to be replaced. Safety labels are free of charge. See an authorized Can-Am Off-road dealer.

Upon replacement of parts that have warnings on them, make sure to order (free of charge) the applicable safety warnings if not already installed on the replacement part.


### NOTE:

In the event of any discrepancy between this guide and the vehicle, the safety labels on the vehicle have precedence over the labels in this guide.

## General Warning Pictogram

### **WARNING**

- Read and understand all safety labels, locate and read operator's guide. Watch the safety video using the QR code link or visit Can-am web site before operation.
- Always wear an approved helmet and protective gear.
- Always wear ear protection.
- Fasten seat belts and nets.
- Make sure operators are 16 or older with a valid driver's license.
- Do not allow operation on public roads (unless designated for off-highway vehicle access) – collisions with cars and trucks can occur.
- Avoid loss of control and rollovers:
  - Avoid abrupt maneuvers, sideways sliding, skidding or fishtailing, and never do donuts.
  - Avoid hard acceleration when turning, even from a stop.
  - Slow down before entering a turn.
  - Plan for hills, rough terrain, ruts, and other changes in traction and terrain.
  - Avoid paved surfaces.
  - Avoid side hilling (riding across slopes).
- Rollovers have caused severe injuries and death, even on flat, open areas.
- Do not exceed seating capacity: 2 occupants.
- Each rider must be able to sit with back against seat, feet flat on the floor or on footrest, and hands on steering wheel or handholds.
- If you think or feel the vehicle may tip or roll, reduce your risk of injury : Keep a firm grip on the steering wheel or handholds and brace yourself. Do not put any part of your body outside of the vehicle for any reason.
- Always stay completely inside the vehicle.
- Do not let people drive or ride after using alcohol or drugs.

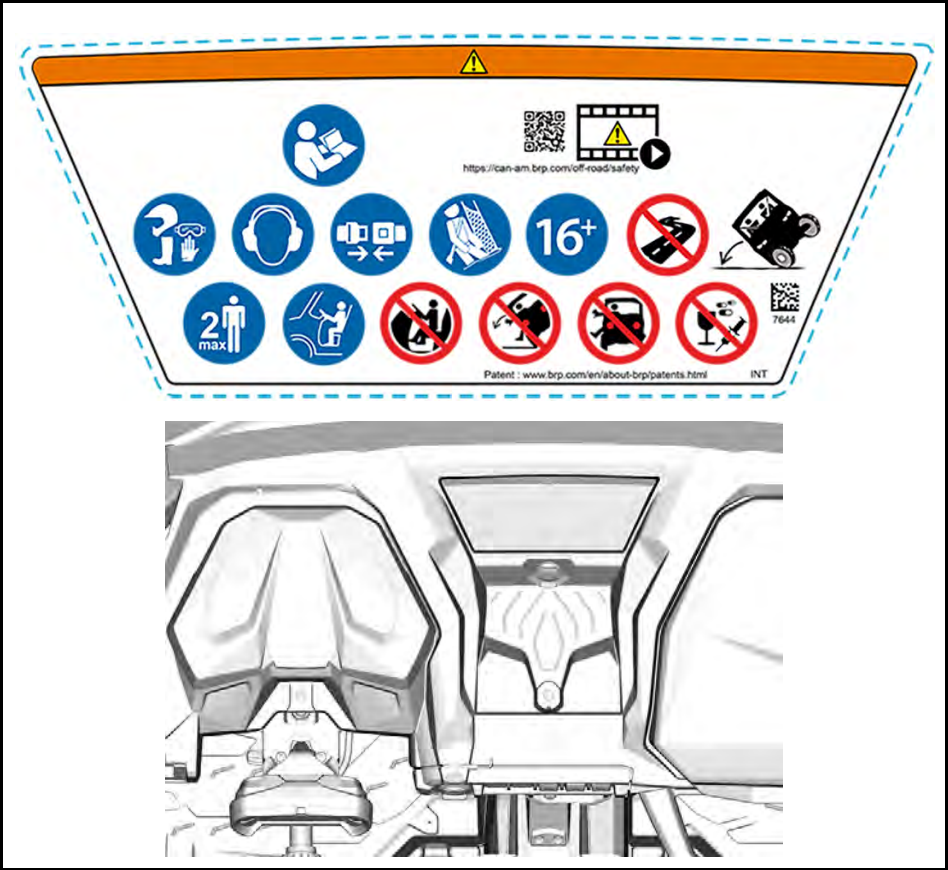

## Passenger Warning Label

### **WARNING**

- Always wear an approved helmet and protective gear.
- Always wear ear protection.
- Fasten seat belts.
- Always latch nets or doors.
- Each rider must be able to sit with back against seat, feet flat on the floor or on footrest, and hands on handholds.
- If you think or feel the vehicle may tip or roll, reduce your risk of injury. Keep a firm grip on handholds and brace yourself. Do not put any part of your body outside of the vehicle for any reason.
- Always stay completely inside the vehicle.
- Do not ride after using alcohol or drugs.



Tire Pressure and Maximum Load - Warning Label

**WARNING**


- Locate and read operator's guide. Improper tire pressure or overloading can cause loss of control, resulting in SEVERE INJURY or DEATH.
- Always maintain proper tire pressure as shown.
- NEVER exceed the vehicle load capacity, including weight of operator, passenger(s), cargo, accessories and trailer tongue weight if applicable.
- Do not overload cargo box.
- NEVER carry passenger in cargo box or on tailgate.
- NEVER place gasoline, flammable or dangerous liquids container on the carrier. This can lead to an explosion.

|  |        |                                      |            |                 |            |                 |             |   |  |
|--|--------|--------------------------------------|------------|-----------------|------------|-----------------|-------------|---|--|
|  |        | < 195 (430)  +  +  > 195 (430)  +  + |            | +  +  < kg (lb) |            | +  +  < kg (lb) |             | + |  |
|  | XT     | 97 ( 14 )                            | 138 ( 20 ) | 103 ( 15 )      | 221 ( 32 ) | 467 ( 1030 )    | 272 ( 600 ) |   |  |
|  | XTP    | 76 ( 11 )                            | 138 ( 20 ) | 83 ( 12 )       | 214 ( 31 ) |                 |             |   |  |
|  | OTHERS | 103 ( 15 )                           | 152 ( 22 ) | 110 ( 16 )      | 241 ( 35 ) |                 |             |   |  |
|  | XT     | 131 ( 19 )                           | 165 ( 24 ) | 165 ( 24 )      | 262 ( 38 ) | 581 ( 1280 )    |             |   |  |
|  | XTP    | 103 ( 15 )                           | 145 ( 21 ) | 124 ( 18 )      | 248 ( 36 ) |                 |             |   |  |
|  | OTHERS | 138 ( 20 )                           | 179 ( 26 ) | 179 ( 26 )      | 290 ( 42 ) |                 |             |   |  |


## 2WD/4WD Selection — Warning Label

### **WARNING**

- Stop the vehicle and apply the brake before using the shift lever or the 2WD/4WD switch.
- Put the shift lever to PARK (P) before exiting vehicle. The vehicle can roll if not in PARK position.

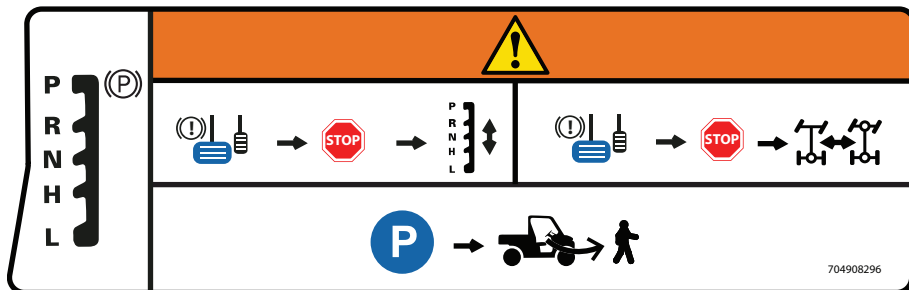

704908296

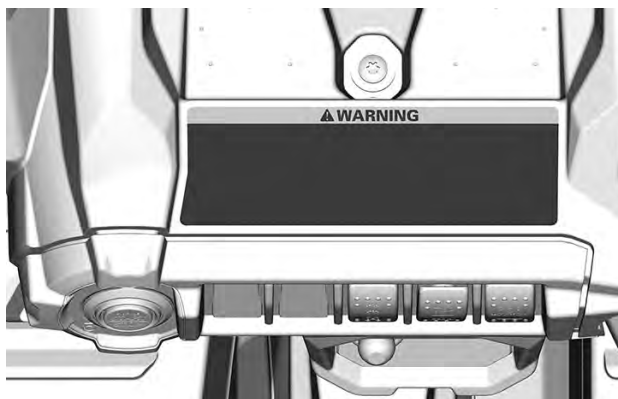

Half Door — Warning Labels

| <div>⚠ <b>WARNING</b></div> <div>Do NOT put your arm outside of the vehicle, there is a risk of SEVERE INJURY.</div>                                                                                         |                                                                                                                                                                                                               |
|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <div>LH Side</div> <div></div> <div></div> | <div>RH Side</div> <div></div> <div></div> |


## Rollover - Pictogram

### **WARNING**

- If you think or feel the vehicle may tip or roll, reduce your risk of injury. Keep a firm grip on handholds and brace yourself. Do not put any part of your body outside of the vehicle for any reason.
- Never hold the cage while riding.
- Always latch nets or doors.
- Fasten seat belts.

LH side


RH Side

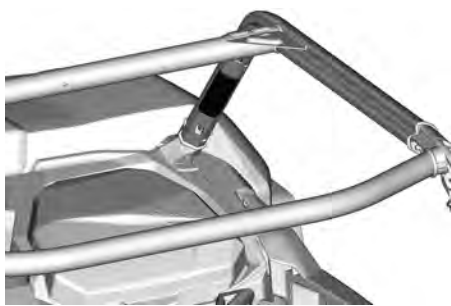

**Pulling a Load Using the Cage - Pictogram**

 **WARNING**

Never attach to the cage to pull a load.  
This can cause the vehicle to tip over.  
Use only the trailer hitch or recovery hook to pull a load.

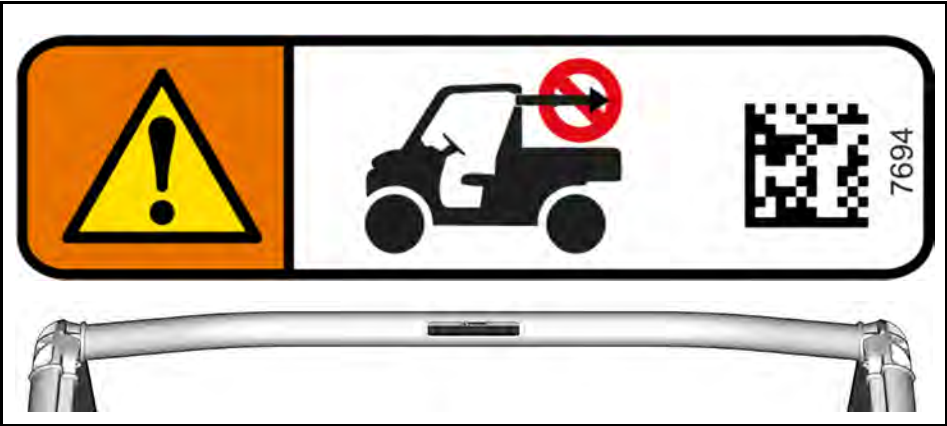



## Winch Installation - Pictogram

### **WARNING**

Never use the frame near the steering column to ground any electrical component such as the winch.

Always use the battery post to ground the winch. Doing otherwise may induce an undesired power steering signal resulting in an unintended steering input.

In certain circumstances, some unintended steering input could lead to a loss of vehicle control increasing the risk of a crash.

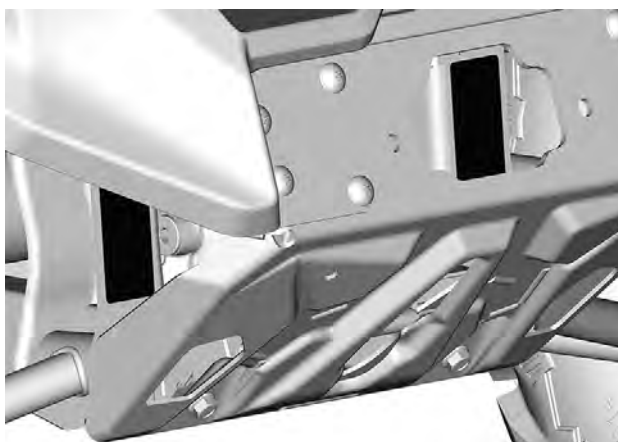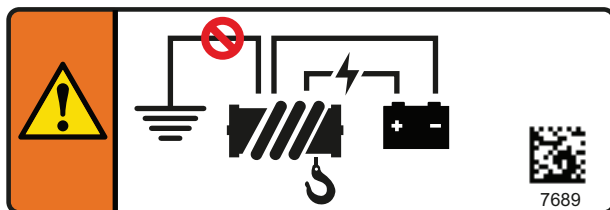


Exhaust — Hot Part Pictogram


 **CAUTION**

Do not touch when hot.



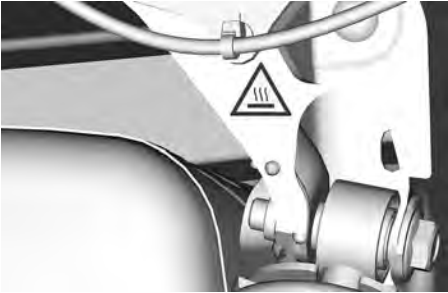

LH SIDE

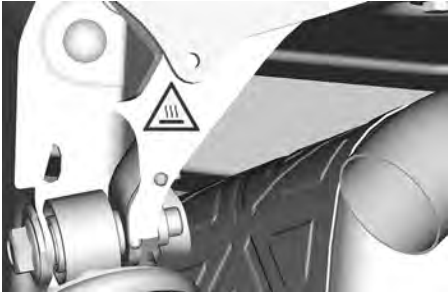

RH SIDE


**Do Not Open, Coolant Hot - Warning Label**



Towing and Tongue Weights - Pictogram

 **WARNING**

**MAXIMUM towing and tongue weights.**  
Set the shift lever to **LOW (L)** gear range when pulling a load.  
Reduce your speed and turn gradually.  
Avoid hills and rough terrain.  
Allow more distance to stop.

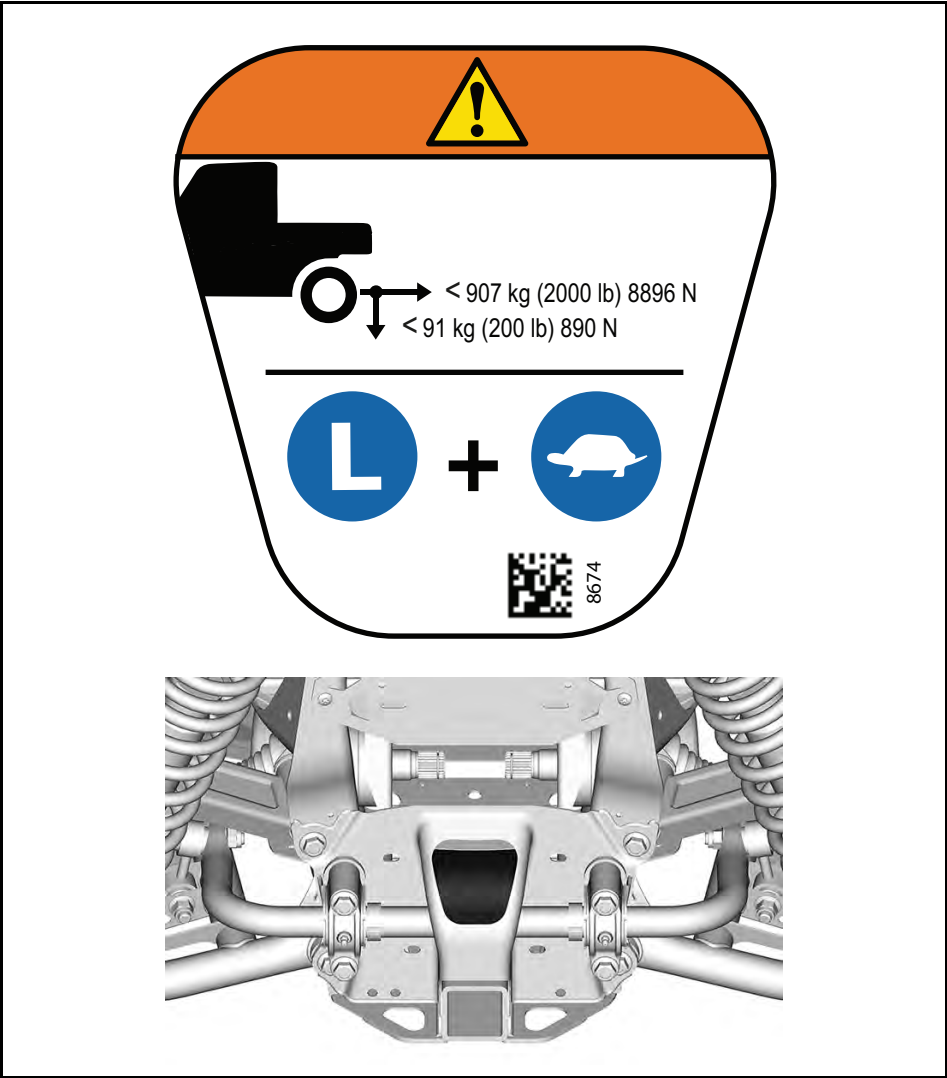


## Cargo Box Pinch Point - Warning Label

### **WARNING**

**Pinch point.**  
**Keep clear when lowering the cargo box.**



**LH SIDE**


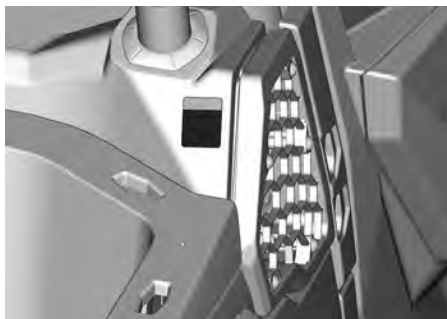


**RH SIDE**

Jump-Start Information - Pictogram

NOTICE

Do not use any component of the steering system to jump - start the vehicle. Failure to comply will result in DPS unit malfunction.

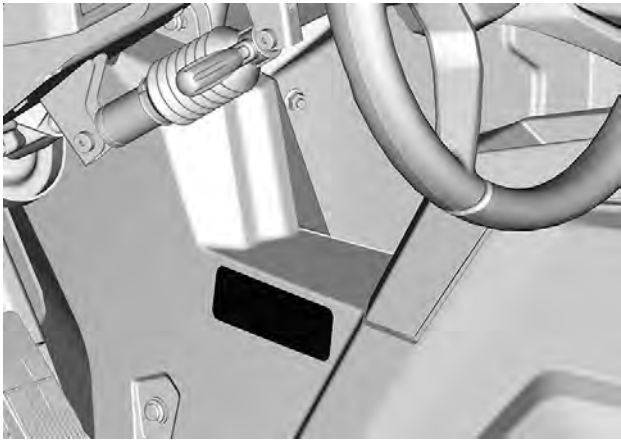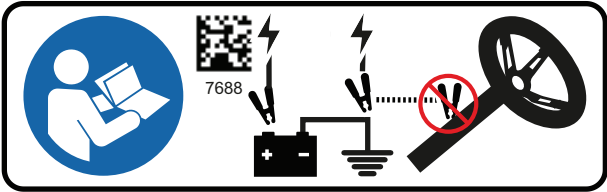

# PRE-RIDE INSPECTION

## WARNING

Perform a pre-ride inspection before each ride to detect any potential problem that could occur during operation. The pre-ride inspection can help you monitor component wear and deterioration before they become a problem. Correct any problem that you discover to reduce the risk of a breakdown or crash.

Before using this vehicle, the operator should always perform the following pre-ride inspection check list:

## Pre-Ride Inspection Check List

### *What to Do Before Starting the Engine (Without DESS Key)*

| Items to Be Inspected       | Inspection to Perform                                                                                                                                                                                                                                                                                                                                                                          | ✓ |
|-----------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---|
| Engine oil (V-Twin engines) | Check engine oil level.                                                                                                                                                                                                                                                                                                                                                                        |   |
| Coolant                     | Check coolant level.                                                                                                                                                                                                                                                                                                                                                                           |   |
| Brake fluid                 | Check brake fluid level.                                                                                                                                                                                                                                                                                                                                                                       |   |
| Engine air filter           | Inspect the engine air filter, clean or replace if needed (service more often when riding in dusty conditions).                                                                                                                                                                                                                                                                                |   |
| CVT air filter              | Inspect and clean the CVT air filter (when riding in dusty conditions).                                                                                                                                                                                                                                                                                                                        |   |
| Radiator                    | Check cleanliness of the radiator.                                                                                                                                                                                                                                                                                                                                                             |   |
| Front grille                | Inspect front grille for cleanliness.                                                                                                                                                                                                                                                                                                                                                          |   |
| Exhaust system              | If not already done, clean the area surrounding the exhaust system, especially if during the last ride, the vehicle was used in a swamp, bog, hay or dead leaves.                                                                                                                                                                                                                              |   |
| Drive shaft bellows         | Check drive shaft bellows and protectors condition.                                                                                                                                                                                                                                                                                                                                            |   |
| Cargo and load              | <b>Cargo Load:</b> If you transport a cargo, respect the maximum loading capacity. Refer to <i>Loading the Cargo Box</i> . Ensure cargo is properly secured to the rear cargo box.<br><b>Vehicle Load:</b> Ensure that total load on the vehicle (including operator, passengers, cargo, tongue weight and added accessories) does not exceed specifications. Refer to <i>Carrying Loads</i> . |   |

| Items to Be Inspected  | Inspection to Perform                                                                                                                                                                                                                                                                                                                               | ✓ |
|------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---|
| Tires                  | Check tire pressure and condition. Refer to the <i>Tire Pressure Label</i> and adjust according to load.                                                                                                                                                                                                                                            |   |
| Wheels                 | Check wheels for damage and for abnormal play. Make sure that lug nuts are tightened. Refer to <i>Wheels and Tires</i> in <i>Maintenance Procedures</i> for torque specification.                                                                                                                                                                   |   |
| Hitch                  | If you are pulling a trailer or another equipment: <ul style="list-style-type: none"> <li>– Check hitch and trailer ball condition.</li> <li>– Respect the tongue capacity and towing capacity as indicated on the label affixed to the hitch or refer to <i>SPECIFICATIONS</i>.</li> <li>– Ensure trailer is properly secured to hitch.</li> </ul> |   |
| Chassis and suspension | Check for debris on or in the vicinity of the exhaust system, remove if any and clean properly. Check underneath vehicle for any debris on chassis or suspension components (upper and lower arms, wheels, shock absorber, springs) and clean them properly                                                                                         |   |
| Doors                  | Check doors for any damage. Have the doors replaced if any damage is found. Close both doors and confirm that they latch securely.                                                                                                                                                                                                                  |   |

### What to Do Before Starting the Engine (With DESS Key)

| ITEMS TO BE INSPECTED | INSPECTION TO PERFORM                                                                                                                                            | ✓ |
|-----------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------|---|
| Digital display       | Check operation of indicator lamps in digital display(during first few seconds of key ON).                                                                       |   |
|                       | Check for messages in gauge.                                                                                                                                     |   |
| Lights                | Check operation and cleanliness of: <ul style="list-style-type: none"> <li>– Headlights (High and Low)</li> <li>– Taillights</li> <li>– Brake lights.</li> </ul> |   |
| Seats and seat belts  | Check if seats are properly latched.                                                                                                                             |   |
|                       | Check seat belts for any damage. Fasten seat belts and confirm that they latch and unlatch securely.                                                             |   |

| ITEMS TO BE INSPECTED | INSPECTION TO PERFORM                                                                                                      | ✓ |
|-----------------------|----------------------------------------------------------------------------------------------------------------------------|---|
| Accelerator pedal     | Press on the accelerator pedal a few times to ensure it operates freely and it returns to the rest position when released. |   |
| Brake pedal           | Press down on the brake pedal and make sure you feel firm resistance and that it fully returns to position when released.  |   |
| Fuel level            | Check the fuel level.                                                                                                      |   |

### ***What to Do After the Engine is Started***

| Items to Be Inspected                    | Inspection to Perform                                                                                                                                                                                                | ✓ |
|------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---|
| Steering                                 | Check if steering wheel operates freely by completely turning it from side to side.                                                                                                                                  |   |
| DESS Key                                 | Remove the DESS key to verify if engine will shut down. Restart engine.                                                                                                                                              |   |
| Shift lever                              | Check operation of shift lever (P, R, N, H and L).                                                                                                                                                                   |   |
| 2WD/4WD selector                         | Check operation of 2WD/4WD selector.                                                                                                                                                                                 |   |
| Brakes                                   | Drive forward slowly a small distance and apply brakes. The brake pedal must feel firm when applied. The pedal must return to rest position when released. The brakes must respond adequately to the driver's input. |   |
| Winch                                    | Check operation of winch.                                                                                                                                                                                            |   |
| Engine oil level (Mono-Cylinder Engines) | Check the engine oil level.                                                                                                                                                                                          |   |

---

## REPORTING SAFETY DEFECTS

In Canada, if you believe that your vehicle has a defect which could cause a crash or could cause injury or death, you should immediately inform Transport Canada in addition to notifying Bombardier Recreational Products Inc.

If Transport Canada receives similar complaints, it may open an investigation, and if it finds that a safety defect exists in a group of vehicles, it may order a recall and remedy campaign. However, Transport Canada cannot become involved in any individual problems between you, your dealer or Bombardier Recreational Products Inc.

### To contact Transport Canada:



819-994-3328 (Gatineau-Ottawa area or internationally)  
Toll free : 1 800-333-0510 (in Canada)



Transport Canada - ASFAD  
330 Sparks Street  
Ottawa, ON  
K1A 0N5



<https://www.tc.gc.ca/recalls>


# VEHICLE INFORMATION

---

## PRIMARY CONTROLS

It is important to know the location and operation of all controls, and to develop and practice smooth and coordinated use of them.

Some vehicle safety labels are not shown on illustrations. For information on vehicle safety labels, refer to *Important On-Product Labels*.

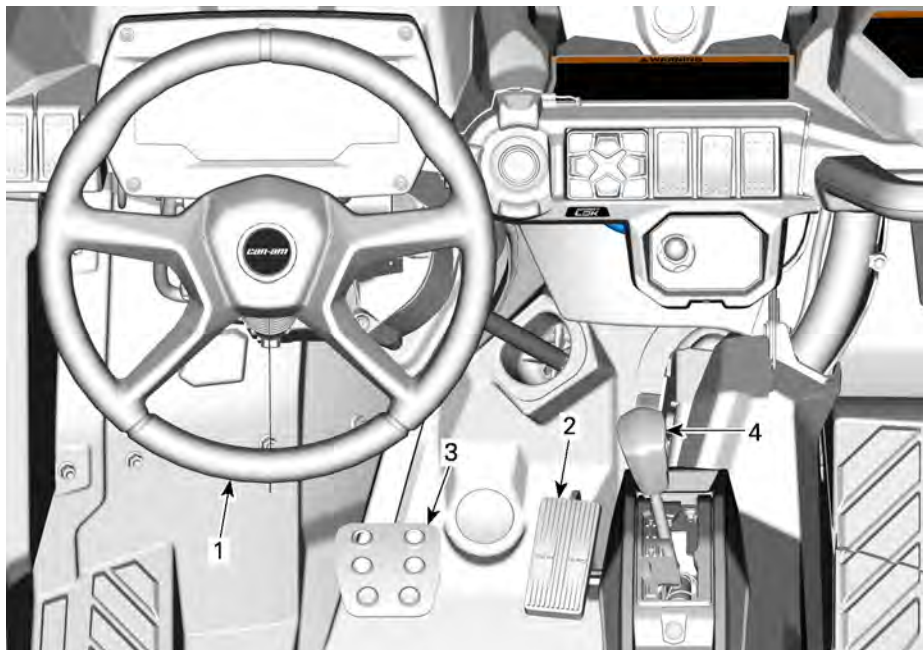

1. Steering wheel
2. Accelerator pedal
3. Brake pedal
4. Shift lever

## Steering Wheel

The steering wheel is located in front of the driver's seat.

The steering wheel steers the vehicle to the left or right.

Turn the steering wheel in the direction you want to go.

Grip the steering wheel with both hands, without having thumbs rolled around the steering wheel.

### CAUTION

**Under rough trail conditions or when crossing an obstacle, the steering wheel could suddenly jerk on one side, causing hand or wrist injuries if the thumbs are rolled around the steering wheel.**

A dynamic power steering (DPS) reduces the effort to turn the steering wheel.

## Accelerator Pedal

The accelerator pedal is located on the right side of the brake pedal.

The accelerator pedal controls the engine speed.

To increase or maintain vehicle speed, press on the accelerator pedal with your right foot.

To decrease vehicle speed, release the accelerator pedal.

The accelerator pedal is spring loaded and should return to rest position (idle) when not pressed.

## Brake Pedal


The brake pedal is located on the left side of the accelerator pedal.

The brake pedal function is to slow down or stop the vehicle.

To decrease vehicle speed or to stop vehicle, press down the brake pedal with your right foot.

The brake pedal is spring loaded and should return to rest position when not pressed.

## Shift Lever

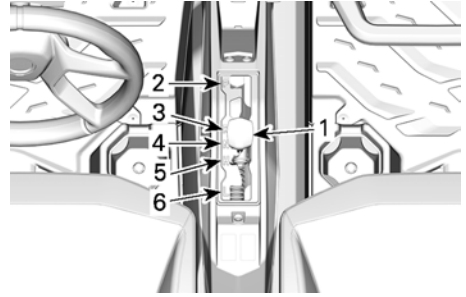

1. Shift lever
2. Park
3. Reverse
4. Neutral
5. High range (forward)
6. Low range (forward)

The shift lever is located on the lower console, between the seats.

The shift lever is used to change the gearbox position.

The vehicle must be stopped and brakes applied prior to selecting any gear.

### WARNING

**This gearbox is not designed to shift while vehicle is moving.**

### Park

The park position locks the gearbox to help prevent vehicle movement.

### WARNING

**Always use the PARK (P) position when the vehicle is not in operation. The vehicle can roll if the shift lever is not set to P (PARK).**

## ***Reverse***

The reverse position allows the vehicle to go backwards.

### **NOTE:**

In reverse operation, the engine RPM is limited thus limiting the vehicle reverse speed.

### **WARNING**

**When driving downhill in reverse, gravity can increase the vehicle speed above safe reverse speed.**

## ***Neutral***

The neutral position disengages the gearbox.

## ***High Range (Forward)***

This position selects the high speed range of the gearbox. It is the normal driving speed range. It allows the vehicle to reach its maximum speed.

## ***Low Range (Forward)***

This position selects the low speed range of the gearbox. It allows the vehicle to move slowly with maximum torque at the wheels.

### **NOTICE**


**Use the low speed range to pull a trailer, carry heavy cargo, go over obstacles or drive uphill and downhill.**

---

## SECONDARY CONTROLS

Some vehicle safety labels are not shown on illustrations. For information

on vehicle safety labels, refer to *Important On-Product Labels*

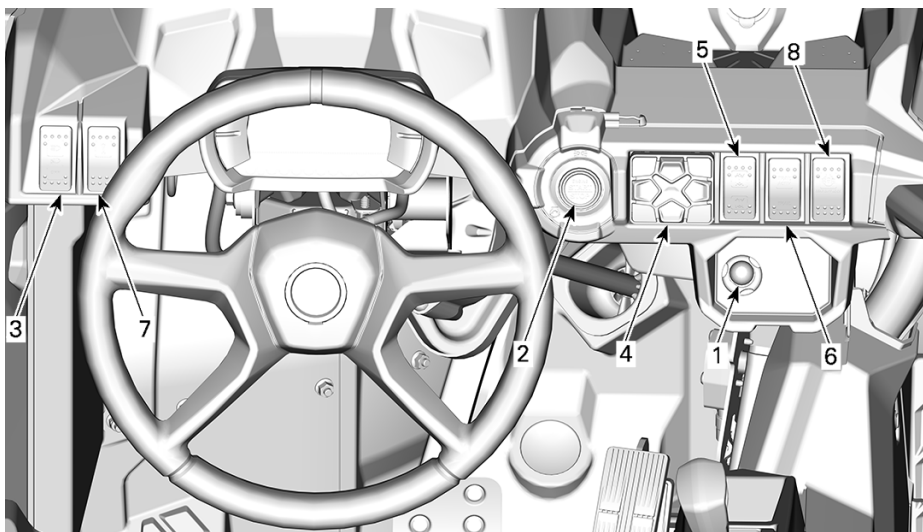

1. RF D.E.S.S. Post
2. Engine Start/Stop Button
3. Headlight Dimmer Switch
4. Keypad
5. 2WD/4WD/Front Diff Lock Switch
6. Smart-locker mode switch
7. Winch Switch
8. Rear Differential Lock Switch

## RF D.E.S.S Key and RF D.E.S.S. Post

### RF D.E.S.S. Key

For all D.E.S.S. related option, see an authorized Can-Am dealer for information.

### Digitally Encoded Security System (D.E.S.S.)

This vehicle is delivered with 1 D.E.S.S. key.

The ignition keys contain an electronic circuit that gives it a unique electronic serial number.

The D.E.S.S. system reads the key code and allows engine starting for keys it recognizes.

This vehicle can be operated using different types of key programming:

- Performance
- Normal
- Work (if applicable)

Refer to your dealer for complete information.

### NOTE:

Additional keys are available from your dealer as an accessory.

### **⚠ WARNING**

**Rollovers, tipovers, collisions and loss of control resulting in serious injury or death are possible with the performance or normal key. Using the normal key is not a substitute for the operator being prepared, qualified, and operating with care.**

### Performance Key

The performance key allows the user to access the full torque of the engine as well as the top speed of the vehicle.

This may be useful for riders who prefer crisper throttle response, and for environments where higher speeds and greater acceleration are appropriate. For example, in wide-open straight trails, operators may prefer the performance key.

### Normal Key

The normal key limits the vehicle speed to 70 km/h (43 MPH) and 50% torque reduction.

### **⚠ WARNING**

**On steep downhills, the engine speed limiter may not prevent the vehicle from accelerating beyond this speed.**


This key may be useful for riders who prefer more gradual acceleration, or for riding in environments where full speed and high acceleration are not desirable. For example, in narrow, winding trails, operators may prefer a normal key.

### Work Key (if applicable)

The work key allows for usage of 100% of maximum engine torque but limits vehicle speed to 40 km/h (25 MPH).


### RF D.E.S.S. Post

The D.E.S.S. post is located on the upper console.

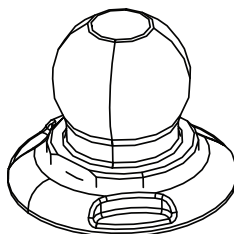

## Engine Start/Stop Button

The engine start / stop button is located on the upper console, at the right of the steering wheel.

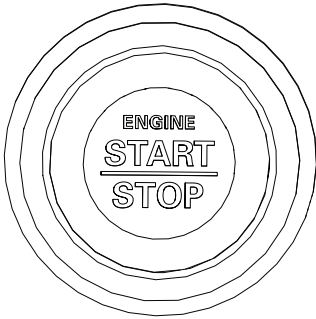

When pressed and held, it starts the engine.

If the engine is running, when pressed, it stops the engine.


### NOTE:

The RF D.E.S.S. key must be installed on the RF D.E.S.S. post to allow engine start.

To power up the electrical system without starting the engine, refer to *Waking Up the Electrical System*.

## Headlight Dimmer Switch

The headlight dimmer switch is located on the upper console.

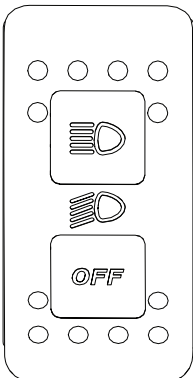


This switch is used to select either the headlights OFF position, low or high beams.

## Headlight Dimmer Switch (700 Engine)

The headlight dimmer switch is located on the upper console.

This switch is used to select either the headlights low or high beams.

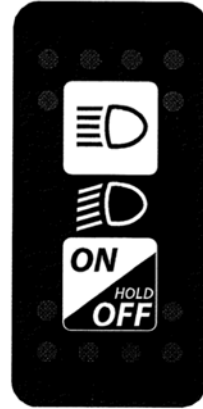


Press and hold to turn on or off the headlights.

## Keypad

The keypad is used to navigate through various menus and options when the 7.6" Digital Display is installed.


The keypad is located on the upper console.

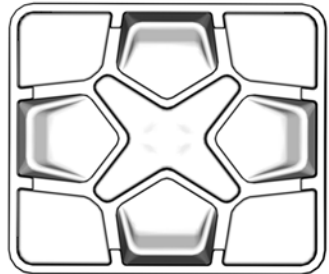

## 2WD/4WD Switch

### Models without Smart-Lok

The 2WD/4WD switch is located on the upper console.

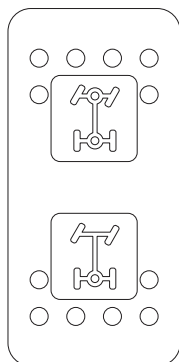

This switch selects 2 wheel drive, or 4 wheel drive mode when the vehicle is stopped.

### NOTICE

**The vehicle must be stopped to engage or disengage 2WD/4WD switch.**

**Mechanical damage may occur if switch is engaged or disengaged while driving.**


The 4WD mode is engaged when the switch is pushed upwards.

The 2WD mode is engaged when the switch is pushed downwards. The vehicle is then rear wheel drive only.

## 2WD/4WD/Front Diff Lock Switch

### Models with Smart-Lok

The 2WD/4WD/Front Diff Lock switch is located on the upper console.

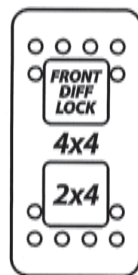

This switch selects 2 wheel drive or 4 wheel drive mode when the vehicle is stopped.

Once the vehicle 4WD mode is engaged, the front diff lock can be activated when the switch is pushed upwards.

The front diff. lock can be activated on the fly, no need to stop the vehicle to engage. To deactivate, push again on the switch. When the engine is stopped, the front diff. lock will be deactivated.

### NOTICE

**The vehicle must be stopped to engage or disengage the 2WD/4WD switch.**

**Mechanical damage may occur if switch is engaged or disengaged while driving.**

**Always unlock the front diff. before disengaging 4WD.**

The front differential is fully locked when the switch is pushed upward. It's a momentary position. When the front diff. is locked, the switch light will illuminate and a message will appear in the cluster for 2 seconds to say "DIFF LOCK". A padlock pictogram will appear inside the 4x4 logo. The light will turn off when the differential is unlocked and a message in the cluster will appear and show "SMART-LOK", meaning that you are back in the automatic mode. For all models with

Smart-Locker, the AUTO pictogram will lit above the 4x4 logo in the cluster.

When the front differential is locked, the effort to turn the steering wheel might be higher and the response might be slower.

### **⚠ WARNING**

**Abruptly changing direction can cause loss of control or injury. Never engage Front Diff Lock before entering a turn or when turning.**


The front differential is locked and the 4WD mode is engaged when the switch is pushed upwards.

The 4WD mode is engaged when the switch is in the middle.

The 2WD mode is engaged when the switch is pushed downwards. The vehicle is then rear wheel drive only.

## **Rear Differential Lock Switch**

The rear differential lock switch is located on the upper console.

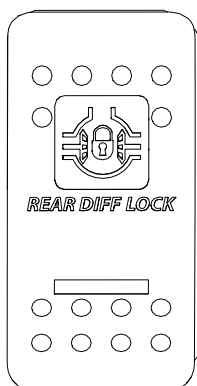

This switch enables locking of rear differential.

### **NOTICE**

**The vehicle must be stopped to engage or disengage the differential switch. The vehicle must be in gear (not in Park) to proceed. Mechanical damage may occur if switch is engaged or disengaged while driving.**


The rear differential is locked when the switch is pushed upwards and unlocked when the switch is pushed downwards.

If the vehicle is in Park and the switch is pushed downwards, the rear differential will stay locked.

## **Riding Mode Switch**

### **On Some Models Only**

This switch is used to choose between the TRAIL or TRAIL ACTIV mode.

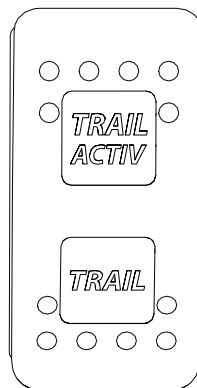

### **TRAIL**

This mode must be used during all normal riding.

The front differential will automatically synchronize the front wheels as needed.

TRAIL ACTIV

This mode is used to increase traction on the front drive train.

This will optimize traction while going out of a corner and/or while doing hard acceleration by the detection of the engine torque required by the driver.

When using this mode, you need to adjust of your driving style as the front drivetrain is going to pull more than usually.




**WARNING**

The fully locked option of the front differential reduces the maneuverability of the vehicle in certain conditions.

Winch Switch

The winch can be controlled from inside and outside the vehicle with the winch control switch located in the upper console.

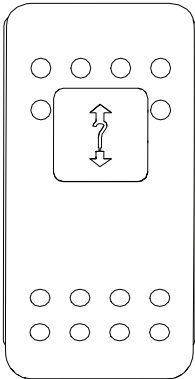

Refer to your *Winch Guide* included with your vehicle for proper winch operation.

## EQUIPMENT

Some features may not apply to your model or could be optional.

Some on-product labels are not shown on illustrations.

For information concerning the safety labels, refer to *Important On-Product Labels*.


### Tilt Steering

The steering wheel height is adjustable.

Adjust the steering wheel height to face your chest, not your head.

To adjust steering wheel height:

1. Pull the tilt lever toward you.
2. Move steering wheel to the desired position.
3. Release the tilt lever.

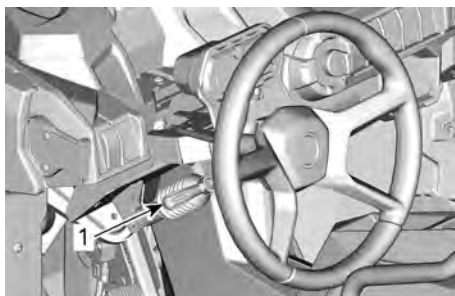


1. Tilt lever

#### **WARNING**

**Never adjust the steering wheel height while riding. You may lose control.**

### Cup Holders

Two cup holders are located on each side of the console.

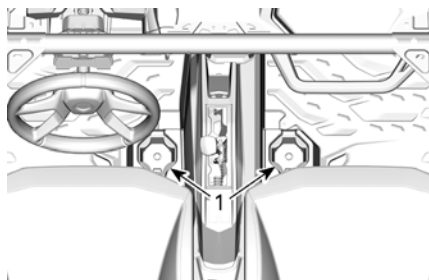


1. Cup holders

#### **NOTE:**

Use only tight fitting containers, a loose container can tip over and interfere with feet movements. Do not use cup holders while riding in rough conditions.

### Passenger's Handhold

The passenger's handhold is located on the console directly in front of the passenger's seat.

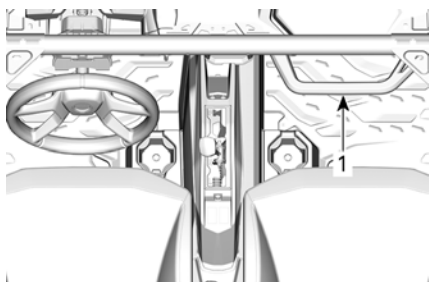

1. Passenger handhold

Holding the handhold helps the passenger brace against the movement of the vehicle and helps keep hands and body inside the cockpit in the event of a rollover.

#### **WARNING**

**Never use any part of vehicle cage as handholds. Hands can be struck by objects outside the cockpit or crushed in a rollover.**


## Storage Compartments

The vehicle is equipped with different types of storage compartments designed to carry light objects.

### Closed Storage Compartment

A storage compartment is available behind the multifunction gauge on the driver side.

A glove box is available on the passenger side.

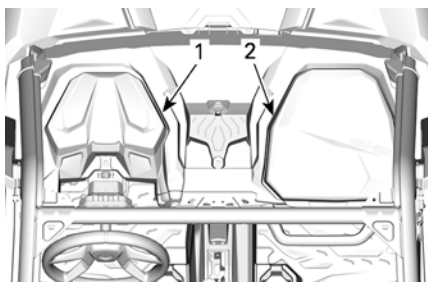


1. Storage compartment
2. Glove box

### Opened Storage Compartments

Multiple opened storage compartments are available in the console.

#### **⚠ WARNING**

When riding vehicle, make sure no object stored in opened storage compartments could cause harm in the event of a roll over.

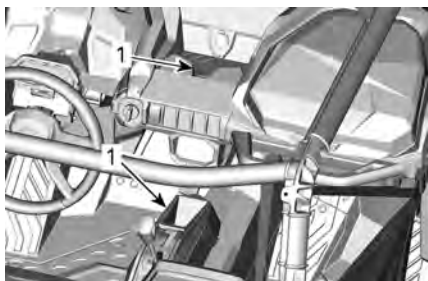

1. Opened storage compartment

### Cargo Box Storage Compartment


The vehicle is equipped with storage compartments located on each side of the cargo box.

The LH storage compartment is to store the spare drive belt and tools to open the clutch.

The RH storage compartment is to install the optional tool kit or other small items.




LH SIDE EXTERIOR

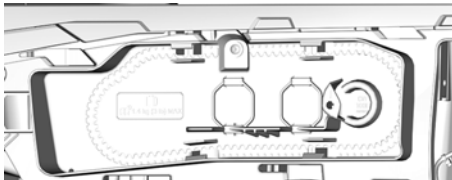

LH SIDE INTERIOR



RH SIDE EXTERIOR

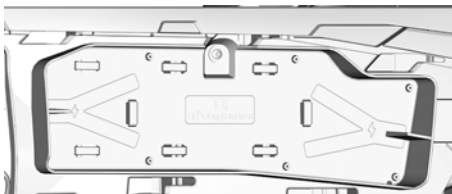

RH SIDE INTERIOR

#### **⚠ CAUTION**

**Storage Compartment Maximum Load: 1.4 kg (3 lb)**

## Opening the Cargo Box Storage Compartment

1. Open the tailgate.
2. Remove the quarter-turn screws.



**LH SIDE SHOWN**

3. Slide the storage compartment cover towards the rear of the vehicle and remove it.



**LH SIDE SHOWN**

4. The installation procedure is the reverse of the removal procedure. However, pay attention to the following.

### **⚠ WARNING**

**Make sure to correctly secure every item inside so they do not slip or move.**

**Correctly slide the storage compartment cover in place before installing the quarter-turn screws. Otherwise, the storage compartment cover and the items inside could become a road hazard for the persons behind.**

1. Secure all items inside compartment.
2. Push on the front of the cover when installing it.

3. Lock the cover using the quarter-turn screws.
4. Close tailgate.

## Tool Kit

A tool kit with basic tools is provided with this vehicle.

It is located inside the glove box.

This tool kit includes:

- Pliers
- Socket wrench 14 and 16 mm
- Open wrench 15 and 17 mm
- Open wrench 10 and 13 mm
- Screwdriver (flat and Phillips)
- Torx key T30
- Suspension adjustment tool

## Footrests

The vehicle is equipped with driver and passenger footrests to allow firmly planting feet on vehicle floor, which helps to maintain proper body position while riding.

The footrests help minimize the risk of leg or foot injury.


Always wear appropriate footwear. See *Riding Gear*.

## Half Doors

Half doors on each side of the cockpit to help arms, legs or shoulders stay inside the vehicle, thus reducing the risk of injuries. Half doors may also keep bushes or debris out of cockpit.

### **⚠ WARNING**

**Never operate the vehicle while the doors are removed or opened.**

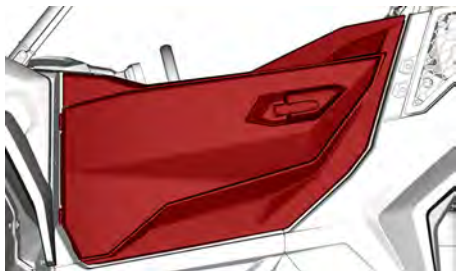**LH DOOR**

To open door, pull on handle.

**LH EXTERIOR HANDLE****LH INTERIOR HANDLE**

## Seat Belts

This vehicle is equipped with 3 points seat belts to help protect driver and passenger in the event of a collision, rollover, or tipover. The seat belts can help keep occupants stay in the passenger compartment.

### **⚠ WARNING**

**Wear seat belts properly at all times.**

Seat belts reduce the risk of injury in case of a crash and help to keep limbs inside the cockpit during a rollover or any accidents. Before riding, everyone aboard should know how to unbuckle their seat belt rapidly. Knowing how to properly detach your seat belt is a crucial skill that can save your life in an emergency situation. In the event of an accident or vehicle malfunction, being able to quickly release your seat belt can help you escape the vehicle and avoid potential hazards such as fire or sinking. Additionally, knowing to quickly release your seat belt can also help you assist others such as children or older persons.

If driver's seat belt is not fastened when:

- The ignition is turned ON
  - The seat belt indicator lamp will be turned ON.
  - The multifunction gauge will display the message: SEAT BELT.
- The engine is started and shift lever is moved out of PARK, vehicle speed will be limited to a maximum

of approximately 20 km/h (12 MPH) on flat ground.

### **⚠ WARNING**

The vehicle may reach higher or lower speed depending on inclines.

### **⚠ WARNING**

There is no indicator light or message for the passengers seat belt. The driver is responsible for the passenger safety and should ensure the passengers buckle their seat belt.

### ***Fastening and Adjusting the Seat Belt***

The seat belt is equipped with a semi-cinching tab that locks the lap belt when the webbing is under tension.



**TYPICAL**

1. Semi-cinching tab

To fasten the seat belt, insert the latch plate into the buckle, then pull the belt to ensure it is properly fastened.

Adjust the seat belt tightly against your body by pulling the shoulder belt upwards.



**TYPICAL**

### **⚠ WARNING**


**Wear seat belt properly.** Fasten seat belts and confirm that they latch and unlatch securely and tightened against the body. **Make sure it is not twisted or defective.**

To release the seat belt, push on the red button on the seat belt buckle.

### **Driver's Seat**

The driver's seat can be adjusted forward and backward.

To adjust seat, move the seat lever aside to unlock the seat. Release the lever to lock the seat into desired position.

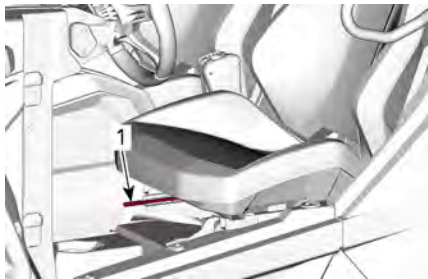

1. Seat lever

### **⚠ WARNING**

**Never adjust the seat position while driving.**

## Passenger's Seat

The passenger seat is not adjustable.

## Fuel Reservoir Cap

The fuel reservoir cap is located on the right hand side of the vehicle.



Refer to *Fuel* for information on fueling procedure and fuel requirements.

## Winch

### **WARNING**

**To avoid severe injury or death or important components damages.**

- Never use the winch cable/rope to retain a vehicle during trailering.
- Never ride with the winch cable/rope attached to a load or another vehicle.
- Only use the winch to help a stuck vehicle (snow, mud, etc.).
- Always refer to the winch manufacturer's instruction before pulling loads.

Refer to your winch guide included with your vehicle for proper winch operation.

The winch can be actuated inside the

vehicle using the winch control switch on the upper console.

### **NOTICE**

**Using the winch intensively over a long period of time may discharge the battery.**

Intensive use of the winch may cause the built-in circuit breakers to momentarily turn OFF. In such a case, wait a moment, then continue winching. The breakers automatically turn ON once they have cooled down.

The following tips will help to reduce the risk of discharging the battery:

- Always unreel manually: Unlock the cable using the handle then pull on the hook strap to unreel.
- Let the vehicle run while winching. Do not stop vehicle immediately after winching to let battery recharge.
- Also, when winching for more than 30 seconds, it is recommended to increase engine RPM in the range of 3000 RPM to increase charging power to the battery.

### **WARNING**

**Make sure vehicle is in NEUTRAL (N) or PARK (P) before increasing engine RPM.**

## Cargo Box

The vehicle is equipped with a tilting cargo box.

The cargo box may be used to transport various types of cargo.

### **⚠ WARNING**


To reduce the risk of loss of control or loss of load, use the cargo box only in accordance with *Carrying Loads* in the *Safety Information* section.

### **NOTICE**

Do not drill the cargo box unnecessarily.  
Drill only to install a LinQ accessory and at location required.  
When removing the accessory, re-install bolts and T-nuts.


### **Tilt Release Handles**

The latching mechanism of the cargo box can be actuated from either side of the vehicle through a release handle.

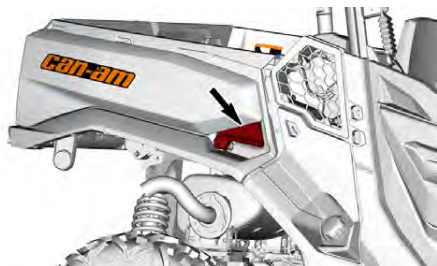

### **Anchoring Hooks**

To help to secure cargo inside the cargo box, 4 anchoring hooks are installed on the floor of the cargo box.

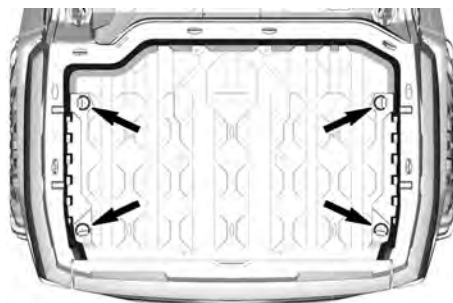

### **Tailgate**



### **Opening the Tailgate**

1. Hold the top of the tailgate with one hand.
2. Pull up on the tailgate handle to release the tailgate.
3. Lower tailgate slowly.

### **Removing the Tailgate**

1. Lower the tailgate.
2. Disconnect retaining cables.
3. Position tailgate so as to remove it from pivot points.

Reverse the steps to reinstall the tailgate.


### **Trailer Hitch**

The vehicle comes equipped with a 50.8 x 50.8 mm (2 x 2 in) standard receiver hitch.

### **12-Volt Power Outlet**

Convenient for handheld spotlight or other portable equipment.

Remove protective cap to use. Always reinstall it after use to protect against weather.

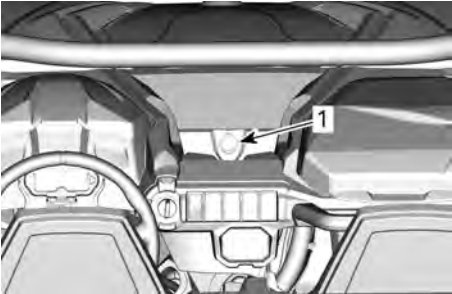

1. 12 V power outlet

## Central Rearview Mirror

*(If Equipped)*

This vehicle comes equipped with a central rearview mirror.

Be aware that objects in mirror are closer than they appear.

The mirror can be adjusted to suit driver's preference.

To adjust mirror; loosen knob located behind mirror and tighten it to secure mirror in position.




**BEHIND THE MIRROR**

1. Knob

### **WARNING**

**Do not adjust mirrors while riding.  
You could lose control.**


# 4.5" DIGITAL DISPLAY MULTIFUNCTION DISPLAY Lower Display

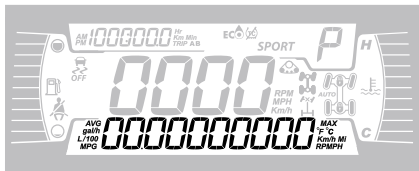

May display the following:


- RPM
- Speed statistics
- Engine Temperature
- Battery Voltage
- Settings
- Messages

Use LOWER button to change the displayed information.

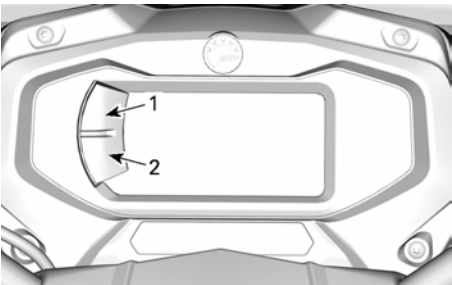

1. Upper button
2. Lower button


## Left Lateral Display

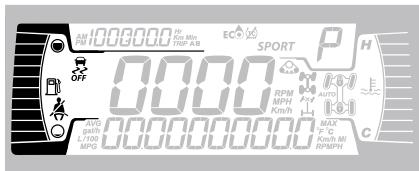

The left lateral display includes:

- Fuel level indicator
- Seat belt icon
- Traction control icon (if equipped)

## Right Lateral Display

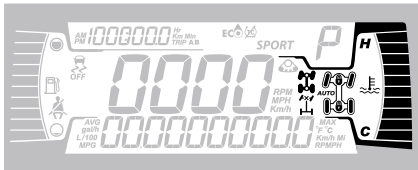


The left lateral display includes:

- Engine Temperature
- 2X4 / 4X4 telltale (if equipped)
- Front differential lock - Smart-Lok icon (if equipped)

| Icon | Description                              |
|------|------------------------------------------|
|      | 2X4 icon                                 |
|      | 4X4 icon                                 |
|      | Front differential lock - Smart-Lok icon |

## Central Display

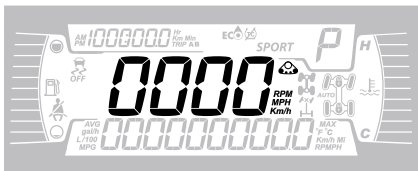


The central display includes:

- Vehicle speed in km/h or MPH or RPM.
- Track kit Active (if equipped)

## Transmission Display


## Position

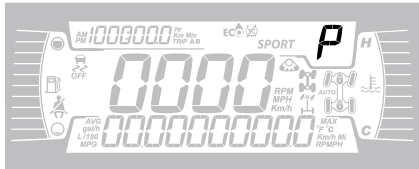

This display shows gear position of gearbox:

- P (Park)
- R (Reverse)
- N (Neutral)
- H (High Range)
- L (Low Range)
- – (Invalid Range)

Engine Mode Display

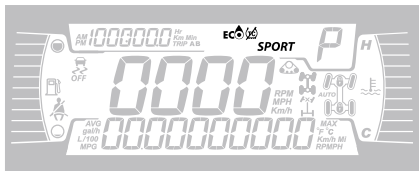

The MODE display indicates the selected mode of operation:


- ECO OFF (nothing is display)
- ECO
- SPORT

To change between modes, hold LOWER button and short press LOWER button to cycle through available modes.

| Engine Mode | Message at Activation |
|-------------|-----------------------|
| Eco OFF     | ECO OFF               |
| Eco         | ECO MODE              |
| SPORT       | SPORT MODE            |

The Traction Control icon  is also displays in this area.

Trip Display

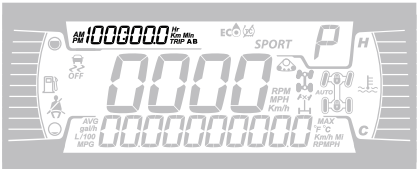


This display shows trip information:

- Cumulative distance odometer
- Trip A
- Trip B
- Vehicle hour meter
- Clock

Use UPPER button to change the displayed information.

Hold UPPER button to reset Trip A/B meters.

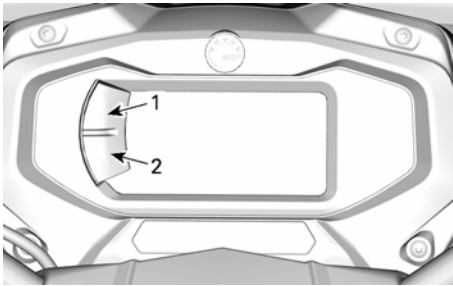

1. Upper button
2. Lower button

Indicator Lamps

Warning and Telltale Lights



| WARNING and Telltale Lights                                                         |                                           |
|-------------------------------------------------------------------------------------|-------------------------------------------|
|  | ORANGE - Vehicle Malfunction              |
|  | BLUE - High Beam                          |
|  | RED - The engine temperature is too high. |

| WARNING and Telltale Lights                                                      |                                                                                                                                                                                         |
|----------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  | GREEN - Neutral                                                                                                                                                                         |
|  | RED - Brake lock lever is engaged or malfunction of the brake system                                                                                                                    |
|  | RED - The battery voltage too low or problem with the electrical system                                                                                                                 |
|  | RED - Low oil pressure<br>Normally ON when engine is OFF                                                                                                                                |
|  | ORANGE - Low fuel level                                                                                                                                                                 |
|  | ORANGE<br><b>Turn on:</b> Malfunction of the vehicle emissions control system<br><b>Blink:</b> Engine problems, the limp home mode is activated. Have the vehicle serviced immediately. |


### Icons and Indicators

| Icons and Indicators                                                                |                                                                                               |
|-------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------|
| <i>SPORT</i>                                                                        | – Denotes SPORT mode is selected.                                                             |
|  | – Denotes ECO mode is selected.                                                               |
|  | When lit, seat belt not buckled with vehicle immobilized.<br>Flashing when vehicle is moving. |
|  | – When lit, indicates that a                                                                  |

| Icons and Indicators                                                              |                                                                                                                              |
|-----------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------|
|                                                                                   | maintenance is required.<br>– See your authorized Can-Am Off-road dealer or person of your own choosing for the maintenance. |
|  | – Track kit active (when installed).                                                                                         |
|  | – Denote front differential lock - Smart-Lok is activated. (If Equipped)                                                     |

## SETTINGS

The buttons to navigate through menus are located on the left side of the LCD display.

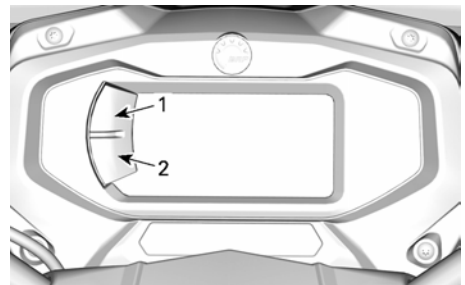

1. Upper button

2. Lower button

### Setup

Using LOWER button, select **SETTINGS** and hold to enter setting menu.

## **Maintenance Reset**

### **NOTE:**

Only when the maintenance icon is displayed.

Using LOWER button, select **RES MAINT** and hold to reset maintenance.

### **Fault Codes**

Available only when at least one code is activated.

Using LOWER button, select **CODES** and hold to see active fault codes.

Fault codes will be scrolled on the Lower Display.

### **Reset Stats**

Using LOWER button, select **RESET STAT** and hold to reset.

### **Unit Selection**

This multifunction gauge is factory preset in Imperial units but it is possible to change it to Metric units.

Using LOWER button, select **UNITS** and hold button to change units.

### **Setting Clock**

All of the following action must be performed using the LOWER button.

1. Select **CLOCK** and hold to adjust clock.
2. Press the button to select clock display.
3. Push and hold the button for 1 second.
4. Press the button to select 12:00 AM PM or 24:00 time base.
5. Push and hold the button to acknowledge selection.
6. Press the button to change hours (hours flash).
7. Push and hold the button to acknowledge hour selection.
8. Press the button to switch to minutes (minutes flash).

9. Push and hold the button to acknowledge minutes selection.

### **Setting Language**

The gauge display language can be changed.

Refer to an authorized Can-Am Off-road dealer for language availability and to setup the gauge to your preference.

### **Setting Brightness**

The brightness of the LCD display can be adjusted.

Using LOWER button, select **BRIGHTNESS** and hold button to change brightness.

Using LOWER button, adjust brightness then push and hold the button to acknowledge selection.

# 7.6" DIGITAL DISPLAY

## Multifunction Display

### ⚠ WARNING

Do not adjust the display while riding, you could lose control.

## Lower Display




May display the following:

- RPM
- Speed statistics
- Engine Temperature
- Battery Voltage
- Settings
- Messages
- Active DPS mode

The SPEED STAT display shows the maximum and the average speed. Hold MENU or OK button for 1 second to reset.

## Left Lateral Display

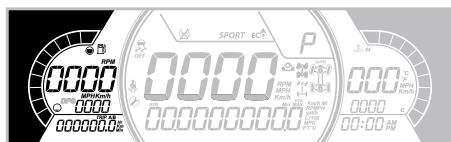


The left lateral display includes:

- Fuel level indicator
- Tripmeter (A - B)
- Odometer
- Vehicle Hour meter
- DPS indicator
- RPM
- Vehicle speed

### NOTE:

When the vehicle speed is indicated here, the RPMs are automatically indicated in the central part and vice versa.

## Right Lateral Display

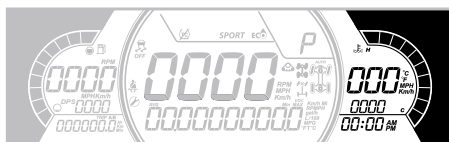

The right lateral display includes:

- Engine Temperature
- Clock
- Utility Speed limiter indicator

The speed indicator in this display is activated when the central display shows information other than the speed. Otherwise it is blank.


## Central Display



May display the following:

- RPM
- Vehicle speed


## Transmission Display

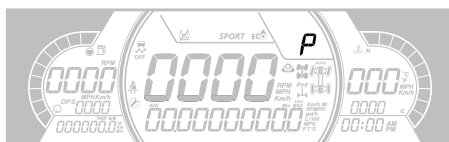

This display shows gears position of gearbox:

- P (Park)
- R (Reverse)
- N (Neutral)
- H (High range)
- L (Low range)
- – (Invalid gear)

## Engine Mode Display

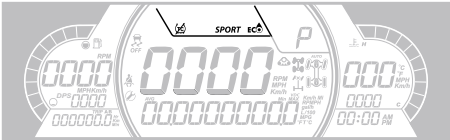

The engine mode display indicates the selected mode of operation:


- SPORT
- ECO

A message of the selected mode will be displayed on the lower display at activation and deactivation as follow:

| Engine Mode | Message at Activation |
|-------------|-----------------------|
| Sport       | SPORT MODE            |
| ECO         | ECO MODE              |

The Traction Control icon  is also displays in this area.


Middle Right Display

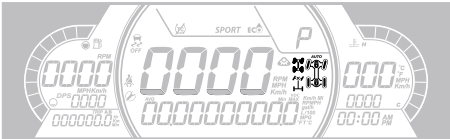


The middle right display indicates the selected mode of operation:

- 2X4
- 4X4
- Front differential lock (Smart-Lok)
- Track kit active (when installed).

| Icon                                                                                | Description |
|-------------------------------------------------------------------------------------|-------------|
|  | 2X4 icon    |
|  | 4X4 icon    |

| Icon                                                                              | Description                        |
|-----------------------------------------------------------------------------------|------------------------------------|
|  | Front differential lock            |
|  | Track kit active (when installed). |

Middle Left Display

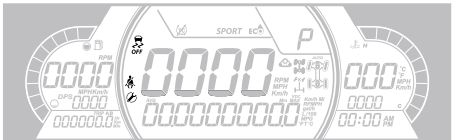

The middle left lateral display includes:

- Traction Control icon
- Seat belt reminder
- Maintenance reminder

Indicator Lamps

Warning and Telltale Lights



| WARNING and Telltale Lights                                                         |                                                                      |
|-------------------------------------------------------------------------------------|----------------------------------------------------------------------|
|   | ORANGE - Vehicle Malfunction                                         |
|  | BLUE - High Beam                                                     |
|  | RED - The engine temperature is too high.                            |
|  | GREEN - Neutral                                                      |
|  | RED - Brake lock lever is engaged or malfunction of the brake system |

| WARNING and Telltale Lights                                                      |                                                                                                                                                                                         |
|----------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  | RED - The battery voltage too low or problem with the electrical system                                                                                                                 |
|  | RED - Low oil pressure<br>Normally ON when engine is OFF                                                                                                                                |
|  | ORANGE - Low fuel level                                                                                                                                                                 |
|  | ORANGE<br><b>Turn on:</b> Malfunction of the vehicle emissions control system<br><b>Blink:</b> Engine problems, the limp home mode is activated. Have the vehicle serviced immediately. |

## Icons and Indicators

| Icons and Indicators                                                                |                                                                                                                                                           |
|-------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------|
| <i>SPORT</i>                                                                        | – Denotes SPORT mode is selected.                                                                                                                         |
|    | – Denotes ECO mode is selected.                                                                                                                           |
|   | – When lit, seat belt not buckled with vehicle immobilized.<br>– Flashing when vehicle is moving.                                                         |
|  | – When lit, indicates that a maintenance is required.<br>– See your authorized Can-Am Off-road dealer or person of your own choosing for the maintenance. |

| Icons and Indicators                                                              |                                                                                  |
|-----------------------------------------------------------------------------------|----------------------------------------------------------------------------------|
|  | Track kit active (If Equipped)                                                   |
|  | – Denote Front differential locked - Smart-Lok<br>When this option is available. |

## Settings

### Setup

Using the MENU button on the key-pad, select **SETTINGS** and hold to enter setting menu.

OK button can be pressed instead of holding MENU button.

### Maintenance Reset

#### NOTE:

Only when the maintenance icon is displayed.

Using MENU button, select **RES MAINT** and hold to reset maintenance.

### Fault Codes

Available only when at least one code is activated.

Using MENU button, select **CODES** and hold to see active fault codes.

Fault codes will be scrolled on the Lower Display.

### Reset Stats

Using MENU button, select **RESET STAT** and hold to reset.

### Unit Selection

This multifunction gauge is factory preset in Imperial units but it is possible to change it to Metric units.

Using MENU button, select **UNITS** and hold button to change units.

### ***Speed/RPM***

The speed and RPM display can be swapped.

Using MENU button, select **SPEED/RPM** and hold button to invert speed and RPM display.

### ***Setting Clock***

All of the following action must be performed using the MENU button.

1. Select **CLOCK** and hold to change time.
2. Press the button to select clock display.
3. Push and hold the button for 1 second.
4. Press the button to select 12:00 AM PM or 24:00 time base.
5. Push and hold the button or OK button to acknowledge selection.
6. Press the button to change hours (hours flash).
7. Push and hold the button or OK button to acknowledge hour selection
8. Push the button to switch to minutes (minutes flash).
9. Push and hold the button to acknowledge minutes selection.

### ***Setting Brightness***

The brightness of the LCD display can be adjusted.

Using MENU button, select **BRIGHTNESS** and hold MENU button to select the brightness setting.

Using MENU button, adjust brightness then push and hold MENU button to acknowledge selection.

### ***Setting Language***

The gauge display language can be changed.

Refer to an authorized Can-Am Off-road dealer for language availability and to setup the gauge to your preference.

### ***DPS Modes***

The lower display can show which DPS mode is active. Refer to *Tune Your ride*.

# FUEL

## Fuel Requirements

### NOTICE

**Always use fresh gasoline. Gasoline will oxidize; the result is loss of octane, volatile compounds, and the production of gum and varnish deposits which can damage the fuel system.**

Alcohol fuel blending varies by country and region. Your vehicle has been designed to operate using the recommended fuels, however, be aware of the following:

- Use of fuel containing alcohol above the percentage specified by government regulations is not recommended and can result in the following problems in the fuel system components:
  - Starting and operating difficulties.
  - Deterioration of rubber or plastic parts.
  - Corrosion of metal parts.
  - Damage to internal engine parts.
- Inspect frequently for the presence of fuel leaks or other fuel system abnormalities if you suspect the presence of alcohol in gasoline exceeds the current government regulations.
- Alcohol blended fuels attract and hold moisture which may lead to fuel phase separation and can result in engine performance problems or engine damage.

### Recommended Fuel

The gasoline must have the following minimum octane requirements:

|                   |                                                                                                 |
|-------------------|-------------------------------------------------------------------------------------------------|
| 1000R Engines     | Premium unleaded gasoline with an AKI (R+M)/2 octane rating of 91, or a RON octane rating of 95 |
| All Other Engines | Common unleaded gasoline with an AKI (R+M)/2 octane rating of 87, or a RON octane rating of 91  |

Use unleaded gasoline containing **MAXIMUM 10% ethanol.**



### NOTICE

**Never experiment with other fuels. Engine or fuel system damages may occur with the use of an inadequate fuel.**

### NOTICE

**Do NOT use fuel from fuel pumps labeled E85.**

Use of fuel labeled E15 is prohibited by U.S. EPA Regulations.

## Vehicle Fueling Procedure

### **WARNING**

- Fuel is flammable and explosive under certain conditions.
- Never use an open flame to check fuel level.
- Never smoke or allow flame or spark in vicinity.
- Always work in a well-ventilated area.
- Vehicle must be on a level surface to perform fueling.

1. Place vehicle on a level surface.
2. Move the shift lever into PARK position.
3. Stop engine.

### **WARNING**

**Always stop engine before refueling.**

4. Have occupants get out of vehicle.

### **WARNING**

**Do not allow anyone to remain in the vehicle while fueling. If there is a fire or explosion during fueling, a vehicle occupant could be unable to quickly leave the area.**

5. Slowly unscrew the fuel reservoir cap counterclockwise to remove it.

### **WARNING**

**If a differential pressure condition is noticed (whistling sound heard when loosening fuel reservoir cap) have vehicle inspected and/or repaired before further operation.**

6. Insert the spout into the filler neck.
7. Pour fuel slowly so that air can escape from the tank and prevent fuel flow back. Be careful not to spill fuel.

8. Stop filling when the fuel reaches the bottom of filler neck. **Do not overfill.**

### **WARNING**

**Never top up the fuel tank before placing the vehicle in a warm area. As temperature increases, fuel expands and may overflow.**

9. Fully tighten fuel reservoir cap clockwise until you hear a clicking noise.

### **NOTICE**

**Always wipe off any fuel spillage from the vehicle.**

---

# BREAK-IN PERIOD

## Operation During Break-In

A break-in period of 10 operating hours or 300 km (200 mi) is required for the vehicle.

### *Engine*

During the break-in period:

- Avoid full throttle operation.
- Avoid pressing accelerator pedal more than 3/4 of the stroke.
- Avoid sustained accelerations.
- Avoid prolonged cruising speeds.
- Avoid engine overheating.

However, brief accelerations and speed variations contribute to a good break-in.

### *Brakes*

#### **WARNING**

**New brakes will not operate at their maximum efficiency until their break-in is completed. Braking performance may be reduced, so use extra caution.**

**Apply moderate braking force for the 40 to 50 first braking events.**

### *Belt*

A new belt requires a break in period of 50 km (30 mi).

During the break-in period:

- Avoid strong acceleration and deceleration.
- Avoid pulling a load.
- Avoid high speed cruising.

# BASIC PROCEDURES

## Starting the Engine

1. Insert D.E.S.S. key on D.E.S.S. post.
2. Press the brake pedal.

**NOTE:** If shift lever is not set to PARK (P), the brake pedal must be pressed to allow engine starting.

3. Press the engine start button and hold it until the engine starts.

**NOTE:** Do not press the accelerator pedal. If the accelerator pedal is pressed at least 50%, the engine will not start.

4. Release the engine start button immediately when the engine has started.

### NOTICE

**If engine does not start after a few seconds, do not hold the engine start button more than 10 seconds. Refer to *Troubleshooting* section.**

## Waking Up the Electrical System

Press and release the START button for less than half a second and the electrical system will turn ON:

- For 20 seconds, **without** powering any equipment, if the D.E.S.S. key is **NOT** installed on the D.E.S.S. post.
- For 10 minutes, powering equipment, if the D.E.S.S. key is installed on the D.E.S.S. post. The electrical system will shutdown after 20 seconds if the D.E.S.S. key is removed.

### NOTICE

**Waking up the electrical system repeatedly or using electrical equipment will discharge the battery and you may not be able to start the engine.**

## Operating the Shift Lever

1. Apply the brakes and select the desired shift lever position while the engine is at idle.
2. Release the brakes.

### NOTICE

**When changing gear selection, always completely stop the vehicle and apply the brakes prior to shifting. Damage to the gearbox may occur.**

## Choosing the Correct Range (Low or High)

It is important to avoid situations known to make the drive belt slip excessively. The main reason the drive belt will slip is if the gearbox is in high range when it should be in low range.

Pay attention to the following:

### Low Range

Low range should be used whenever:

- Pulling
- Pushing
- Hauling a load
- 4x4 applications
- Mud holes
- Water holes
- Crossing obstacles
- Climbing onto trailer
- Hill climbing

It is also recommended to use low range if driving for prolonged periods at speeds under 24 km/h (15 MPH).

Please refer to *Break-In Period* for drive belt break-in information.

### High Range

High is the default riding range.

### ***Electronic Drive Belt Protection (if available and activated on your model)***

Some vehicles have the electronic drive belt protection function activated.

Refer to your authorized Can-Am dealer for availability and possible activation.

This function is activated when riding at too slow speed for the **High Range**, such as in the following situations:

- Pulling
- Pushing
- Hauling a load
- 4x4 applications
- Mud holes
- Water holes
- Crossing obstacles
- Climbing onto trailer
- Hill climbing

In the above mentioned situations the electronic drive belt protection will help protect the CVT drive belt from being damaged by activating the engine torque limiter. The gauge will also scroll a **LOW GEAR** message, suggesting the operator to immobilize the vehicle and shift to **LOW GEAR**.

### **NOTICE**

**Whenever the electronic drive belt protection is activated, you *MUST* shift in **LOW** range. Refer to *Operating the Shift Lever*.**

### **⚠ WARNING**

**Apply brakes to immobilize vehicle. Put shift lever in reverse (R), and back down the hill, barely releasing brakes to remain at low speed. Do not attempt to turn around. Never coast down hill while vehicle is in neutral. Do not perform hard braking as it increases the risk of tipover.**

## **Stopping the Engine and Parking the Vehicle**

### **⚠ WARNING**

**Avoid parking on steep slope as the vehicle may roll away.**

### **⚠ WARNING**

**Always put the vehicle in **PARK** when stopped or parked to prevent rolling.**

### **⚠ WARNING**

**Avoid parking in places where hot parts can start a fire.**

1. Select the flattest terrain available for parking.
2. Release accelerator pedal and use brakes to completely stop the vehicle.
3. Set shift lever in **PARK** position.
4. Remove the D.E.S.S. key from the D.E.S.S. post or turn the ignition key in **OFF** position.

### **NOTE:**

If you must park on a steep incline or if the vehicle is carrying cargo, block the wheels using rocks or bricks.

## **Tips for Maximizing Drive Belt Durability**

Riding style and conditions have a direct impact on drive belt durability.

Your vehicle features a CVT system design that is optimized to offer the best performance.

The CVT and drive belt have successfully endured thousands of miles of durability tests.

However, to maximize drive belt durability and to prevent premature failures, it is important that the operator understands the limits of a belt driven

CVT system and adapts their riding style and speed accordingly.

If riding in any of the conditions listed below, BRP highly recommends not to constantly hold the throttle wide open (WOT) for more than five (5) minutes.

- High ambient temperatures (above 30 °C (86 °F))
- Heavy loads: Passengers / Heavy cargo
- Heavy drag: Soft sand / Hill climbing / Mud / Using a track kit.

After a few minutes at WOT, partially release the accelerator and allow the CVT to cool down.

For more tips for maximizing the drive belt durability, refer to *Choosing the Correct Range (Low or High)*.

# SPECIAL PROCEDURES

## NOTE:

Component failures resulting from these events are not covered by warranty.

## Fuel Flooded Engine

If the engine does not start and it is fuel-flooded, the drowned mode can be activated to prevent fuel injection and to cut ignition while cranking. Proceed as follows:

1. Install key on D.E.S.S. post.
2. Press completely and HOLD accelerator pedal.
3. Press the engine START button during 10 seconds.
4. Release engine START button.
5. Release accelerator pedal completely.
6. Press the engine START button again to allow starting.

If it does not work:

1. Remove the spark plugs.
2. Crank engine several times.
3. Install new spark plugs if possible or clean and dry spark plugs.

If engine does not start, see an authorized Can-Am Off-road dealer, a repair shop, or a person of your own choosing for maintenance, repair, or replacement.


Please refer to the *US EPA Emission-Related Warranty* contained herein for information about warranty claims.

## What to do if Water is Suspected to be in the CVT

If water is present in the CVT, the engine will accelerate but the vehicle will remain still.

### NOTICE

**Stop the engine and drain the water to avoid damage to the CVT.**

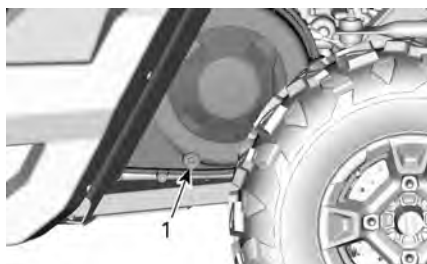

**TYPICAL - LEFT SIDE OF VEHICLE UNDER CARGO BOX**

1. CVT drain

See an authorized Can-Am dealer, a repair shop or person of your choosing to have the CVT inspected and cleaned.

## What to do if Battery is Drained Out

The vehicle can be jump started by using the RED (+) cable to the battery positive pole and the BLACK (-) cable to the vehicle chassis.

### NOTICE

**Do not connect any electrical source to the steering column or components which are in contact with DPS.**

## What to Do if Vehicle Rolled Over

Abrupt maneuvers, sharp turns, side hilling or accident may cause vehicle to rollover.

Should the vehicle be rolled over, it will be necessary to have it transported to an authorized Can-Am Off-road dealer for inspection as soon as possible. **NEVER START THE ENGINE!**

Points to be verified, including but not limited to:

- All fluid levels
- Seat belts, including retractors, buckles and semi-cinching tabs
- Cage and its attachment points

- Steering system
- Suspension and its attachment points.

## **What to do if Vehicle is Submerged**

Should the vehicle become immersed, it will be necessary to have it transported to an authorized Can-Am Off-road dealer as soon as possible.

### ***NOTICE***

**Never start the engine as immersion of the vehicle can cause serious damage to the engine if the correct restart procedure is not followed.**

# TUNE YOUR RIDE

## Suspension Adjustment Guidelines

Your vehicle handling and comfort depend upon suspension adjustments.

### **⚠ WARNING**

**Suspension adjustment could affect vehicle handling. Always take time to familiarize yourself with the vehicle's behavior after any suspension adjustment has been made.**

Choice of suspension adjustments vary with vehicle load, personal preference, riding speed and terrain condition.

The best way to set up the suspension, is to start from factory settings, then customize each adjustment one at a time.

Front and rear adjustments are inter-related. It may be necessary to readjust the rear shock absorbers after adjusting front shock absorbers for instance.

Test run the vehicle under the same conditions; trail, speed, load, etc. Change one adjustment and retest. Proceed methodically until you are satisfied.

## Suspension Factory Settings

### Front Suspension

| Spring Preload   |                       |
|------------------|-----------------------|
| XT-P             | 103.2 mm (4.1 in)     |
| All other models | Cam position 1 (soft) |

| Compression Damping |            |
|---------------------|------------|
| XT-P                | Position 2 |

### Rear Suspension


| Spring Preload   |                       |
|------------------|-----------------------|
| XT-P             | 51.6 mm (2 in)        |
| All other models | Cam position 1 (soft) |

| Compression Damping |            |
|---------------------|------------|
| XT-P                | Position 2 |

## Suspension Adjustments

### *Spring Preload Adjustment*

Following are guidelines to fine-tune suspension. Use suspension adjustment tool provided in the tool kit.

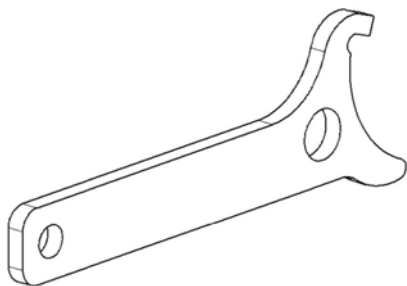

The spring preload affects the ground clearance of the vehicle.

Shorten the spring for a firmer ride and rough riding condition or when pulling a trailer.

Lengthen the spring for a softer ride and smooth riding condition.

### NOTE:

Factory settings are suitable for almost all conditions. Take into consideration that an increase in ground clearance can affect the handling of the vehicle.


### **⚠ WARNING**

The left and right shock adjustment on front or rear suspension must always be set to the same position. Never adjust one shock only. Uneven adjustment can cause poor handling and loss of stability, which could lead to an accident.

Lift the vehicle to adjust spring preload.

### **Shock Absorber with Adjusting Cam**


Adjust by turning adjusting cam.

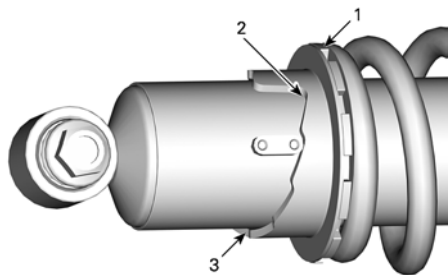


1. Turn adjusting cam
2. Soft adjustment
3. Firm adjustment

### **Shock Absorber with Adjusting Rings**

Adjust spring preload by turning the adjusting rings.

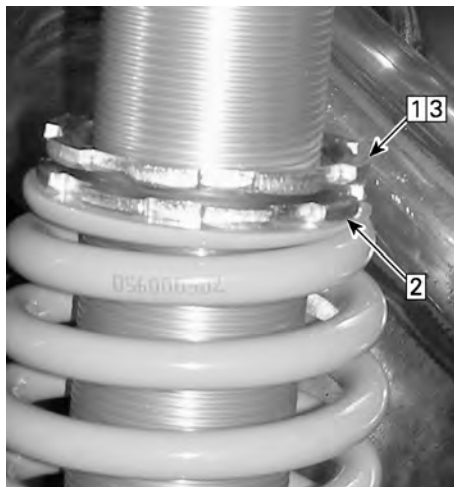

1. Loosen top locking ring
2. Turn adjusting ring accordingly
3. Tighten top locking ring

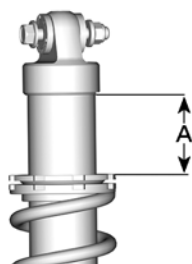

1. Distance to measure

### **DPS Function**

The Dynamic Power Steering (DPS) provides a computer controlled, variable power assist, achieved by an electric motor to optimize the amount of steering input required by the rider.

### **DPS Function**

The Dynamic Power Steering (DPS) provides a computer controlled, variable power assist, achieved by an electric motor to optimize the amount of steering input required by the rider.

## TRANSPORTING THE VEHICLE

When contacting a towing or transporting service, be sure to ask if they have a flatbed trailer, loading ramp or power ramp to safely lift the vehicle and tie-down straps. Ensure the vehicle is properly transported as specified in this section.

### NOTICE

**Do not tow this vehicle — towing can seriously damage the vehicle's drive system.**

### NOTICE

**Avoid using chains to tie the vehicle — they may damage the surface finish or plastic components.**

### WARNING

**To avoid severe injury or death or important components damages.**

- **Never use the winch cable/rope to retain a vehicle during trailering.**
- **Never ride with the winch cable/rope attached to a load or another vehicle.**
- **Only use the winch to help a stuck vehicle (snow, mud, etc.).**
- **Always refer to the winch manufacturer's instruction before pulling loads.**

### WARNING

**Make sure all accessories, cargo and loose objects inside the vehicle are properly secured, or remove it to prevent from failing on the road and creating a hazard for following vehicles.**

### WARNING

**Always transport the vehicle facing forward to avoid damaging the windshield or other components. Parts may detach during transport.**

### WARNING

**Before attempting to mount vehicle onto a platform or a trailer, make sure to respect the following safety precautions.**

### Safety Precautions

|                    |                                                                                                                                                 |
|--------------------|-------------------------------------------------------------------------------------------------------------------------------------------------|
| Carrying equipment | The carrying item (platform or trailer or flat bed) must be of appropriate dimensions and capacity to safely support and transport the vehicle. |
| Hauling vehicle    | Do not exceed vehicle hauling capacity and specifications. Ensure the trailer or platform is properly secured to the hauling vehicle hitch.     |
| Visibility         | Ensure you have a good visibility during the entire maneuver.                                                                                   |
| Terrain            | The hauling vehicle and trailer must be on a leveled surface. Use wheel chocks on trailer and hauling vehicle to avoid any movement.            |
| Ramps              | Use ramps with proper rating and secure ramps to the trailer or platform. Avoid steep ramps.                                                    |

### Safety Precautions

|                       |                                                                                                                                                                                            |
|-----------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Bystanders            | Always make sure bystanders are not close to the vehicle or the trailering equipment while climbing up.                                                                                    |
| Accessories and cargo | Make sure all accessories, cargo and loose objects inside the vehicle are properly secured, or remove it to prevent from failing on the road and creating a hazard for following vehicles. |

## Using Vehicle Power to Climb Onto Trailering Equipment

When vehicle can climb on its own power, proceed as follows;

1. Wear protective gear.
2. Fasten seat belt.
3. Use low gear only (if equipped).
4. If vehicle has 4WD option, use it.
5. When driving remain seated at all times.
6. Ensure proper alignment on rails or platform.
7. Start from a sufficient distance from the trailer to align the vehicle in a straight line with the ramps. Never attempt to turn while getting closer to the ramp. Rear wheels might not be aligned once you get to the ramp and vehicle may fall off.
8. Slowly climb the front wheels onto the ramp to verify alignment.
9. Back off the vehicle, verify ramps are still secure, then proceed at proper speed.
10. Carefully drive vehicle onto platform or trailer. Use sufficient speed to climb without spinning or abruptly accelerating. Avoid

acceleration while on ramps to prevent ramps movement.

11. If trailer is inclined towards front, simply let vehicle roll in without acceleration.
12. Once vehicle is climbed, put shift lever to Park. Apply brake locking mechanism (if equipped).

### CAUTION

**When vehicle cannot move on its own power, or in case overshooting is a risk or if any dangerous condition prevents for embarking on its own power, proceed using a winch.**

## Using a Winch to Pull Vehicle Onto Trailering Equipment

When vehicle cannot climb on its own power, proceed as follows;

### WARNING

**Have the help of an assistant. One person should be in vehicle to have access to vehicle steering, brakes and winch switch, while the other person controls the environment and safety of the maneuver.**

### WARNING

**Ensure the winch hook can be safely attached to a proper anchoring point. Use proper rigging.**

### NOTE:

If vehicle can be started safely, let engine idle during winching to avoid draining the battery.

1. Place shift lever to NEUTRAL (N).
2. If the vehicle is equipped with a winch, use the winch to roll the vehicle on the platform.
3. If the vehicle is not equipped with a winch, proceed as follows:


1. Attach strap to lower front bumper anchor.
2. Attach the strap to the winch cable of the towing vehicle.
3. Pull the vehicle on the flatbed trailer with the winch.
4. Put shift lever to Park. Apply brake locking mechanism (if equipped).

## Securing Vehicle for Transport

### **⚠ WARNING**

**Never use the winch to secure the vehicle during transport.**

1. Remove the key from the vehicle.
2. At rear, secure the vehicle on both sides using a strap around the suspension arm as close to the wheel as possible.
3. At front, secure the vehicle on both sides using a strap around the lower suspension arm as close to the wheel as possible.

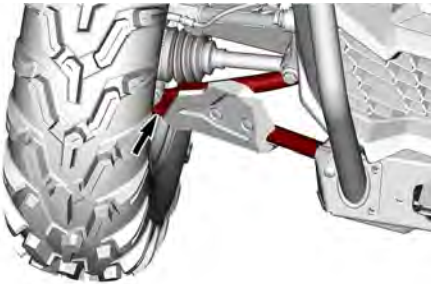

4. Strap the rear tires by using tire towing straps.
5. Firmly attach the rear suspension tie-down straps to both sides of the rear of the trailer with ratchets.
6. Ensure that both the front and rear wheels are firmly attached to the trailer.

## Getting Vehicle Out of Trailer

### **⚠ WARNING**

**Vehicle may have moved during transport. Ensure vehicle is properly aligned with ramps before proceeding.**


### **⚠ WARNING**

**Visibility will be greatly reduced when backing off from the trailer. Have the help of an assistant to ensure proper alignment and safe environment.**

# LIFTING AND SUPPORTING THE VEHICLE

## Front of Vehicle

1. Place vehicle on a flat non slippery ground.
2. Ensure vehicle shift lever is set to PARK.
3. Install an hydraulic jack under the front skid plate.
4. Lift front of vehicle and install a jack stand on each side under frame section.

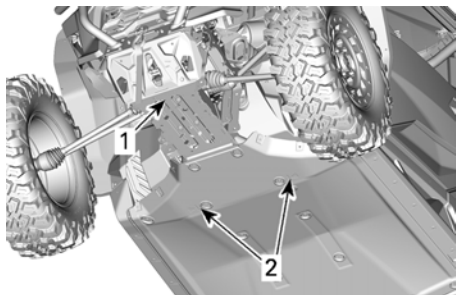


1. Front of vehicle
2. Frame section

5. Lower hydraulic lift and ensure vehicle is supported safely onto both jack stands.

## Rear of Vehicle

1. Place vehicle on a flat non slippery ground.
2. Activate 4WD mode.
3. Ensure vehicle shift lever is set to PARK.
4. Install an hydraulic jack under the skid plate.
5. Lift rear of vehicle and install a jack stand on each side under frame section in front of rear wheel.

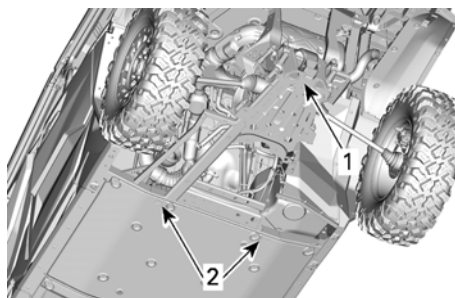

1. Lifting location under skid plate
2. Frame section to install jack stands

6. Lower hydraulic lift and ensure vehicle is supported safely onto both jack stands.

# MAINTENANCE

---

# MAINTENANCE SCHEDULE

Maintenance is very important to keep your vehicle in safe operating condition. The vehicle should be serviced as per the maintenance schedule.

Proper maintenance is the owner's responsibility. A warranty claim may be denied if, among other things, the owner or operator caused the problem through improper maintenance or use.

Perform periodic checks and follow the maintenance schedule. **The maintenance schedule does not exempt the pre-ride inspection.**

## WARNING

**Failure to properly maintain the vehicle according to the maintenance schedule and procedures can make it unsafe to operate.**

## EPA Regulation - Canadian and USA Vehicles

**A repair shop or person of the owner's choosing may maintain, replace, or repair** emission control devices and systems. These instructions do not require components or service by BRP or authorized Can-Am Off-road dealers.

Although an authorized Can-Am Off-road dealer has an in-depth technical knowledge and tools to service your vehicle, the emission-related warranty is not conditioned on the use of an authorized Can-Am Off-road dealer or any other establishment with which BRP has a commercial relationship.

Proper maintenance is the owner's responsibility. A warranty claim may be denied if, among other things, the owner or operator caused the problem through improper maintenance or use.

For emission-related warranty claims, BRP is limiting the diagnosis and repair of emission-related parts to the authorized Can-Am Off-road dealers. For more information, please refer to the *US EPA Emission-Related Warranty* contained in the *Warranty* section.

You must follow the instructions for fuel requirements in the fueling section of this manual. Even if gasoline containing greater than ten volume percent ethanol is readily available, the US EPA issued a prohibition against the use of gasoline containing greater than 10 vol% ethanol that applies to this vehicle. The use of gasoline containing greater than 10 vol% ethanol with this engine may harm the emission control system.

## Air Filter Maintenance Guideline

Air filter maintenance should be adjusted according to riding conditions.

Air filter maintenance must be increased in frequency when riding on snow, dry sand, dirt, gravel or similar conditions which have a high dust or particle dispersion.

Riding in a group in these conditions will require increasing the air filter maintenance frequency further.

### NOTE:

Accessory filters and pre-filter are available for such conditions. Contact an authorized Can-Am off-road dealer for details.

## Severe Duty Use

If your vehicle is used in the following conditions, refer to the *Severe Duty* section of the maintenance schedule.

- Repeated hauling of loads at more than 75% the maximum capacity.
  - The increase workload applied to the drive system accelerates the differentials, gearbox/transmission, and engine oil life. This reduces internal component longevity if not replaced more frequently.
- Driving at excessive speeds for prolonged amount of time.

Commercial/work and rental vehicles must also use the *Severe Duty* maintenance schedule.

Higher than the average use requires more frequent fluid and wear component replacement than trail, recreational, or occasional utility purposes.

## Extreme Cold Condition

An engine that is frequently operated at or below an ambient temperature of -25 °C (-13 °F) will require an increase in service and maintenance schedule.

Any combustion engine operated at these low ambient temperature will collect an increased amount of condensation at every startup/warm-up.

Since the engine is not reaching operating temperatures for extended periods of time, the oil is starting to be strongly diluted with water and gas residue (more water content).

An engine needs to reach operating temperature, in order to be able to evaporate condensate out of the oil.

If daily usage (work or leisure driving cycle) is similar to those mentioned below, BRP strongly recommends changing the oil at least once a month.

Parameters of an increase in service and maintenance schedule:

- Engine not reaching the proper operating temperature during normal daily usage
- Multiple starts and stops without reaching operating temperature
- Short idle periods
- Low RPM driving cycle in short distances without reaching operating temperature.

### NOTE:

BRP strongly recommends the installation of a block heater to help warm up the liquids, this will also help to extend the oil lifetime.

## Deep Mud / Water Use

Whether your vehicle is a X mr model or was accessorized for deep mud / water use, this type of usage requires more frequent maintenance and inspections to ensure debris has not infiltrated mechanical components.

If you regularly ride in deep mud or water, refer to the *Deep Mud / Water* section of the maintenance schedule.

After every ride, be sure to perform the *Post Operation Care for Deep Mud / Water Environment*.

### ***Post Operation Care for Deep Mud / Water Environment***

- Rinse the vehicle and its components with fresh water.
- Clean the CVT air filters.
- Drain the CVT compartment and clean if any water or mud is found.
- Inspect and clean engine air filters and engine air filter housing.
- Clean debris around exhaust pipe and muffler area and the spark arrester.
- Clean radiator.
- Visually inspect for any water accumulation in the vent hoses (fuel tank, gear-box, front differential and rear final drive). If there is water, bring the vehicle to your nearest authorized Can-Am off-road dealer for inspection and servicing of main components related to the vents.
- Clean front and rear shock absorbers to prevent seal from damage by dust or dirt.
- Clean drive shaft bellows and the propeller shaft yokes or boots.

## **Maintenance Schedule**

Make sure to perform proper maintenance at recommended intervals as indicated in the tables.

The maintenance chart intervals are based on three indicators:

- Odometer reading
- Calendar time
- Vehicle hours

Take into account whichever comes first to determine the maintenance threshold.

Your driving habits will determine which indicator you should adhere to. For example:

- Someone who uses their vehicle every other weekend trail riding with friends would most likely follow the **odometer reading** to determine the maintenance interval.
- Someone who uses their vehicle seldomly during the year or only on a few occasions (hunting, camping) would most likely follow the **calendar time** to determine the maintenance interval.
- Someone who uses their vehicle daily/weekly for long periods of time such as agriculture or other work would most likely follow the **vehicle hours** to determine the maintenance interval.

**IMPORTANT:** The following tables show the appropriate maintenance application for the first 3 years. For subsequent years, repeat the same pattern alternatively.

| Regular Maintenance Overview |               |                   |                |
|------------------------------|---------------|-------------------|----------------|
| Calendar Years               | Vehicle Hours | Odometer          | Regular Duty   |
| 1                            | 200           | 3000 km (1900 mi) | <b>A</b>       |
| 2                            | 400           | 6000 km (3700 mi) | <b>A and B</b> |
| 3                            | 600           | 9000 km (5600 mi) | <b>A</b>       |

| Severe Duty and Mud/Water Maintenance Overview |               |                   |                                  |
|------------------------------------------------|---------------|-------------------|----------------------------------|
| Calendar Years                                 | Vehicle Hours | Odometer          | Severe Duty and Deep Mud / Water |
| 0.5                                            | 100           | 1500 km (900 mi)  | <b>A+</b>                        |
| 1                                              | 200           | 3000 km (1900 mi) | <b>A+ and A</b>                  |
| 1.5                                            | 300           | 4500 km (2800 mi) | <b>A+</b>                        |
| 2                                              | 400           | 6000 km (3700 mi) | <b>A+ and A and B</b>            |
| 2.5                                            | 500           | 7500 km (4700 mi) | <b>A+</b>                        |
| 3                                              | 600           | 9000 km (5600 mi) | <b>A+ and A</b>                  |

| REGULAR DUTY                                                                                                                   | A                                                                                                     | B                                                                                                        |
|--------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------|
| <b>A = Adjust</b><br><b>C = Clean</b><br><b>I = Inspect</b><br><b>L = Lubricate</b><br><b>R = Replace</b><br><b>T = Torque</b> | <b>Every year</b><br><b>or</b><br><b>200 hours</b><br><b>or</b><br><b>3000 km</b><br><b>(1900 mi)</b> | <b>Every 2 years</b><br><b>or</b><br><b>400 hours</b><br><b>or</b><br><b>6000 km</b><br><b>(3700 mi)</b> |
| <b>Air and Fuel Delivery</b>                                                                                                   |                                                                                                       |                                                                                                          |
| Engine air filter                                                                                                              | I, C or R                                                                                             |                                                                                                          |
| Air delivery components and function (airbox, throttle body, ducts, clamps)*                                                   | I, C                                                                                                  |                                                                                                          |
| Fuel components and function (fuel tank cap, fuel tank, hoses, clamps, leaks)*                                                 | I                                                                                                     |                                                                                                          |
| Fuel pump pressure                                                                                                             |                                                                                                       | I                                                                                                        |
| <b>Body / Chassis and Accessories</b>                                                                                          |                                                                                                       |                                                                                                          |
| Cage fasteners                                                                                                                 | T                                                                                                     |                                                                                                          |
| Seat belts retractors, buckles and semi-cinching                                                                               | I, C                                                                                                  |                                                                                                          |
| Winch                                                                                                                          | I, C                                                                                                  |                                                                                                          |
| Door latches, hinges and key barrels                                                                                           | L, T                                                                                                  |                                                                                                          |
| <b>Engine and Cooling</b>                                                                                                      |                                                                                                       |                                                                                                          |
| Engine oil and filter                                                                                                          | R                                                                                                     |                                                                                                          |
| Valve clearance (regardless of calendar time)                                                                                  | I, A<br>(V-twin engines)                                                                              | I, A<br>(Single-cyl. engines)                                                                            |
| Spark plugs (regardless of calendar time)                                                                                      |                                                                                                       | R                                                                                                        |
| Engine seals and gaskets                                                                                                       | I                                                                                                     |                                                                                                          |
| Engine cooling components (concentration, level, hose condition, clamps, leaks)*                                               | I, A                                                                                                  |                                                                                                          |
| Engine Coolant                                                                                                                 | <b>R</b><br><b>EVERY 5 YEARS OR 12 000 KM</b><br><b>(7500 MI)</b>                                     |                                                                                                          |
| Radiator                                                                                                                       | C                                                                                                     |                                                                                                          |
| <b>Exhaust and Emissions</b>                                                                                                   |                                                                                                       |                                                                                                          |
| Fuel tank vent breather filter (non-EVAP models)                                                                               | R                                                                                                     |                                                                                                          |
| Canister vent pre-filter (CARB and EVAP models)                                                                                |                                                                                                       | R                                                                                                        |
| Exhaust components (gaskets, pipes, muffler condition, leaks)*                                                                 | I                                                                                                     |                                                                                                          |

| <b>REGULAR DUTY</b>                                                                                                            | <b>A</b>                                                                                              | <b>B</b>                                                                                                 |
|--------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------|
| <b>A = Adjust</b><br><b>C = Clean</b><br><b>I = Inspect</b><br><b>L = Lubricate</b><br><b>R = Replace</b><br><b>T = Torque</b> | <b>Every year</b><br><b>or</b><br><b>200 hours</b><br><b>or</b><br><b>3000 km</b><br><b>(1900 mi)</b> | <b>Every 2 years</b><br><b>or</b><br><b>400 hours</b><br><b>or</b><br><b>6000 km</b><br><b>(3700 mi)</b> |
| Muffler spark arrester                                                                                                         | C                                                                                                     |                                                                                                          |
| Debris around exhaust pipe and muffler area                                                                                    | C                                                                                                     |                                                                                                          |
| <b>Brake</b>                                                                                                                   |                                                                                                       |                                                                                                          |
| Brake components and function (oil level, brake pads, brake discs, calipers, lines, master cylinder)*                          | I, C, L, A                                                                                            |                                                                                                          |
| Brake fluid                                                                                                                    | <b>R</b><br><b>EVERY 2 YEARS</b>                                                                      |                                                                                                          |
| <b>Drive</b>                                                                                                                   |                                                                                                       |                                                                                                          |
| Gearbox oil                                                                                                                    | Replace at first 3000 km (1900 mi) and at 6000 km (3700 mi), then follow the regular schedule         |                                                                                                          |
| Gearbox oil                                                                                                                    | I, A                                                                                                  | R                                                                                                        |
| Front differential oil                                                                                                         | I, A                                                                                                  | R                                                                                                        |
| Rear final drive oil (Single-cyl. engines)                                                                                     | I, A                                                                                                  | R                                                                                                        |
| Tires (wear, pressure)                                                                                                         | I, A                                                                                                  |                                                                                                          |
| Wheel lug nuts                                                                                                                 | T                                                                                                     |                                                                                                          |
| Wheel beadlock bolts (if equipped)                                                                                             | T                                                                                                     |                                                                                                          |
| Drive components and function*                                                                                                 | I                                                                                                     |                                                                                                          |
| <b>Controls</b>                                                                                                                |                                                                                                       |                                                                                                          |
| Gearbox position lever operation                                                                                               | I, A                                                                                                  |                                                                                                          |
| Throttle operation                                                                                                             | I                                                                                                     |                                                                                                          |
| <b>Continuously Variable Transmission (CVT)</b>                                                                                |                                                                                                       |                                                                                                          |
| Rollers in driven pulley (Single-cyl. engines)                                                                                 | I                                                                                                     |                                                                                                          |
| CVT components (air filter, drive and driven pulley cleaning, drive belt, drive pulley rollers and hub bearing)*               | I, C, L                                                                                               |                                                                                                          |
| <b>Electrical</b>                                                                                                              |                                                                                                       |                                                                                                          |
| Battery connections and condition                                                                                              | I, C                                                                                                  |                                                                                                          |
| Fault codes module and applicable software updates                                                                             | I                                                                                                     |                                                                                                          |

| REGULAR DUTY                                                                                                                   | A                                                                                                     | B                                                                                                        |
|--------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------|
| <b>A = Adjust</b><br><b>C = Clean</b><br><b>I = Inspect</b><br><b>L = Lubricate</b><br><b>R = Replace</b><br><b>T = Torque</b> | <b>Every year</b><br><b>or</b><br><b>200 hours</b><br><b>or</b><br><b>3000 km</b><br><b>(1900 mi)</b> | <b>Every 2 years</b><br><b>or</b><br><b>400 hours</b><br><b>or</b><br><b>6000 km</b><br><b>(3700 mi)</b> |
| Vehicle Speed Sensor (VSS)                                                                                                     |                                                                                                       | C                                                                                                        |
| Operation of control switches and lighting*                                                                                    | I                                                                                                     |                                                                                                          |
| Steering                                                                                                                       |                                                                                                       |                                                                                                          |
| Steering components and function*                                                                                              | I                                                                                                     |                                                                                                          |
| Suspension                                                                                                                     |                                                                                                       |                                                                                                          |
| Suspension components and function*                                                                                            | I, C, L, T                                                                                            |                                                                                                          |
| Stabilizer bar and suspension arm bushings<br>(models without double-bonded bushings)                                          | <b>I, L</b><br><b>Recommended at</b><br><b>every 1000 km</b><br><b>(620 mi)</b>                       |                                                                                                          |

\* For an extensive list of maintenance actions to be performed, refer to your local dealership.

| <b>SEVERE DUTY</b>                                                                                                             | <b>A+</b>                                                                                                | <b>A</b>                                                                                              | <b>B</b>                                                                                                 |
|--------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------|
| <b>A = Adjust</b><br><b>C = Clean</b><br><b>I = Inspect</b><br><b>L = Lubricate</b><br><b>R = Replace</b><br><b>T = Torque</b> | <b>Every 6 months</b><br><b>or</b><br><b>100 hours</b><br><b>or</b><br><b>1500 km</b><br><b>(900 mi)</b> | <b>Every year</b><br><b>or</b><br><b>200 hours</b><br><b>or</b><br><b>3000 km</b><br><b>(1900 mi)</b> | <b>Every 2 years</b><br><b>or</b><br><b>400 hours</b><br><b>or</b><br><b>6000 km</b><br><b>(3700 mi)</b> |
| <b>Air and Fuel Delivery</b>                                                                                                   |                                                                                                          |                                                                                                       |                                                                                                          |
| Engine air filter                                                                                                              | I, C                                                                                                     | R                                                                                                     |                                                                                                          |
| Air delivery components and function (airbox, throttle body, ducts, clamps)*                                                   | I, C                                                                                                     |                                                                                                       |                                                                                                          |
| Fuel components and function (fuel tank cap, fuel tank, hoses, clamps, leaks)*                                                 |                                                                                                          | I                                                                                                     |                                                                                                          |
| Fuel pump pressure                                                                                                             |                                                                                                          |                                                                                                       | I                                                                                                        |
| <b>Body / Chassis and Accessories</b>                                                                                          |                                                                                                          |                                                                                                       |                                                                                                          |
| Cage fasteners                                                                                                                 |                                                                                                          | T                                                                                                     |                                                                                                          |
| Seat belts retractors, buckles and semi-cinching                                                                               |                                                                                                          | I, C                                                                                                  |                                                                                                          |
| Winch                                                                                                                          | I, C                                                                                                     |                                                                                                       |                                                                                                          |
| Door latches, hinges and key barrels                                                                                           |                                                                                                          | L, T                                                                                                  |                                                                                                          |
| <b>Engine and Cooling</b>                                                                                                      |                                                                                                          |                                                                                                       |                                                                                                          |
| Engine oil and filter                                                                                                          | R                                                                                                        |                                                                                                       |                                                                                                          |
| Valve clearance (regardless of calendar time)                                                                                  |                                                                                                          | I, A<br>(V-twin engines)                                                                              | I, A<br>(Single-cyl. engines)                                                                            |
| Spark plugs (regardless of calendar time)                                                                                      |                                                                                                          |                                                                                                       | R                                                                                                        |
| Engine seals and gaskets                                                                                                       |                                                                                                          | I                                                                                                     |                                                                                                          |
| Engine cooling components (concentration, level, hose condition, clamps, leaks)*                                               |                                                                                                          | I, A                                                                                                  |                                                                                                          |
| Engine coolant                                                                                                                 | <b>R</b><br><b>EVERY 5 YEARS OR 12 000 KM (7500 MI)</b>                                                  |                                                                                                       |                                                                                                          |
| Radiator                                                                                                                       |                                                                                                          | C                                                                                                     |                                                                                                          |
| <b>Exhaust and Emissions</b>                                                                                                   |                                                                                                          |                                                                                                       |                                                                                                          |
| Fuel tank vent breather filter (Non-EVAP models)                                                                               |                                                                                                          | R                                                                                                     |                                                                                                          |

| SEVERE DUTY                                                                                                      | A+                                                                                           | A                                                           | B                                                              |
|------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------|-------------------------------------------------------------|----------------------------------------------------------------|
| A = Adjust<br>C = Clean<br>I = Inspect<br>L = Lubricate<br>R = Replace<br>T = Torque                             | Every 6 months<br>or<br>100 hours<br>or<br>1500 km<br>(900 mi)                               | Every year<br>or<br>200 hours<br>or<br>3000 km<br>(1900 mi) | Every 2 years<br>or<br>400 hours<br>or<br>6000 km<br>(3700 mi) |
| Canister vent pre-filter (CARB and EVAP models)                                                                  |                                                                                              |                                                             | R                                                              |
| Exhaust components (gasket, pipes, muffler condition, leaks)*                                                    |                                                                                              | I                                                           |                                                                |
| Muffler spark arrester                                                                                           | C                                                                                            |                                                             |                                                                |
| Debris around exhaust pipe and muffler area                                                                      | C                                                                                            |                                                             |                                                                |
| Brake                                                                                                            |                                                                                              |                                                             |                                                                |
| Brake components and function (fluid level, brake pads, brake discs, calipers, lines and master cylinder)*       | I, C, A                                                                                      | C, L                                                        |                                                                |
| Brake fluid                                                                                                      | R<br>EVERY 2 YEARS                                                                           |                                                             |                                                                |
| Drive                                                                                                            |                                                                                              |                                                             |                                                                |
| Gearbox oil and oil filter                                                                                       | Replace at first 1500 km (900 mi) and at 3000 km (1900 mi), then follow the regular schedule |                                                             |                                                                |
| Gearbox oil and oil filter                                                                                       | I, A                                                                                         | R                                                           |                                                                |
| Front differential oil                                                                                           | I, A                                                                                         | R                                                           |                                                                |
| Rear final drive oil (Single-cyl. engines)                                                                       | I, A                                                                                         | R                                                           |                                                                |
| Tires (wear, pressure)                                                                                           | I, A                                                                                         |                                                             |                                                                |
| Wheel lug nuts                                                                                                   | T                                                                                            |                                                             |                                                                |
| Wheel beadlock bolts (if equipped)                                                                               |                                                                                              | T                                                           |                                                                |
| Drive components and function*                                                                                   | I                                                                                            |                                                             |                                                                |
| Controls                                                                                                         |                                                                                              |                                                             |                                                                |
| Gearbox position lever operation                                                                                 |                                                                                              | I, A                                                        |                                                                |
| Throttle operation                                                                                               |                                                                                              | I                                                           |                                                                |
| Continuously Variable Transmission (CVT)                                                                         |                                                                                              |                                                             |                                                                |
| Rollers in driven pulley (Single-cyl. engines)                                                                   |                                                                                              | I                                                           |                                                                |
| CVT components (air filter, drive and driven pulley cleaning, drive belt, drive pulley rollers and hub bearing)* |                                                                                              | I, C, L                                                     |                                                                |

| <b>SEVERE DUTY</b>                                                                                                             | <b>A+</b>                                                                                      | <b>A</b>                                                                                    | <b>B</b>                                                                                       |
|--------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------|
| <b>A = Adjust</b><br><b>C = Clean</b><br><b>I = Inspect</b><br><b>L = Lubricate</b><br><b>R = Replace</b><br><b>T = Torque</b> | <b>Every 6 months</b><br><b>or</b><br><b>100 hours</b><br><b>or</b><br><b>1500 km (900 mi)</b> | <b>Every year</b><br><b>or</b><br><b>200 hours</b><br><b>or</b><br><b>3000 km (1900 mi)</b> | <b>Every 2 years</b><br><b>or</b><br><b>400 hours</b><br><b>or</b><br><b>6000 km (3700 mi)</b> |
| <b>Electrical</b>                                                                                                              |                                                                                                |                                                                                             |                                                                                                |
| Battery connections and condition                                                                                              |                                                                                                | <b>I, C</b>                                                                                 |                                                                                                |
| Fault codes module and applicable software updates                                                                             |                                                                                                | <b>I</b>                                                                                    |                                                                                                |
| Vehicle Speed Sensor (VSS)<br>(Single-cyl. engines)                                                                            |                                                                                                | <b>C</b>                                                                                    |                                                                                                |
| Operation of control switches and lighting*                                                                                    |                                                                                                | <b>I</b>                                                                                    |                                                                                                |
| <b>Steering</b>                                                                                                                |                                                                                                |                                                                                             |                                                                                                |
| Steering components and function*                                                                                              | <b>I</b>                                                                                       |                                                                                             |                                                                                                |
| <b>Suspension</b>                                                                                                              |                                                                                                |                                                                                             |                                                                                                |
| Suspension components and function*                                                                                            | <b>I, C, L</b>                                                                                 | <b>T</b>                                                                                    |                                                                                                |
| Stabilizer bar and suspension arm bushings (models without double-bonded bushings)                                             | <b>I, L</b><br><b>Recommend</b><br><b>ed at every</b><br><b>1000 km (620 mi)</b>               |                                                                                             |                                                                                                |

\* For an extensive list of maintenance actions to be performed, refer to your local dealership.

| DEEP MUD / WATER                                                                                                               | A+                                                                                                       | A                                                                                                     | B                                                                                                        |
|--------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------|
| <b>A = Adjust</b><br><b>C = Clean</b><br><b>I = Inspect</b><br><b>L = Lubricate</b><br><b>R = Replace</b><br><b>T = Torque</b> | <b>Every 6 months</b><br><b>or</b><br><b>100 hours</b><br><b>or</b><br><b>1500 km</b><br><b>(900 mi)</b> | <b>Every year</b><br><b>or</b><br><b>200 hours</b><br><b>or</b><br><b>3000 km</b><br><b>(1900 mi)</b> | <b>Every 2 years</b><br><b>or</b><br><b>400 hours</b><br><b>or</b><br><b>6000 km</b><br><b>(3700 mi)</b> |
| <b>Air and Fuel Delivery</b>                                                                                                   |                                                                                                          |                                                                                                       |                                                                                                          |
| Engine air filter                                                                                                              | I, C                                                                                                     | R                                                                                                     |                                                                                                          |
| Air delivery components and function (airbox, throttle body, ducts, clamps)*                                                   | I, C                                                                                                     |                                                                                                       |                                                                                                          |
| Fuel components and function (fuel tank cap, fuel tank, hoses, clamps, leaks)*                                                 |                                                                                                          | I                                                                                                     |                                                                                                          |
| Fuel pump pressure                                                                                                             |                                                                                                          |                                                                                                       | I                                                                                                        |
| <b>Body / Chassis and Accessories</b>                                                                                          |                                                                                                          |                                                                                                       |                                                                                                          |
| Cage fasteners                                                                                                                 |                                                                                                          | T                                                                                                     |                                                                                                          |
| Seat belts retractors, buckles and semi-cinching                                                                               |                                                                                                          | I, C                                                                                                  |                                                                                                          |
| Winch                                                                                                                          | I, C                                                                                                     |                                                                                                       |                                                                                                          |
| Door latches, hinges and key barrels                                                                                           |                                                                                                          | L, T                                                                                                  |                                                                                                          |
| <b>Engine and Cooling</b>                                                                                                      |                                                                                                          |                                                                                                       |                                                                                                          |
| Engine oil and filter                                                                                                          | I, A                                                                                                     | R                                                                                                     |                                                                                                          |
| Valve clearance (regardless of calendar time)                                                                                  |                                                                                                          | I, A<br>(V-twin engines)                                                                              | I, A<br>(Single-cyl. engines)                                                                            |
| Spark plugs (regardless of calendar time)                                                                                      |                                                                                                          |                                                                                                       | R                                                                                                        |
| Engine seals and gaskets                                                                                                       |                                                                                                          | I                                                                                                     |                                                                                                          |
| Engine cooling components (concentration, level, hose condition, clamps, leaks)*                                               |                                                                                                          | I, A                                                                                                  |                                                                                                          |
| Coolant                                                                                                                        | <b>R</b><br><b>EVERY 5 YEARS OR 12 000 KM (7500 MI)</b>                                                  |                                                                                                       |                                                                                                          |
| Radiator                                                                                                                       | C                                                                                                        |                                                                                                       |                                                                                                          |
| <b>Exhaust and Emissions</b>                                                                                                   |                                                                                                          |                                                                                                       |                                                                                                          |
| Fuel tank vent breather filter (non-EVAP models)                                                                               |                                                                                                          | R                                                                                                     |                                                                                                          |

| DEEP MUD / WATER                                                                                                 | A+                                                                                           | A                                                           | B                                                              |
|------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------|-------------------------------------------------------------|----------------------------------------------------------------|
| A = Adjust<br>C = Clean<br>I = Inspect<br>L = Lubricate<br>R = Replace<br>T = Torque                             | Every 6 months<br>or<br>100 hours<br>or<br>1500 km<br>(900 mi)                               | Every year<br>or<br>200 hours<br>or<br>3000 km<br>(1900 mi) | Every 2 years<br>or<br>400 hours<br>or<br>6000 km<br>(3700 mi) |
| Canister vent pre-filter (CARB and EVAP models)                                                                  |                                                                                              |                                                             | R                                                              |
| Exhaust components (gasket, pipes, muffler condition, leaks)*                                                    | I                                                                                            |                                                             |                                                                |
| Muffler spark arrester                                                                                           | C                                                                                            |                                                             |                                                                |
| Debris around exhaust pipe and muffler area                                                                      | C                                                                                            |                                                             |                                                                |
| Brake                                                                                                            |                                                                                              |                                                             |                                                                |
| Brake components and function (fluid level, brake pads, brake discs, calipers, lines and master cylinder)*       | I, C, A                                                                                      | C, L                                                        |                                                                |
| Brake fluid                                                                                                      | R<br>EVERY 2 YEARS                                                                           |                                                             |                                                                |
| Drive                                                                                                            |                                                                                              |                                                             |                                                                |
| Gearbox oil and oil filter                                                                                       | Replace at first 1500 km (900 mi) and at 3000 km (1900 mi), then follow the regular schedule |                                                             |                                                                |
| Gearbox oil and oil filter                                                                                       | I, A                                                                                         |                                                             | R                                                              |
| Front differential oil                                                                                           | I, A                                                                                         |                                                             | R                                                              |
| Rear final drive oil (Single-cyl. engines)                                                                       | I, A                                                                                         |                                                             | R                                                              |
| Tires (wear, pressure)                                                                                           | I, A                                                                                         |                                                             |                                                                |
| Wheel lug nuts                                                                                                   | T                                                                                            |                                                             |                                                                |
| Wheel beadlock bolts (if equipped)                                                                               |                                                                                              | T                                                           |                                                                |
| Drive components and function*                                                                                   | I                                                                                            |                                                             |                                                                |
| Controls                                                                                                         |                                                                                              |                                                             |                                                                |
| Gearbox position lever operation                                                                                 |                                                                                              | I,A                                                         |                                                                |
| Throttle operation                                                                                               | I                                                                                            |                                                             |                                                                |
| Continuously Variable Transmission (CVT)                                                                         |                                                                                              |                                                             |                                                                |
| Rollers in driven pulley (Single-cyl. engines)                                                                   |                                                                                              | I                                                           |                                                                |
| CVT components (air filter, drive and driven pulley cleaning, drive belt, drive pulley rollers and hub bearing)* |                                                                                              | I, C, L                                                     |                                                                |

| DEEP MUD / WATER                                                                                                               | A+                                                                                                       | A                                                                                                     | B                                                                                                        |
|--------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------|
| <b>A = Adjust</b><br><b>C = Clean</b><br><b>I = Inspect</b><br><b>L = Lubricate</b><br><b>R = Replace</b><br><b>T = Torque</b> | <b>Every 6 months</b><br><b>or</b><br><b>100 hours</b><br><b>or</b><br><b>1500 km</b><br><b>(900 mi)</b> | <b>Every year</b><br><b>or</b><br><b>200 hours</b><br><b>or</b><br><b>3000 km</b><br><b>(1900 mi)</b> | <b>Every 2 years</b><br><b>or</b><br><b>400 hours</b><br><b>or</b><br><b>6000 km</b><br><b>(3700 mi)</b> |
| <b>Electrical</b>                                                                                                              |                                                                                                          |                                                                                                       |                                                                                                          |
| Battery connections and condition                                                                                              |                                                                                                          | I, C                                                                                                  |                                                                                                          |
| Fault codes module and applicable software updates                                                                             |                                                                                                          | I                                                                                                     |                                                                                                          |
| Vehicle speed sensor (VSS)<br>(Mono-cyl. engines)                                                                              |                                                                                                          | C                                                                                                     |                                                                                                          |
| Operation of control switches and lighting*                                                                                    |                                                                                                          | I                                                                                                     |                                                                                                          |
| <b>Steering</b>                                                                                                                |                                                                                                          |                                                                                                       |                                                                                                          |
| Steering components and function*                                                                                              | I                                                                                                        |                                                                                                       |                                                                                                          |
| <b>Suspension</b>                                                                                                              |                                                                                                          |                                                                                                       |                                                                                                          |
| Suspension components and function*                                                                                            | I, C, L                                                                                                  | T                                                                                                     |                                                                                                          |
| Stabilizer bar and suspension arm bushings (models without double-bonded bushings)                                             | <b>I, L</b><br><b>Recommend</b><br><b>ed at every</b><br><b>1000 km (620</b><br><b>mi)</b>               |                                                                                                       |                                                                                                          |

\* For an extensive list of maintenance actions to be performed, refer to your local dealership.

## Maintenance Records

Send photocopy of maintenance record to BRP if needed.

| Pre-delivery                                                                |                        |
|-----------------------------------------------------------------------------|------------------------|
| Serial number: _____                                                        | Signature/Print: _____ |
| Mileage / km: _____                                                         |                        |
| Hours: _____                                                                |                        |
| Date: _____                                                                 |                        |
| Dealer no: _____                                                            |                        |
| Notes: _____                                                                |                        |
| _____                                                                       |                        |
| Refer to vehicle Pre-Delivery Bulletin for detailed installation procedures |                        |

| FIRST inspection                                                                           |                        |
|--------------------------------------------------------------------------------------------|------------------------|
| Mileage / km: _____                                                                        | Signature/Print: _____ |
| Hours: _____                                                                               |                        |
| Date: _____                                                                                |                        |
| Dealer no: _____                                                                           |                        |
| Notes: _____                                                                               |                        |
| _____                                                                                      |                        |
| _____                                                                                      |                        |
| For maintenance schedule refer to Maintenance Information section of this operator's guide |                        |

Service

Mileage / km:

\_\_\_\_\_

Hours:

\_\_\_\_\_

Date:

\_\_\_\_\_

Dealer no:

\_\_\_\_\_

Notes:

\_\_\_\_\_

\_\_\_\_\_

Signature/Print:

For maintenance schedule refer to Maintenance Information section of this operator's guide

Service

Mileage / km:

\_\_\_\_\_

Hours:

\_\_\_\_\_

Date:

\_\_\_\_\_

Dealer no:

\_\_\_\_\_

Notes:

\_\_\_\_\_

\_\_\_\_\_

Signature/Print:

For maintenance schedule refer to Maintenance Information section of this operator's guide

Service

Mileage / km:

\_\_\_\_\_

Hours:

\_\_\_\_\_

Date:

\_\_\_\_\_

Dealer no:

\_\_\_\_\_

Notes:

\_\_\_\_\_

\_\_\_\_\_

Signature/Print:

For maintenance schedule refer to Maintenance Information section of this operator's guide

| Service                                                                                         |                                                |
|-------------------------------------------------------------------------------------------------|------------------------------------------------|
| Mileage / km: _____<br>Hours: _____<br>Date: _____<br>Dealer no: _____<br>Notes: _____<br>_____ | Signature/Print: _____<br><br><br><br><br><br> |
| For maintenance schedule refer to Maintenance Information section of this operator's guide      |                                                |

| Service                                                                                         |                                                |
|-------------------------------------------------------------------------------------------------|------------------------------------------------|
| Mileage / km: _____<br>Hours: _____<br>Date: _____<br>Dealer no: _____<br>Notes: _____<br>_____ | Signature/Print: _____<br><br><br><br><br><br> |
| For maintenance schedule refer to Maintenance Information section of this operator's guide      |                                                |

| Service                                                                                         |                                                |
|-------------------------------------------------------------------------------------------------|------------------------------------------------|
| Mileage / km: _____<br>Hours: _____<br>Date: _____<br>Dealer no: _____<br>Notes: _____<br>_____ | Signature/Print: _____<br><br><br><br><br><br> |
| For maintenance schedule refer to Maintenance Information section of this operator's guide      |                                                |

Service

|               |                  |
|---------------|------------------|
| Mileage / km: | Signature/Print: |
| Hours:        |                  |
| Date:         |                  |
| Dealer no:    |                  |
| Notes:        |                  |
|               |                  |

For maintenance schedule refer to Maintenance Information section of this operator's guide

Service

|               |                  |
|---------------|------------------|
| Mileage / km: | Signature/Print: |
| Hours:        |                  |
| Date:         |                  |
| Dealer no:    |                  |
| Notes:        |                  |
|               |                  |

For maintenance schedule refer to Maintenance Information section of this operator's guide

Service

|               |                  |
|---------------|------------------|
| Mileage / km: | Signature/Print: |
| Hours:        |                  |
| Date:         |                  |
| Dealer no:    |                  |
| Notes:        |                  |
|               |                  |

For maintenance schedule refer to Maintenance Information section of this operator's guide

| Service                                                                                         |                                                |
|-------------------------------------------------------------------------------------------------|------------------------------------------------|
| Mileage / km: _____<br>Hours: _____<br>Date: _____<br>Dealer no: _____<br>Notes: _____<br>_____ | Signature/Print: _____<br><br><br><br><br><br> |
| For maintenance schedule refer to Maintenance Information section of this operator's guide      |                                                |

| Service                                                                                         |                                                |
|-------------------------------------------------------------------------------------------------|------------------------------------------------|
| Mileage / km: _____<br>Hours: _____<br>Date: _____<br>Dealer no: _____<br>Notes: _____<br>_____ | Signature/Print: _____<br><br><br><br><br><br> |
| For maintenance schedule refer to Maintenance Information section of this operator's guide      |                                                |

| Service                                                                                         |                                                |
|-------------------------------------------------------------------------------------------------|------------------------------------------------|
| Mileage / km: _____<br>Hours: _____<br>Date: _____<br>Dealer no: _____<br>Notes: _____<br>_____ | Signature/Print: _____<br><br><br><br><br><br> |
| For maintenance schedule refer to Maintenance Information section of this operator's guide      |                                                |

# MAINTENANCE PROCEDURES

This section includes instructions for basic maintenance procedures.

Due to the complexity of some of the maintenance procedures, good mechanical skills are required.

If you are not comfortable with these procedures, do not hesitate to contact an authorized Can-Am Off-road dealer, a repair shop or a person of your own choosing.

## **WARNING**

Unless otherwise indicated, always turn ignition switch to the OFF position before performing any maintenance and remove key.

## **WARNING**

Should removal of a locking device be required (e.g. lock tab, self-locking fastener, etc.), always replace it with a new one.

## Accessing the Maintenance Components

### *Front Service Cover*

The front service cover gives an access to the following components:

- Brake Reservoirs
- Front Headlights Connector

1. To open the front service cover, push on the button.




2. To close the front service cover, push on it downwards until it clips



### *Rear Service Cover*

The rear service cover gives an access to the coolant tank.

1. Turn the quarter-turn lock counter-clockwise and remove the rear service cover.

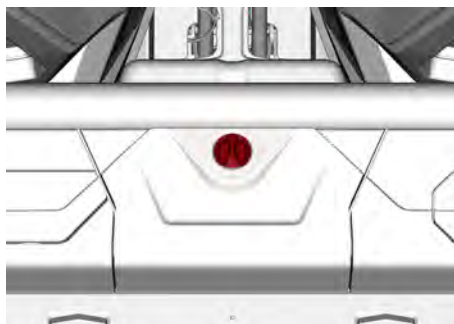

2. Install the rear service cover back in place and turn the quarter-turn lock clockwise.

**NOTE:** Make sure the rear service cover is correctly installed and locked.

### *Engine Service Cover*

The engine service cover gives an access to the following components:

- Engine oil filter
- Engine front spark plug.


1. Remove the seats.

**NOTE:** On MAX models, remove the rear passenger seats.


2. Remove the plastic rivets and the dart.
3. Remove the engine service cover.

**NOTE:**

If installed, no need to remove the acoustic panel from the engine service cover.

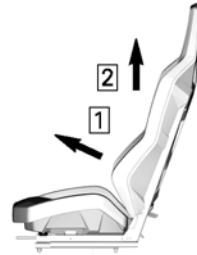


1. Pull toward the front
2. Lift

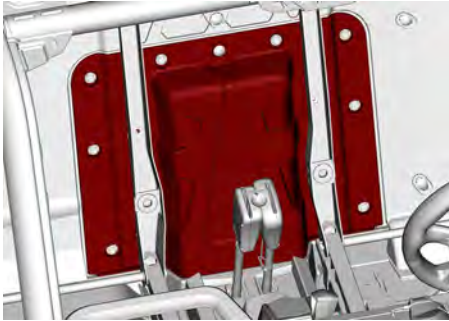

4. The installation is the reverse of the removal procedure.

**Seat Cushion and Backrest**

1. Remove the seat cushion by lifting the front up and pulling toward the front.

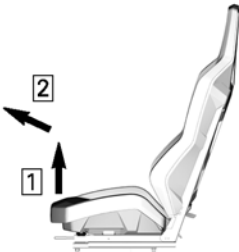

1. Lift front of seat
2. Pull toward the front

2. Remove the backrest by pulling the lower part toward the front and lifting up.

**Engine Air Filter**

**NOTICE**

Never modify the air intake system. Otherwise, engine performance degradation or damage can occur. The engine is calibrated to operate specifically with these components.

**Engine Air Filter Replacement Guideline**

Engine air filter inspection and replacement frequency should be adjusted according to riding conditions as it is critical to ensure proper engine performance and life span.

Under the following severe riding conditions, the inspection and replacement frequency must be increased:

- Riding on dry sand.
- Riding on dry dirt covered surfaces.
- Riding on dry gravel trails or similar conditions.
- Riding in areas with high concentration of seeds or crop husks.

- Riding in severe snow conditions.

## NOTICE


**When riding in dusty conditions or sand, the air box needs to be cleaned before every ride.**

### NOTE:

Riding in a group, under these conditions, increases the frequency of the air filter maintenance.

### *Removing the Engine Air Filter*

1. Remove the air filter access door by unscrewing the quarter-turn fastener.

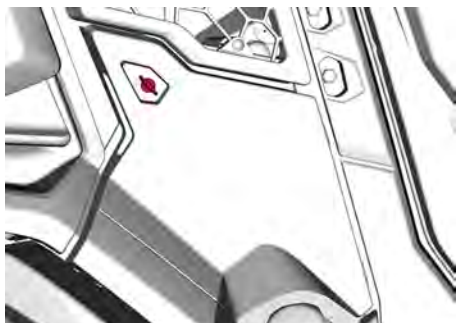

2. Unlatch the air filter cover and remove the air filter.



1. Air filter cover
2. Latches
3. Duckbill valve
3. The filter fits tightly over the outlet tube and there will be some initial resistance.

1. Gently move the end of the filter back and forth to break the seal.
2. Rotate while pulling straight out.
3. Avoid knocking the filter against the housing.

### *Cleaning the Engine Air Filter*

1. Inspect the filter for any signs of leaks. A streak of dust on the clean side of the filter is a telltale sign. Replace filter if there is any damages. Eliminate any source of air leaks before installing a new filter.
2. Clean engine air filter by tapping out heavy dust from paper element, this will allow dirt and dust to get out of the paper filter.

## NOTICE

**It is not recommended to blow compressed air on the paper element; this could damage the paper fibers and reduce its filtration ability when used in dusty environments. If engine air filter is too dirty and cannot be cleaned following the recommended procedure, it should be replaced.**


3. Inspect air filter housing for cleanliness. Clean if necessary.
4. Use a clean damp cloth to wipe both the filter sealing surface and the inside of the inlet tube. Ensure that the inlet tube sealing area is undamaged.

### *Duckbill Valve Cleaning*

### *Installing the Engine Air Filter*

1. Insert the filter carefully.
  1. Seat the filter by hand, making certain it is inserted completely into the air cleaner housing.
  2. Apply pressure by hand on the outer rim of the filter, not the flexible center.

2. Inspect and carefully clean gasket in the groove of the cover. Replace if damaged.
3. Secure air filter cover with latches.

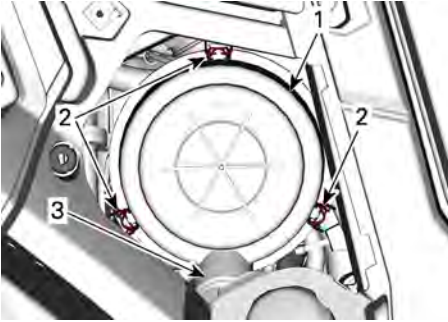

1. Air filter cover
2. Latches
3. Duckbill valve
4. Reinstall the air filter access door and secure it with the quarter-turn screw.

## CVT Air Filter

### CVT Air Filter Replacement Guideline

CVT air filter inspection and replacement frequency should be adjusted according to riding conditions as it is critical to ensure proper engine performance and life span.

Under the following severe riding conditions, the inspection and replacement frequency must be increased:

- Riding on dry sand.
- Riding on dry dirt covered surfaces.
- Riding on dry gravel trails or similar conditions.
- Riding in muddy conditions.
- Riding in areas with high concentration of seeds or crop husks.

- Riding in severe snow conditions.

### NOTICE


**When riding in dusty conditions or sand, the air filter needs to be cleaned before every ride.**

### NOTE:

Riding in a group, under these conditions, increases the frequency of the air filter maintenance.

### Removing the CVT Air Filter

1. Remove fasteners

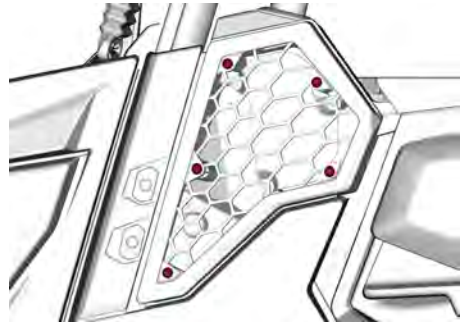

2. Remove the CVT air filter.

### Inspecting and Cleaning the CVT Air Filter

1. Inspect filter and replace if damaged.
2. Remove the seals.
3. Clean filter and seals using a solution of soft soap and water, then rinse.
4. Gently shake off excess water and allow filter and seals to dry at room temperature.
5. Clean inside the CVT air inlet with a vacuum cleaner.

### Installing the CVT Air Filter

1. Install seals in CVT filter. Make sure the upper ends of the seals touch and there is a gap at the bottom to allow water to drain.



1. Seal touching
2. Gap
2. Reinstall CVT air filter.
3. Reinstall fasteners.

| Tightening Torque              |                                                           |
|--------------------------------|-----------------------------------------------------------|
| CVT air filter retaining screw | $3.5 \pm 0.5 \text{ Nm}$<br>( $31 \pm 4 \text{ lbf-in}$ ) |

## Evaporative Emission System Pre-Filter (if Equipped)


### Removing the Evaporative Emission System Pre-Filter

1. Tilt the cargo box.

 **WARNING**

**Make sure to secure the cargo box in place before doing anything under it.**

2. Remove the hose clamps.
3. Remove the retaining screw.
4. Remove the pre-filter assembly.

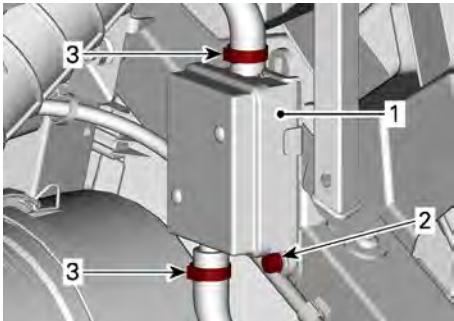

1. Pre-Filter Assembly
2. Retaining Screw
3. Hose Clamps

### Installing the Evaporative Emission System Pre-Filter

1. Install a new pre-filter assembly and secure it with retaining screw. Tighten to specifications

| Tightening Torque          |                                                           |
|----------------------------|-----------------------------------------------------------|
| Pre-filter retaining screw | $6.5 \pm 0.5 \text{ Nm}$<br>( $58 \pm 4 \text{ lbf-in}$ ) |

2. Secure hoses with clamps.
3. Close the cargo box.

## Engine Oil

### Verifying the Engine Oil Level (Mono Cylinder)

**NOTICE**


**Operating the engine with an improper level may severely damage engine.**

**NOTICE**

**Check the oil level when the engine is WARM.**

1. Start and let the engine run at idle for 60 seconds.
2. Stop engine.
3. Place vehicle on a level surface.

4. Clean around dipstick to avoid foreign particles falling down the tube.

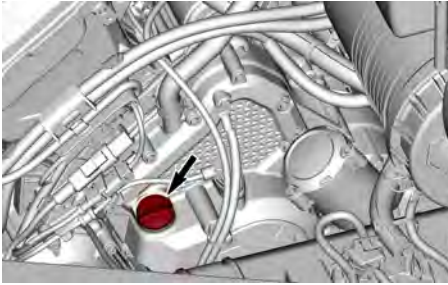

5. Unscrew dipstick then remove it and wipe clean.
6. Reinstall dipstick, screw in it completely.
7. Remove dipstick and check oil level. It should be near or equal to the upper mark.



1. MIN
2. MAX

If the level is between marks, reinstall the dipstick.

If the level is below the lower mark, add oil as follow:

- Place a funnel into the dipstick hole.
- Add a small amount of recommended oil and recheck oil level.
- Continue to add oil until the level reaches the upper mark.

### NOTICE

**Do not overfill. Wipe off any spillage.**

### Recommended Engine Oil

Rotax® engines were developed and validated using the XPS® oil.

BRP recommends the use of its XPS engine oil or an equivalent at all time.

Damage caused by the use of an oil not suitable for the engine may not be covered by the BRP Limited Warranty.

| XPS Recommended Engine Oil |                     |
|----------------------------|---------------------|
| General purpose            | 5W40 synthetic oil  |
| Cold temperature           | 0W40 synthetic oil  |
| Warm temperature           | 10W50 synthetic oil |

If the recommended XPS engine oil is not available:

- Use a 4-stroke SAE engine synthetic oil meeting or exceeding the following lubricant industry specifications.
- Always check the API service label certification on the oil container, it must contain at least one of the indicated standards.
  - **API service classification SN, or**
  - **JASO MA2**

### Changing the Engine Oil

#### NOTICE

**Engine oil and oil filter must be replaced at the same time.**


Oil change and oil filter replacement should be done with a warm engine.

#### CAUTION

**The engine oil can be very hot. Wait until engine oil is warm.**

1. Place the vehicle on a level surface.
2. Clean the dipstick area.
3. Remove the dipstick.

- 4. Place a drain pan under the engine drain plug area.
- 5. Clean the drain plug area.
- 6. Unscrew drain plug and discard the gasket ring.

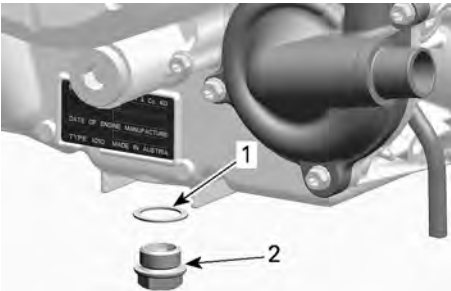

- 1. Gasket ring (discard)
- 2. Drain plug

- 7. Allow oil to drain completely from the crankcase.
- 8. Clean the drain plug.
- 9. Install a NEW gasket ring on the drain plug.

NOTICE

Never use the gasket ring a second time. Always replace with a new one.

- 10. Install and tighten drain plug to the recommended specification.

| Tightening Torque |                              |
|-------------------|------------------------------|
| Drain plug        | 30 ± 2 Nm<br>(22 ± 1 lbf-ft) |

- 11. Replace oil filter, refer to *Oil Filter*.
- 12. Refill engine, refer to *Recommended Engine Oil*.

**NOTE:**  
For engine oil capacity, refer to *Technical Specifications*.

- 13. Start engine and let it idle for a 60 seconds.
- 14. Stop engine.

- 15. Check the oil level immediately, refer to *Verifying the Engine Oil Level*.
- 16. Refill as necessary.
- 17. Ensure oil filter and drain plug areas are not leaking.
- 18. Dispose oil and filter as per your local environmental regulations.

Engine Oil

Verifying the Engine Oil Level (V-Twin)


NOTICE

Operating the engine with an improper level may severely damage engine.

NOTICE

Check the oil level when the engine is COLD.

- 1. Place vehicle on a level surface.
- 2. Clean around dipstick to avoid foreign particles falling down the tube.

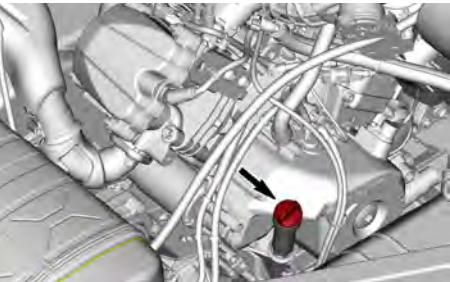

- 3. Unscrew dipstick then remove it and wipe clean.
- 4. Reinstall dipstick, screw in it completely.
- 5. Remove dipstick and check oil level. It should be near or equal to the upper mark.



1. MIN
2. MAX

If the level is between marks, re-install the dipstick.

If the level is below the lower mark, add oil as follow:

- Place a funnel into the dipstick hole.
- Add a small amount of recommended oil and recheck oil level.
- Continue to add oil until the level reaches the upper mark.

### NOTICE

**Do not overfill. Wipe off any spillage.**

### Recommended Engine Oil

Rotax® engines were developed and validated using the XPS® oil.

BRP recommends the use of its XPS engine oil or an equivalent at all time.

Damage caused by the use of an oil not suitable for the engine may not be covered by the BRP Limited Warranty.

| XPS Recommended Engine Oil |                     |
|----------------------------|---------------------|
| General purpose            | 5W40 synthetic oil  |
| Cold temperature           | 0W40 synthetic oil  |
| Warm temperature           | 10W50 synthetic oil |

If the recommended XPS engine oil is not available:

- Use a 4-stroke SAE engine synthetic oil meeting or exceeding the

following lubricant industry specifications.

- Always check the API service label certification on the oil container, it must contain at least one of the indicated standards.
  - **API service classification**  
**SN, or**
  - **JASO MA2**

### Changing the Engine Oil

#### NOTICE


**Engine oil and oil filter must be replaced at the same time.**

Oil change and oil filter replacement should be done with a warm engine.

#### CAUTION

**The engine oil can be very hot. Wait until engine oil is warm.**

1. Place the vehicle on a level surface.
2. Clean the dipstick area.
3. Remove the dipstick.
4. Place a drain pan under the engine drain plug area.
5. Clean the drain plug area.
6. Unscrew drain plug and discard the gasket ring.

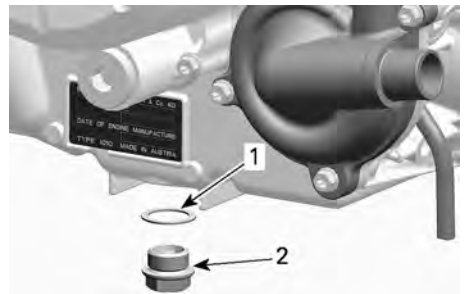

1. Gasket ring (discard)
2. Drain plug

7. Allow oil to drain completely from the crankcase.
8. Replace oil filter, refer to *Oil Filter*.

9. Clean the magnetic drain plug from metal shavings and residue.

**NOTE:** Presence of debris gives an indication of internal engine damage.

10. Install a NEW gasket ring on the drain plug.

**NOTICE**

**Never use the gasket ring a second time. Always replace with a new one.**

11. Install and tighten drain plug to the recommended specification.

| Tightening Torque |                                       |
|-------------------|---------------------------------------|
| Drain plug        | $30 \pm 2$ Nm<br>( $22 \pm 1$ lbf-ft) |

12. Refill engine, refer to *Recommended Engine Oil*.


**NOTE:**  
For engine oil capacity, refer to *Technical Specifications*.

13. Start engine and let it idle for a 60 seconds.  
14. Stop engine.  
15. Check the oil level immediately, refer to *Verifying the Engine Oil Level*.  
16. Refill as necessary.  
17. Ensure oil filter and drain plug areas are not leaking.  
18. Dispose oil and filter as per your local environmental regulations.

**Engine Oil Filter (Mono-cylinder Engines)**

**Removing the Oil Filter**

1. Clean oil filter area.  
2. Remove the oil filter cover and the O-ring.

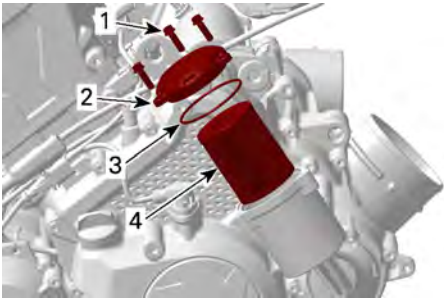


1. Oil filter screw  
2. Oil filter cover  
3. O-ring  
4. Oil filter


3. Remove and discard oil filter.

**Installing the Oil Filter**

1. Check and clean the oil filter inlet and outlet area for dirt and other contaminations.

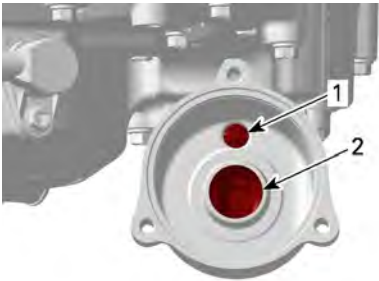

1. Inlet bore from the oil pump to the oil filter  
2. Outlet bore to the engine oil providing system
2. Wet a NEW O-ring with engine oil and slip onto oil filter cover.  
3. Install the new filter into the cover.  
4. Apply engine oil to the seal on the open end of the oil filter.

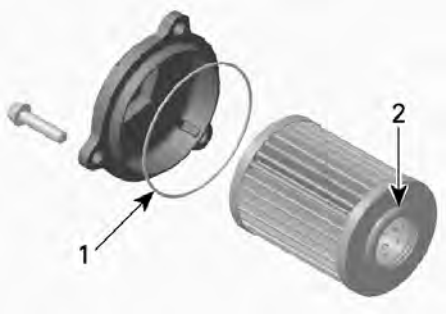

1. Slightly oil
2. Slightly oil

### NOTICE

**Pay attention to avoid pinching the O-ring during filter and cover installation.**

5. Install the cover on the oil filter housing.
6. Tighten oil filter cover screws to specification.

### Tightening Torque


|                         |                                       |
|-------------------------|---------------------------------------|
| Oil filter cover screws | $10 \pm 1$ Nm<br>( $89 \pm 9$ lbf-in) |
|-------------------------|---------------------------------------|

7. Wipe off any oil spillage on engine.


## Engine Oil Filter (V-Twin Engines)

### Removing the Oil Filter

1. If not already done, remove the engine service cover.
2. Clean oil filter area.

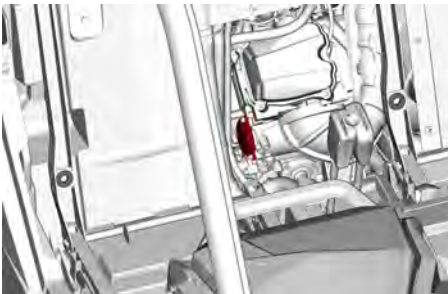

3. Remove oil filter cover.
4. Remove and discard oil filter.

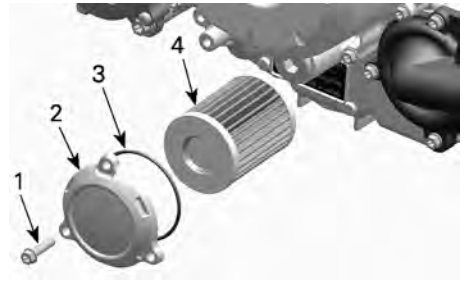


### TYPICAL

1. Oil filter screw
2. Oil filter cover
3. O-ring
4. Oil filter


### Installing the Oil Filter

1. Check and clean the oil filter inlet and outlet area for dirt and other contaminations.

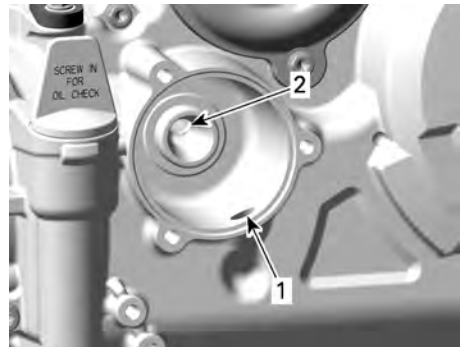

1. Inlet bore from the oil pump to the oil filter
2. Outlet bore to the engine oil providing system

2. Wet a NEW O-ring with engine oil and slip onto oil filter cover.
3. Install the new filter into the cover.
4. Apply engine oil to the seal on the open end of the oil filter.

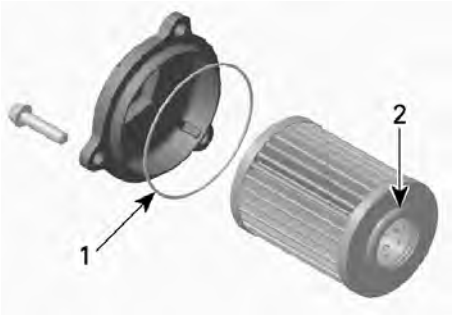

1. Slightly oil
2. Slightly oil

**NOTICE**

Pay attention to avoid pinching the O-ring during filter and cover installation.

5. Install the cover on the engine.
6. Tighten oil filter cover screws to recommended specification.

| Tightening Torque       |                              |
|-------------------------|------------------------------|
| Oil filter cover screws | 10 ± 1 Nm<br>(89 ± 9 lbf-in) |

7. Wipe off any oil spillage on engine.

**Engine Coolant**

**Verifying the Engine Coolant Level**


**⚠ WARNING**

Check coolant level with engine cold.


**⚠ WARNING**

In order to avoid potential burns, do not remove the pressure cap or loosen the coolant drain plug if the engine is hot.

1. Place vehicle on a level surface.
2. Remove the rear service cover.

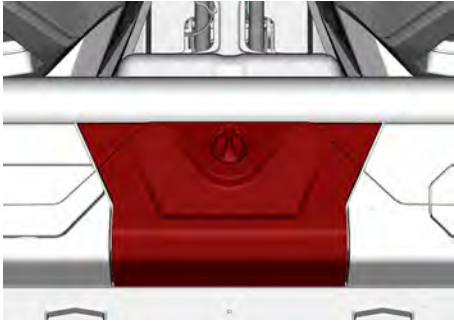

3. Ensure cooling system is full up to the Max line.

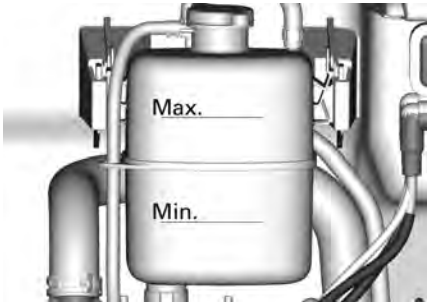

**Adding Coolant**

1. Remove the coolant tank pressure cap.
2. Add coolant in system as necessary. Use a funnel to avoid spillage. **Do not overfill.**
3. Properly reinstall pressure cap on cooling tank.

**NOTE:**  
A cooling system that frequently requires addition of coolant is an indication of leaks or engine problems.

**Recommended Engine Coolant**

| XPS Recommended Coolant                                                       |
|-------------------------------------------------------------------------------|
| Extended life pre-mixed coolant                                               |
| If XPS is not available                                                       |
| Distilled water and antifreeze solution (50% distilled water, 50% antifreeze) |

## NOTICE


Always use ethylene-glycol anti-freeze containing corrosion inhibitors specifically for internal combustion aluminum engines.

### Replacing the Engine Coolant

#### ⚠ WARNING


In order to avoid potential burns, do not remove the pressure cap or loosen the coolant drain plug if the engine is hot.

1. Remove the cooling system pressure cap.
2. Unscrew coolant drain plug partially to drain the coolant into a suitable container.

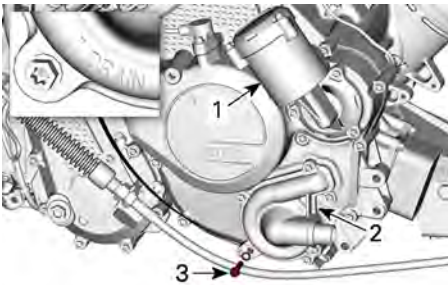

#### MONO CYLINDER ENGINE

1. Oil filter housing
2. Water pump cover
3. Coolant drain plug

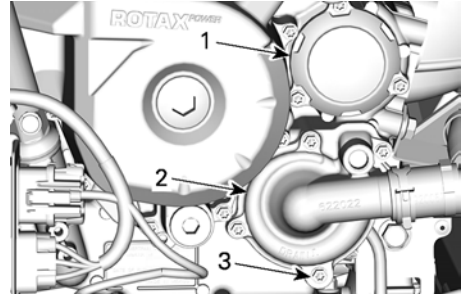

#### V-TWIN ENGINE

1. Oil filter cover
2. Water pump cover
3. Coolant drain plug
3. Disconnect the lower radiator hose from the water pump cover and drain the remaining coolant into a suitable container.
4. Tighten the coolant drain plug to specification.


#### Tightening Torque

|                    |                              |
|--------------------|------------------------------|
| Coolant drain plug | 10 ± 1 Nm<br>(89 ± 9 lbf-in) |
|--------------------|------------------------------|

5. Reinstall radiator hose.
6. Fill cooling system with coolant, refer to *Bleeding the Cooling System* procedure.

#### Bleeding the Cooling System

1. Remove the pressure cap.
2. Fill coolant system until it is full up to the Max line on the coolant tank.

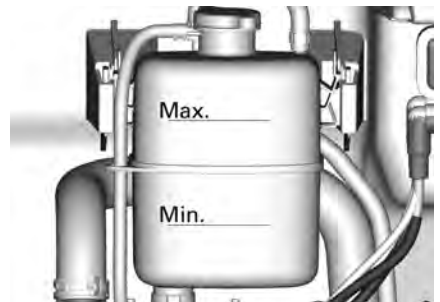

3. Install pressure cap.

4. Run engine at idle with the pressure cap **ON** until the cooling fan cycles on for a second time.
5. Stop the engine and let it cool down.

### ⚠ WARNING


**In order to avoid potential burns, do not remove the pressure cap if the engine is hot.**

6. When the engine is cool, remove pressure cap and add coolant if required.
7. Install pressure cap.
8. After the next ride, following this procedure, check coolant level. Add coolant as required. Refer to *Verifying the Engine Coolant Level* in this section.

## Radiator

### *Inspecting and Cleaning the Radiator*

1. Periodically check the radiator area for cleanliness.
2. To access the radiator, remove the front grill by pulling the top then sliding it upwards.

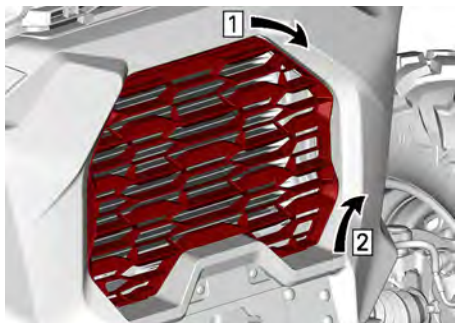

1. Pull the top
2. Slide upwards

### ⚠ CAUTION


**Never clean radiator with your hands when it is hot. Let the radiator cool down before cleaning.**

3. Inspect radiator and hoses for leaks or any damage.
4. Inspect radiating fins. They must be clean, free of mud, dirt, leaves and any other deposit that would prevent the radiator to cool properly.
5. If available, use a garden hose to rinse the radiating fins.

### NOTICE

**Be careful not to damage the radiating fins when cleaning. Do not use any object/tool that could damage the fins. When hosing, use low pressure only. Never use a HIGH PRESSURE washer.**

6. To install the front grill, insert lower tabs first then push the top.

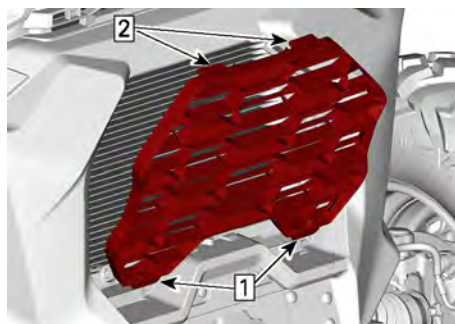

1. Insert the lower tabs
2. Push the top


## Muffler and Spark Arrester

### *Inspecting and Cleaning the Muffler Spark Arrester*


### ⚠ CAUTION

**Never perform this operation immediately after the engine has been running as exhaust system is very hot.**

1. Remove and discard the tail pipe retaining screws.

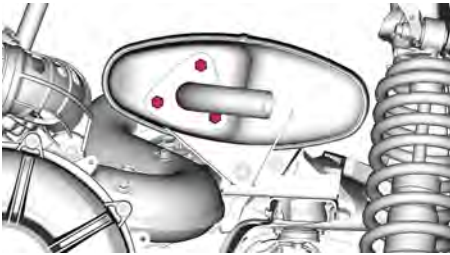


**MONO CYLINDER ENGINE CONFIGURATION**

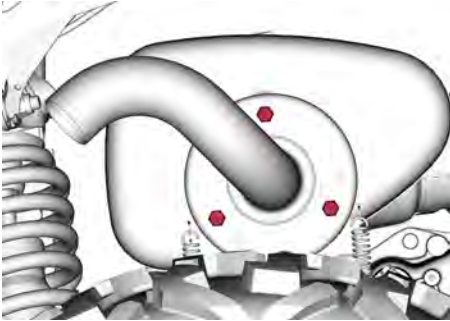

**V-TWIN ENGINE CONFIGURATION**

2. Remove exhaust tail pipe, gasket (discard) and spark arrester.

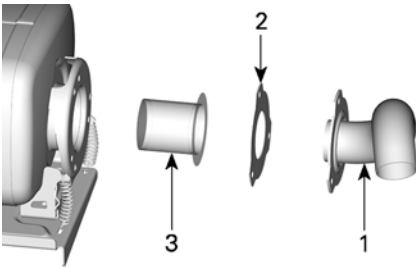

**TYPICAL**

1. Tail pipe
2. Gasket (discard)
3. Spark arrester
3. Remove carbon deposits from the spark arrester using a brush.

## NOTICE

Use a metallic soft brush and be careful to avoid damaging spark arrester mesh.

4. Inspect mesh of spark arrester for any damage. Replace as required.
5. Inspect spark arrester chamber in muffler. Remove any debris as required.
6. Reinstall the muffler spark arrester in the reverse of the removal procedure. However pay attention to the following.

Tighten to specification.


| Tightening Torque         |                              |
|---------------------------|------------------------------|
| Tail pipe retaining screw | 32 ± 2 Nm<br>(24 ± 1 lbf-ft) |

## GEARBOX

### Verifying the Gearbox Oil Level (Mono Cylinder)

1. Through the right rear wheel arch., remove the voltage/regulator support from the frame and move it aside to create room.


The removal of the wheel is not necessary but its removal will create more room to work.

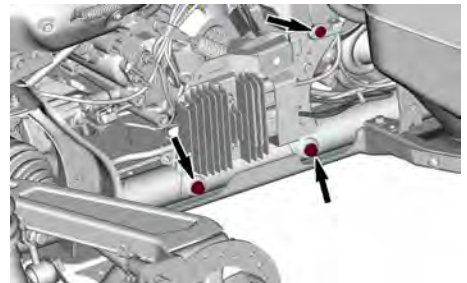

**VOLTAGE/REGULATOR SUPPORT SCREWS**

**SUPPORT SCREWS**

2. Remove the gearbox oil level plug.

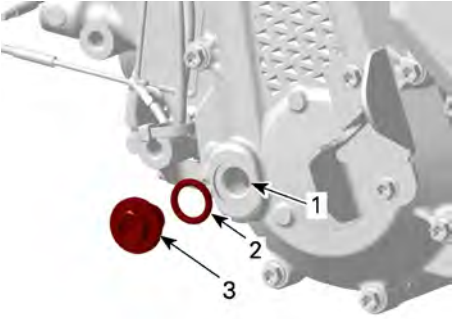

1. Oil level hole
2. O-ring
3. Oil level plug
3. Check oil level.

The oil should be level with the bottom of the oil level hole.

**NOTICE**

**Operating the gearbox with an improper oil level may severely damage gearbox.**

4. Install the oil level plug with O-ring. Tighten plug as per specification.

| Tightening Torque |                              |
|-------------------|------------------------------|
| Oil level plug    | 5 ± 0.6 Nm<br>(44 ± 5lbf-in) |

**Recommended Gearbox Oil**

The XPS oil is specially formulated to meet the lubrication requirements of this gearbox. BRP strongly recommends the use of its XPS oil.

**NOTICE**

**Do not use another type of oil when servicing.**

| XPS Recommended Gearbox Oil         |
|-------------------------------------|
| 75W140 Synthetic gear oil           |
| Alternative, or if not available    |
| 75W 140 API GL-5 Synthetic gear oil |

**Changing the Gearbox Oil**

1. Start engine and operate vehicle to warm-up the gearbox oil.

**NOTICE**

**Running engine at idle is not sufficient, vehicle transmission must be operated.**

2. Position vehicle on a level surface.
3. Place a drain pan under the gearbox drain plug area.
4. Clean drain plug area.
5. Remove drain plug and sealing washer. Discard sealing washer.

**CAUTION**

**The gearbox oil can be very hot.**

6. Remove oil level plug and O-ring and allow oil to completely flow out of gearbox.



1. Drain plug
2. Seal ring
7. Clean drain plug, pay attention to any debris present on drain plug.

## NOTICE

**Presence of excessive debris provides an indication of a gearbox problem.**

8. Reinstall drain plug with a NEW sealing washer.

| Tightening Torque |                                       |
|-------------------|---------------------------------------|
| Drain plug        | $20 \pm 2$ Nm<br>( $15 \pm 1$ lbf-ft) |

9. Remove the vehicle speed sensor (VSS).



10. Clean VSS using a clean rag.
11. Install the VSS and tighten screw to specification.

| Tightening Torque   |                                       |
|---------------------|---------------------------------------|
| VSS retaining screw | $10 \pm 1$ Nm<br>( $89 \pm 9$ lbf-in) |

12. Fill the gearbox through the oil level hole until the oil reaches the bottom of the oil level hole.

| Capacity                     |
|------------------------------|
| 0.5 l<br>(0.53 qt (liq.,US)) |

13. Install the oil level plug with its O-ring. Tighten to specification.

| Tightening Torque |                                        |
|-------------------|----------------------------------------|
| Oil level plug    | $5 \pm 0.6$ Nm<br>( $44 \pm 5$ lbf-in) |

14. Wipe off any spillage.
15. Dispose gearbox oil as per your local environmental regulations.

## GEARBOX

### Verifying the Gearbox Oil Level (V-Twin)

1. Place the vehicle on a level surface.
2. Select PARK position.
3. Clean dipstick area.
4. Remove the gearbox oil dipstick.



5. Wipe and reinstall the dipstick.
6. Remove dipstick again and check oil level. It should be near or equal to the upper mark.



1. MIN.
2. MAX.
3. Operating range

7. Add oil (if required):

1. Place a funnel into the dipstick hole.
2. Add a small amount of recommended oil.
3. Recheck oil level often.
4. Repeat the above procedures until oil level reaches the dipstick's upper mark.

**NOTICE**

Operating the gearbox with an improper oil level may severely damage gearbox.

**NOTE:**  
Do not overfill. Wipe off any spillage.

8. Properly tighten oil dipstick.

**Recommended Gearbox Oil**

The XPS oil is specially formulated to meet the lubrication requirements of this gearbox. BRP strongly recommends the use of its XPS oil.


**NOTICE**

Do not use another type of oil when servicing.


| XPS Recommended Gearbox Oil         |
|-------------------------------------|
| 75W140 Synthetic gear oil           |
| Alternative, or if not available    |
| 75W 140 API GL-5 Synthetic gear oil |

**Changing the Gearbox Oil**

- Place the vehicle on a level surface.
- Clean the following areas.
  - Drain plug area.

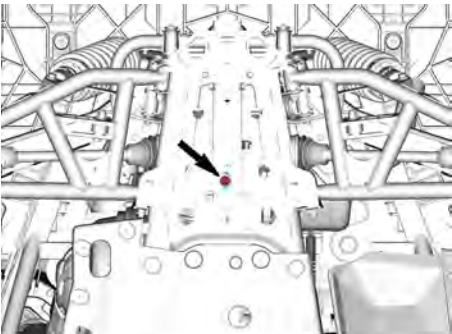

- Dipstick area.

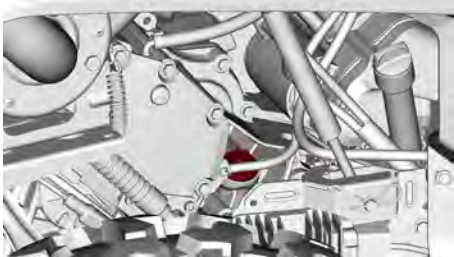

- Place a drain pan underneath the oil drain plug area.
- Remove the dipstick.
- Remove the drain plug.
- Let oil completely drain from gearbox.
- Clean drain plug from any metallic particles.
- Install the drain plug.

| Tightening Torque |                              |
|-------------------|------------------------------|
| Drain plug        | 20 ± 2 Nm<br>(15 ± 1 lbf-ft) |

- Refill gearbox.

**NOTE:**  
The oil should be level with the bottom of the oil level orifice.

**NOTICE**

Use ONLY the recommended type of oil.

- Reinstall dipstick.
- Lubricate the VSS O-ring.

| Super Lube Grease |
|-------------------|
|-------------------|

- Wipe off any spillage.

**FRONT DIFFERENTIAL**

**Verifying the Front Differential Oil Level**


- Place the vehicle on a level surface.

2. Clean filler plug area prior to checking oil level.


The drain plug is located on the right side of the front differential.



WITH INTEGRATED 4WD ACTUATOR

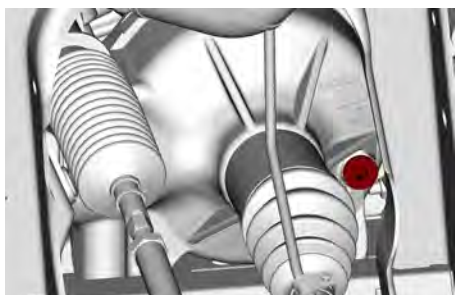

WITHOUT INTEGRATED 4WD ACTUATOR

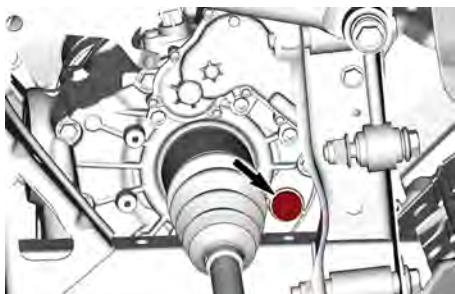

FRONT SMART-LOK DIFFERENTIAL

3. Remove the filler plug.
4. Check oil level. The oil should reach the lower edge.
5. Reinstall the filler plug.

## Recommended Front Differential Oil

The XPS oil is specially formulated to meet the lubrication requirements of this differential. BRP strongly recommends the use of its XPS oil.

### NOTICE

**Do not use another type of oil when servicing.**

#### XPS Recommended Front Differential Oil


75W90 Synthetic gear oil

#### Alternative if XPS Product is not Available

75W90 (API GL-5) synthetic gear oil

## Changing the Front Differential Oil


1. Place vehicle on a level surface.
2. Set gearbox in park position.
3. From underneath the vehicle, clean the drain plug area.

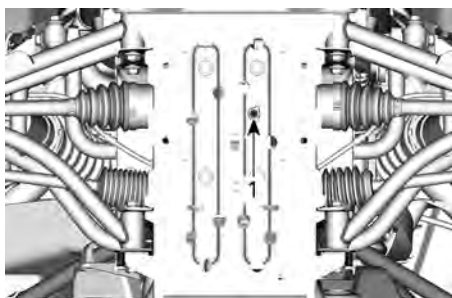


1. Drain plug
4. Place a drain pan under the rear differential.
5. Remove drain plug.
6. Unscrew filler plug.

### Tightening Torque

|             |                                    |
|-------------|------------------------------------|
| Filler plug | 16.5 ± 2.5 Nm<br>(146 ± 22 lbf-in) |
|-------------|------------------------------------|

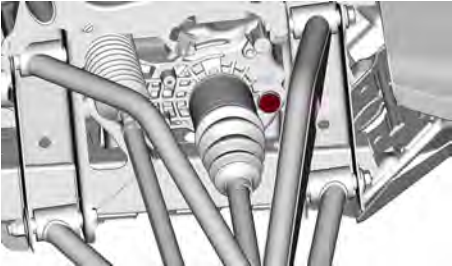

WITH INTEGRATED 4WD ACTUATOR

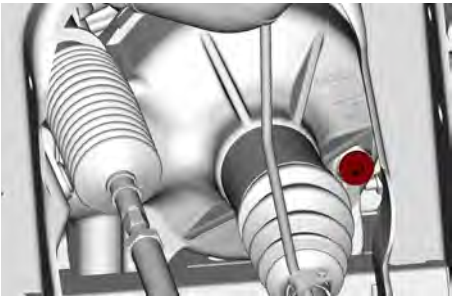

FRONT DIFFERENTIAL (NO ACTUATOR)

- 7. Let oil drip completely.
  - 8. Install drain plug.
9. Refill differential with recommended oil for optimal performance.
  10. For the differential oil capacity, refer to *Technical Specifications*.
  11. Reinstall filler plug.

| Tightening Torque |                                 |
|-------------------|---------------------------------|
| Drain plug        | 2.5 ± 0.5 Nm<br>(24 ± 4 lbf-in) |

| Tightening Torque |                                    |
|-------------------|------------------------------------|
| Filler plug       | 16.5 ± 2.5 Nm<br>(146 ± 22 lbf-in) |

Rear Final Drive (Mono Cylinder Models Only)

Verifying the Rear Final Drive Oil Level

1. Place the vehicle on a level surface.

2. Clean filler plug area prior to checking oil level.



3. Remove the filler plug.
4. Check oil level. The oil should reach the lower edge.
5. Reinstall the filler plug.

| Tightening Torque |                                    |
|-------------------|------------------------------------|
| Filler plug       | 16.5 ± 2.5 Nm<br>(146 ± 22 lbf-in) |

Recommended Rear Final Drive Oil


The XPS oil is specially formulated to meet the lubrication requirements of this final drive unit. BRP strongly recommends the use of its XPS oil.

| NOTICE                                         |
|------------------------------------------------|
| Do not use another type of oil when servicing. |

| XPS Recommended Final Drive Oil             |
|---------------------------------------------|
| 75W90 Synthetic gear oil                    |
| Alternative if XPS Product is not Available |
| 75W90 (API GL-5) synthetic gear oil         |

Changing the Rear Final Drive Oil

1. Place vehicle on a level surface.
2. Set gearbox in park position.
3. From underneath the vehicle, clean the drain plug area.

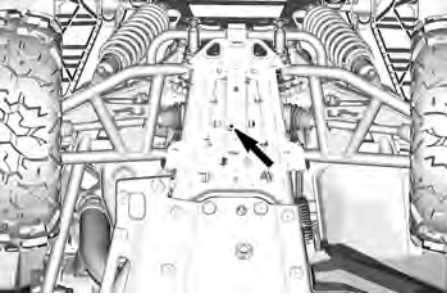

4. Place a drain pan under the rear final drive.
5. Remove drain plug.
6. Unscrew filler plug.



7. Let oil drip completely.
8. Install drain plug.

| Tightening Torque |                                                           |
|-------------------|-----------------------------------------------------------|
| Drain plug        | $2.5 \pm 0.5 \text{ Nm}$<br>( $24 \pm 4 \text{ lbf-in}$ ) |

9. Refill final drive with recommended oil for optimal performance.
10. For the oil capacity, refer to *Technical Specifications*.
11. Reinstall filler plug.


| Tightening Torque |                                                              |
|-------------------|--------------------------------------------------------------|
| Filler plug       | $16.5 \pm 2.5 \text{ Nm}$<br>( $146 \pm 22 \text{ lbf-in}$ ) |

## SPARK PLUGS

### Accessing the Spark Plugs

1. Open the cargo box to reach the rear cylinder of the V-twin engine and the mono cylinder engine.

2. Remove the engine service cover to reach the front cylinder of V-twin engine.

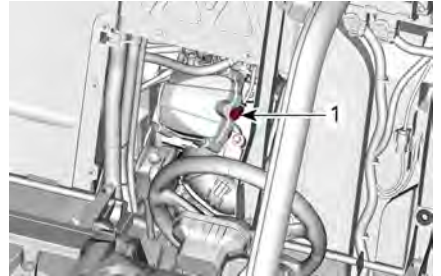

1. Front spark plug of V-twin engine

### Removing the Spark Plug

1. Unplug spark plug cable.
2. Clean spark plug area with pressurized air before removing spark plug.
3. Unscrew spark plug completely using a spark plug socket, then remove it.

### Installing the Spark Plugs

1. Prior to installation make sure that the contact surface of cylinder head and spark plug is free of grime.
2. Using a feeler gauge, set the spark plug gap.

| Spark Plug Gap |                                    |
|----------------|------------------------------------|
| Mono cylinder  | 0.7 to 0.8 mm<br>(.028 to .031 in) |
| Twin cylinders | 0.8 to 0.9 mm<br>(.031 to .035 in) |

3. Coat spark plug threads with the following anti-seize lubricant.

|                                          |
|------------------------------------------|
| <b>Copper-based anti-seize lubricant</b> |
|------------------------------------------|

4. Screw spark plug into cylinder heads by hand and tighten with a torque wrench and a spark plug socket.

|                                                                 |
|-----------------------------------------------------------------|
| <b>NOTICE</b>                                                   |
| <b>Do not overtighten spark plugs, engine damage can occur.</b> |

| Tightening Torque |                      |
|-------------------|----------------------|
| Spark plug        | 11 Nm<br>(97 lbf-in) |

## CVT COVER

For a better understanding, some illustrations are taken with engine out of vehicle. To perform the following

instructions, it is not necessary to remove engine.

|                                                                                                    |
|----------------------------------------------------------------------------------------------------|
| <b>⚠ WARNING</b>                                                                                   |
| <b>Never touch CVT while engine is running.<br/>Never drive vehicle when CVT cover is removed.</b> |

|                                                     |
|-----------------------------------------------------|
| <b>⚠ CAUTION</b>                                    |
| <b>Engine must be cool before cover is removed.</b> |

|                                                                                                      |
|------------------------------------------------------------------------------------------------------|
| <b>NOTICE</b>                                                                                        |
| <b>This CVT is lubrication free.<br/>Never lubricate any components except drive pulley bearing.</b> |

### Accessing the CVT Cover

The CVT cover is accessible by the rear LH wheel well.

### Removing the CVT Cover

1. Place the vehicle on a level surface.
2. If equipped, remove the CVT air intake hose.
3. Manually, remove all CVT cover retaining screws.

|                                                              |
|--------------------------------------------------------------|
| <b>NOTICE</b>                                                |
| <b>Do not use an impact tool to remove CVT cover screws.</b> |

### NOTE:

Remove the center top screw last to support the cover during removal.

4. Remove the CVT cover and its gasket.

## Drive Belt

### Removing the Drive Belt (Mono Cylinder Engine)

#### NOTICE

In case of a drive belt failure, the CVT, cover and air outlet must be cleaned.

Please refer to *Tips for Maximizing Drive Belt Durability* in *Basic Procedures* for some important information.

1. Remove the CVT Cover.
2. Install the puller/locking tool in the threaded hole of the driven pulley.

#### Puller/locking tool

(P/N 529036098)




3. Tighten to open the pulley.
4. To remove belt, slip the belt over the top edge of fixed sheave.

### Removing the Drive Belt (Twin Cylinder Engine)

#### NOTICE

In case of a drive belt failure, the CVT, cover and air outlet must be cleaned.


Please refer to *Tips for Maximizing Drive Belt Durability* in *Basic Procedures* for some important information.

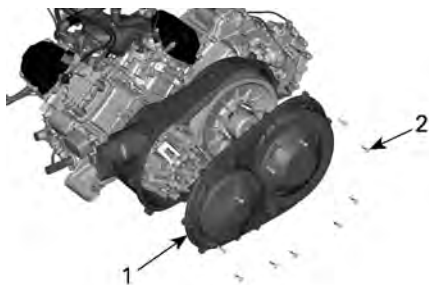

1. CVT cover
2. CVT cover screws

### Installing the CVT Cover

1. Install the center top screw of first.
2. Tighten the CVT cover screws as per following sequence.

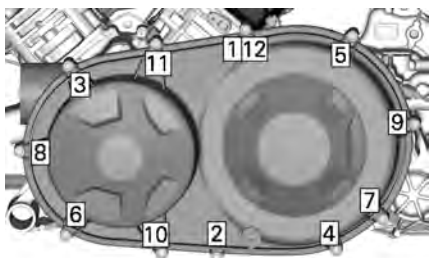

#### Tightening Torque

CVT cover  
screws

$7 \pm 0.8 \text{ Nm}$   
( $62 \pm 7 \text{ lbf-in}$ )

3. If equipped, install CVT air intake hose.

#### Tightening Torque

Clamp worm  
gear

$2 \pm 0.3 \text{ Nm}$   
( $18 \pm 2 \text{ lbf-in}$ )


1. Remove the CVT Cover.
2. Install the adaptor in the threaded hole of the driven pulley.

|                                                                   |                                                                                   |
|-------------------------------------------------------------------|-----------------------------------------------------------------------------------|
| <p><b>Driven pulley adapter</b></p> <p><b>(P/N 708200720)</b></p> |  |
|-------------------------------------------------------------------|-----------------------------------------------------------------------------------|

3. Screw the puller/locking tool in the threaded hole of the adaptor.

|                                                                 |                                                                                   |
|-----------------------------------------------------------------|-----------------------------------------------------------------------------------|
| <p><b>Puller/locking tool</b></p> <p><b>(P/N 529000088)</b></p> |  |
|-----------------------------------------------------------------|-----------------------------------------------------------------------------------|

4. Tighten to open the pulley.

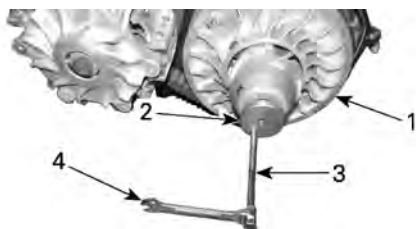

1. Fixed sheave of driven pulley
2. Adaptor
3. Puller/locking tool
4. Wrench

5. To remove belt, slip the belt over the top edge of fixed sheave, as shown.




## Installing the Drive Belt

### NOTICE

The maximum drive belt life span is obtained when the drive belt has the proper rotation direction.

1. To install the drive belt, slip the drive belt over the top edge of fixed sheave.
2. Install it so that the arrow printed on belt is pointing towards front of the vehicle, viewed from top.

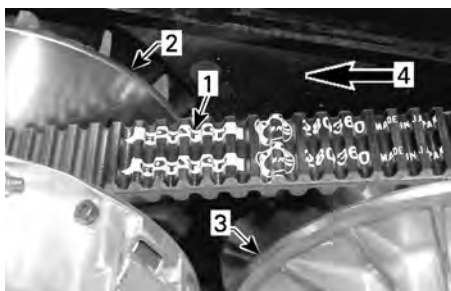


1. Arrow printed on belt
2. Drive pulley (front)
3. Driven pulley (rear)
4. Rotation direction

3. Unscrew and remove the puller/locking tool.



4. Turn the driven pulley until the lowest portion of the cogs on the external surface of the drive belt is even with the driven pulley edge.

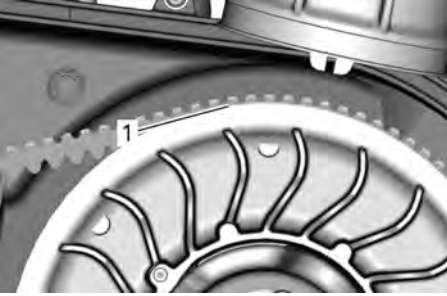

1. Lowest portion of cogs even with driven pulley edge

5. Install the CVT cover.

## Drive and Driven Pulleys

### Inspecting Drive and Driven Pulleys

This inspection must be performed by an authorized Can-Am Off-road dealer, repair shop, or person of your own choosing for maintenance, repair, or replacement.

#### Drive Pulley

Inspect the bushings and rollers of the sliding sheave of the drive pulley, replace worn parts.

#### Driven Pulley

Inspect rollers on fixed sheave.



## BATTERY

### Battery Maintenance

#### NOTICE

**Never charge a battery while installed in vehicle.**

These vehicles are equipped with a VRLA battery (Valve Regulated Lead Acid). It is a maintenance-free type battery, there is no need to add water to adjust electrolyte level.

#### NOTICE

**Never remove the battery sealing cap.**


### Removing the Battery

1. Remove the driver's seat cushion.
2. Disconnect BLACK (-) cable first then RED (+) cable.

#### NOTICE

**Always respect this order for disassembly; disconnect BLACK (-) cable first.**

3. Remove battery holder retaining screw(s).

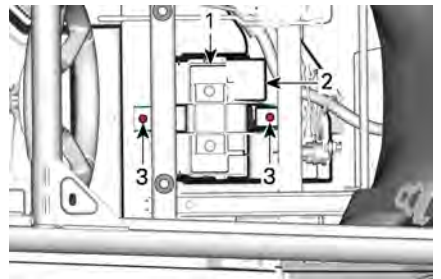

1. Battery holder
2. Battery
3. Battery holder retaining screw(s)

4. Remove battery holder.
5. Remove battery.

**Installing the Battery**

Battery installation is the reverse of the removal procedure.

**NOTICE**

Improper orientation of the battery cables (reverse polarity) will result in damage to the voltage regulator.

**NOTICE**

Always connect RED (+) cable first then BLACK (-) cable.

**Fuses and Fusible Links**

**Replacing a Fuse**

If a fuse is burnt, replace it by one of the same rating.

**NOTICE**

Do not use a higher rated fuse as this can cause severe damage.


**Fuse Boxes Location**

The vehicle is equipped with two fuse boxes.


The front fuse box is located under the LH dashboard and the rear fuse box is located behind the driver's seat backrest, near the ECM.

**Fuse Boxes Description**

| Individual Fuse Holders |                                               |        |
|-------------------------|-----------------------------------------------|--------|
| No                      | Description                                   | Rating |
| PF3                     | DPS<br>(Under the dash, near DPS)             | 40 A   |
| PF4                     | Accessory post<br>(Under dash terminal block) | 30 A   |

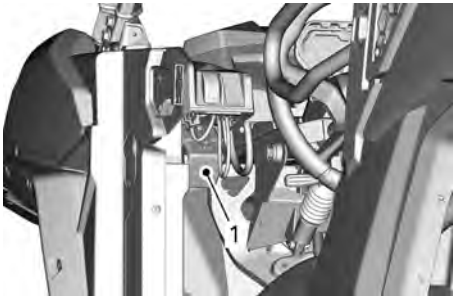

1. Front fuse box

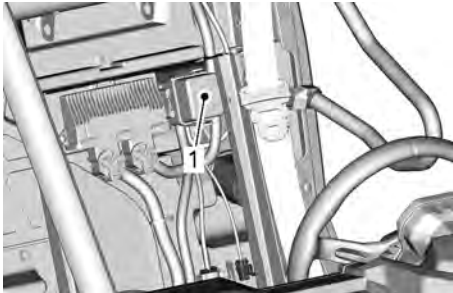

1. Rear fuse box

**Fuse Links and Individual Fuse**

The vehicle is equipped with 2 fuse links and an individual fuse.

The fuse link 1 is connected to battery positive post.

The fuse link 2 is located between the fuse box #1 and the accessory post (located under the dash).

The regulator fuse holder is also located near the battery.

| Individual Fuse Holders |                                                                    |        |
|-------------------------|--------------------------------------------------------------------|--------|
| No                      | Description                                                        | Rating |
| PF8                     | Smart Lok<br>(Under dash, near front diff module)<br>(if equipped) | 20 A   |
| PF10                    | Regulator<br>(Near the battery)                                    | 50 A   |

| Fuse Box #1 (Under the Dash)<br>(Fuses are identified on the fuse box cover) |                                                 |        |
|------------------------------------------------------------------------------|-------------------------------------------------|--------|
| No                                                                           | Description                                     | Rating |
| F7                                                                           | 2x4 4x4                                         | 10 A   |
| F11                                                                          | Headlamps                                       | 20 A   |
| F12                                                                          | DC3<br>Winch                                    | 10 A   |
| F14                                                                          | 12 V accessory outlet 1                         | 10 A   |
| F16                                                                          | Tail lamps                                      | 10 A   |
| R9                                                                           | Fuses PF1/F14 (DC outlet)<br>PF4 Accessory post | N/A    |
| R3                                                                           | ECM accessory 12V                               | N/A    |
| R8                                                                           | Brake lights                                    | N/A    |
| Spare1                                                                       | Spare                                           | 20 A   |

| Fuse Box #2 (Behind driver's Seat)<br>(Fuses are identified on the fuse box cover) |                              |        |
|------------------------------------------------------------------------------------|------------------------------|--------|
| No                                                                                 | Description                  | Rating |
| F4                                                                                 | Cluster/relays               | 10 A   |
| F5                                                                                 | Ignition/injection/fuel pump | 10 A   |
| F6                                                                                 | Engine Control Module (ECM)  | 10 A   |
| F7                                                                                 | 4WD actuator                 | 10 A   |
| F8                                                                                 | Ignition switch<br>Clock     | 10 A   |

**Fuse Box #2 (Behind driver's Seat)  
(Fuses are identified on the fuse box cover)**

| No  | Description                       | Rating |
|-----|-----------------------------------|--------|
| F9  | Cooling fan                       | 25 A   |
| F18 | Oxygen sensor<br>Evap purge valve | 10 A   |
| R1  | Fan                               | N/A    |
| R2  | Main                              | N/A    |

**Fuse Links**

| Fuse Link | Description    | Rating |
|-----------|----------------|--------|
| 1         | Main           | 18 awg |
| 2         | Accessory post | 14 awg |

## Lights

| Lights              | Model      | Type               |
|---------------------|------------|--------------------|
| Headlamp            | DPS<br>XT  | Halogen<br>55W H11 |
|                     | XT-P       | LED                |
| Taillights          | All        | LED                |
| Signature<br>lights | XT<br>XT-P | LED                |

### LED Lights

In the unlikely event they do not work, have them checked by an authorized Can-Am Off-road dealer, repair shop or person of your choosing.

LED lights can not be replaced. In case of a malfunction, the headlamp or the tail light unit must be replaced.

### Halogen Bulb

#### Halogen Bulb Access

The headlight bulbs are accessible by the front wheel wells.

## Replacing Halogen Bulb

### WARNING

**Improper bulb installation, may cause its dislodgement from the headlight housing.**  
In this situation, the bulb could enter into contact with the headlight housing, lens or any other parts located in this area, resulting in parts melting and/or fire hazard.

### NOTICE

**Never touch glass portion of a halogen bulb with bare fingers, it shortens its operating life. If glass is touched, clean it with isopropyl alcohol which will not leave a film on the bulb.**

1. Unplug the connector from the headlight bulb socket.
2. Rotate the headlight bulb socket to unlock it.
3. Pull out the headlight bulb socket.
4. Properly reinstall all removed parts by reversing the order of their removal.


5. Validate headlights operation.

### Headlight Beam Aiming

1. Turn adjustment screws to adjust beam height to your convenience.

#### NOTE:

Adjust headlights evenly.

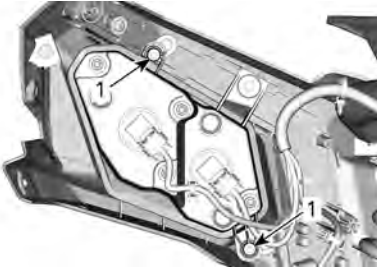


1. Adjustment screws

## Drive Shaft Bellows and Protectors


### Inspecting Drive Shaft Bellows and Protector

1. Visually inspect drive shaft protectors and bellows condition.
2. Check protectors for damage or rubbing against shafts.
3. Check bellows for cracks, tears, leaking grease, etc.
4. Repair or replace damaged parts as necessary.

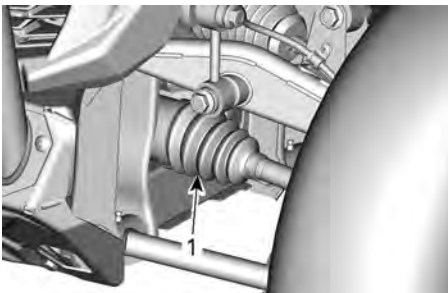


**TYPICAL — FRONT DIFFERENTIAL SIDE**

1. Inner drive shaft bellows

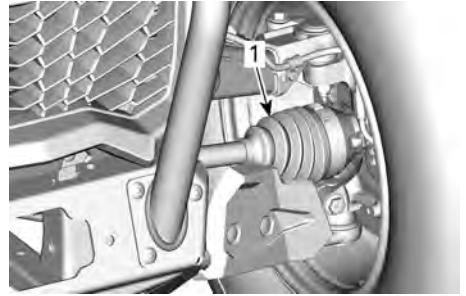


**TYPICAL — FRONT WHEEL SIDE**

1. Outer drive shaft bellows

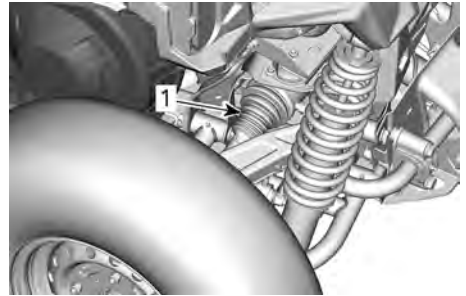

**TYPICAL — REAR GEARBOX SIDE**

1. Inner drive shaft bellows

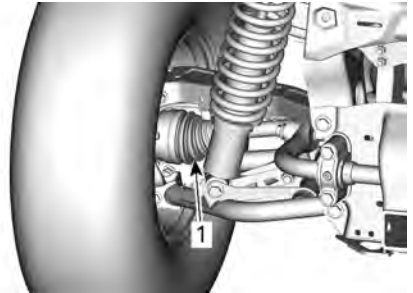

**TYPICAL — REAR WHEEL SIDE**

1. Outer drive shaft bellows

## Wheel Bearing

### Inspecting a Wheel Bearing

1. Lift and support vehicle. Refer to *Lifting and Supporting the Vehicle*.
2. Push and pull the wheels from the upper edge to feel the play.
3. See an authorized Can-Am Off-road dealer, a repair shop or a

person of your choosing if there is excessive play.



TYPICAL

Wheels and Tires

Removing a Wheel

- 1. Place the vehicle on a level surface.
- 2. Place shift lever on PARK position.
- 3. Loosen the wheel lug nuts.
- 4. Lift and support vehicle. Refer to *Lifting and Supporting Vehicle* section
- 5. Remove lug nuts and wheel.

Installing a Wheel

- 1. Inspect studs threads and lug nuts. Replace if needed.
- 2. Install the wheel.

**NOTE:** The tires are unidirectional and their rotation must be kept in a specific direction for proper operation.

- 3. Install all lug nuts by hand.

**NOTICE**

Always use the recommended wheel lug nuts for the type of wheel. Using a different lug nut could cause damages to the rim or studs.

- 4. Tighten wheel lug nuts in accordance with the following illustration.

| Tightening Torque |                                |
|-------------------|--------------------------------|
| Wheel lug nuts    | 100 ± 10 Nm<br>(74 ± 7 lbf-ft) |



TIGHTENING SEQUENCE

Tire Pressure

**⚠ WARNING**

Tire pressure greatly affects vehicle handling and stability. Insufficient pressure may cause tire to deflate and rotate on wheel. Overpressure may burst the tire. Always follow recommended pressure. NEVER set tire pressure below minimum. It could cause the tire to dislodge from the rim.

Check pressure when tires are cold before using the vehicle. Tire pressure changes with temperature and altitude. Recheck pressure if one of these conditions has changed.

Refer to the *Tires Pressure and Maximum Load Label* on your vehicle for applicable pressure.

**NOTE:**  
Although the tires are specifically designed for off-road use, a flat may still occur. Therefore, it is recommended to carry a tire gauge, tire pump and a repair kit.

## Tire Inspection

Check tire for damage and wear. Replace if necessary.

### ⚠ WARNING

Do not rotate tires. The front and rear tires have a different size. The left and right tires have different unidirectional tread patterns.

## Tire Replacement

Tire replacement should be performed by an authorized Can-Am Off-road dealer, a repair shop or a person of your choosing.

### ⚠ WARNING

Replace tires only with the same type and size as original tires. For unidirectional tread pattern, ensure that the tires are installed in the correct direction of rotation. Tires should be replaced, by an experienced person, in accordance with tire industry standards and tools.

## Tire Mounting on Beadlock Wheels


1. Mount the tire on wheel.

- On the opposite side of beadlock, apply tire mounting lube on inner bead of tire and wheel to ensure proper seat when inflating.
- Mount the inner bead over the wheel.
- Seat tire outer bead in the shoulder of the beadlock inner ring and center the tire.

2. Install all beadlock screws by hand to avoid cross threading.

### NOTICE

Do not use an impact wrench for installing beadlock screws. The risk of screw breaking or screw stripping is high when using an impact wrench.

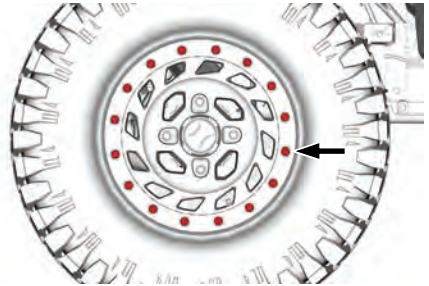


- Apply the **FIRST** tightening torque using the following sequence.

### NOTICE

To ensure even pressure on the beadlock clamp ring, tighten screws a few turns at a time.

#### Tightening Torque

|                                   |                                      |
|-----------------------------------|--------------------------------------|
| Beadlock screws<br>(FIRST TORQUE) | $4 \pm 1$ Nm<br>( $35 \pm 9$ lbf-in) |
|-----------------------------------|--------------------------------------|

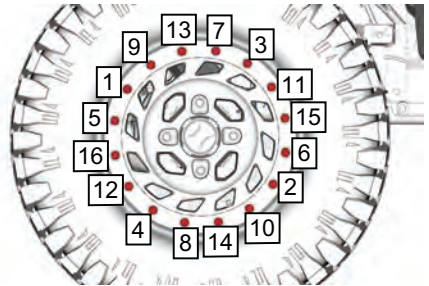


#### FIRST SEQUENCE

- At this time check if the tire is still centered on wheel. Reposition it if necessary.
- Apply the **SECOND** tightening torque using the same sequence.

**NOTE:**


The beadlock clamp ring should be in contact with the beadlock inner ring. The beadlock clamp ring can flex slightly to match the tire bead. IT IS NORMAL.

| Tightening Torque                  |                                                         |
|------------------------------------|---------------------------------------------------------|
| Beadlock screws<br>(SECOND TORQUE) | $14 \pm 1 \text{ Nm}$<br>( $124 \pm 9 \text{ lbf-in}$ ) |

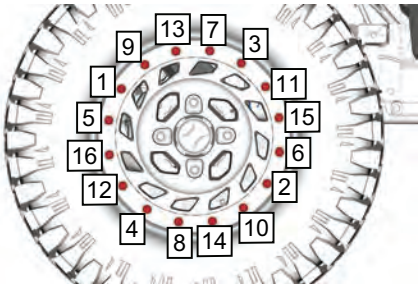

**SECOND SEQUENCE**

6. Verify the gap between tire and beadlock clamp ring, it should be practically equal all around the ring.

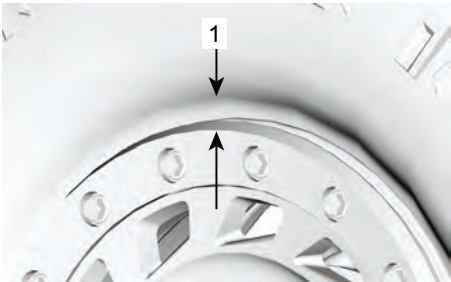

1. Gap equal all around beadlock clamp ring

If the gap is not acceptable,


- Loosen all screws.
- Check tire position on wheel and reposition it if necessary.
- Restart the torquing sequence as detailed.

7. Apply the **THIRD** tightening torque using the same sequence.

**NOTE:**

The beadlock clamp ring should be in contact with the beadlock inner ring. The beadlock clamp ring can flex slightly to match the tire bead. IT IS NORMAL.


| Tightening Torque                 |                                                        |
|-----------------------------------|--------------------------------------------------------|
| Beadlock screws<br>(THIRD TORQUE) | $29 \pm 1 \text{ Nm}$<br>( $21 \pm 1 \text{ lbf-ft}$ ) |

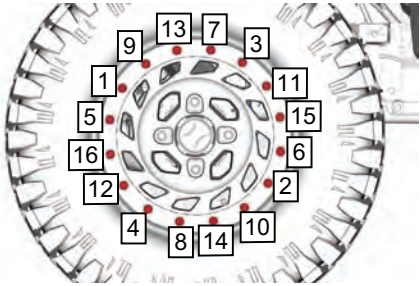

**THIRD SEQUENCE**

8. Apply the **FINAL** tightening torque using the following sequence.

| Tightening Torque                 |                                                        |
|-----------------------------------|--------------------------------------------------------|
| Beadlock screws<br>(FINAL TORQUE) | $29 \pm 1 \text{ Nm}$<br>( $21 \pm 1 \text{ lbf-ft}$ ) |

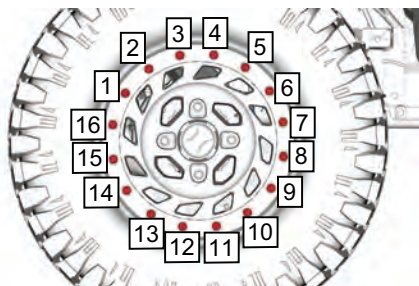

9. Inflate tire to seat the inner bead on wheel. Always use safe practices, such as a tire safety cage.

### ⚠ WARNING

**Never exceed tire's recommended maximum pressure for seating beads.**

## SUSPENSION

See an authorized Can-Am Off-road dealer, a repair shop or a person of your choosing if any problem is detected.


### *Inspecting the Suspension*

See an authorized Can-Am Off-road dealer, a repair shop or a person of your choosing if any problem is detected.


### Shock Absorbers

1. Inspect shock absorber for leaks, bump stop wear out or other damages.
2. Verify if fasteners are still well tightened.

| Tightening Torque |                                  |
|-------------------|----------------------------------|
| M12 bolt          | 74.5 ± 4.5 Nm<br>(55 ± 3 lbf-ft) |

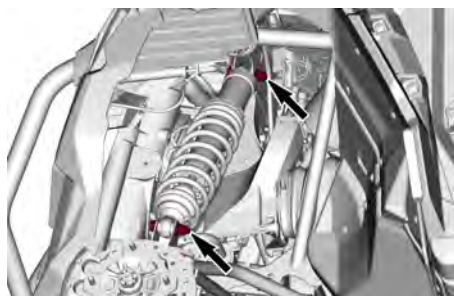

**TYPICAL — FRONT SHOCK ABSORBER FASTENERS**

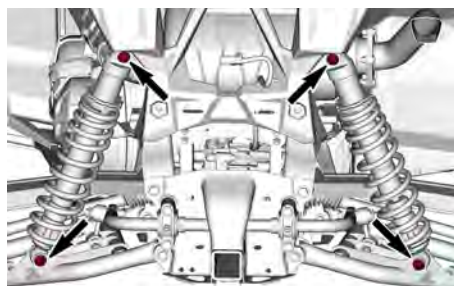

**TYPICAL — REAR SHOCK ABSORBER FASTENERS**

### Front Suspension Arms

1. Check suspension arms for cracks, bending or other damages.
2. Re-tighten the suspension arm bolts to specifications at ride height.

### NOTICE

**To avoid suspension bushings damages, never lift the vehicle from the ground to re-tighten suspension arm fasteners. When possible, always apply the tightening torque by the bolt head and not by using the nut to ensure optimal clamping.**

| Tightening Torque |                                   |
|-------------------|-----------------------------------|
| M12 bolt          | 112.5 ± 7.5 Nm<br>(83 ± 6 lbf-ft) |



Rear Suspension Arms

- 1. Check suspension arms for distortion, cracks or bending.
- 2. Re-tighten suspension arm to specifications at ride height.


**NOTICE**

To avoid suspension bushings damages, never lift the vehicle from the ground to re-tighten suspension arm fasteners.

**NOTICE**

The suspension arms must be tightened on the M12 bolt head and not on the nut (when possible) to insure optimal clamping.

| Tightening Torque                 |                                |
|-----------------------------------|--------------------------------|
| M12 bolt                          | 130 ± 10 Nm<br>(96 ± 7 lbf-ft) |
| Hexagonal flanged elastic nut M10 | 90 ± 10 Nm<br>(66 ± 7 lbf-ft)  |

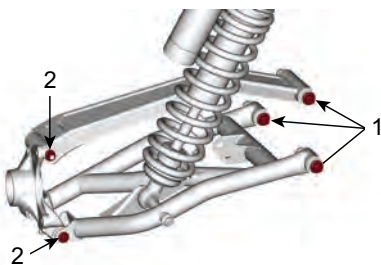

- 1. M12 fasteners
- 2. M10 fasteners

Stabilizer Bar

- 1. Check stabilizer bars for cracks, bending or, other damaged.
- 2. Tighten bracket screws to specification.

| Tightening Torque             |                                  |
|-------------------------------|----------------------------------|
| Stabilizer bar bracket screws | 95 ± 5 Nm<br>(70.1 ± 3.7 lbf-ft) |


Lubricating the Suspension

Stabilizer Bar

- 1. Lubricate stabilizer bars using the following product.


XPS synthetic suspension grease

## Stabilizer Bars Grease Fittings Location

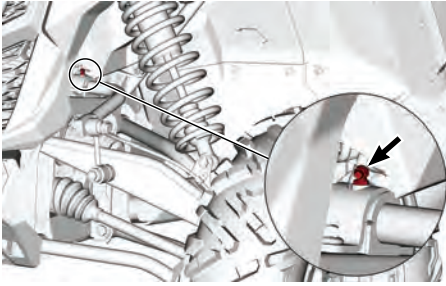

**TYPICAL — FRONT STABILIZER BAR**

**NOTE:** There is one grease fitting on the top of each stabilizer bar pivot bushing.

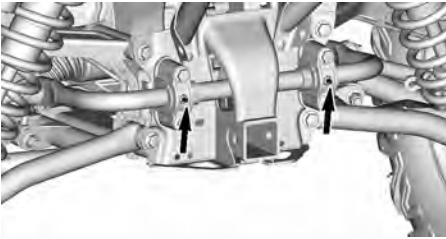


**TYPICAL — REAR STABILIZER BAR**

## BRAKES

### Verifying Brake Fluid Level

The brake fluid reservoirs are located under the front service cover. Refer to *Accessing Maintenance Components* section.

1. Place the vehicle on a level surface.
2. Check brake fluid in each reservoir for proper level. The level should be between MIN and MAX marks.

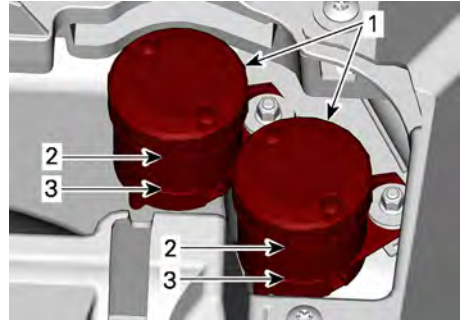

1. Brake fluid reservoirs
2. MAX
3. MIN

### **⚠ WARNING**

**A low level may indicate leaks or worn brake pads.**

### Adding Brake Fluid

1. Clean both reservoir covers and the surrounding area.
2. Add enough new brake fluid to increase the level near the MAX mark.

### **NOTICE**

**Do not overfill.**

### **⚠ WARNING**

**Ensure diaphragm is pushed back inside the cover before installing it.**

### Recommended Brake Fluid

Always use brake fluid meeting the specification DOT 4 only.

### **NOTICE**

**To avoid serious damage to the braking system, do not use fluids other than the recommended one, nor mix different fluids for topping up.  
Do not use brake fluid taken from old or already opened containers.**

## Inspecting Brake System

The brake inspection, maintenance and repair should be performed by an authorized Can-Am dealer, a repair shop or person of your choosing.

However, verify the following between visits to your dealer:

- Brake fluid level
- Brake system for fluid leaks
- Brake pad wear
- Brake cleanliness

### **⚠ WARNING**

The brake fluid replacement or brake system maintenance and repairs should be performed by an authorized Can-Am dealer.

## SEAT BELTS

### *Cleaning Seat Belt*

To clean dirt and debris from the seat belts, sponge the straps with mild soap and water.

### **⚠ WARNING**

To avoid damaging the seat belt components, never use a pressure washer to clean them.

### **NOTICE**

Do not use bleach, dye, or household detergents.

## Doors

### *Lubricating Door Latch Mechanism*

1. Lubricate door latch mechanisms (lock and hinges) periodically using a silicone based lubricant.

### **NOTICE**

Never apply any type of grease on door lock mechanism.


## CAGE

### *Verifying Cage Fasteners*


Tighten cage fasteners to specification periodically.


**NOTE:** LH side shown, repeat on RH side.

1. Remove the lower trims from the front pillars.

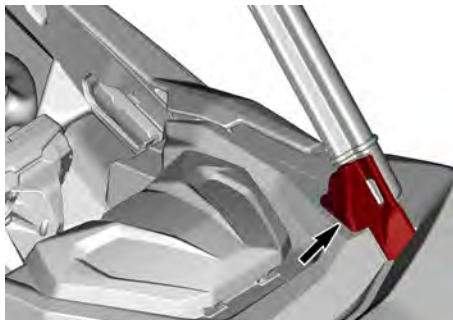

2. Remove seat backrests, refer to *Accessing Maintenance Components* section.
3. Tighten all fasteners.

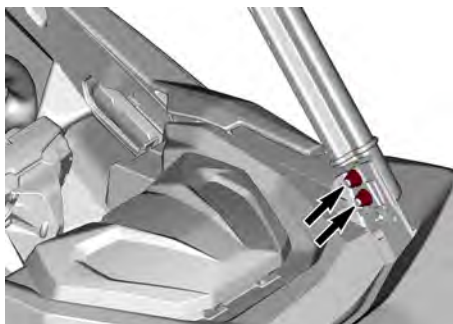

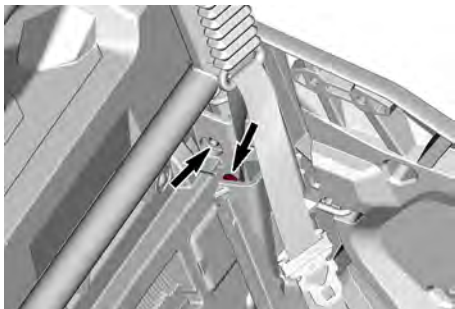

| Tightening Torque |                                                            |
|-------------------|------------------------------------------------------------|
| Cage fasteners    | $67.5 \pm 2.5 \text{ Nm}$<br>( $50 \pm 2 \text{ lbf-ft}$ ) |

### Cargo Box Release Handle

1. Open the cargo box.
2. Inspect tightening torque of the cargo box release handles.
3. Tighten to specification if needed.

| Tightening Torque             |                                                        |
|-------------------------------|--------------------------------------------------------|
| Cargo box release handle bolt | $11 \pm 1 \text{ Nm}$<br>( $97 \pm 9 \text{ lbf-in}$ ) |

# VEHICLE CARE

## Vehicle Cleaning and Protection

### NOTICE

**Never use a high pressure washer to clean the vehicle. USE LOW PRESSURE ONLY (like a garden hose). High pressure can cause damage to electrical or mechanical components.**

Pay attention to certain areas where salt-water, mud or debris can accumulate and potentially cause:

- Fire
- Wear
- Interference
- Corrosion.

This list includes but is not limited to:

- Around exhaust system and between muffler and muffler cover
- Under and around the fuel tank
- Radiator
- Shock absorbers
- Around front and rear differentials
- Around and underneath engine and gearbox
- Inside wheels
- On top of skid plates.

### ⚠ WARNING

**Debris accumulation could lead to a vehicle fire when the exhaust system is hot and the debris are dried.**

**In some cases, that could result in serious properly damages, injuries or even death.**

**Clean often and regularly the area surrounding the exhaust system when riding in swamp, bog, hay or dead leaves.**

**In other situations, clean as per maintenance schedule requirement.**

fresh water is necessary to preserve vehicle and its components after each operating day.

Metallic parts lubrication is highly recommended.

Use anti-corrosive lubricant or an equivalent.

XPS Lubricant and anti-corrosive

Painted parts which are damaged should be properly repainted to prevent rust.

When required, wash the body with warm water and soap (only use mild detergent). Apply non-abrasive wax.

### NOTICE

**Never clean plastic parts with strong detergent, degreasing agent, paint thinner, acetone, etc.**

Protect the vehicle with a cover to prevent dust accumulation during storage.

### NOTICE

**The vehicle has to be stored in a cool and dry place and covered with an opaque tarpaulin. This will prevent sun rays and grime from affecting plastic components and vehicle finish.**

When vehicle is used in salt-water environment rinsing the vehicle with

---

## STORAGE AND PRESEASON PREPARATION

When a vehicle is not in use for more than 4 months, proper storage is a necessity.

If the vehicle is to remain inactive for more than 21 days, disconnect the BLACK (-) cable of the battery.

The use of a low amperage trickle charger is recommended to keep battery fully charged.

Before using your vehicle after storage, a preparation is required.

See an authorized Can-Am Off-road dealer, a repair shop, or a person of your own choosing to have your vehicle prepared properly.

While reading this Operator's Guide, remember that:



### **WARNING**

**Indicates a potential hazard which, if not avoided, could result in serious injury or death.**

This page is intentionally blank

# TECHNICAL INFORMATION

# VEHICLE IDENTIFICATION


The main components of your vehicle (engine and frame) are identified by different serial numbers.

It may sometimes become necessary to locate these numbers for warranty purposes or to trace your vehicle in the event of loss.

These numbers are required by the authorized Can-Am dealer to complete warranty claims properly.

We strongly recommend that you take note of all the serial numbers on your vehicle and supply them to your insurance company.

## Engine Identification Number (EIN)

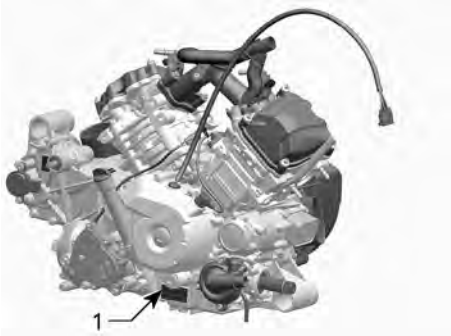


TYPICAL

- 1. EIN (Engine Identification Number)

## Vehicle Identification Number



### VIN LABEL - OTHER COUNTRIES

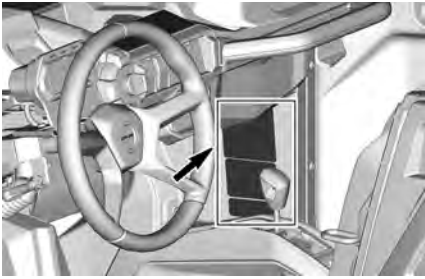

TYPICAL - VIN LABEL LOCATION


# COMPLIANCE LABELS

These labels indicate vehicle's compliance.


## ROHVA Compliance Label



Emission Control Information
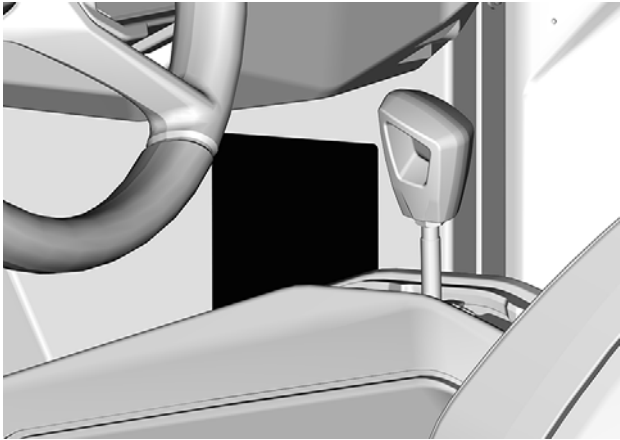
| CARB Model                                                                         | Other Model                                                          |
|------------------------------------------------------------------------------------|----------------------------------------------------------------------|
| <div><p>VEHICLE EMISSIONS CONTROL INFORMATION</p><p>11092</p><p>EC 121</p></div>   | <div><p>VEHICLE EMISSIONS CONTROL INFORMATION</p><p>EC 121</p></div> |
|  |                                                                      |

Ethanol Compliance Pictogram


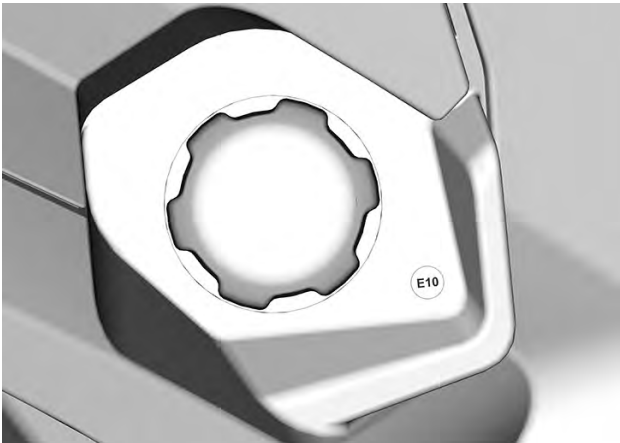


## Air Filter Maintenance Label

## Models Outside North America

**NOTICE**

To replace the air filter, refer to the operator's guide for the procedure.

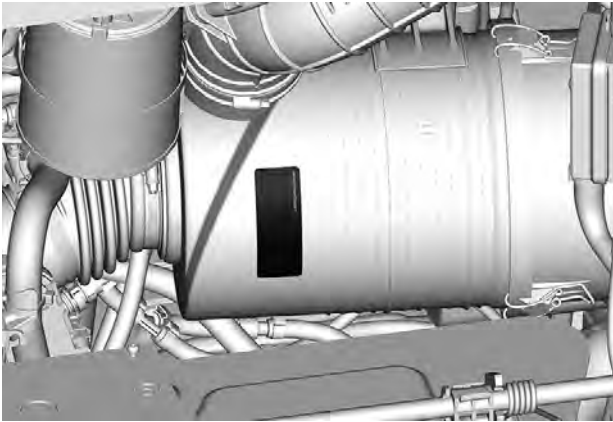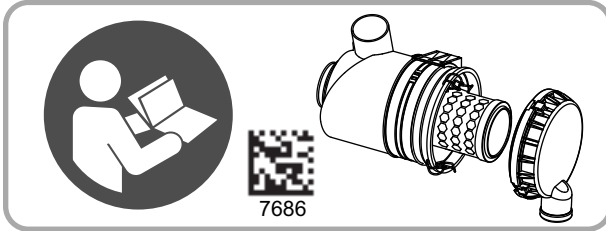

---

# BRP RF DESS POST GEN3 (CAN)

## USA and Canada

This device complies with FCC Part 15 and Industry Canada license exempt RSS standard(s). Operation is subject to the following two conditions:

1. this device may not cause interference, and
2. this device must accept any interference, including interference that may cause undesired operation of the device.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

Le dispositif a été évalué à satisfaire l'exigence générale de l'exposition aux rf. L'appareil peut être utilisé dans des conditions d'exposition portatif sans restriction.

L'émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence.

1. l'appareil ne doit pas produire de brouillage, et
2. l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

IC: 12006A-1001317030 For variant 1001316154 (CAN)

FCC ID: 2ACER 1001317030 For variant 1001316154 (CAN)

## Mexico



IFETEL

Marca: BRP Megatech

Número: BRME1023-28186

BRP Megatech Certificate number: 1450978

Modelo: 1001316154

NOM-208-SCFI-2016 (Disposición Técnica IFT-008-2015)

La operación de este equipo está sujeta a las siguientes dos condiciones:

1. Es posible que este equipo o dispositivo no cause interferencia perjudicial y
2. Este equipo o dispositivo debe aceptar cualquier interferencia, incluyendo la que pueda causar su operación no deseada.

## Brazil



Número: 05254-23-15603

BRP Megatech Certificate number: 1450991

Modelo: 1001316154

Este equipamento não tem direito à proteção contra interferência prejudicial e não pode causar interferência em sistemas devidamente autorizados. Para maiores informações, consulte o site da ANATEL.

## Japan

This device is granted pursuant to the Japanese Radio Law (電波法) and the Japanese Telecommunications Business Law (電気通信事業法). This device should not be modified (otherwise the granted designation number will become invalid).

## Europe

### Declaration of Conformity

Simplified EU Declaration of Conformity according Radio Equipment Directive 2014/ 53/EU



### DE

Hiermit erklärt BRP Megatech, dass der Funkanlagentyp 1001316154 der Richtlinie 2014/53/EU entspricht. Der vollständige Text der EU-Konformitätserklärung ist unter der folgenden Internetadresse verfügbar: <https://www.brp.com/en/corporatesocialresponsibility/productsafety.html>

### FR

Le soussigné, BRP Megatech, déclare que l'équipement radioélectrique du type 1001316154 est conforme à la directive 2014/53/UE. Le texte complet de la déclaration UE de conformité est disponible à l'adresse internet suivante: <https://www.brp.com/en/corporatesocialresponsibility/productsafety.html>

### BG

С настоящото BRP Megatech декларира, че този тип радиосъоръжение 1001316154 е в съответствие с Директива 2014/53/ЕС.

Цялостният текст на ЕС декларацията за съответствие може да се намери на следния интернет адрес: <https://www.brp.com/en/corporatesocialresponsibility/productsafety.html>

### EL

Με την παρούσα ο/η BRP Megatech, δηλώνει ότι ο ραδιοεξοπλισμός 1001316154 πληροί την οδηγία 2014/53/ΕΕ. Το πλήρες κείμενο της δήλωσης συμμόρφωσης ΕΕ διατίθεται στην ακόλουθη ιστοσελίδα στο διαδίκτυο: <https://www.brp.com/en/corporatesocialresponsibility/productsafety.html>

### CS

Tímto BRP Megatech prohlašuje, že typ rádiového zařízení 1001316154 je v souladu se směrnicí 2014/53/EU. Úplné znění EU prohlášení o shodě je k dispozici na této internetové adrese: <https://www.brp.com/en/corporatesocialresponsibility/productsafety.html>

**DA**

Hermed erklærer BRP Megatech, at radioudstyrstypen 1001316154 er i overensstemmelse med direktiv 2014/53/EU.

EU-overensstemmelseserklæringens fulde tekst kan findes på følgende internetadresse: <https://www.brp.com/en/corporatesocialresponsibility/productsafety.html>

**ET**

Käesolevaga deklareerib BRP Megatech, et käesolev raadioseadme tüüp 1001316154 vastab direktiivi 2014/53/EL nõuetele.

ELi vastavusdeklaratsiooni täielik tekst on kättesaadav järgmisel internetiaadressil: <https://www.brp.com/en/corporatesocialresponsibility/productsafety.html>

**ES**

Por la presente, BRP Megatech declara que el tipo de equipo radioeléctrico 1001316154 es conforme con la Directiva 2014/53/UE.

El texto completo de la declaración UE de conformidad está disponible en la dirección Internet siguiente: <https://www.brp.com/en/corporatesocialresponsibility/productsafety.html>

**FI**

BRP Megatech vakuuttaa, että radiolaitetyyppi 1001316154 on direktiivin 2014/53/EU mukainen. EU-vaatimustenmukaisuusvakuutuksen täysimittainen teksti on saatavilla seuraavassa internetosoitteessa: <https://www.brp.com/en/corporatesocialresponsibility/productsafety.html>

**EN**

Hereby, BRP Megatech declares that the radio equipment type 1001316154 is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: <https://www.brp.com/en/corporatesocialresponsibility/product-safety.html>

**HR**

BRP Megatech ovime izjavljuje da je radijska oprema tipa 1001316154 u skladu s Direktivom 2014/53/EU. Cjeloviti tekst EU izjave o sukladnosti dostupan je na sljedećoj internetskoj adresi: <https://www.brp.com/en/corporate-social-responsibility/productsafety.html>

**HU**

BRP Megatech igazolja, hogy a 1001316154 típusú rádióberendezés megfelel a 2014/53/EU irányelvnek. Az EU-megfelelőségi nyilatkozat teljes szövege elérhető a következő internetes címen: <https://www.brp.com/en/corporate-social-responsibility/productsafety.html>

**IT**

Il fabbricante, BRP Megatech, dichiara che il tipo di apparecchiatura radio 1001316154 è conforme alla direttiva 2014/53/UE.

Il testo completo della dichiarazione di conformità UE è disponibile al seguente indirizzo Internet: <https://www.brp.com/en/corporate-socialresponsibility/product-safety.html>

## LT

Aš, BRP Megatech, patvirtinu, kad radijo įrenginių tipas 1001316154 atitinka Direktyvą 2014/53/ES. Visas ES atitikties deklaracijos tekstas prieinamas šiuo interneto adresu: <https://www.brp.com/en/corporate-social-responsibility/productsafety.html>

## LV

Ar šo BRP Megatech deklarē, ka radioiekārta 1001316154 atbilst Direktīvai 2014/53/ES. Pilns ES atbilstības deklarācijas teksts ir pieejams šādā interneta vietnē: <https://www.brp.com/en/corporate-social-responsibility/productsafety.html>

## MT

B'dan, BRP Megatech, niddikjara li dan it-tip ta' tagħmir tar-radju 1001316154 huwa konformi mad-Direttiva 2014/53/UE. It-test kollu tad-dikjarazzjoni ta' konformità tal-UE huwa disponibbli f'dan l-indirizz tal-Internet li ġej: <https://www.brp.com/en/corporatesocialresponsibility/productsafety.html>

## NL

Hierbij verklaar ik, BRP Megatech, dat het type radioapparatuur 1001316154 conform is met Richtlijn 2014/53/EU.

De volledige tekst van de EU-conformiteitsverklaring kan worden geraadpleegd op het volgende internetadres: <https://www.brp.com/en/corporatesocialresponsibility/productsafety.html>

## PL

BRP Megatech niniejszym oświadczam, że typ urządzenia radiowego 1001316154 jest zgodny z dyrektywą 2014/53/UE. Pełny tekst deklaracji zgodności UE jest dostępny pod następującym adresem internetowym: <https://www.brp.com/en/corporatesocialresponsibility/productsafety.html>

## PT

O(a) abaixo assinado(a) BRP Megatech declara que o presente tipo de equipamento de rádio 1001316154 está em conformidade com a Diretiva 2014/53/UE.

O texto integral da declaração de conformidade está disponível no seguinte endereço de Internet: <https://www.brp.com/en/corporatesocialresponsibility/productsafety.html>

## RO

Prin prezenta, BRP Megatech declară că tipul de echipamente radio 1001316154 este în conformitate cu Directiva 2014/53/UE. Textul integral al declarației UE de conformitate este disponibil la următoarea adresă internet: <https://www.brp.com/en/corporatesocialresponsibility/productsafety.html>

## SV

Härmed försäkrar BRP Megatech att denna typ av radioutrustning 1001316154 överensstämmer med direktiv 2014/53/EU. Den fullständiga texten till EU-försäkringen om överensstämmelse finns på följande webbadress: <https://www.brp.com/en/corporatesocialresponsibility/productsafety.html>

## SL

BRP Megatech potrjuje, da je tip radijske opreme 1001316154 skladen z Direktivo 2014/53/EU. Celotno besedilo izjave EU o skladnosti je na voljo na naslednjem spletnem naslovu: <https://www.brp.com/en/corporatesocialresponsibility/productsafety.html>

## SK

BRP Megatech týmto vyhlasuje, že rádiové zariadenie typu 1001316154 je v súlade so smernicou 2014/53/EÚ. Úplné EÚ vyhlásenie o zhode je k dispozícii na tejto internetovej adrese: <https://www.brp.com/en/corporatesocialresponsibility/productsafety.html>

## IS

BRP Megatech lýsir því hér með yfir að þráðlausí fjarskiptabúnaðurinn 1001316154 er í samræmi við tilskipun 2014/53/ESB. Östyttan texta ESB-samræmisýfirlýsingarinnar er að finna á veffanginu: <https://www.brp.com/en/corporatesocialresponsibility/productsafety.html>

## Liechtenstein

Hiermit erklärt BRP Megatech, dass der Funkanlagentyp 1001316154 der Richtlinie 2014/53/EU entspricht. Der vollständige Text der EU-Konformitätserklärung ist unter der folgenden Internetadresse verfügbar: <https://www.brp.com/en/corporatesocialresponsibility/productsafety.html>

## NO

Hermed erklærer BRP Megatech at radioutstyrstypen 1001316154 er i samsvar med direktiv 2014/53/EU. Hele teksten i EU-samsvarserklæringen finnes på følgende internettadresse: <https://www.brp.com/en/corporatesocialresponsibility/productsafety.html>

## RU

Компания BRP Megatech настоящим заявляет, что радиотехническое оборудование категории 1001316154 отвечает требованиям Директивы 2014/53/EU.

Полный текст декларации соответствия ЕС доступен на сайте : <https://www.brp.com/en/corporatesocialresponsibility/productsafety.html>

---

# EVAPORATIVE EMISSION CONTROL SYSTEM

## California Models with Evaporative Emission Control System

Beginning with the 2018 model-year vehicles, some California models are certified to meet the CARB (California Air Resources Board) TP-933. These models are equipped with an evaporative emission control system consisting of a low permeation fuel tank (LPFT), low permeation fuel lines (LPFL) and an actively purged carbon canister.

The following statement is required by the CCR (California Code of Regulation): An add-on or modified part must be compliant with applicable ARB evaporative emission control standards. A violation of this requirement is punishable by civil and/or criminal punishment.

---

# NOISE EMISSION CONTROL SYSTEM REGULATION

## USA and Canada Only

### **Tampering with Noise Control System Is Prohibited!**

U.S. Federal law and Canadian provincial laws may prohibit the following acts or the causing there of:

1. The removal or rendering inoperative by any person other than for purposes of maintenance, repair or replacement of any device or element of design incorporated into any new vehicle for the purpose of noise control prior to its sale or delivery to the ultimate purchaser or while it is in use or
2. The use of the vehicle after such device or element of design has been removed or rendered inoperative by any person.

### **Among those Acts Presumed to Constitute Tampering Are the Acts Listed Below:**

1. Removal or alteration or the puncturing of the muffler or any engine component which conducts removal of engine exhaust gases.
2. Removal or alteration or the puncturing of any part of the intake system.
3. Replacing any moving parts of the vehicle or parts of the exhaust or intake system, with parts other than those specified by the manufacturer.
4. Lack of proper maintenance.

---

# NOISE EMISSION AND VIBRATION VALUES (MACHINERY DIRECTIVE 2006/42/EC COMPLIANCE MODELS)

Noise emission and vibration values are measured in accordance with Machinery Directive 2006/42/EC on a paved surface, at neutral or without belt.

| ENGINE    |                                   | HD10                                     |
|-----------|-----------------------------------|------------------------------------------|
| Noise     | Sound Pressure Level ( $L_{pA}$ ) | 83 dB (A) (Uncertainty ( $K_{pA}$ ) 3dB) |
|           | Sound Power Level ( $L_{wA}$ )    | 97 dB (A) (Uncertainty ( $K_{wA}$ ) 3dB) |
| Vibration | Hand-arm system                   | Less than 2.5 m/s <sup>2</sup>           |
|           | Whole body at seat                | Less than 0.5 m/s <sup>2</sup>           |

# DECLARATION OF CONFORMITY

## EU Declaration of Conformity



ADVENTURE BY DESIGN

505 de la Montagne Street  
Valcourt (Québec) J0E 2L0  
Canada

www.brp.com

### EU Declaration of Conformity

Authorized Representative: BRP-Rotax GmbH Co. KG, Rotaxstrasse 1, Gunskirchen, A-4623 Austria

This declaration of conformity is issued under the sole responsibility of the manufacturer.

The undersigned, representing the manufacturer, hereby declares that model year 2026 **Side by Side Vehicles** marked with the **CE** mark and a 17-character vehicle identification number (VIN) structured as 3JBxxxxxxTxxxxxxx under commercial names Can-Am Traxter, Can-Am Maverick Sport, Can-Am Maverick, and Can-Am Maverick R comply with all the relevant provisions of the following Directives and Regulations:

|                                                                                                                                                  |                                                                            |
|--------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------|
| Machinery (MD) Directive 2006/42/EC as amended up to and including Regulation (EU) 2019/1243                                                     | ISO 12100:2010 & EN 16990:2020                                             |
| Non-Road Mobile Machinery (NRMM) Regulation (EU) 2016/1628 on gaseous pollutants as amended up to and including Regulation (EU) 2022/992         | Category ATS, Stage V emission limits                                      |
| Electromagnetic Compatibility (EMC) Directive 2014/30/EU as amended up to and including Regulation (EU) 2018/1139                                | CISPR 12:2007/A1:2009 & IEC 61000-6-1:2007 or UN R10.05 or later version   |
| Battery Directive 2006/66/EC as amended up to and including Directive (EU) 2018/849 and, Regulation (EU) 1103/2010 on battery capacity labelling | EN 50342-7:2015                                                            |
| Radio Equipment (RED) Directive 2014/53/EU as amended up to and including Regulation (EU) 2023/1717                                              | Art. 3.1a: IEC 62366-1:2014<br>Art. 3.1b: CISPR 25:2016 & ISO 11452-2:2004 |
| (If fitted with radio frequency (RF) D.E.S.S. key)                                                                                               | Art. 3.2: ETSI EN 300 330 V2.1.1:2017                                      |

*Luc Bouchard*

Luc Bouchard (Mars, 2025 12:06 EST)

Luc Bouchard, Eng.

Director, Product Development, Can-Am SSV  
Bombardier Recreational Products Inc.

Valcourt, QC, Canada

06/03/2025

BRP-ROTAX LYNX 500-5000 EVERADE ROTAX CAN-AM

# UK Declaration of Conformity



ADVENTURE BY DESIGN

565 de la Montague Street  
Valcourt (Québec) J0E 2L0  
Canada

www.brp.com

## UK Declaration of Conformity

**Authorized Representative:** BRP Recreational Products UK Ltd., Mitchell Charlesworth  
Suites C, D, E & F, 14th Floor The Plaza, 100 Old Hall Street, Liverpool, L3 9QJ

This declaration of conformity is issued under the sole responsibility of the manufacturer.

The undersigned, representing the manufacturer, hereby declares that model year **2026 Side by Side Vehicles** marked with the <sup>UK</sup>CA mark and a 17-character vehicle identification number (VIN) structured as **3JBxxxxxTxxxxxx** under commercial names **Can-Am Traxter, Can-Am Maverick Sport, Can-Am Maverick**, and **Can-Am Maverick R** comply with all the relevant provisions of the following Statutory Instruments:

|                                                                                                                                                                           |                                                                            |
|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------|
| Supply of Machinery (Safety) Regulations 2008, UK SI 2008/1597 as amended up to and including SI 2024/696                                                                 | ISO 12100:2010 & EN 16990:2020                                             |
| Non-Road Mobile Machinery (Type-Approval and Emission of Gaseous and Particulate Pollutants) Regulations 2018, UK SI 2018/764 as amended up to and including SI 2022/1273 | Category ATS,<br>Stage V emission limits                                   |
| Electromagnetic Compatibility Regulations 2016, UK SI 2016/1091 as amended up to and including SI 2024/696                                                                | CISPR 12:2007/A1:2009 & IEC 61000-6-1:2007 or UN R10.05 or later version   |
| Batteries and Accumulators (Placing on the Market) Regulations 2008, UK SI 2008/2164 as amended up to and including UK SI 2020/1540                                       | EN 50342-7:2015                                                            |
| Radio Equipment Regulations 2017, UK SI 2017/1206 as amended up to and including SI 2024/1231                                                                             | Art. 3.1a: IEC 62368-1:2014<br>Art. 3.1b: CISPR 25:2016 & ISO 11452-2:2004 |
| (If fitted with radio frequency (RF) D.E.S.S. key)                                                                                                                        | Art. 3.2: ETSI EN 300 330 V2.1.1:2017                                      |

*Luc Bouchard*

Luc Bouchard (Mar 6, 2025 12:06 EST)

Luc Bouchard, Eng.

Director, Product Development, Can-Am SSV  
Bombardier Recreational Products Inc.

Valcourt, QC, Canada

06/03/2025

SKI-DOD LYNX SEA-DOD. EVERIDE ROTAX CAN-AM

**Left blank for Eurasian Conformity  
mark where applicable**

This page is intentionally blank

# **TECHNICAL SPECIFICATIONS**

# TECHNICAL SPECIFICATIONS

| Engine 700              |                                                           |
|-------------------------|-----------------------------------------------------------|
| Engine type             | ROTAX® Mono cylinder                                      |
|                         | 4-stroke, Double Over Head Camshaft (DOHC), liquid cooled |
| Number of cylinders     | 1                                                         |
| Number of valves        | 4 valves (mechanical adjustment)                          |
| Intake valve clearance  | 0.11 mm to 0.19 mm<br>(.0043 in to .0074 in)              |
| Exhaust valve clearance | 0.31 mm to 0.39 mm<br>(.0122 in to .0153 in)              |
| Bore                    | 97 mm<br>(3.82 in)                                        |
| Stroke                  | 88 mm<br>(3.46 in)                                        |
| Displacement            | 650 cm <sup>3</sup><br>(39.7 in <sup>3</sup> )            |
| Exhaust system          | Spark arrestor approved by USDA Forest Service            |
| Air filter              | Synthetic paper filter                                    |

| Engine 1000R            |                                                           |
|-------------------------|-----------------------------------------------------------|
| Engine type             | ROTAX® 2 cylinders (V-Twin)                               |
|                         | 4-stroke, Single Over Head Camshaft (SOHC), liquid cooled |
| Number of cylinders     | 2                                                         |
| Number of valves        | 8 valves (mechanical adjustment)                          |
| Intake valve clearance  | 0.06 mm to 0.14 mm<br>(.0024 in to .0055 in)              |
| Exhaust valve clearance | 0.11 mm to 0.19 mm<br>(.0043 in to .0075 in)              |

| Engine 1000R   |                                                   |
|----------------|---------------------------------------------------|
| Bore           | 91 mm<br>(3.58 in)                                |
| Stroke         | 75 mm<br>(2.95 in)                                |
| Displacement   | 976 cm <sup>3</sup><br>(59.56 in <sup>3</sup> )   |
| Exhaust system | Spark arrestor approved<br>by USDA Forest Service |
| Air filter     | Synthetic paper filter                            |

| Lubrication System |                     |          |                                                                                                       |
|--------------------|---------------------|----------|-------------------------------------------------------------------------------------------------------|
| Type               |                     | Wet sump |                                                                                                       |
| Oil filter         | Oil filter          |          | Replaceable cartridge<br>oil filter (paper type)                                                      |
| Engine oil         | Capacity            | 700      | 2.7 L<br>(2.85 qt (liq.,US))                                                                          |
|                    |                     | 1000R    | 2 L<br>(2.1 qt (liq.,US))                                                                             |
|                    | Recommended XPS oil |          | <i>See Recommended<br/>Engine Oil in the<br/>Maintenance<br/>Procedures section of<br/>this guide</i> |

| Cooling System |                         |                                                                                    |
|----------------|-------------------------|------------------------------------------------------------------------------------|
| Coolant        | Recommended XPS coolant | See Recommended Engine Coolant in the Maintenance Procedures section of this guide |
|                | Capacity                | 6.7 L<br>(1.77 gal (liq.,US))                                                      |

| Transmission |       |                                          |
|--------------|-------|------------------------------------------|
| Type         |       | CVT (Continuously Variable Transmission) |
| Engagement   | 700   | 2050 RPM                                 |
|              | 1000R | 1950 RPM                                 |

| Gearbox     |                             |       |                                                                                 |
|-------------|-----------------------------|-------|---------------------------------------------------------------------------------|
| Type        |                             |       | Dual range (HI-LO) with PARK, neutral and reverse                               |
| Gearbox oil | Capacity                    | 700   | 0.5 L<br>(0.53 qt (liq.,US))                                                    |
|             |                             | 1000R | Approximately:<br>1.25 l<br>(1.3 qt (liq.,US))                                  |
|             | Recommended XPS gearbox oil |       | See Recommended Gearbox Oil in the Maintenance Procedures section of this guide |

| Rear Final Drive (700 engine only) |          |                               |
|------------------------------------|----------|-------------------------------|
| Type                               |          | Spiral bevel gear final drive |
| Gearbox oil                        | Capacity | 500 ml<br>(16.9 fl oz (US))   |

| Rear Final Drive (700 engine only) |       |                             |       |                                                                                 |
|------------------------------------|-------|-----------------------------|-------|---------------------------------------------------------------------------------|
|                                    |       | Recommended XPS gearbox oil |       | See Recommended Gearbox Oil in the Maintenance Procedures section of this guide |
| Electrical System                  |       |                             |       |                                                                                 |
| Magneto generator output           |       |                             |       | 650 W @ 5000 RPM                                                                |
| Ignition system type               |       |                             |       | IDI (Inductive Discharge Ignition)                                              |
| Spark plug                         | 700   | Quantity                    |       | 1                                                                               |
|                                    |       | Make and type               |       | NGK LMAR8AI-8                                                                   |
|                                    |       | Gap                         |       | 0.7 to 0.8 mm<br>(.028 to .031 in)                                              |
|                                    | 1000R | Quantity                    |       | 2                                                                               |
|                                    |       | Make and type               |       | NGK LMAR8C-9                                                                    |
|                                    |       | Gap                         |       | 0.8 to 0.9 mm<br>(.031 to .035 in)                                              |
| Battery                            |       | Type                        |       | Maintenance free —SLA<br>(Sealed Lead Acid)                                     |
|                                    |       | Voltage                     |       | 12 volts                                                                        |
|                                    |       | Nominal rating              |       | 18 A•h                                                                          |
|                                    |       | Power starter output        | 700   | 1 kW                                                                            |
|                                    |       |                             | 1000R | 0.7 kW                                                                          |
| Headlight                          |       | XT-P                        |       | 2x 20W LED                                                                      |
|                                    |       | All other models            |       | 4x 55W H11                                                                      |
| Taillight                          |       |                             |       | 2.3/3.5 W LED                                                                   |

| Electrical System |                                                         |           |
|-------------------|---------------------------------------------------------|-----------|
| Signature lights  | XT<br>XT-P                                              | 2x 2W LED |
| Fuses             | Refer to <i>Fuses</i> in the <i>Maintenance</i> section |           |

| Fuel System                                 |                       |                       |                                                |
|---------------------------------------------|-----------------------|-----------------------|------------------------------------------------|
| Fuel delivery                               | Type                  |                       | Electronic fuel injection (EFI) with iTC       |
| Throttle body                               |                       | 700                   | 46 mm with ETA                                 |
|                                             |                       | 1000R                 | 54 mm with ETA                                 |
| Fuel pump                                   | Type                  |                       | Electric (in fuel tank)                        |
| Idle speed                                  |                       | ECO mode              | 1350 ± 100 RPM                                 |
|                                             |                       | Sport mode            | 1500 ± 100 RPM                                 |
| Fuel                                        | Type                  | 700                   | Regular unleaded gasoline                      |
|                                             |                       | 1000R                 | Premium unleaded gasoline                      |
|                                             | Minimum Octane rating | North America         | 87 AKI (R+M)/2 (700)<br>91 AKI (R+M)/2 (1000R) |
|                                             |                       | Outside North America | 91 RON (700)<br>95 RON (1000R)                 |
| Fuel tank capacity                          |                       |                       | ± 38 L<br>(10 gal (liq.,US))                   |
| Fuel remaining when low fuel light turns ON |                       |                       | ± 8.5 L<br>(2.2 gal (liq.,US))                 |

| Drive System           |          |                  |                           |
|------------------------|----------|------------------|---------------------------|
| Drive system type      |          |                  | Selectable 2WD/4WD        |
| Front differential oil | Capacity | Smart-Lok        | 350 ml<br>(12 fl oz (US)) |
|                        |          | All other models | 400 ml<br>(14 fl oz (US)) |

| Drive System                                                           |                                  |                                                                                                 |
|------------------------------------------------------------------------|----------------------------------|-------------------------------------------------------------------------------------------------|
|                                                                        | Recommended XPS differential oil | See Recommended Front Differential Oil in the Maintenance Procedures section of this guide      |
| Front drive                                                            | XT-P                             | Selectable 2WD / 4WD with Smart-Lok electronic control locking front differential, spiral gears |
|                                                                        | All other models                 | Selectable 2WD / 4WD with auto-locking front differential, spiral gears                         |
| Front drive ratio                                                      |                                  | 3.6:1                                                                                           |
| Rear drive                                                             |                                  | Lockable differential                                                                           |
| Rear drive ratio                                                       | 700                              | 3.6:1                                                                                           |
|                                                                        | 1000R                            | 3.43:1                                                                                          |
| CV joint grease                                                        |                                  | CV joint grease                                                                                 |
| Spline's propeller shaft grease (grease applied to spline connections) |                                  | XPS Propeller shaft grease or equivalent                                                        |

| Steering       |                          |
|----------------|--------------------------|
| Type           | Rack and pinion          |
| Steering wheel | Adjustable tilt steering |

| Front Suspension  |               |                                          |
|-------------------|---------------|------------------------------------------|
| Suspension type   | DPS XT 700    | Double A-arms with stabilizer bar        |
|                   | XT 1000R XT-P | Double arched A-arms with stabilizer bar |
| Suspension travel | DPS XT 700    | 318 mm (12.5 in)                         |
|                   | XT 1000R      | 381 mm (15 in)                           |

| Front Suspension |          |           |                                                                  |
|------------------|----------|-----------|------------------------------------------------------------------|
|                  |          | XT-P      | 356 mm<br>(14 in)                                                |
| Shock absorber   | Quantity |           | 2                                                                |
|                  | Type     | DPS<br>XT | Twin tube, gas charged                                           |
|                  |          | XT-P      | FOX† 2.5 PODIUM<br>Piggyback with QS3†<br>compression adjustment |

| Rear Suspension   |          |                  |                                                                  |
|-------------------|----------|------------------|------------------------------------------------------------------|
| Suspension type   |          | DPS<br>XT 700    | TTA with stabilizer bar                                          |
|                   |          | XT 1000R<br>XT-P | Arched TTA with<br>stabilizer bar                                |
| Suspension travel |          | DPS<br>XT 700    | 330 mm<br>(13 in)                                                |
|                   |          | XT 1000R         | 381 mm<br>(15 in)                                                |
|                   |          | XT-P             | 356 mm<br>(14 in)                                                |
| Shock absorber    | Quantity |                  | 2                                                                |
|                   | Type     | DPS<br>XT        | Twin tube, gas charged                                           |
|                   |          | XT-P             | FOX† 2.5 PODIUM<br>Piggyback with QS3†<br>compression adjustment |

| Brakes      |      |                                                                                                              |
|-------------|------|--------------------------------------------------------------------------------------------------------------|
| Front brake | Qty  | 2                                                                                                            |
|             | Type | 220 mm<br>(8.7 in) ventilated brake<br>disc with hydraulic<br>twin-pistons calipers of<br>32 mm<br>(1.26 in) |
| Rear brake  | Qty  | 2                                                                                                            |

| Brakes                       |          |                                                                                              |
|------------------------------|----------|----------------------------------------------------------------------------------------------|
|                              | Type     | 220 mm (8.7 in) ventilated brake disc with hydraulic twin-pistons calipers of 28 mm (1.1 in) |
| Brake fluid                  | Type     | DOT 4                                                                                        |
|                              | Capacity | Approximately 295 ml (10 fl oz (US))                                                         |
| Caliper                      |          | Floating                                                                                     |
| Brake pad material           |          | Metallic                                                                                     |
| Minimum brake pad thickness  |          | 0.5 mm (.02 in)                                                                              |
| Minimum brake disc thickness |          | 4 mm (.157 in)                                                                               |
| Maximum brake disc warpage   |          | 0.2 mm (.01 in)                                                                              |

| Tires     |       |      |                                                                                                                                                   |
|-----------|-------|------|---------------------------------------------------------------------------------------------------------------------------------------------------|
| Pressure  |       |      | Recommended tire inflation pressure is found on the Tire Label. Refer to appropriate <i>Important On-Product Labels</i> section for its location. |
| Tire size | Front | DPS  | 686 x 229 x 356 mm (27 x 9 x 14 in)                                                                                                               |
|           |       | XT   | 711 x 229 x 356 mm (28 x 9 x 14 in)                                                                                                               |
|           |       | XT-P | 762 x 254 x 381 mm (30 x 10 x 15 in)                                                                                                              |
|           | Rear  | DPS  | 686 x 279 x 356 mm (27 x 11 x 14 in)                                                                                                              |
|           |       | XT   | 711 x 279 x 356 mm (28 x 11 x 14 in)                                                                                                              |

| Tires                     |  |      |                                         |
|---------------------------|--|------|-----------------------------------------|
|                           |  | XT-P | 762 x 254 x 381 mm<br>(30 x 10 x 15 in) |
| Minimum tire thread depth |  |      | 3 mm<br>(.118 in)                       |

| Wheels                |       |               |                                                                      |
|-----------------------|-------|---------------|----------------------------------------------------------------------|
| Type                  |       | DPS           | Steel                                                                |
|                       |       | XT            | Cast aluminum wheels                                                 |
|                       |       | XT-P          | Cast aluminum beadlock wheels                                        |
| Rim size              | Front | DPS<br>XT 700 | 35.6 x 16.5 cm<br>(14 x 6.5 in)                                      |
|                       |       | XT 1000R      | 35.6 x 18 cm<br>(14 x 7 in)                                          |
|                       |       | XT-P          | 38.1 x 17.3 cm<br>(15 x 7 in)                                        |
|                       | Rear  | DPS<br>XT     | 35.6 x 21.6 cm<br>(14 x 8.5 in)                                      |
|                       |       | XT-P          | 38.1 x 17.3 cm<br>(15 x 7 in)                                        |
| Wheel lug nuts torque |       |               | 100 ± 10 Nm<br>(74 ± 7 lbf-ft)                                       |
| Wheel Offset          | Front | DPS<br>XT 700 | 10 mm<br>(0.4 in)                                                    |
|                       |       | XT 1000R      | 41.2 mm<br>(1.6 in)                                                  |
|                       |       | XT-P          | 46.4 mm<br>(1.8 in)                                                  |
|                       | Rear  | DPS<br>XT 700 | 22.6 mm<br>(0.9 in)                                                  |
|                       |       | XT 1000R      | 51 mm<br>(2 in)                                                      |
|                       |       | XT-P          | 46.4 mm<br>(1.8 in)                                                  |
| Chassis               |       |               |                                                                      |
| Cage type             |       |               | Profiled tube section,<br>high strength steel, ISO<br>3471 certified |

| Dimensions       |       |                  |                        |
|------------------|-------|------------------|------------------------|
| Overall length   |       | DPS              | 326.4 cm<br>(128.5 in) |
|                  |       | XT<br>XT-P       | 330.2 cm<br>(130 in)   |
| Overall width    |       | DPS<br>XT 700    | 157.5 cm<br>(62 in)    |
|                  |       | XT 1000R<br>XT-P | 162.6 cm<br>(64 in)    |
| Overall height   |       | DPS              | 180.2 cm<br>(70.5 in)  |
|                  |       | XT               | 188 cm<br>(74 in)      |
|                  |       | XT-P             | 189.6 cm<br>(74.5 in)  |
| Wheelbase        |       |                  | 230.1 cm<br>(90.6 in)  |
| Wheel track      | Front | DPS<br>XT 700    | 135.4 cm<br>(53.3 in)  |
|                  |       | XT 1000R         | 139.5 cm<br>(54.9 in)  |
|                  |       | XT-P             | 141.2 cm<br>(55.6 in)  |
|                  | Rear  | DPS<br>XT 700    | 128.8 cm<br>(50.7 in)  |
|                  |       | XT 1000R         | 134 cm<br>(52.8 in)    |
|                  |       | XT-P             | 136.5 cm<br>(53.7 in)  |
| Ground clearance |       | DPS              | 31.8 cm<br>(12.5 in)   |
|                  |       | XT               | 33 cm<br>(13 in)       |
|                  |       | XT-P             | 34.3 cm<br>(13.5 in)   |

| Loading Capacity and Weight                                                                         |           |                        |
|-----------------------------------------------------------------------------------------------------|-----------|------------------------|
| Dry weight                                                                                          | DPS 700   | 702.6 kg<br>(1,549 lb) |
|                                                                                                     | DPS 1000R | 734.5 kg<br>(1,619 lb) |
|                                                                                                     | XT 700    | 723.4 kg<br>(1,594 lb) |
|                                                                                                     | XT 1000R  | 768.8 kg<br>(1,694 lb) |
|                                                                                                     | XT-P      | 791.4 kg<br>(1,744 lb) |
| Weight distribution (front/rear)                                                                    | DPS 700   | 43/57                  |
|                                                                                                     | DPS 1000R | 39/61                  |
|                                                                                                     | XT 700    | 43/57                  |
|                                                                                                     | XT 1000R  | 41/59                  |
|                                                                                                     | XT-P      | 42/58                  |
| Cargo box capacity                                                                                  |           | 272 kg<br>(600 lb)     |
| Total vehicle payload allowed (including driver, passengers, all other loads and added accessories) |           | 467 kg<br>(1,030 lb)   |
| Gross vehicle weight rating                                                                         | DPS 700   | 1 216 kg<br>(2,681 lb) |
|                                                                                                     | DPS 1000R | 1 221 kg<br>(2,692 lb) |
|                                                                                                     | XT 700    | 1 222 kg<br>(2,694 lb) |
|                                                                                                     | XT 1000R  | 1 261 kg<br>(2,780 lb) |
|                                                                                                     | XT-P      | 1 285 kg<br>(2,833 lb) |
| Towing capacity                                                                                     |           | 907 kg<br>(2,000 lb)   |

| Loading Capacity and Weight |                              |
|-----------------------------|------------------------------|
| Tongue capacity             | 91 kg<br>(200 lb)            |
| Receiver Hitch              | 50.8 x 50.8 mm<br>(2 x 2 in) |

# **TROUBLESHOOTING**

---

# TROUBLESHOOTING GUIDELINES

## CVT Belt Is Slipping

### 1. Water has entered in the CVT.

- *Refer to Special Procedures.*

## “–” Is Displayed On the Gearbox Position Display

### 1. Shift lever is between 2 positions.

- *Properly position the shift lever in the desired position.*

### 2. Shift lever is not properly adjusted.

- *Contact an authorized Can-Am Off-road dealer.*

### 3. Electrical communication error.

- *Contact an authorized Can-Am Off-road dealer.*

## Engine Does Not Turn

### 1. D.E.S.S. key is not installed on D.E.S.S. post.

- *Securely install key to D.E.S.S. post.*

### 2. D.E.S.S. key not recognized is displayed in the multifunction gauge.

- *Clean D.E.S.S. key. If message still displayed after cleaning, see an authorized Can-Am Off-road dealer.*

### 3. Shift lever is not set on PARK.

- *Set shift lever to either in PARK or press the brake pedal.*

### 4. Burnt fuse.

- *Check fuses.*

### 5. Weak battery or loose connections.

- *Check charging system fuse.*
- *Check fault message in cluster.*
- *Check battery connections and terminals condition.*
- *Have the battery checked by an authorized Can-Am Off-road dealer.*

### 6. Defective engine start button.

- *Contact an authorized Can-Am Off-road dealer.*

### 7. Defective starter solenoid.

- *Contact an authorized Can-Am Off-road dealer.*

## Engine Turns Over But Fails To Start

### 1. Flooded engine

- Active the drowned mode to start the engine. Refer to *Flooded Engine in Special Procedures* section.

## **2. No fuel to the engine (spark plug dry when removed).**

- Check fuel tank level.
- Check fuel pump fuse.
- Obstructed fuel pump pre-filter or fuel pump failure.

See an authorized Can-Am Off-road dealer, a repair shop, or a person of your own choosing for maintenance, repair, or replacement.

Please refer to the US EPA Emission-Related Warranty contained herein for information about warranty claims.

## **3. Spark plug/ignition (no spark).**

- Check ignition fuse.
- Remove spark plug then reconnect to ignition coil.
- Start engine with spark plug grounded to the engine away from spark plug hole. If no spark appears, replace spark plug.

If trouble persists, see an authorized Can-Am Off-road dealer, a repair shop, or a person of your own choosing for maintenance, repair, or replacement.

Please refer to the US EPA Emission-Related Warranty contained herein for information about warranty claims.

## **Engine Lacks Acceleration or Power**

### **1. Seat belt not buckled properly. Check cluster message.**

- Buckle up seat belt.

### **2. Fouled or damaged spark plug.**

- Replace spark plugs.

### **3. Engine air filter plugged or dirty.**

- Check air filter and replace if necessary.
- Check deposits in engine air filter housing.

### **4. Water in CVT**

- Drain water from CVT. Refer to *Special Procedures* section.

### **5. CVT dirty or worn-out.**

- Contact an authorized Can-Am Off-road dealer.

### **6. Lack of fuel**

- Dirty or clogged fuel pump pre-filter. See an authorized Can-Am Off-road dealer, a repair shop, or a person of your own choosing for maintenance, repair, or replacement. Please refer to the US EPA Emission-Related Warranty contained herein for information about warranty claims.

## **7. Engine is in Torque Limitation mode (if equipped).**

- *Engine torque is gradually limited for protection when coolant temperature is too high. Check multifunction gauge display for engine temperature.*
- *Let engine cool down.*

## **8. Engine is in limp home mode.**

- *Multifunction gauge CHECK ENGINE indicator lamp is on and display shows LIMP HOME. See an authorized Can-Am Off-road dealer, a repair shop, or a person of your own choosing for maintenance, repair, or replacement. Please refer to the US EPA Emission-Related Warranty contained herein for information about warranty claims.*

## **Engine Overheats**

### **1. Low coolant level in cooling system.**

- *Check coolant level and refill. See Maintenance Procedures. Seek service from an authorized Can-Am Off-road dealer, a repair shop, or a person of your own choosing for maintenance, repair, or replacement. Please refer to the US EPA Emission-related warranty contained herein for information about warranty claims.*

### **2. Cooling fan is not working.**

- *Ensure cooling fan is not jammed and working properly.*
- *Check fan fuse. See Fuses and Fusible Links in the Maintenance Procedures.*

### **3. Dirty radiators fins.**

- *Check and clean radiator fins. See Maintenance Procedures.*

## **Engine Misfire**

### **1. Fouled/damaged/worn spark plug.**

- *Replace spark plugs as required.*

### **2. Water in fuel.**

- *Drain fuel system and refill with fresh fuel.*

## **The RPM Increases But the Vehicle Does Not Move**

### **1. Water in the CVT.**

- *Drain water from CVT. See Special Procedures section.*

### **2. CVT dirty or worn-out or belt failure.**

- *Contact an authorized Can-Am Off-road dealer.*

## **Partial or No Response From the Accelerator Pedal - Check Engine Is ON and PPS Fault Message Is Displayed**

### **1. Partial failure of the accelerator pedal sensors (PPS).**

- *Contact an authorized Can-Am Off-road dealer.*

### **2. Total failure of the accelerator pedal sensors (PPS).**

- *Contact an authorized Can-Am Off-road dealer.*

---

## DIGITAL DISPLAY MESSAGES

If an abnormal engine condition occurs, the following messages can be combined with a pilot lamp.

| Message                     | Description                                                                                                                                    |
|-----------------------------|------------------------------------------------------------------------------------------------------------------------------------------------|
| D.E.S.S. KEY NOT RECOGNIZED | D.E.S.S. key requires cleaning. If message still displayed after cleaning, See an authorized Can-Am Off-road dealer.                           |
| BAD KEY                     | Indicates that you have used the wrong D.E.S.S. key, use the proper key for this vehicle.                                                      |
| CHECK ENGINE                | All active or previously activated faults that require attention.<br>No engine limitation engaged.                                             |
| LIMP HOME                   | Critical faults requiring diagnostic as soon as possible.<br>An engine limitation is engaged and/or the engine behavior is modified.           |
| TPS FAULT                   | Throttle body fault, generally followed by a Limp Home message.                                                                                |
| BRAKE SWITCH FAULT          | Brake signal fault.                                                                                                                            |
| CHECK DPS                   | Check engine pilot light on. Indicates that the DPS (Dynamic Power Steering) does not work properly. See an authorized Can-Am Off-road dealer. |
| PPS FAULT                   | Faulty Pedal Position Sensor(s) (PPS). See an authorized Can-Am Off-road dealer.                                                               |
| FUEL SENSOR FAULT           | When the fuel sender resistor value is out of range the digital display module will detect it and display the message.                         |
| CHECK SMART-LOK             | Check engine pilot light on. Indicates that the Smart-Lok does not work properly. See an authorized Can-Am Off-road dealer.                    |

# WARRANTY

---

# **BRP LIMITED WARRANTY FOR CANADA AND USA: 2026 CAN-AM® SSV**

## **1) Scope of the Limited Warranty**

Bombardier Recreational Products Inc. ("BRP") warrants its 2026 Can-Am SSV (the "Product") sold by an authorized dealer in the United States of America ("USA") and in Canada from defects in material or workmanship for the period and under the conditions described below.

This limited warranty will become null and void if:

1. the Product was used for racing or any other competitive activity, at any point, even by a previous owner; or
2. the Product has been altered or modified in such a way so as to adversely affect its operation, performance or durability, or has been altered or modified to change its intended use.

Non-factory installed parts and accessories are not covered under this limited warranty. Please refer to the applicable parts and accessories limited warranty text.

## **2) Limitations of Liability**

TO THE EXTENT PERMITTED BY LAW, THIS WARRANTY IS EXPRESSLY GIVEN AND ACCEPTED IN LIEU OF ANY AND ALL OTHER WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING WITHOUT LIMITATION ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. TO THE EXTENT THAT THEY CANNOT BE DISCLAIMED, THE IMPLIED WARRANTIES ARE LIMITED IN DURATION TO THE LIFE OF THE EXPRESS WARRANTY. INCIDENTAL AND CONSEQUENTIAL DAMAGES ARE EXCLUDED FROM COVERAGE UNDER THIS WARRANTY. SOME STATES/PROVINCES DO NOT ALLOW FOR THE DISCLAIMERS, LIMITATIONS AND EXCLUSIONS IDENTIFIED ABOVE. AS A RESULT, THEY MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU SPECIFIC RIGHTS, AND YOU MAY ALSO HAVE OTHER LEGAL RIGHTS WHICH MAY VARY FROM STATE TO STATE, OR PROVINCE TO PROVINCE.

Neither the distributor, any BRP Dealer nor any other person has been authorized to make any affirmation, representation or warranty regarding the Product, other than those contained in this limited warranty, and if made, shall not be enforceable against BRP.

BRP reserves the right to modify this limited warranty at any time, being understood that such modification will not alter the warranty conditions applicable to the Products sold while this warranty is in effect.

## **3) EXCLUSIONS – Are Not Warranted**

The following are not warranted under any circumstances:

- Normal wear and tear;
- Routine maintenance items, tune ups, adjustments;
- Damage caused by negligence or failure to provide proper maintenance and/or storage, as described in the Operator's Guide;
- Damage resulting from removal of parts, improper repairs, service, maintenance, modifications or use of parts not manufactured or approved by BRP or

resulting from repairs done by a person that is not an authorized servicing BRP Dealer;

- Damage caused by abuse, abnormal use, neglect or operation of the Product in a manner inconsistent with the recommended operation described in the Product's Operator's Guide;
- Damage resulting from accident, submersion, fire, theft, vandalism or any act of God;
- Operation with fuels, oils or lubricants which are not suitable for use with the Product (see the Operator's Guide);
- Damages from rust, corrosion or exposure to the elements;
- Damage resulting from water or snow ingestion;
- Incidental or consequential damages, or damages of any kind including without limitation transportation expenses, towing, storage, telephone, rental, taxi, inconvenience, insurance coverage, loan payments, loss of time, loss of income or time missed for downtime experience due to service work.

#### 4) Warranty Coverage Period

This limited warranty will be in effect from (1) the date of delivery to the first retail consumer, or (2) the date the Product is first put into use, whichever occurs first and for the applicable period below:

1. **TWELVE (12) consecutive months**, for private use or commercial use owners.
2. **For emission-related components**, please also refer to the US EPA Emission-Related Warranty.
3. **For evaporative emission-related components of California models equipped with evaporative emission control system produced by BRP for sale in the State of California** that are originally sold to a resident or subsequently warranty registered to a resident in the State of California, also refer to the California Evaporative Emissions Control Warranty Statement.

The repair or replacement of parts or the performance of service under this warranty does not extend the life of this limited warranty beyond its original expiration date.

#### 5) Conditions to Have Warranty Coverage

This warranty coverage is available only if each of the following conditions has been fulfilled:

1. The Product must be purchased as new and unused by its first owner from a Dealer authorized to sell the Product in the country in which the sale occurred ("Dealer");
2. The BRP specified pre-delivery inspection process must be completed, documented and signed by the purchaser;
3. The Product must have undergone proper registration by an authorized Dealer;
4. The Product must be purchased in the country in which the purchaser resides;
5. Routine maintenance outlined in the Operator's Guide must be timely performed in order to maintain warranty coverage. BRP reserves the right to make warranty coverage contingent upon proof of proper maintenance.

BRP will not honor this limited warranty to any private use owner or commercial use owner if one of the preceding conditions has not been met. Such limitations are necessary in order to allow BRP to preserve both the safety of its products, and also that of its consumers and the general public.

## **6) What to Do to Obtain Warranty Coverage**

The customer must cease using the Product upon the appearance of an anomaly, notify a servicing BRP Dealer within three (3) days of the appearance of the anomaly and provide the Dealer with reasonable access to the Product and reasonable opportunity to repair it.

The customer must also present to the Dealer, proof of purchase of the Product and must sign the repair/work order prior to starting the repair in order to validate the warranty repair.

All parts replaced under this limited warranty become the property of BRP.

## **7) What BRP Will Do**

BRP's obligations under this warranty are limited to, at its sole discretion, repairing or replacing parts found defective under normal use, maintenance and service without charge for parts and labor, at any authorized BRP Dealer during the warranty coverage period under the conditions described herein. No claim of breach of warranty shall be cause for cancellation or rescission of the sale of the Product to the owner.

In the event that service is required outside of the country of original sale, the owner will bear responsibility for any additional charges due to local practices and conditions, such as, but not limited to, freight, insurance, taxes, license fees, import duties, and any and all other financial charges, including those levied by governments, states, territories and their respective agencies.

BRP reserves the right to improve or modify products from time to time without assuming any obligation to modify products previously manufactured.

## **8) Transfer**

If the ownership of a Product is transferred during the warranty coverage period, this limited warranty, subject to its terms and conditions, shall also be transferred and be valid for the remaining coverage period provided BRP or an authorized Product Distributor/Dealer receives a proof that the former owner agreed to the transfer of ownership, in addition to the coordinates of the new owner.

## **9) Consumer Assistance**

In the event of a controversy or a dispute in connection with this limited warranty, BRP suggests that you try to resolve the issue at the dealership level. We recommend discussing the issue with the authorized Dealer's service manager or owner.

If the matter still remains unresolved, contact BRP by filling out the customer contact form at [www.brp.com](http://www.brp.com) or contact BRP by mail at one of the addresses listed under the *Contact Us* section of this guide.

---

## US EPA EMISSION - RELATED WARRANTY

Bombardier Recreational Products Inc. ("BRP") warrants to the ultimate purchaser and each subsequent purchaser that this new vehicle, including all parts of its exhaust emission control system and its evaporative emission control system, meets two conditions:

1. It is designed, built, and equipped so it conforms at the time of sale to the ultimate purchaser with the requirements of 40 CFR 1051 and 40 CFR 1060.
2. It is free from defects in materials and workmanship that may keep it from meeting the requirements of 40 CFR 1051 and 40 CFR 1060.

Where a warrantable condition exists, BRP will repair or replace, as it elects, any part or component with a defect in materials or workmanship that would increase the engine's emissions of any regulated pollutant within the stated warranty period at no cost to the owner, including expenses related to diagnosing and repairing or replacing emission-related parts. All defective parts replaced under this warranty become the property of BRP.

For all emission-related warranty claims, BRP is limiting the diagnosis and repair of emission-related parts to the authorized Can-Am dealers, unless for emergency repairs as required by item 2 of the following list.

As a certifying manufacturer, BRP will not deny emission-related warranty claims based on any of the following:

1. Maintenance or other service BRP or BRP's authorized facilities performed.
2. Engine/equipment repair work that an operator performed to correct an unsafe, emergency condition attributable to BRP as long as the operator tries to restore the engine/equipment to its proper configuration as soon as possible.
3. Any action or inaction by the operator unrelated to the warranty claim.
4. Maintenance that was performed more frequently than BRP specify.
5. Anything that is BRP fault or responsibility.
6. The use of any fuel that is commonly available where the equipment operates unless BRP written maintenance instructions state that this fuel would harm the equipment's emission control system and operators can readily find the proper fuel. See maintenance information section and fuel requirements of fueling section.

### Emission-Related Warranty Period

The emission-related warranty is valid for the following period whichever comes first.

|                                                     | HOURS | MONTHS | KILOMETERS |
|-----------------------------------------------------|-------|--------|------------|
| Exhaust and evaporative emission-related components | 500   | 30     | 5000       |

### Components Covered

The emission-related warranty covers all components whose failure would increase an engine's emissions of any regulated pollutant, including the following listed components:

1. For exhaust emissions, emission-related components include any engine parts related to the following systems:

- Air-induction system
  - Fuel system
  - Ignition system
  - Exhaust gas recirculation systems.
2. The following parts are also considered emission-related components for exhaust emissions:
- After treatment devices
  - Crankcase ventilation valves
  - Sensors
  - Electronic control units.
3. The following parts are considered emission-related components for evaporative emissions:
- Fuel tank
  - Fuel cap
  - Fuel line
  - Fuel line fittings
  - Clamps\*
  - Pressure relief valves\*
  - Control valves\*
  - Control solenoids\*
  - Electronic controls\*
  - Vacuum control diaphragms\*
  - Control cables\*
  - Control linkages\*
  - Purge valves
  - Vapor hoses
  - Liquid/vapor separator
  - Carbon canister
  - Canister mounting brackets
  - Carburetor purge port connector.

**NOTE:**

\*As related to the evaporative emission control system.

4. Emission-related components also include any other part whose only purpose is to reduce emissions or whose failure will increase emissions without significantly degrading engine/equipment performance.

## Limited Applicability

As a certifying manufacturer, BRP may deny emission-related warranty claims for failures that have been caused by the owner's or operator's improper maintenance or use, by accidents for which the manufacturer has no responsibility, or by acts of God. For example, an emission-related warranty claim need not be honored for failures that have been directly caused by the operator's abuse of the engine/equipment or the operator's use of the engine/equipment in a manner for which it was not designed and are not attributable to the manufacturer in anyway.

If you have any question regarding your warranty rights and responsibility or for the name and location of the nearest authorized BRP dealer, you should contact BRP by filling out the customer contact form at **www.brp.com** or contact BRP by

mail at one of the addresses listed under the CONTACT US section of this guide, or call at 1-888-272-9222.

---

# CALIFORNIA EVAPORATIVE EMISSIONS CONTROL WARRANTY STATEMENT

The warranty periods begin on the date the new Off-Highway Recreational Vehicle ("OHRV") is delivered to an ultimate purchaser.

Bombardier Recreational Products Inc. ("BRP") warrants to the ultimate purchaser and each subsequent purchaser that the OHRV is:

1. Designed, built, and equipped so as to conform, at the time of sale, with all applicable laws, rules and regulations; and
2. Free from defects in materials and workmanship that may cause the failure of a warranted part. All replacement parts must be identical in all material respects to that part as described in BRP's Executive Order of Certification application.

The warranty on emissions-related parts function as follows:

1. Repair or replacement of any warranted part must be performed at no charge to the OHRV owner, at a warranty station, except in the case of a temporary repair when a warranted part or a warranty station is not reasonably available to the OHRV owner. In the event a temporary repair is permitted, repairs may be performed at any available service establishment, or by the owner, using any replacement part. BRP must reimburse the owner for his or her expenses including diagnostic charges for such temporary repair or replacement, not to exceed BRP's suggested retail price for all warranted parts replaced and labor charges based on BRP's recommended time allowance for the warranty repair and the geographically appropriate hourly labor rate.
2. The lack of availability of warranted parts or the incompleteness of repairs within a reasonable time period, not to exceed 30 days from the time the OHRV is initially presented to the warranty station for repair, will qualify the need for a temporary repair.
3. Any warranted part which is not scheduled for replacement as part of maintenance in the written instructions must be warranted for the warranty period defined below. If any such part fails during the warranty period, it must be repaired or replaced by BRP. Any such part repaired or replaced under warranty must be fully warranted.
4. Any warranted part which is scheduled only for regular inspection in the written instructions must be warranted for the warranty period defined below. A statement in such written instructions to the effect of "repair or replace as necessary" does not reduce the period of warranty coverage. Any such part repaired or replaced under warranty is warranted for the remaining warranty period.
5. Any warranted part which is scheduled for replacement as part of maintenance in the written instructions is warranted for the period of time prior to the first scheduled replacement point for that part. If the part fails before the first scheduled replacement point, the part will be repaired or replaced by BRP. Any such part repaired or replaced under warranty is warranted for the remainder of the period prior to the first scheduled replacement point for the part.
6. Warranty services or repairs are provided at all manufacturer dealerships that are owned by the manufacturer or franchised to service the subject OHRVs.
7. The OHRV owner will not be charged for diagnostic labor which leads to the determination that a warranted part is, in fact, defective, provided that such diagnostic work is performed at a warranty station.

8. BRP is liable for damages to other vehicle components proximately caused by a failure, under warranty, of any warranted part.
9. Any replacement part designated by BRP may be used in warranty repairs provided without charge to the OHRV owner. Such use will not reduce the warranty obligations of BRP, except that BRP will not be liable for repair or replacement of any replacement part which is not a warranted part.
10. Any add-on or modified part exempted by the Air Resources Board from the prohibitions of section 27156 of the California Vehicle Code may be used on an OHRV. Such use, in and of itself, will not be grounds for disallowing a warranty claim. BRP is not liable to warrant failures of warranted parts caused by the use of an add-on or modified part (s) unless such part (s) are also warranted.

#### Conditions and exclusions:

- BRP may deny you warranty coverage if your OHRV or a part has failed directly due to abuse, neglect, improper maintenance or unapproved modifications.

## Your Warranty Rights And Obligations

The California Air Resources Board is pleased to explain the evaporative emissions control system warranty on your 2026 Off-Road Sport Vehicle. In California, new off-highway recreational vehicles must be designed, built, and equipped to meet the State's stringent anti-smog standards. BRP must warrant the evaporative emissions control system on your Off-Road Sport Vehicle for the periods of time listed below provided there has been no abuse, neglect, improper maintenance, or unapproved modification of your Off-Road Sport Vehicle.

Your evaporative emissions control system may include parts such as the carburetor or fuel-injection system, fuel tank, fuel hoses, carbon canister, and engine computer. Also included may be hoses, belts, connectors and other evaporative emissions-related assemblies. Where a warrantable condition exists, Bombardier Recreational Products Inc. will repair your Off-Road Sport Vehicle at no cost to you including diagnosis, parts and labor.

## OHRV Manufacturer's Warranty Coverage

The warranty period for this OHRV is 60 months, or 5000 miles, or 500 hours, whichever comes first.

#### Parts covered:

1. Canister Mounting Bracket(s)
2. Carbon Canister
3. Purge Port Connector
4. Clamp(s)\*
5. Electronic Control\*
6. Fuel Cap
7. Filler Neck
8. Filler Neck Hose
9. Fuel Line(s)
10. Fuel Line Fitting(s)
11. Fuel Tank
12. Pressure Relief Valve(s)\*

13. Purge Valve(s)
14. Check Valve(s)\*
15. Vapor Hose(s)
16. Flow Reducer
17. Filter(s)\*
18. Fuel pump
19. All other parts not listed that may affect the evaporative emissions control system

**NOTE:**

\*As related to the evaporative emission control system.

If any evaporative emissions-related part on your Off-Road Sport Vehicle is defective the part will be repaired or replaced by Bombardier Recreational Products Inc.

## **Owner's Warranty Responsibilities**

As the Off-Road Sport Vehicle owner you are responsible for the performance of the required maintenance listed in your owner's manual. Bombardier Recreational Products Inc. recommends that you retain all receipts covering maintenance on your Off-Road Sport Vehicle, but Bombardier Recreational Products Inc. cannot deny warranty solely for the lack of receipts or for failure to ensure the performance of a scheduled maintenance.

As an owner you are responsible for presenting your Off-Road Sport Vehicle to a Bombardier Recreational Products Inc. dealer as soon as a problem exists. The warranty repairs should be completed in a reasonable time, not to exceed 30 days.

As an Off-Road Sport Vehicle owner, you should also be aware that Bombardier Recreational Products Inc. may deny you warranty coverage if your Off-Road Sport Vehicle or a part has failed due to abuse, neglect, improper maintenance or unapproved modifications.

If you have any questions regarding your warranty rights and responsibilities, you should contact:

- Bombardier Recreational Products Inc. at 1-888-272-9222, or
- The California Air Resources Board at 4001 Iowa Avenue, Riverside, CA 92507.

---

# BRP LIMITED WARRANTY FOR INTERNATIONAL: 2026 CAN-AM® SSV

## 1) Scope of the Limited Warranty

Bombardier Recreational Products Inc. ("**BRP**") warrants its 2026 Can-Am SSV (the "**Product**") sold by distributors or dealers authorized by BRP to distribute the Products outside of the United States of America ("**USA**"), Canada, member states of the European Economic Area (which is comprised of the states of the European Union plus the United Kingdom, Norway, Iceland and Liechtenstein) ("**EEA**"), member states of the Commonwealth of the Independent States (including Ukraine and Turkmenistan) ("**CIS**") and Turkey from defects in material or workmanship for the period and under the conditions described below.

This limited warranty will become null and void if:

1. the Product was used for racing or any other competitive activity, at any point, even by a previous owner; or
2. the Product has been altered or modified in such a way so as to adversely affect its operation, performance or durability, or has been altered or modified to change its intended use.

Non-factory installed parts and accessories are not covered under this limited warranty. Please refer to the applicable parts and accessories limited warranty text.

## 2) Limitation of Liability

TO THE EXTENT PERMITTED BY LAW, THIS WARRANTY IS EXPRESSLY GIVEN AND ACCEPTED IN LIEU OF ANY AND ALL OTHER WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING WITHOUT LIMITATION ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. TO THE EXTENT THAT THEY CANNOT BE DISCLAIMED, THE IMPLIED WARRANTIES ARE LIMITED IN DURATION TO THE LIFE OF THE EXPRESS WARRANTY. INCIDENTAL AND CONSEQUENTIAL DAMAGES ARE EXCLUDED FROM COVERAGE UNDER THIS WARRANTY. SOME JURISDICTIONS DO NOT ALLOW FOR THE DISCLAIMERS, LIMITATIONS AND EXCLUSIONS IDENTIFIED ABOVE. AS A RESULT, THEY MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU SPECIFIC RIGHTS, AND YOU MAY ALSO HAVE OTHER LEGAL RIGHTS WHICH MAY VARY FROM COUNTRY TO COUNTRY. BRP SHALL NOT BE HELD LIABLE IF PRODUCTS OR WARRANTY PARTS ARE NOT AVAILABLE IN CERTAIN COUNTRIES FOR REASONS OUTSIDE OF BRP'S CONTROL.

For Products purchased in Australia, refer to the Australia specific section below.

Neither the distributor, the BRP Distributor/Dealer nor any other person has been authorized to make any affirmation, representation or warranty regarding the Product, other than those contained in this limited warranty, and if made, shall not be enforceable against BRP.

BRP reserves the right to modify this limited warranty at any time, being understood that such modification will not alter the warranty conditions applicable to the Products sold while this warranty is in effect.

### **3) EXCLUSIONS – Are Not Warranted**

The following are not warranted under any circumstances:

- Normal wear and tear;
- Routine maintenance items, tune ups, adjustments;
- Damage caused by negligence or failure to provide proper maintenance and/or storage, as described in the Operator's Guide;
- Damage resulting from removal of parts, improper repairs, service, maintenance, modifications or use of parts not manufactured or approved by BRP or resulting from repairs done by a person that is not an authorized servicing BRP Distributor/ Dealer;
- Damage caused by abuse, abnormal use, neglect or operation of the product in a manner inconsistent with the recommended operation described in the Product's Operator's Guide;
- Damage resulting from accident, submersion, fire, theft, vandalism or any act of God;
- Operation with fuels, oils or lubricants which are not suitable for use with the Product (see the Operator's Guide);
- Damages from rust, corrosion or exposure to the elements;
- Damage resulting from water or snow ingestion;
- Incidental or consequential damages, or damages of any kind including without limitation transportation expenses, towing, storage, telephone, rental, taxi, inconvenience, insurance coverage, loan payments, loss of time, loss of income or time missed for downtime experience due to service work.

The following list includes, without limitation, items that are considered wear items and that are not covered under BRP's limited warranty unless failure is a direct result of a defect in material or workmanship:

- Batteries
- Brake pads
- Brake disks and drums
- Clutch plates / pads
- Clutch sliders
- Clutch springs
- Clutch replaceable bushings
- Drive belts
- Filters
- Finished and unfinished surfaces
- Fuses
- Light bulbs / sealed beam
- Lubricants
- Spark plugs
- Suspension bushings
- Suspension slider shoes
- Suspension springs
- Tires.

### **4) Warranty Coverage Period**

This limited warranty will be in effect from (1) the date of delivery to the first retail consumer, or (2) the date the Product is first put into use, whichever occurs first and for the applicable period below:

1. **TWELVE (12) consecutive months**, for private use or commercial use owners.

**In AUSTRALIA and NEW ZEALAND only**, this warranty will be in effect from (1) the date of delivery to the first retail consumer or (2) the date the Product is first put into use, whichever occurs first, and for a period of **TWELVE (12) CONSECUTIVE MONTHS** and **THIRTY-SIX (36) CONSECUTIVE MONTHS** for Powertrain Engine and Transmission systems only, for private use or commercial use.

The repair or replacement of parts or the performance of service under this warranty does not extend the life of this warranty beyond its original expiration date.

The warranty coverage period identified above are a minimal limited warranty period which can be extended by any applicable warranty promotional program, as the case may be.

Note that the duration and any other modalities of the warranty coverage are subject to the applicable national or local legislation in the customer's country.

## 5) For Products Sold In Australia Only

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law.

You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage.

You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Nothing in these Warranty terms and conditions should be taken to exclude, restrict or modify the application of any condition, warranty, guarantee, right or remedy conferred or implied under the Competition and Consumer Act 2010 (Cth), including the Australian Consumer Law or any other law, where to do so would contravene that law, or cause any part of these terms and conditions to be void. The benefits given to you under this limited warranty are in addition to other rights and remedies that you have under Australian law.

## 6) Conditions to Have Warranty Coverage

This warranty coverage is available only if each of the following conditions has been fulfilled:

1. Distributor/Dealer authorized to distribute the Product in the country in which the sale occurred ("Distributor/Dealer");
2. The BRP specified pre-delivery inspection process must be completed, documented and signed by the purchaser;
3. The Product must have undergone proper registration by an authorized Distributor/Dealer;
4. The Product must be purchased in the country in which the purchaser resides;
5. Routine maintenance outlined in the Operator's Guide must be timely performed in order to maintain warranty coverage. BRP reserves the right to make warranty coverage contingent upon proof of proper maintenance.

BRP will not honor this limited warranty to any private use owner or commercial use owner if one of the preceding conditions has not been met. Such limitations are necessary in order to allow BRP to preserve both the safety of its products, and also that of its consumers and the general public.

## **7) What to Do to Obtain Warranty Coverage**

The customer must cease using the Product upon the appearance of an anomaly, notify a servicing BRP Distributor/Dealer within two (2) months of the appearance of the anomaly and provide the Distributor/Dealer with reasonable access to the Product and reasonable opportunity to repair it.

The notification period is subject to the applicable national or local legislation in customer's country.

The customer must also present to the Distributor/Dealer, proof of purchase of the Product and must sign the repair/work order prior to starting the repair in order to validate the warranty repair.

All parts replaced under this limited warranty become the property of BRP.

## **8) What BRP Will Do**

To the extent permitted by law, BRP's obligations under this warranty are limited to, at its sole discretion, repairing or replacing parts found defective under normal use, maintenance and service without charge for parts and labor, at any authorized BRP Distributor/Dealer during the warranty coverage period under the conditions described herein. No claim of breach of warranty shall be cause for cancellation or rescission of the sale of the Product to the owner. You may have other legal rights which may vary from country to country.

In the event that service is required outside of the country of original sale, the owner will bear responsibility for any additional charges due to local practices and conditions, such as, but not limited to, freight, insurance, taxes, license fees, import duties, and any and all other financial charges, including those levied by governments, states, territories and their respective agencies.

BRP reserves the right to improve or modify products from time to time without assuming any obligation to modify products previously manufactured.

## **9) Transfer**

If the ownership of a Product is transferred during the warranty coverage period, this limited warranty, subject to its terms and conditions, shall also be transferred and be valid for the remaining coverage period provided BRP or an authorized Product Distributor/Dealer receives a proof that the former owner agreed to the transfer of ownership, in addition to the coordinates of the new owner.

## **10) Consumer Assistance**

In the event of a controversy or a dispute in connection with this limited warranty, BRP suggests that you try to resolve the issue at the BRP dealership level. We recommend discussing the issue with the authorized Distributor/Dealer's service manager or owner.

If the matter still remains unresolved, contact BRP by filling out the customer contact form at **[www.brp.com](http://www.brp.com)** or contact BRP by mail at one of the addresses listed under the *Contact Us* section of this guide.

---

# **BRP LIMITED WARRANTY FOR THE EUROPEAN ECONOMIC AREA, THE COMMONWEALTH OF THE INDEPENDENT STATES AND TURKEY: 2026 CAN-AM® SSV**

## **1) Scope of the Limited Warranty**

Bombardier Recreational Products Inc. ("BRP") warrants its 2026 Can-Am SSV (the "**Product**") sold by distributors or dealers authorized by BRP to distribute the Product in member states of the European Economic Area (which is comprised of the states of the European Union plus the United Kingdom, Norway, Iceland and Liechtenstein) ("**EEA**"), member states of the Commonwealth of the Independent States (including Ukraine and Turkmenistan) ("**CIS**") and Turkey ("**Distributor/Dealer**") from defects in material or workmanship for the period and under the conditions described below.

This limited warranty will become null and void if:

1. the Product was used for racing or any other competitive activity, at any point, even by a previous owner; or
2. the Product has been altered or modified in such a way so as to adversely affect its operation, performance or durability, or has been altered or modified to change its intended use.

Non-factory installed parts and accessories are not covered under this limited warranty. Please refer to the applicable parts and accessories limited warranty text.

## **2) Limitations of Liability**

TO THE EXTENT PERMITTED BY LAW, THIS WARRANTY IS EXPRESSLY GIVEN AND ACCEPTED IN LIEU OF ANY AND ALL OTHER WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING WITHOUT LIMITATION ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. TO THE EXTENT THAT THEY CANNOT BE DISCLAIMED, THE IMPLIED WARRANTIES ARE LIMITED IN DURATION TO THE LIFE OF THE EXPRESS WARRANTY. INCIDENTAL AND CONSEQUENTIAL DAMAGES ARE EXCLUDED FROM COVERAGE UNDER THIS WARRANTY. SOME JURISDICTIONS DO NOT ALLOW FOR THE DISCLAIMERS, LIMITATIONS AND EXCLUSIONS IDENTIFIED ABOVE. AS A RESULT, THEY MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU SPECIFIC RIGHTS, AND YOU MAY ALSO HAVE OTHER LEGAL RIGHTS WHICH MAY VARY FROM COUNTRY TO COUNTRY. BRP SHALL NOT BE HELD LIABLE IF PRODUCTS OR WARRANTY PARTS ARE NOT AVAILABLE IN CERTAIN COUNTRIES FOR REASONS OUTSIDE OF BRP'S CONTROL.

For Products purchased in France, refer to the France specific section below.

Neither the distributor, any BRP Distributor/Dealer nor any other person has been authorized to make any affirmation, representation or warranty regarding the Product, other than those contained in this limited warranty, and if made, shall not be enforceable against BRP.

BRP reserves the right to modify this limited warranty at any time, being understood that such modification will not alter the warranty conditions applicable to the Products sold while this warranty is in effect.

### 3) EXCLUSIONS – Are Not Warranted

The following are not warranted under any circumstances:

- Normal wear and tear;
- Routine maintenance items, tune ups, adjustments;
- Damage caused by negligence or failure to provide proper maintenance and/or storage, as described in the Operator's Guide;
- Damage resulting from removal of parts, improper repairs, service, maintenance, modifications or use of parts not manufactured or approved by BRP or resulting from repairs done by a person that is not an authorized servicing BRP Distributor/Dealer;
- Damage caused by abuse, abnormal use, neglect or operation of the Product in a manner inconsistent with the recommended operation described in the Product's Operator's Guide;
- Damage resulting from accident, submersion, fire, theft, vandalism or any act of God;
- Operation with fuels, oils or lubricants which are not suitable for use with the Product (see the Operator's Guide);
- Damages from rust, corrosion or exposure to the elements;
- Damage resulting from water or snow ingestion;
- Incidental or consequential damages, or damages of any kind including without limitation transportation expenses, towing, storage, telephone, rental, taxi, inconvenience, insurance coverage, loan payments, loss of time, loss of income or time missed for downtime experience due to service work.

The following list includes, without limitation, items that are considered wear items and that are not covered under BRP's limited warranty unless failure is a direct result of a defect in material or workmanship:

- Batteries
- Brake pads
- Brake disks and drums
- Clutch plates / pads
- Clutch sliders
- Clutch springs
- Clutch replaceable bushings
- Drive belts
- Filters
- Finished and unfinished surfaces
- Fuses
- Light bulbs / sealed beam
- Lubricants
- Spark plugs
- Suspension bushings
- Suspension slider shoes
- Suspension springs
- Tires.

### 4) Warranty Coverage Period

This limited warranty will be in effect from (1) the date of delivery to the first retail consumer, or (2) the date the Product is first put into use, whichever occurs first and for the applicable period below:

1. **TWENTY-FOUR (24) consecutive months**, for private use owners.

2. **SIX (6) consecutive months**, for commercial use owners.

A Product is used commercially when it is used in connection with any work or employment that generates income during any part of the warranty period. A Product is also used commercially when, at any point during the warranty period, it is licensed for commercial use.

The repair or replacement of parts or the performance of service under this warranty does not extend the life of this warranty beyond its original expiration date.

The warranty coverage period identified above are a minimal limited warranty period which can be extended by any applicable warranty promotional program, as the case may be.

Note that the duration and any other modalities of the warranty coverage are subject to the applicable national or local legislation in the customer's country.

## 5) For Products Sold In France Only

The seller shall deliver goods that are complying with the contract and shall be responsible for defects existing upon delivery. The seller shall also be responsible for defects resulting from packaging, assembling instructions or the installation when it is its responsibility per the contract or if accomplished under its responsibility. To be compliant with the contract, the good shall:

1. Be fit for normal use for goods similar thereto and, if applicable:
  - Correspond to the description provided by the seller and have the qualities presented to the buyer through sample or model;
  - Have the qualities that a buyer may legitimately expect considering the public declarations of the seller, the manufacturer of its representative, including in advertising or labeling; or
2. Have the characteristics mutually agreed upon as between the parties or be fit for the specific use intended by the buyer and brought to the attention of the seller and which were accepted by the seller.

The action for failure to comply is prescribed after two years after delivery of the goods. The seller is responsible for the warranty for hidden defects of the good sold if such hidden defects are rendering the good unfit for the intended use, or if they diminish its use in such a way that the buyer would not have acquired the good or would have given a lesser price, had he known. The action for such hidden defects shall be taken by the buyer within 2 years of the discovery of the defect.

## 6) Conditions to Have Warranty Coverage

This warranty coverage is available only if each of the following conditions has been fulfilled:

1. The Product must be purchased as new and unused by its first owner from a Distributor/Dealer authorized to distribute Products in the country, or in the case of the EEA union of countries, in which the sale occurred ("Distributor/Dealer");

2. The BRP specified pre-delivery inspection process must be completed, documented and signed by the purchaser;
3. The Product must have undergone proper registration by an authorized Distributor/Dealer;
4. The Product must be purchased in the country, or in the case of the EEA union of countries, in which the purchaser resides;
5. Routine maintenance outlined in the Operator's Guide must be timely performed in order to maintain warranty coverage. BRP reserves the right to make warranty coverage contingent upon proof of proper maintenance.

BRP will not honor this limited warranty to any private use owner or commercial use owner if one of the preceding conditions has not been met. Such limitations are necessary in order to allow BRP to preserve both the safety of its products, and also that of its consumers and the general public.

## **7) What to Do to Obtain Warranty Coverage**

The customer must cease using the Product upon the appearance of an anomaly, notify a servicing BRP Distributor/Dealer within two (2) months of the appearance of the anomaly and provide the Distributor/Dealer with reasonable access to the Product and reasonable opportunity to repair it.

The notification period is subject to the applicable national or local legislation in customer's country.

The customer must also present to the Distributor/Dealer, proof of purchase of the Product and must sign the repair/work order prior to starting the repair in order to validate the warranty repair.

All parts replaced under this limited warranty become the property of BRP.

## **8) What BRP Will Do**

To the extent permitted by law, BRP's obligations under this warranty are limited to, at its sole discretion, repairing or replacing parts found defective under normal use, maintenance and service without charge for parts and labor, at any authorized BRP Distributor/Dealer during the warranty coverage period under the conditions described herein. No claim of breach of warranty shall be cause for cancellation or rescission of the sale of the Product to the owner. You may have other legal rights which may vary from country to country.

In the event that service is required outside of the country of original sale, or for EEA residents if service is required outside of the EEA, the owner will bear responsibility for any additional charges due to local practices and conditions, such as, but not limited to, freight, insurance, taxes, license fees, import duties, and any and all other financial charges, including those levied by governments, states, territories and their respective agencies.

BRP reserves the right to improve or modify products from time to time without assuming any obligation to modify products previously manufactured.

## **9) Transfer**

If the ownership of a Product is transferred during the warranty coverage period, this limited warranty, subject to its terms and conditions, shall also be transferred

and be valid for the remaining coverage period provided BRP or an authorized product distributor/Dealer receives a proof that the former owner agreed to the transfer of ownership, in addition to the coordinates of the new owner.

## 10) Consumer Assistance

In the event of a controversy or a dispute in connection with this limited warranty, BRP suggests that you try to resolve the issue at the dealership level. We recommend discussing the issue with the authorized Distributor/Dealer's service manager or owner.

If the matter still remains unresolved, contact BRP by filling out the customer contact form at **[www.brp.com](http://www.brp.com)** or contact BRP by mail at one of the addresses listed under the *Contact Us* section of this guide.

# CUSTOMER INFORMATION

---

# DATA PRIVACY INFORMATION

## DATA PRIVACY INFORMATION

Bombardier Recreational Products inc., its affiliates and subsidiaries (“BRP”) is committed to protecting your privacy. This notice is to inform you about how we collect, use and disclose your personal information in the course of managing our relationship with you. More details can be found by visiting BRP’s Privacy Policy at: <https://brp.com/en/privacy-policy.html> or by scanning the QR Code below.

Please be assured that we have appropriate measures in place to ensure that your personal information is kept secured and protected against unauthorized access, use or disclosure.

The personal information we hold about you is collected either directly from you or through our authorized dealers and third parties (e.g. with whom we offer services or engage in joint-marketing activities), and includes:

- Contact, Demographic & Registration Information (e.g., name, full address, phone number, email, ownership history, language of communication)
- Transactional Information (e.g., information necessary to handle returns, payment information when you purchase our products or services through our websites or mobile applications and other issues related to your purchase of BRP products).
- Vehicle Information (e.g., serial number, vehicle identification number, mileage, purchase and delivery date, unit usage, vehicle location and movements)
- Your comments, opinions and reviews of our products and services
- Information collected automatically when you navigate on BRP or dealer’s websites or mobile apps collected via cookies and similar technologies (e.g., IP address, type of device, operating system, browser type, webpages you view).

We may also receive information about you from social media platforms when you interact with us on those platforms.

We use your personal information for various reasons, mostly to:

- Manage your order of BRP products and services (e.g., to complete or deliver your order, or service your BRP product)
- Provide customer support, assistance, and after-sales (e.g., complete or follow up with you about your order or maintenance, help with any delivery issues, handle returns, and other issues related to your purchase of BRP products)
- Manage your BRP products registration, warranty, security, safety recall, and dispute resolution (e.g. to offer warranty and after-sales service to you, protect your security and safety, perform safety recalls)
- Send you commercial communications about our products and services (e.g. inform you about new BRP products, services or features; share news about contests, promotions, and events or discuss products or services offered by BRP that may be of interest to you)
- Offer you personalized experience, content, or offers and services based on profiling or geolocation technologies (e.g. to notify you when your vehicle may need servicing, to locate your nearest dealership)
- Perform data analytics and statistics data that no longer identifies you personally, for business intelligence and have insights on how to improve our products and services

- Prevent, detect, and control fraud and any unauthorized or illegal activities (e.g., to detect and control fraud in relation to BRP products or services purchase; manage illegal or unauthorized activities and cyberthreats)
- Comply with applicable laws and regulations.

Your personal information may be disclosed to the following: BRP, BRP's authorized dealerships, distributors, service providers, advertising & market research partners and other authorized third parties.

Depending on the circumstances, your personal information may be communicated outside the region where you reside. Your personal information is retained only for as long as necessary for the purpose for which we obtained it and according to our retention policies.

To exercise your data privacy rights (e.g. right of access, right of rectification), to withdraw your consent in order to be removed from the address list for marketing purposes or for the satisfaction survey or for general data privacy questions, please contact BRP's Data Protection Officer at or by mail at [privacyofficer@brp.com](mailto:privacyofficer@brp.com) or by mail at: BRP Legal Service, 726 St-Joseph, Valcourt, Quebec, Canada, J0E 2L0.

**When BRP processes your personal information, they do so in compliance with its Privacy Policy available at: <https://www.brp.com/en/privacy-policy.html> or by using the following QR Code.**



---

# CONTACT US

*[www.brp.com](http://www.brp.com)*

## **Asia Pacific**

### **BRP Asia**

107D and 107E, 17/F, Tower 1,  
Grand Century Place, Mongkok,  
Kowloon, Hong Kong

### **Australia**

Level 26  
477 Pitt Street  
Sydney, NSW 2020

### **China**

上海市徐汇区衡山路10号6号楼301  
Rm 301, Building 6,  
No.10 Heng Shan Rd,  
Shanghai, China

### **Japan**

21F Shinagawa East One Tower  
2-16-1 Konan, Minato-ku-ku,  
Tokyo 108-0075

## **Europe, Middle East and Africa**

### **Belgium**

Oktrooiplein 1  
9000 Gent

### **Czech Republic**

Stefanikova 43a  
Prague 5  
150 00

### **Germany**

Alte Papierfabrik 16  
D-40699 Erkrath

### **Finland**

Isoaavantie 7  
PL 8040  
96101 Rovaniemi

### **France**

Arteparc Bâtiment B  
Route de la côte d'Azur, Le Canet  
13 590 Meyreuil

### **Norway**

Ingvald Ystgaards veg 15

N-7484 Trondheim

**Sweden**

Spinnvägen 15  
903 61 Umeå

**Switzerland**

Avenue d'Ouchy 4-6  
1006 Lausanne

**Latin America**

**Brazil**

Rua Odila Maia Rocha Brito, 25  
Edifício Beaumont, andar 1 ao 5  
CEP 13092-110 Campinas -SP

**Mexico**

Av. Ferrocarril 202  
Parque Industrial Querétaro  
Santo Rosa Jauregui, Querétaro  
C.P. 76220

**North America**

**Canada**

3200A, rue King Ouest,  
Suite 300  
Sherbrooke (Québec) J1L 1C9

**United States of America**

10101 Science Drive  
Sturtevant, Wisconsin  
53177

---

## CHANGE OF ADDRESS AND OWNERSHIP

If your address has changed or if you are the new owner of the vehicle, be sure to notify BRP by either:

- Notifying an authorized Can-Am dealer.
- **North America Only:** calling at 1 888 272-9222.
- Mailing one of the change of address cards on the following pages at one of the BRP addresses indicated in the *Contact Us* section of this guide.

In case of change of ownership, please join a proof that the former owner agreed to the transfer.

Notifying BRP, even after the expiration of the limited warranty, is very important as it enables BRP to reach the vehicle owner if necessary, like when safety recalls are initiated. It is the owner's responsibility to notify BRP.

**STOLEN UNITS:** If your personal vehicle is stolen, you should notify BRP or an authorized Can-Am dealer. We will ask you to provide your name, address, phone number, the vehicle identification number and the date it was stolen.

|                                                                                                                                                                                           |                                              |                 |
|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------|-----------------|
| CHANGE OF ADDRESS <input type="checkbox"/>                                                                                                                                                | CHANGE OF OWNERSHIP <input type="checkbox"/> |                 |
| VEHICLE IDENTIFICATION NUMBER                                                                                                                                                             |                                              |                 |
| <div style="display: flex; justify-content: space-between;"> <span style="width: 20%;">Model Number</span> <span style="width: 80%;">Vehicle Identification Number (V.I.N.)</span> </div> |                                              |                 |
| <b>OLD ADDRESS<br/>OR PREVIOUS OWNER:</b>                                                                                                                                                 | NAME                                         |                 |
|                                                                                                                                                                                           | NO.                                          | STREET          |
|                                                                                                                                                                                           | CITY                                         | APT             |
|                                                                                                                                                                                           | STATE/PROVINCE                               | ZIP/POSTAL CODE |
|                                                                                                                                                                                           | COUNTRY                                      | TELEPHONE       |
| <b>NEW ADDRESS<br/>OR NEW OWNER:</b>                                                                                                                                                      | NAME                                         |                 |
|                                                                                                                                                                                           | NO.                                          | STREET          |
|                                                                                                                                                                                           | CITY                                         | APT             |
|                                                                                                                                                                                           | STATE/PROVINCE                               | ZIP/POSTAL CODE |
|                                                                                                                                                                                           | COUNTRY                                      | TELEPHONE       |
| E-MAIL ADDRESS                                                                                                                                                                            |                                              |                 |

|                                                                                                                                                                                           |                                              |                 |
|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------|-----------------|
| CHANGE OF ADDRESS <input type="checkbox"/>                                                                                                                                                | CHANGE OF OWNERSHIP <input type="checkbox"/> |                 |
| VEHICLE IDENTIFICATION NUMBER                                                                                                                                                             |                                              |                 |
| <div style="display: flex; justify-content: space-between;"> <span style="width: 20%;">Model Number</span> <span style="width: 80%;">Vehicle Identification Number (V.I.N.)</span> </div> |                                              |                 |
| <b>OLD ADDRESS<br/>OR PREVIOUS OWNER:</b>                                                                                                                                                 | NAME                                         |                 |
|                                                                                                                                                                                           | NO.                                          | STREET          |
|                                                                                                                                                                                           | CITY                                         | APT             |
|                                                                                                                                                                                           | STATE/PROVINCE                               | ZIP/POSTAL CODE |
|                                                                                                                                                                                           | COUNTRY                                      | TELEPHONE       |
| <b>NEW ADDRESS<br/>OR NEW OWNER:</b>                                                                                                                                                      | NAME                                         |                 |
|                                                                                                                                                                                           | NO.                                          | STREET          |
|                                                                                                                                                                                           | CITY                                         | APT             |
|                                                                                                                                                                                           | STATE/PROVINCE                               | ZIP/POSTAL CODE |
|                                                                                                                                                                                           | COUNTRY                                      | TELEPHONE       |
| E-MAIL ADDRESS                                                                                                                                                                            |                                              |                 |

This page is  
intentionally blank

|                                                                                                       |                                                                                                                                 |
|-------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------|
| CHANGE OF ADDRESS <input type="checkbox"/>                                                            | CHANGE OF OWNERSHIP <input type="checkbox"/>                                                                                    |
| VEHICLE IDENTIFICATION NUMBER                                                                         |                                                                                                                                 |
| <div style="border: 1px solid black; width: 100px; height: 20px; margin: 0 auto;"></div> Model Number | <div style="border: 1px solid black; width: 300px; height: 20px; margin: 0 auto;"></div> Vehicle Identification Number (V.I.N.) |
| OLD ADDRESS<br>OR PREVIOUS OWNER:                                                                     | NAME                                                                                                                            |
|                                                                                                       | NO. STREET APT                                                                                                                  |
|                                                                                                       | CITY STATE/PROVINCE ZIP/POSTAL CODE                                                                                             |
|                                                                                                       | COUNTRY TELEPHONE                                                                                                               |
| NEW ADDRESS<br>OR NEW OWNER:                                                                          | NAME                                                                                                                            |
|                                                                                                       | NO. STREET APT                                                                                                                  |
|                                                                                                       | CITY STATE/PROVINCE ZIP/POSTAL CODE                                                                                             |
|                                                                                                       | COUNTRY TELEPHONE                                                                                                               |
|                                                                                                       | E-MAIL ADDRESS                                                                                                                  |

|                                                                                                       |                                                                                                                                 |
|-------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------|
| CHANGE OF ADDRESS <input type="checkbox"/>                                                            | CHANGE OF OWNERSHIP <input type="checkbox"/>                                                                                    |
| VEHICLE IDENTIFICATION NUMBER                                                                         |                                                                                                                                 |
| <div style="border: 1px solid black; width: 100px; height: 20px; margin: 0 auto;"></div> Model Number | <div style="border: 1px solid black; width: 300px; height: 20px; margin: 0 auto;"></div> Vehicle Identification Number (V.I.N.) |
| OLD ADDRESS<br>OR PREVIOUS OWNER:                                                                     | NAME                                                                                                                            |
|                                                                                                       | NO. STREET APT                                                                                                                  |
|                                                                                                       | CITY STATE/PROVINCE ZIP/POSTAL CODE                                                                                             |
|                                                                                                       | COUNTRY TELEPHONE                                                                                                               |
| NEW ADDRESS<br>OR NEW OWNER:                                                                          | NAME                                                                                                                            |
|                                                                                                       | NO. STREET APT                                                                                                                  |
|                                                                                                       | CITY STATE/PROVINCE ZIP/POSTAL CODE                                                                                             |
|                                                                                                       | COUNTRY TELEPHONE                                                                                                               |
|                                                                                                       | E-MAIL ADDRESS                                                                                                                  |

This page is  
intentionally blank

NOTE: \_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

NOTE: \_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

NOTE: \_\_\_\_\_

This image shows a blank sheet of white paper with horizontal ruling lines. The lines are evenly spaced and extend across the width of the page. There are no margins, text, or other markings on the paper.

NOTE: \_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

NOTE: \_\_\_\_\_

[illegible]

NOTE: \_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

NOTE: \_\_\_\_\_

[illegible]

NOTE: \_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

NOTE: \_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

NOTE: \_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

Model No. \_\_\_\_\_

**VEHICLE**

IDENTIFICATION NUMBER (V.I.N.) \_\_\_\_\_

**ENGINE**

IDENTIFICATION NUMBER (E.I.N.) \_\_\_\_\_

Owner: \_\_\_\_\_

NAME

No.

STREET

APT

CITY

STATE/PROVINCE

ZIP/POSTAL CODE

Purchase Date \_\_\_\_\_

YEAR

MONTH

DAY

Warranty Expiry Date \_\_\_\_\_

YEAR

MONTH

DAY

To be completed by the dealer at the time of the sale.

DEALER IMPRINT AREA

This page is intentionally blank



## **⚠ WARNING**

### **TO REDUCE RISK OF SERIOUS INJURY OR DEATH,**

- Read this operator's guide and safety labels.
- Watch the safety video.



### **BE PREPARED**

- Fasten seat belts and make sure neets and/or doors are securely latched in place.
- Wear an approved helmet and protective gear.
- Each rider must be able to sit with back against seat, foot flat on the floor or on the footrest, and hands on steering wheel or handholds. Stay completely inside the vehicle.

### **DRIVE RESPONSIBLY**

- Avoid loss of control and rollovers.
- Avoid abrupt maneuvers, sideways sliding, skidding or fishtailing and never do donuts.
- Avoid hard acceleration when turning, even from a stop.
- Slow down before entering a turn.
- Plan for hills, rough terrain, ruts and other changes in traction and terrain.
- Avoid paved surfaces.
- Avoid side hilling (riding across slopes).

### **BE QUALIFIED AND RESPONSIBLE**

- Do not allow careless or reckless driving.
- Driver must be at least 16 years old with a valid driver's license.
- Do not operate after using drugs or alcohol.
- Do not allow operation on public roads (unless designated for off-highway vehicle access where collisions with cars and trucks can occur).
- Do not exceed vehicle seating capacity.

[www.brp.com](http://www.brp.com)

**SKI-DOO®**

**LYNX®**

**MANITOU®**

**SEA-DOO®**

**ROTAX®**

**QUINTREX®**

**CAN-AM®**

**ALUMACRAFT®**

219002512