

***can-am***



## TRAXTER PRO T SERIES

# OPERATOR'S GUIDE

Includes Safety, Vehicle and Maintenance Information

NON

### WARNING

Read this operator's guide thoroughly. It contains important safety information.  
Minimum recommended operator age: 16 or older with a valid driver's license.  
Keep this operator's guide with the vehicle at all times.

---

219002613

Original Instruction

**⚠ WARNING**

**YOUR VEHICLE CAN BE HAZARDOUS TO OPERATE.** A collision or roll-over can occur quickly, if you fail to take proper precautions, even during routine maneuvers such as turning and driving on hills or over obstacles. For your safety, understand and follow all the warnings contained in this operator's guide and on the labels on your vehicle. Failure to follow these warnings can result in **SEVERE INJURY OR DEATH**. Keep this operator's guide with the vehicle at all times.

**⚠ WARNING**

Disregarding any of the safety precautions and instructions contained in the operator's guide, **SAFETY VIDEO** and on-product safety labels could cause injury including the possibility of death.

**⚠ WARNING**

This vehicle may exceed the performance of other vehicles you may have ridden in the past. Take time to familiarize yourself with your new vehicle.

<sup>TM</sup>® Trademarks of BRP or its affiliates.

This is a non-exhaustive list of trademarks that are the property of Bombardier Recreational Products Inc. or its affiliates:

Can-Am®

D.E.S.S.<sup>TM</sup>

DPST<sup>TM</sup>

ROTAX®

XPS®

All rights reserved. No parts of this Operator's guide may be reproduced in any form without the prior written permission of Bombardier Recreational Products Inc.

©Bombardier Recreational Products Inc. (BRP) 2026

|            |                                                                                                                                                                                                             |
|------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Deutsch    | Dieses Handbuch ist möglicherweise in Ihrer Landessprache verfügbar. Bitte wenden Sie sich an Ihren Händler oder besuchen Sie: <a href="http://www.operatorsguides.brp.com">www.operatorsguides.brp.com</a> |
| English    | This guide may be available in your language. Check with your dealer or go to: <a href="http://www.operatorsguides.brp.com">www.operatorsguides.brp.com</a>                                                 |
| Español    | Es posible que este manual esté disponible en su idioma. Consulte a su distribuidor o visite: <a href="http://www.operatorsguides.brp.com">www.operatorsguides.brp.com</a>                                  |
| Français   | Ce guide peut être disponible dans votre langue. Vérifier avec votre concessionnaire ou aller à: <a href="http://www.operatorsguides.brp.com">www.operatorsguides.brp.com</a>                               |
| Italiano   | Questa guida potrebbe essere disponibile nella propria lingua. Contattare il concessionario o consultare: <a href="http://www.operatorsguides.brp.com">www.operatorsguides.brp.com</a>                      |
| 中文         | 本手册可能有您的语种的翻译版本。请向经销商询问，或者登录 <a href="http://www.operatorsguides.brp.com">www.operatorsguides.brp.com</a> 查询。                                                                                               |
| 日本語        | このガイドは、言語によって翻訳版が用意されています。<br>ディーラーに問い合わせるか、次のアドレスでご確認ください：<br><a href="http://www.operatorsguides.brp.com">www.operatorsguides.brp.com</a>                                                                 |
| Nederlands | Deze handleiding kan beschikbaar zijn in uw taal. Vraag het aan uw dealer of ga naar: <a href="http://www.operatorsguides.brp.com">www.operatorsguides.brp.com</a>                                          |
| Norsk      | Denne boken kan finnes tilgjengelig på ditt eget språk. Kontakt din forhandler eller gå til: <a href="http://www.operatorsguides.brp.com">www.operatorsguides.brp.com</a>                                   |
| Português  | Este manual pode estar disponível em seu idioma. Fale com sua concessionária ou visite o site: <a href="http://www.operatorsguides.brp.com">www.operatorsguides.brp.com</a>                                 |
| Русский    | Воспользуйтесь руководством на вашем языке. Узнайте о его наличии у дилера или на странице по адресу <a href="http://www.operatorsguides.brp.com">www.operatorsguides.brp.com</a>                           |
| Suomi      | Käyttöohjekirja voi olla saatavissa omalla kielelläsi. Tarkista jälleenmyyjältä tai käy osoitteessa: <a href="http://www.operatorsguides.brp.com">www.operatorsguides.brp.com</a>                           |
| Svenska    | Denna bok kan finnas tillgänglig på ditt språk. Kontakta din återförsäljare eller gå till: <a href="http://www.operatorsguides.brp.com">www.operatorsguides.brp.com</a>                                     |

|                                                |
|------------------------------------------------|
| Covered Model<br>T Category (EU) Reg. 167/2013 |
| Traxter PRO XU HD10                            |

In Canada, products are distributed and serviced by Bombardier Recreational Products Inc. (BRP).

In the USA, products are distributed and serviced by BRP US Inc.

In the European Economic Area (which is comprised of the member states of the European Union plus the United Kingdom, Norway, Iceland and Liechtenstein), the Commonwealth of the Independent States (including Ukraine and Turkmenistan) and Turkey, products are distributed and serviced by BRP European Distribution S.A. and other affiliates or subsidiaries of BRP.

For all other countries, products are distributed and serviced by Bombardier Recreational Products Inc. (BRP) or its affiliates.

# TABLE OF CONTENTS

## GENERAL INFORMATION

|                             |           |
|-----------------------------|-----------|
| <b>GENERAL INFORMATION</b>  | <b>10</b> |
| About this Operator's Guide | 10        |
| Safety Messages             | 10        |
| Be A Responsible Rider      | 11        |
| Know Before you Go          | 11        |

## SAFETY INFORMATION

|                                                                          |           |
|--------------------------------------------------------------------------|-----------|
| <b>GENERAL PRECAUTIONS</b>                                               | <b>14</b> |
| Avoid Carbon Monoxide Poisoning                                          | 14        |
| Avoid Gasoline Fires and Other Hazards                                   | 14        |
| Avoid Burns from Hot Parts                                               | 14        |
| <b>BEFORE YOU GO</b>                                                     | <b>15</b> |
| Operating Age and Ability                                                | 15        |
| Drugs and Alcohol                                                        | 15        |
| Protective Gear                                                          | 15        |
| Required Equipment                                                       | 18        |
| <b>SAFE OPERATION - RESPONSIBILITIES</b>                                 | <b>19</b> |
| Owner - Be Responsible                                                   | 19        |
| Operator - Be Qualified and Responsible                                  | 19        |
| Riding Carefully                                                         | 20        |
| Occupant Restraint System                                                | 21        |
| <b>GET FAMILIAR WITH THE VEHICLE</b>                                     | <b>22</b> |
| Steering                                                                 | 22        |
| Braking                                                                  | 22        |
| Programmable D.E.S.S. Key                                                | 22        |
| Accessories and Modifications                                            | 22        |
| <b>RIDING YOUR VEHICLE</b>                                               | <b>26</b> |
| Practice Exercises                                                       | 26        |
| Off-Road Operation                                                       | 27        |
| European Community                                                       | 27        |
| General Riding Techniques                                                | 28        |
| Environment                                                              | 32        |
| <b>MOVING LOADS AND DOING WORK</b>                                       | <b>34</b> |
| Working with Your Vehicle                                                | 34        |
| Carrying Loads                                                           | 34        |
| Hauling a Load                                                           | 37        |
| Pulling a Trailer                                                        | 38        |
| <b>IMPORTANT ON PRODUCT LABELS</b>                                       | <b>40</b> |
| Important On-Product Labels (Countries Outside Canada and United States) | 40        |

|                                            |           |
|--------------------------------------------|-----------|
| <b>PRE-RIDE INSPECTION CHECKLIST .....</b> | <b>55</b> |
|--------------------------------------------|-----------|

## **VEHICLE INFORMATION**

|                                                       |           |
|-------------------------------------------------------|-----------|
| <b>PRIMARY CONTROLS .....</b>                         | <b>62</b> |
| Steering Wheel.....                                   | 63        |
| Accelerator Pedal .....                               | 63        |
| Brake Pedal .....                                     | 63        |
| Shift Lever.....                                      | 63        |
| Ignition Switch and Keys .....                        | 64        |
| Digitally Encoded Security System (D.E.S.S.) Key..... | 65        |
| <b>SECONDARY CONTROLS .....</b>                       | <b>67</b> |
| Multifunction Lever.....                              | 67        |
| Rear Differential Lock Switch.....                    | 67        |
| Keypad .....                                          | 67        |
| Horn Switch (On applicable models).....               | 68        |
| Winch Switch .....                                    | 68        |
| Headlight Dimmer Switch .....                         | 68        |
| Hill Descent Control (HDC)(ABS models only) .....     | 68        |
| Hazard Warning Switch.....                            | 69        |
| <b>7.6" DIGITAL DISPLAY .....</b>                     | <b>70</b> |
| Multifunction Display.....                            | 70        |
| Settings .....                                        | 72        |
| <b>EQUIPMENT .....</b>                                | <b>75</b> |
| Steering Wheel Tilt Mechanism.....                    | 75        |
| Cup Holder.....                                       | 75        |
| Passenger Handholds.....                              | 76        |
| Storage compartment .....                             | 76        |
| Lower Storage Box .....                               | 78        |
| Tool Kit .....                                        | 79        |
| Footrests.....                                        | 79        |
| Side Nets .....                                       | 79        |
| Shoulder Guards .....                                 | 81        |
| Seat Belts .....                                      | 81        |
| Driver's Seat.....                                    | 82        |
| Passenger Seats .....                                 | 82        |
| Fuel Reservoir Cap.....                               | 82        |
| Winch .....                                           | 83        |
| Cargo Box.....                                        | 83        |
| Side Mirrors (If equipped) .....                      | 85        |
| Trailer Hitch.....                                    | 85        |
| Hitch Draw Bar .....                                  | 86        |
| Trailer Lights Connector .....                        | 86        |
| Recovery Hooks (Models Without a Winch) .....         | 87        |
| 12-Volt Power Outlets .....                           | 87        |
| USB Power Outlet.....                                 | 87        |
| Brake Holding Mechanism.....                          | 87        |
| Side Mirrors.....                                     | 88        |
| Climate Control System.....                           | 88        |
| <b>DRIVING AID TECHNOLOGIES .....</b>                 | <b>92</b> |
| ABS (Anti-Lock Brake System) .....                    | 92        |
| BTC (Brake Torque Control) .....                      | 92        |

|                                                               |            |
|---------------------------------------------------------------|------------|
| DTC (Drag Torque Control) .....                               | 92         |
| HHC (Hill Hold Control) .....                                 | 92         |
| HDC (Hill Descent Control) .....                              | 92         |
| <b>BREAK-IN PERIOD</b> .....                                  | <b>93</b>  |
| Operation During Break-In .....                               | 93         |
| <b>OPERATING THE VEHICLE</b> .....                            | <b>94</b>  |
| Starting the Engine .....                                     | 94         |
| Operating the Shift Lever .....                               | 94         |
| Choosing the Correct Range (Low or High) .....                | 94         |
| Stopping the Engine and Parking the Vehicle .....             | 95         |
| Tips for Maximizing Drive Belt Durability .....               | 95         |
| Refueling .....                                               | 95         |
| <b>SPECIAL PROCEDURES</b> .....                               | <b>99</b>  |
| Fuel Flooded Engine .....                                     | 99         |
| What to do if Water is Suspected to be in the CVT .....       | 99         |
| What to do if Battery is Drained Out .....                    | 99         |
| What to Do if Vehicle Rolled Over .....                       | 99         |
| What to do if Vehicle is Submerged .....                      | 100        |
| <b>TRANSPORTING THE VEHICLE</b> .....                         | <b>101</b> |
| Using Vehicle Power to Climb Onto Trailering Equipment .....  | 102        |
| Using a Winch to Pull Vehicle Onto Trailering Equipment ..... | 102        |
| Securing Vehicle for Transport .....                          | 103        |
| Getting Vehicle Out of Trailer .....                          | 103        |
| <b>LIFTING AND SUPPORTING THE VEHICLE</b> .....               | <b>104</b> |
| Front of Vehicle .....                                        | 104        |
| Rear of Vehicle .....                                         | 104        |
| <b>TUNE YOUR RIDE</b> .....                                   | <b>105</b> |
| Suspension Adjustment Guidelines .....                        | 105        |
| Suspension Factory Settings .....                             | 105        |
| Suspension Adjustments .....                                  | 105        |
| DPS Function .....                                            | 106        |

## **MAINTENANCE**

|                                                            |            |
|------------------------------------------------------------|------------|
| <b>PERIODIC MAINTENANCE</b> .....                          | <b>108</b> |
| Air Filter Maintenance Guideline .....                     | 108        |
| Severe Duty Use .....                                      | 108        |
| Deep Mud / Water Use .....                                 | 109        |
| Maintenance Schedule .....                                 | 110        |
| Maintenance Records .....                                  | 114        |
| <b>MAINTENANCE PROCEDURES</b> .....                        | <b>119</b> |
| ENGINE AIR FILTER .....                                    | 119        |
| CVT Air Filter .....                                       | 120        |
| Evaporative Emission System Pre-Filter (If Equipped) ..... | 122        |
| ENGINE OIL .....                                           | 122        |
| OIL FILTER .....                                           | 124        |
| RADIATOR .....                                             | 125        |
| ENGINE COOLANT .....                                       | 126        |
| Heating/Air Conditioning Air Filter (if equipped) .....    | 127        |
| Air Conditioning Compressor Belt .....                     | 129        |
| EXHAUST SYSTEM .....                                       | 129        |
| GEARBOX .....                                              | 130        |

|                                                |            |
|------------------------------------------------|------------|
| FRONT DIFFERENTIAL .....                       | 130        |
| CVT COVER .....                                | 131        |
| Drive Belt .....                               | 132        |
| Drive and Driven Pulleys .....                 | 133        |
| SPARK PLUGS .....                              | 133        |
| Battery .....                                  | 133        |
| Fuses and Fusible Links .....                  | 134        |
| LIGHTS .....                                   | 136        |
| Drive Shaft Bellow and Protector .....         | 138        |
| Wheel Bearing .....                            | 138        |
| Wheels and Tires .....                         | 139        |
| Suspensions .....                              | 140        |
| Brakes .....                                   | 140        |
| SEAT BELTS .....                               | 141        |
| Cage .....                                     | 142        |
| <b>VEHICLE CARE .....</b>                      | <b>143</b> |
| Vehicle Cleaning and Protection .....          | 143        |
| <b>STORAGE AND PRESEASON PREPARATION .....</b> | <b>144</b> |

### ***TECHNICAL INFORMATION***

|                                                                               |            |
|-------------------------------------------------------------------------------|------------|
| <b>VEHICLE IDENTIFICATION .....</b>                                           | <b>146</b> |
| Vehicle Identification Number .....                                           | 146        |
| <b>BRP RF DESS POST GEN3 (CAN) .....</b>                                      | <b>147</b> |
| USA and Canada .....                                                          | 147        |
| Mexico .....                                                                  | 148        |
| Brazil .....                                                                  | 148        |
| Japan .....                                                                   | 149        |
| Europe .....                                                                  | 149        |
| <b>TECHNICAL INFORMATION LABEL .....</b>                                      | <b>153</b> |
| Middle Seat Opening Pictogram .....                                           | 153        |
| Air Filter Replacement Pictogram .....                                        | 153        |
| Park Position Pictogram .....                                                 | 154        |
| Starting Position Pictogram .....                                             | 154        |
| Position Light Position Pictogram .....                                       | 155        |
| Brake Fluid Pictogram .....                                                   | 155        |
| Lifting Point Location .....                                                  | 156        |
| Front Suspension Grease Fitting Location .....                                | 156        |
| Rear Suspension Grease Fitting Location .....                                 | 157        |
| <b>COMPLIANCE LABEL .....</b>                                                 | <b>158</b> |
| Regulation (EU) 2016/1628 Applicable for Non-Road Mobile<br>Machineries ..... | 158        |
| Ethanol Compliance Pictogram .....                                            | 158        |
| Cage Compliance Pictogram .....                                               | 159        |
| Category Compliance Pictogram .....                                           | 159        |
| <b>NOISE EMISSION AND VIBRATION VALUES .....</b>                              | <b>160</b> |
| <b>DECLARATION OF CONFORMITY .....</b>                                        | <b>161</b> |
| EU Declaration of Conformity .....                                            | 161        |
| UK Declaration of Conformity .....                                            | 162        |

|                                     |     |
|-------------------------------------|-----|
| EAC DECLARATION OF CONFORMITY ..... | 163 |
| 2016/1628 ARTICLE 8, ITEM 5 .....   | 164 |

## **TECHNICAL SPECIFICATIONS**

|                                |     |
|--------------------------------|-----|
| TECHNICAL SPECIFICATIONS ..... | 166 |
|--------------------------------|-----|

## **PARTS CATALOG**

|                            |     |
|----------------------------|-----|
| ONLINE PARTS CATALOG ..... | 174 |
|----------------------------|-----|

## **TROUBLESHOOTING**

|                                                                                                                   |     |
|-------------------------------------------------------------------------------------------------------------------|-----|
| TRUBLESHOOTING GUIDELINES .....                                                                                   | 176 |
| “–” Is Displayed On the Gearbox Position Display .....                                                            | 176 |
| Engine Does Not Turn.....                                                                                         | 176 |
| Engine Turns Over But Fails To Start .....                                                                        | 176 |
| Engine Lacks Acceleration or Power .....                                                                          | 177 |
| Engine Overheats.....                                                                                             | 178 |
| Engine Misfire .....                                                                                              | 178 |
| The RPM Increases But the Vehicle Does Not Move .....                                                             | 178 |
| Partial or No Response From the Accelerator Pedal - Check Engine Is ON<br>and PPS Fault Message Is Displayed..... | 178 |
| DIGITAL DISPLAY MESSAGES.....                                                                                     | 179 |

## **CUSTOMER INFORMATION**

|                                       |     |
|---------------------------------------|-----|
| DATA PRIVACY INFORMATION .....        | 182 |
| CONTACT US .....                      | 184 |
| Asia Pacific .....                    | 184 |
| Europe, Middle East and Africa.....   | 184 |
| Latin America .....                   | 185 |
| North America .....                   | 185 |
| CHANGE OF ADDRESS AND OWNERSHIP ..... | 186 |

This page is intentionally blank

# GENERAL INFORMATION

---

## GENERAL INFORMATION

Congratulations on your purchase of a new Can-Am® side-by-side vehicle. It's backed by the BRP limited warranty and a network of authorized Can-Am dealers ready to provide the parts, accessories or service you may require.

At delivery, you were informed of the warranty coverage and signed the Pre-delivery Check List to ensure your new vehicle was prepared to your entire satisfaction.

Your dealer is committed to your satisfaction. If you need more information, please ask your dealer.

### About this Operator's Guide

This Operator's Guide has been prepared to acquaint the owner/operator of a new vehicle with the various vehicle controls, maintenance and safe operating instructions. It is indispensable for the proper use of the product.

Keep this Operator's Guide in the vehicle as you can refer to it for things such as maintenance, troubleshooting and instructing others.

Note that this guide is available in several languages. In the event of any discrepancy, the English version shall prevail.

If you want to view and/or print an extra copy of your Operator's Guide, simply visit the following website:

**[www.operatorsguides.brp.com](http://www.operatorsguides.brp.com)**

The information contained in this document is correct at the time of publication. BRP, however, maintains a policy of continuous improvement of its products without imposing upon itself any obligation to install them on products previously manufactured. Due to late changes, some differences between the manufactured product and the descriptions and/or specifications in this guide may occur. BRP reserves the right at any time to discontinue or change specifications, designs, features, models or equipment without incurring any obligation upon itself.

This Operator's Guide should remain with the vehicle when it is sold.

### Safety Messages

The types of safety messages, what they look like and how they are used in this guide are explained as follows:

The safety alert symbol  indicates a potential injury hazard.

#### **WARNING**

Indicates a potential hazard which, if not avoided, could result in serious injury or death.

#### **CAUTION**

Indicates a hazardous situation which, if not avoided, could result in minor or moderate injury.

**NOTICE**

**Indicates an instruction which, if not followed, could result in severely damaged vehicle components or other property.**

## Be A Responsible Rider

At BRP, we believe there's an opportunity for everyone in the powersports and marine communities to come together and rethink how we approach safety, riding etiquette, and the environment. We believe that when we empower all riders to ride responsibly — to look out for each other and safeguard our trails and playgrounds — we inspire an industry to welcome newcomers, build a more caring community and generate positive experiences.

Whether you ride on trails, roads, water or snow, BRP is committed to driving positive change. That's why we're making the Responsible Rider program a key part of our Corporate Social Responsibility initiative through action, education and community empowerment.


To learn more about Responsible Rider, including tips and tricks on safety, riding etiquette and the environment, visit:



## Know Before you Go

To learn how to reduce the risk of accident for you or bystanders, read this Operator's Guide before you operate the vehicle.

Also, read all safety labels on your vehicle and watch the *Safety Video* using the following QR code:

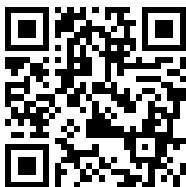

Failure to follow the warnings contained in this Operator's Guide can result in **SERIOUS INJURY or DEATH.**

This page is intentionally blank

# **SAFETY INFORMATION**

---

# GENERAL PRECAUTIONS

## Avoid Carbon Monoxide Poisoning

All engine exhaust contains carbon monoxide, a deadly gas. Breathing carbon monoxide can cause headaches, dizziness, drowsiness, nausea, confusion and eventually death.

Carbon monoxide is a colorless, odorless, tasteless gas that may be present even if you do not see or smell any engine exhaust. Deadly levels of carbon monoxide can collect rapidly, and you can quickly be overcome and unable to save yourself. Also, deadly levels of carbon monoxide can linger for hours or days in enclosed or poorly ventilated areas. If you experience any symptoms of carbon monoxide poisoning, leave the area immediately, get fresh air and seek medical treatment.

To prevent serious injury or death from carbon monoxide:

- Never run the vehicle in poorly ventilated or partially enclosed areas such as garages, carports or barns. Even if you try to ventilate engine exhaust with fans or open windows and doors, carbon monoxide can rapidly reach dangerous levels.
- Never run the vehicle outdoors where engine exhaust can be drawn into a building through openings such as windows and doors.

## Avoid Gasoline Fires and Other Hazards

Gasoline is extremely flammable and highly explosive. Fuel vapors can spread and be ignited by a spark or flame many feet away from the engine. To reduce the risk of fire or explosion, follow these instructions:

- Use only an approved gasoline container to store fuel.
- Never fill the gasoline container on the vehicle - an electrical static discharge may ignite the fuel.
- Never carry gasoline container(s) or any dangerous liquids on the cargo rack.
- Strictly adhere to instructions in *Vehicle Fueling Procedure*.
- Never start or operate the engine if the fuel cap is not properly installed.

Gasoline is poisonous and can cause injury or death.

- Never siphon gasoline by mouth.
- If you swallow gasoline, get any in your eye(s), or inhale gasoline vapor, see a doctor immediately.

If gasoline spills on you, wash your skin thoroughly with soap and water and change your clothes. To clean your gasoline-contaminated clothes, air them out to let the fuel evaporate and hand wash before air-drying. Do not use a washing machine or a dryer before the gasoline has been removed to avoid any risk of fire.

## Avoid Burns from Hot Parts

Certain components like brake rotors and exhaust components become hot during operation. Avoid contact with those parts during and shortly after operation to avoid burn wounds.

# BEFORE YOU GO

## **WARNING**

**Disregarding any of the safety precautions and instructions contained in this section could cause injury including the possibility of death.**

### **Operating Age and Ability**

Operators must be qualified.

Make sure the operator is 16 or older. Your state (or province) may have additional requirements.

Laws regarding the minimum age and licensing requirements vary from one jurisdiction to another. Be sure to contact the local authorities for information regarding the legal operation of a side-by-side vehicle in the intended jurisdiction of use.

BRP highly recommends that you take a safety riding course. Basic training is required for the safe operation of any side-by-side vehicles.

Operation of this vehicle with a disability that impairs vision, reaction time, judgment, or operation of the controls is not recommended.

The safe use of this vehicle depends on many conditions such as visibility, speed, weather, environment, traffic, vehicle condition and the condition of the operator.

The performance of this vehicle may significantly exceed that of other vehicles you have operated. Therefore, use by novice or inexperienced operators is not recommended.

Each passenger must be tall enough to always be properly seated: back against the backrest with seat belt fastened, holding both handholds, and feet firmly planted on the floor.

### **Drugs and Alcohol**


Never ride after consuming alcohol or drugs.

Riding this vehicle requires the operator and passenger(s) to be sober, attentive and alert.

The use of drugs and alcohol, singly or in combination, slows reaction time, impedes judgment, impairs vision, and inhibits your ability to ride safely.

### **Protective Gear**

It is important that the operator and passenger always wears appropriate protective clothing and apparel, including:

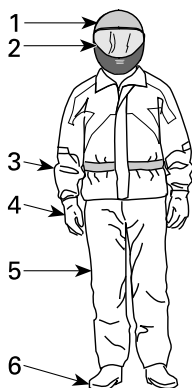

1. *Approved helmet*
2. *Eye and face protection*
3. *Long sleeves shirt or jacket*
4. *Gloves*
5. *Long pants*
6. *Boots (over-the-ankle footwear)*

Depending on conditions, anti-fogging goggles may be required.

Weather conditions should help you decide how to dress. To maximize comfort and avoid frostbites in winter, dress for the coldest weather expected. Thermal underwear next to the skin also provides good insulation.

Never wear any loose clothing that may get entangled in the vehicle or on tree branches and shrubs.

### ***Helmets and Eye Protection***

Helmets protect the head and brain from injury. Even with the vehicle's cage and doors or nets, objects can enter the cockpit and strike the head, or the head can strike the cage itself or objects outside the vehicle. Even the best helmet is no guarantee against injury, but statistics indicate that helmet use significantly reduces the risk of brain injury. So, be safe and always wear a helmet while riding.

### **Choosing a Helmet**

Helmets should be manufactured to meet the appropriate standard in your state, province or country and should fit properly.

A helmet with face protection is a better choice as it protects also against frontal impacts. It can also protect against debris, stones, insects, the elements, etc.

An open-face helmet does not offer the same protection for the face and chin. If you wear an open-face helmet, you should use a snap-on face shield and/or a pair of goggles. Ordinary glasses or sunglasses are not sufficient eye protection for riders. They can shatter or fly off, and they allow wind and airborne objects to reach the eyes.

For winter riding conditions, a stocking type cap, balaclava and face mask should always be carried or worn.

Use tinted face shields or goggles in the daytime only; do not use them at night or in poor illumination. Do not use them if they impair your ability to discern color.

## **Other Riding Gear**

### **Footwear**

Always wear closed toe footwear. Sturdy over-the-ankle boots with non-slip soles offer more protection and allow you to plant your foot properly on footrest.

Avoid long shoelaces that can be tangled in the accelerator or brake pedals.

For winter riding conditions, rubber soled boots with either a nylon or leather uppers, with removable felt liners are best suited.

Avoid rubber boots. Rubber boots may get trapped behind or between pedals, impairing the proper operation of brake and accelerator pedals.

### **Gloves**

Full-fingered gloves protect hands from the wind, sun, heat, cold and flying objects. Gloves that fit snugly will improve grip on the steering wheel and help reduce hand fatigue. Sturdy, reinforced motorcycle or ATV gloves help protect hands better in the event of an accident or a rollover. If gloves are too bulky, it may be difficult to operate the controls.

For winter riding conditions, hands should be protected by a pair of snowmobile gloves which have sufficient insulation and allow use of thumbs and fingers for operation of controls.

### **Jackets, Pants and Riding Suits**

Wear a jacket or a long sleeved shirt and long pants, or a full riding suit. Quality ATV-type protective gear will provide comfort, and it can help you avoid being distracted by adverse environmental elements. In case of a crash, good quality protective gear made of sturdy material may prevent or reduce injury.

In cool-weather riding, protect yourself against hypothermia. Hypothermia, a condition of low body temperature, can cause loss of concentration, slowed reactions and loss of smooth, precise muscle movement. In cool conditions, proper protective gear like a windproof jacket and insulated layers of clothing are essential. Even while riding at moderate temperatures, you can feel very cold due to the wind.

Protective gear that is appropriate for cold-weather riding may be too hot when stopped. Dress in layers so that clothing can be removed as desired. Topping the protective gear with a windproof outer layer can prevent cold air from reaching the skin.

### **Rain Gear**

If you must ride in wet weather, a rain suit or a waterproof riding suit is recommended. On long rides, it is a good idea to carry rain gear. A dry rider will be much more comfortable and alert.

## Hearing Protection

Long-term exposure to wind and engine noise when riding can cause permanent hearing loss. Properly worn hearing protective devices such as earplugs can help prevent hearing loss. Check local laws before using any hearing protective devices.

## Required Equipment

As the owner of a side-by-side vehicle, you are responsible for ensuring that all required safety equipment is aboard. Check your local regulations about requirements.

This could include:

- First aid kit
- Sling: to help a defective or stuck vehicle
- Tool kit
- Phone in a watertight compartment designed for this application
- Current local map.

For a long ride, you should also include the following:

- Snack
- Flashlight.

---

# SAFE OPERATION - RESPONSIBILITIES

This is a high performance vehicle. Operators must be responsible and use care to avoid rollovers, tipovers, collisions, and other accidents. Even with vehicle safety features (such as protective structure, seat belts, side nets, doors) and protective gear (such as a helmet), there is always a risk of injury or death in these accidents. To reduce the risk of serious injury or death, follow the rules in this section.

## Owner - Be Responsible

Read this Operator's Guide and watch the *Safety Video*. Refer to the link at the beginning of the Operator's Guide.

Always inspect and confirm the safe operating condition of your vehicle prior to ride. Always follow the maintenance schedule described in this Operator's Guide.

Never allow anyone to operate your vehicle unless they are responsible and can be trusted with a high performance vehicle. Consider supervising new or young operators and setting rules and limits (e.g., whether they can carry passengers, what they may do with the vehicle, where they may ride, etc.) for anyone using your vehicle.

**If equipped with optional D.E.S.S. keys**, select the appropriate key (see *Ignition Switch and Keys*) based on the operator's experience, vehicle use and environment.

Discuss the safety information with anyone who will be using the vehicle. Be sure that all operators and passengers meet the qualifications below and agree to follow the safety information. Help users become familiar with the vehicle.

We encourage you to have an Annual Safety Inspection of your vehicle. Please contact an authorized BRP dealer for further details. Though not required, it is recommended that an authorized BRP dealer performs the preseason preparation of your vehicle. Each visit to your authorized BRP dealer is a great opportunity for your dealer to verify if your vehicle is included in any safety campaign. We also urge you to visit your authorized BRP dealer in a timely manner if you become aware of any safety related campaigns.

See an authorized BRP dealer for available accessories you may require.

## Operator - Be Qualified and Responsible

Read this Operator's Guide and watch the safety video. Refer to the link at the beginning of the Operator's Guide.

Become completely familiar with the operational controls and the general operation of the vehicle.

Familiarize yourself with this vehicle, as it may exceed the performance of others you have operated. It is a high-performance machine, and inexperienced riders may underestimate the risks or be caught off guard by its behavior under different terrain conditions.

Take a training course if available (contact an authorized Can-Am dealer to find out about training course availability as well as on the internet at <http://www.rohva.org/>), and perform the practice exercises in *Practice Exercises*. Practice driving in a suitable area free of hazards and feel the response of each control. Drive

at low speeds. Higher speeds require greater experience, knowledge and suitable riding conditions.

Be at least 16 years of age.

Be tall enough to be properly seated: back against the backrest with the seat belt fastened, to hold the steering wheel with both hands and still be able to reach the full stroke of brake and accelerator pedals with the right foot and to firmly plant left foot on the footrest.

Have a proper driver's license in accordance with local laws.

Never use this vehicle with drugs or alcohol, or if tired or ill. These slow reaction time and impair judgment.

### ***Carrying Passengers***

Only carry one passenger per available seat. All passengers must be properly seated in the cockpit.

The passengers must be tall enough to always be properly seated: back against the backrest with seat belt fastened, holding both handholds, and feet firmly planted on the footrests.

Never carry passengers who has used drugs or alcohol, or is tired or ill. These slow reaction time and impair judgment.

Instruct the passengers to read the vehicle's safety labels.

Never carry passengers if you judge his ability or judgement insufficient to concentrate on the terrain conditions and adapt accordingly. More specifically for side-by-side vehicles, the passengers must also pay constant attention to the terrain ahead and be able to brace for bumps.

### ***Riding Carefully***

- This vehicle handles differently from other vehicles. A collision or rollover can occur quickly, during abrupt maneuvers such as doing sharp turns, acceleration or deceleration and driving on hills or over obstacles, if you fail to take proper precautions.
- Never operate at excessive speeds. Always go at a speed that is proper for the terrain, visibility, and operating conditions, and your experience.
- Never attempt jumps, side slides, donuts or any other stunts.
- Never attempt rapid acceleration or deceleration when performing a sharp turn. This may result in a roll over.
- Never attempt skidding or sliding. If vehicle starts to skid or slide, counter steer in the direction of skidding or sliding. On extremely slippery surfaces, such as ice, go slowly and be very cautious in order to reduce the chance of skidding out of control.
- Always be sure there are no obstacles or people behind the vehicle when you operate in reverse. Pay attention to blind spots. When it is safe to proceed in reverse, go slowly.
- Never exceed the stated load limits for this vehicle. Cargo must be properly secured. Reduce speed, allow for greater braking distance and follow other instructions in *Moving Loads and Doing Work*.

- Always remember that this vehicle is heavy! Its pure weight alone may entrap you should it tip or rollover.

## Occupant Restraint System

- This vehicle is designed to carry one (1) driver and up to two (2) passengers, all wearing proper protective gears (refer to *Riding Gear* in this section).
- 
- All occupants must latch the doors or the side nets and wear the seat belts at all times when riding.
- Before riding, everyone aboard should know how to unbuckle their seat belt rapidly. Knowing how to properly detach your seat belt is a crucial skill that can save your life in an emergency situation. In the event of an accident or vehicle malfunction, being able to quickly release your seat belt can help you escape the vehicle and avoid potential hazards such as fire or sinking. Additionally, knowing to quickly release your seat belt can also help you assist others such as children or older persons.

---

# GET FAMILIAR WITH THE VEHICLE

This vehicle may exceed the performance of other vehicles you may have ridden. Take time to familiarize yourself with your new vehicle.

Inexperienced operators may overlook risks and be surprised by vehicle's specific behavior and terrain conditions. Ride slowly. Excessive speed and reckless driving can kill.

Make sure you read and understand the content of this operator's guide to become completely familiar with the controls and operation of this vehicle before embarking on your first trip or taking on a passenger(s).

Take time to practice driving solo in a suitable traffic-free area to become accustomed to the feel and response of each control.

It is very important to inform any operator, regardless of his experience, of the handling characteristics of this vehicle. The configuration, such as vehicle height, width, suspension type, tires type, and type vary from a model to another. The vehicle handling is greatly influenced by these characteristics.

## Steering

The front wheels are steered by the steering wheel.

Steering behavior will vary depending of the grip of the tires on the ground.

The Dynamic Power Steering (DPS) to reduce the effort to turn the steering wheel.

Riding with passenger(s) or when carrying loads will affect the steering control and vehicle handling. Pay attention and reduce the speed.

## Braking

Braking performances may vary suddenly under certain conditions.

Always remember that the vehicle braking distance may be affected when riding with passenger(s) and when loaded with cargo at the rear.

Never jam the brakes. Be sure to use restraint in braking to keep from blocking the wheels in order to avoid surprises that could lead to a loss of control.

## Programmable D.E.S.S. Key

The D.E.S.S. key can be programmed to limit the speed of the vehicle and the engine torque.

Enabling first time users and less experienced operators to learn how to operate while gaining the necessary confidence and control.

## Accessories and Modifications

Any modifications or addition of accessories approved by BRP may affect the handling of your vehicle. It is important to take the time to get familiar with the vehicle once modifications are made to understand how to adapt your driving behavior accordingly.

Avoid installing equipment not specifically approved by BRP for the vehicle and avoid unauthorized modifications. These modifications and equipment have not been tested by BRP and may create hazards. For example, they could:

- Create a loss of control and increase risk of crash.
- Cause overheating or short circuits increasing the risk of fire or burn injuries.
- Affect the protection features provided by the vehicle.
- Affect the behavior of the trailer when the vehicle is transported.
- Cause a risk of losing objects on the road when transported.

Your vehicle may also become illegal to ride.

See your authorized BRP dealer for available BRP accessories for your vehicle.

For safety reasons, some BRP accessories must be installed by a BRP dealer but if you decide to install the accessory by yourself, when not required to be done by the dealer, it is important to follow all the instructions carefully and, if applicable, understand all the information on how to use the product or for servicing.

If the accessory has been installed on your vehicle by another person than you, BRP strongly recommends you to read the corresponding instruction sheet as there may be more for information on how to use it safely or for the servicing.

The instruction sheets can be found at this address:

- [HTTPS://INSTRUCTIONS.BRP.COM](https://instructions.brp.com)

---

# AVOID ACCIDENTS

## Avoid Rollovers and Tipovers

Side-by-side vehicles handle differently from other vehicles. Side-by-side vehicles are designed to handle off-road terrain (for example, their wheel base and track width, ground clearance, suspension, drivetrain, tires, etc.), and, as a result, can overturn in situations where vehicles designed for use primarily on paved or smooth terrain may not.

A rollover or other accident can occur quickly during abrupt maneuvers such as sharp turns or hard acceleration or deceleration when turning, or when driving on hills or over obstacles. Abrupt maneuvers or aggressive driving can cause rollovers or loss of control even in flat open areas. If the vehicle rolls over, any part of your body (such as arms, legs, or head) outside of the cockpit can be crushed and trapped by the cage or ROPS or other parts of the vehicle. You can also be injured by impact with the ground, cockpit or other objects.

To reduce the risk of rollovers:

- Use care when turning.
  - Do not turn the steering wheel too far or too fast for your speed and environment. Adjust steering inputs according to your speed and environment.
  - Slow down before entering a turn. Avoid hard braking during a turn.
  - Avoid sudden or hard acceleration when turning, even from a stop or low speed.
- Never attempt donuts, skids, slides, fishtails, jumps, or other stunts. If vehicle starts to skid or slide, steer in the direction of the skid or slide. Never slam the brakes and lock the wheels.
- Driving on paved surfaces is different from driving in Off-Road conditions. It requires a different approach in regards to the steering inputs and braking. Turn gradually, go slowly, and avoid abrupt acceleration and braking.

This vehicle can roll over sideways or tip over forward or backwards on slopes or uneven terrain.

- Avoid side hilling (driving along the slope rather than up or down a hill). When possible, drive straight up and down inclines rather than across them. If you must side hill, use extreme caution and avoid slippery surfaces, objects, or depressions. If you feel the vehicle start to rollover or slide sideways, steer downhill if possible.
- Avoid steep hills and follow procedures in this guide for climbing and descending hills.
- Sudden changes in terrain such as holes, depressions, banks, softer or harder ground or other irregularities may cause the vehicle to tip or become unstable. Observe the terrain ahead and slow down in areas of uneven terrain.

This vehicle will handle differently when carrying or pulling a load.

- Reduce speed and follow instructions in this manual for carrying cargo or pulling a trailer.
- Avoid hills and rough terrain.
- Allow more distance to stop.

## Be Prepared in Case of Rollover

- Latch doors and side nets, if equipped, and fasten seat belts to help you avoid sticking arms or legs out of the vehicle.

- Never grab the cage or ROPS while riding. Hands can be crushed between the cage or ROPS and the ground in a rollover. Keep hands on the steering wheel or handholds.
- Never try to stop a rollover using your arms or legs. If you think that the vehicle may tip or roll, the driver should keep both hands on the steering wheel and the left foot firmly planted on the footrest. The passengers should keep both hands on the handhold and both feet firmly planted on the floor.

## **Avoid Collisions**

This vehicle can reach high speeds. At higher speeds, there is an increased risk of losing control, particularly in challenging driving conditions, and the risk of injury in a collision is greater. Never operate at excessive speeds. Always go at a speed that is proper for the terrain, visibility, and operating conditions, and your experience. Consider reserving use of the performance key for situations in which full speed and acceleration capability are appropriate.

This vehicle does not have the same kind of protection for collisions as a car; for example, there are no air bags, the cockpit is not fully enclosed, and it is not designed for collisions with other vehicles. Therefore, it is particularly important to fasten seat belts and close doors or nets and wear an approved helmet.

---

# RIDING YOUR VEHICLE

## Practice Exercises

Before you go out for a ride, it is very important to familiarize yourself with the handling of your vehicle by practicing in a controlled environment. If possible, it is also a very good idea to take a more formal training course to sharpen your skills and increase your knowledge of the vehicle.

Find a suitable area to practice and perform the following exercises. It should be at least 45 x 45 m (150 x 150 ft) free of obstacles like trees and rocks. Once you've selected a suitable permitted location, proceed with the following exercises.

### *Turning Exercises*

Turning is one of the most frequent causes of accidents. It is easier for the vehicle to lose traction or rollover if you turn too sharply, or go too fast. Slow down when you approach a turn.

- First learn how to perform slight right turns at very low speeds. Release the throttle before turning and slowly reapply the throttle when turning.
- Repeat turning exercise but this time maintain the throttle at the level while turning.
- Finally, repeat turning exercise while accelerating slowly.
- Practice exercises turning on the other side.

Note how your vehicle reacts in these different exercises. We recommend releasing the throttle before entering a turn to help initiate directional change. You will feel the lateral force increasing with the speed and with your steering input. The lateral force should be maintained as low as possible to make sure it does not cause the vehicle to roll over.

### *U-Turn Exercises*

Practice doing U-turns.

- Accelerate slowly and while remaining at low speed, then gradually turn the steering wheel to the right until you have completed the U-turn.
- Repeat U-turn exercise with different steering inputs and always at a very low speed.
- Repeat U-turn exercise on the other side.

### *Braking Exercises*

Practice braking to get familiar with the brake response.

- Do it at low speed first, then increase the speed.
- Practice braking in straight line at different speeds and different braking force.
- Practice emergency braking; optimal braking is obtained in straight line, with high force applied, without locking the wheels.

Remember, braking distance depends on vehicle speed, load and the type of surface. Also, the tires and brakes conditions play a major role.

### *Reverse Exercises*

The next step involves using the reverse.

- Install 1 cone marker on both sides of the vehicle beside each rear wheel. Move the vehicle forward until you can see the cone markers, then stop the vehicle. Acknowledge the distance required to see obstacles behind you.
- Learn how the vehicle handles itself in reverse and reacts with steering inputs.
- Always perform this reverse exercise at slow speeds.
- Become familiar with the usage of the override function. Do not steer while using the override as it increases the risks of rollover.

### ***Emergency Engine Stopping Exercise***

Learn how to stop your engine quickly in an emergency situation.

- While running at low speed, simply remove the RF D.E.S.S. key from the D.E. S.S. post.

This is to familiarize you with the vehicle's reaction when the engine is turned off while driving and to develop this reflex.

## **Off-Road Operation**

The very nature of off-road operation is dangerous. Any terrain, which has not been specially prepared to carry vehicles, presents an inherent danger where terrain substance, shape and steepness are unpredictable. The terrain itself presents a continual element of danger, which must be knowingly accepted by anyone venturing over it.

An operator who takes a vehicle off-road should always exercise the utmost care in selecting the safest path and keeping close watch on the terrain ahead of him. The vehicle should never be operated by anyone who is not completely familiar with the driving instructions applicable to the vehicle, nor should it be operated on steep or treacherous terrain.

## **European Community**

### **On-Road Use**

The following warning applies only in the European Countries where on-road usage is allowed.

**SEVERE INJURY OR DEATH** can result if you do not comply with the following instructions.

#### **WARNING**

- **Always refrain from speeding and substantially reduce vehicle speed when turning.**
- **Always respect the road traffic laws, even on a dirt or gravel road.**
- **Always use any other equipment as required by traffic law for slow moving vehicle.**

## General Riding Techniques

### *General Driving Tips*

Care, caution, experience and driving skill are the best precautions against the hazards of vehicle operation.

Whenever there is the slightest doubt that the vehicle can safely negotiate an obstacle or a particular piece of terrain, always choose an alternate route.

In off-road operation, power and traction, not speed, are important. Never drive faster than visibility and your own ability to select a safe route permit. Always go slowly and be extra careful when operating on unfamiliar terrain. Always be alert to changing terrain conditions when operating this vehicle. Be especially cautious on excessively rough, slippery, icy or loose terrain.

Constantly watch the terrain ahead for sudden changes in slopes or obstacles, such as rocks or stumps, that may cause loss of stability, resulting in tip over or rollover.

Never operate the vehicle if the controls do not function normally. See an authorized Can-Am dealer.

To maintain proper control it is strongly advised that you keep your hands on the steering wheel and within easy reach of all controls. The same holds true for your feet. To minimize the possibility of any leg or foot injury, keep your left foot on the footrest and right foot on the floor at all times. Staying completely within the cockpit will also help keep you from striking objects outside the vehicle.

Watch for and avoid branches and other objects that could enter the occupant compartment and strike you or your passengers.

### *Operating in Reverse*

When operating in reverse, check that the path behind the vehicle is free of people or obstacles. Pay attention to blind spots. When it is safe to proceed in reverse, go slowly and avoid sharp turns.

#### **WARNING**

**Steering inputs in reverse operation increase the risk of rollover.**

#### **NOTE:**

In reverse operation, the engine RPM is limited thus limiting the vehicle reverse speed.

#### **WARNING**

**When driving downhill in reverse, gravity can increase the vehicle speed above safe reverse speed.**

### *Crossing Roads*

If you have to cross a road, ensure to have complete visibility on both sides for incoming traffic and decide on exit point on other side of road. Drive in a straight

line toward that point. Do not make sharp direction changes or abrupt accelerations as it may result in a rollover situation. Do not travel on sidewalks or bicycle trails as they are designated specifically for those uses.

### ***Shallow Water Crossing***

Water can be a unique hazard. If it is too deep the vehicle may “float” and topple. Check the water depth and current before you attempt to cross any water. Water depth should not exceed the center of the wheel for vehicle to safely cross the obstacle. Beware of slippery surfaces such as rocks, grass, logs, etc., both in the water and on its banks. A loss of traction may occur. Do not attempt to enter the water at high speed.

Mud or marsh lands may be encountered near water. Be prepared for sudden “holes” or changes in depth. Similarly so, be watchful of hazards such as rocks, logs, etc., partially covered by vegetation.

Water will affect the braking ability of your vehicle. Make sure you dry the brakes by applying them several times after the vehicle leaves the water.

Water and mud can also cause overheating problems.

- Check if the front cooling fans are not obstruct or damages.
- After that, check the cooling fan fuses. If burnt, replace them with fuses with the same rate.

### ***Riding on Snow or Ice***

When performing pre-ride inspection, pay special attention to locations on the vehicle where snow and/or ice accumulations may obstruct visibility of the tail lamp, clog ventilation openings, block the radiator, fan, engine air intake and CVT air intake, and interfere with the movement of controls. Before starting with your vehicle, check the steering, accelerator and brake pedals for interference free operation.

Whenever this vehicle is ridden on a snow covered drive path, the tire grip is generally reduced causing the vehicle to react differently to control inputs from the operator. On low grip surfaces, the steering responses are not as crisp and precise, stopping distances are lengthened and acceleration is also affected. Slow down and do not “gun” the accelerator. This will only result in spinning of the tires and possibly in an over steering slide of the vehicle. Avoid hard braking. This will possibly result in a straight line slide of the vehicle. Again, the best advice is to safely reduce speed in anticipation of a maneuver to give yourself time and distance in order to keep control of the vehicle.

As you drive your vehicle over a loose snow covered surface, snow dust will be picked up in the wake turbulence of the moving vehicle and transported to contact and accumulate or melt on some exposed components including rotating parts like brake discs. Water, snow or ice may affect the response time of the brake system of your vehicle. Even when not required to reduce vehicle speed apply brakes frequently to prevent ice or snow accumulation and to dry brake pads and discs. While doing so in low risk driving situations you will test for grip level and keep yourself alerted to how the vehicle reacts to your control inputs. Always keep brake and accelerator pedals and floor boards free of snow and ice. Frequently wipe snow off seat, steering wheel, headlights and tail lamps.

The depth of the snow cover may hide rocks, tree stumps or other objects and if it is wet may totally impede the drivability as the vehicle becomes bogged down or completely loses traction in slushy snow. Look far ahead and always be watchful of any visible clues that might indicate the presence of such obstacles. In doubt steer clear. Avoid driving on any frozen waterways before checking that the ice will safely support the vehicle, its riders and its load of cargo.

At the end of each ride it is a good practice to clean the vehicle and all moving components (brakes, steering components, drivelines, controls, radiator fan etc.) from any snow or ice accumulations. Wet snow will turn to ice during the shut down period and become more difficult to remove at the next pre-ride inspection.

### ***Riding on Sand***

Riding on sand or sand dunes is another unique experience, but there are some basic precautions that should be observed. Wet, deep or fine sand may create a loss of traction and cause the vehicle to slide, drop off or become “bogged” down. If this occurs look for a firmer base. Again, the best advice is to slow down and be watchful of the conditions. Slow down even more when riding with a passenger.

When riding in sand dunes it is advisable to equip the vehicle with an antenna--type safety flag. This will help make your location more visible to others over the next sand dune. Proceed carefully should you see another safety flag ahead. Since the antenna type safety flag can snag and rebound on your body if caught, do not use it in areas where there are low hanging branches or obstacles. Always remember when riding that the vehicle handling and stability may be affected when riding with a passenger.

### ***Riding on Gravel, Loose Stones or Other Slippery Surfaces***

Riding on loose stones or gravel is very similar to riding on ice. They will affect the steering of vehicle, possibly causing it to slide and tip over especially at high speeds. In addition, braking distance may be affected. Remember that “gunning” the throttle or sliding may cause loose stones to be ejected rearwards into the path of another rider's way. Never do it deliberately.

If you do get into a slide or skid, it may help to turn the steering wheel into the direction of the skid until you regain control. Never jam the brakes and lock the wheels.

### ***Crossing Obstacles***

Use the low range (L) for crossing obstacles.

Obstacles on the “trail” should be traversed with caution. This includes rocks, fallen trees, and depressions. You should avoid them whenever possible. Remember that some obstacles are too large or dangerous to cross and should be avoided. As a guideline, never attempt to cross an obstacle higher than the ground clearance of the vehicle. Small rocks or small fallen trees may be safely crossed - approach obstacle at low speed and as much as possible at a right angle. Adjust speed without losing momentum and do not accelerate abruptly. Passenger must grasp both handholds firmly and brace feet on the floor. Hold steering firmly without closing your fists around it and proceed. Be aware that the obstacle may be slippery or may move while crossing.

## Hill Driving Conditions

When driving on hills or slopes, two things are highly important: be prepared for slippery surfaces or terrain variations and obstacles and brace yourself properly inside vehicle. If you climb or descend a hill that is too slippery or has too loose a surface, you can lose control. If you go over the top of a hill at high speed, you may not have time to prepare for the terrain on the other side. Avoid parking on a slope. Always put the shift lever in PARK when stopped or parked, especially on an incline, to avoid rolling. If you must park on a steep incline, block the wheels using rocks or bricks.

## Uphill Driving

Use the low range (L) for uphill driving.

Due to its configuration, this vehicle has very good traction even while climbing, so much so that tip over is possible before traction is lost. For example, it is common to encounter terrain situations where the top of the hill has eroded to a point that the hill peak rises very sharply. This vehicle is not designed to negotiate such a condition. Take an alternate route.

It is also wise to know the terrain condition on the other side of the hill or bank. All too often there exists a sharp drop-off that is impossible to negotiate or descend.

If you feel that the slope is getting too steep to climb, apply brakes to immobilize vehicle. Put shift lever in reverse (R), and back down the hill, barely releasing brakes to remain at low speed. Do not attempt to turn around. Never coast down hill while vehicle is in neutral. Do not perform hard braking as it increases the risk of tipover.

## Downhill Driving

This vehicle can climb steeper slopes than it can descend safely. Therefore, it is essential to assure that a safe route exists to descend a slope before you climb it.

Decelerating while negotiating a slippery downhill slope could “toboggan” the vehicle, causing it to slide. Maintain steady speed and/or accelerate slightly to regain control. Never slam brakes and lock the wheels.

## Side Hilling

Whenever possible, side hilling (driving across a slope rather than up or down it) should be avoided. If necessary, do so with extreme caution. Side hilling on steep inclines could result in rollover. In addition, slippery or unfirm surfaces could result in uncontrollable side sliding. Avoid all objects or depressions that will intensify the raising of one side of the vehicle higher than the other, thus causing rollover. If you feel the vehicle start to rollover or slide sideways, steer downhill if possible.

### **WARNING**

**Be careful when loading and transporting liquid reservoirs. They can affect vehicle stability when side hilling by pulling downhill and increasing the risk of a rollover.**

## Drop-Offs

This vehicle is not designed to negotiate drop-offs. It will “bottom-out” and usually stop if either the front or rear wheels are driven over a drop-off. If the drop is sharp or deep, the vehicle will nose dive and tip over.

Avoid negotiating drop-offs. Reverse and select an alternate route.

## *Recreational, Group and Distance Riding*

Respect the rights and limitations of others. Stay away from areas designated for other types of off road use. This includes snowmobile trails, equestrian trails, cross country ski trails, mountain bike trails, etc. Never assume there are no other users on the trail. Always stay to the right of the trail and do not zig zag to one side of the trail then the other. Be prepared to stop or pull off to the side if another trail user appears in front of you.

Join a local side-by-side vehicle club. It will provide you with a map and advice or inform you where you can ride. If a club does not exist in your area, help to start one. Group riding and club activities provide a pleasurable, social experience. Never use this vehicle with drugs or alcohol, or tired or ill.

Always keep a safe distance from other riders. Your judgment of speed, terrain conditions, weather, mechanical condition of your vehicle and the “trust in judgment” you have in others around you will help you make a better choice of appropriate safe distance. This vehicle, like any other motorized vehicle, cannot stop “on a dime”.

Before you ride, tell someone where you are planning to travel and your expected time of return.

Depending on the length of your ride, carry additional tools or emergency equipment. Find out where you can get additional gasoline. Be prepared for the possible conditions you may encounter. An emergency first aid kit should always be a consideration.

## Environment

One of the benefits of this vehicle is that it can take you off the beaten path away from most communities. However, you should always respect nature and the rights of others to enjoy it. Do not ride in environmentally sensitive areas. Do not drive over forest crops or shrubs, nor cut down trees or take down fencing, nor spin your wheels and destroy the terrain. “Tread Lightly”.

This vehicle can cause OHV wildfires if debris builds up near the exhaust or other engine hot spots and ignites then falls off into dry grass. Avoid riding in wet areas, through muskeg or tall grass, where debris can build up. Should you ride in those areas, inspect and remove all debris from your engine and hot spots. Refer to *Vehicle Care* for details.

Chasing wildlife is in many areas illegal. Wildlife can die of exhaustion after being chased by a motorized vehicle. If you encounter animals on the trail, stop and observe quietly and with caution. It will be one of the better memories of your life.

Observe the rule “what you take in, carry out”. Do not litter. Do not start campfires unless you have permission to do so, and then only away from dry areas. The

hazards you may create on the trail may cause injury to others or yourself, even at a later date.

Respect farmlands. Always obtain the permission of the landowner before riding on private land. Respect crops, farm animals and property lines.

Finally, do not pollute streams, lakes or rivers and do not modify the engine or exhaust system, or remove any of its components as it will alter the vehicle emissions.

# MOVING LOADS AND DOING WORK

## Working with Your Vehicle

Your vehicle can help you perform a number of different LIGHT tasks ranging from snow removal to pulling wood or carrying cargo. A variety of accessories are available from your authorized Can-Am dealer. To prevent possible injury, follow the instructions and warnings that accompany the accessory. Always respect the load limits of the vehicle. Overloading the vehicle can overstress the components and cause failure. Avoid overexerting yourself if you lift or pull heavy loads or manually push the vehicle.

 **WARNING**

**Mounted machinery must be lowered on the ground before leaving the vehicle.**

## Carrying Loads

 **WARNING**

**Make sure all accessories, cargo and loose objects inside the vehicle are properly secured, or remove it to prevent from failing on the road and creating a hazard for following vehicles.**

Any load carried on the vehicle will affect the handling, stability and braking distance of the vehicle. Do not exceed the load limits of the vehicle, including the weight of operator, passengers, cargo, accessories and trailer tongue weight.

Always be aware that the “load” may slide or fall off and cause an accident.

Must use low gear if total payload is greater than 390 kg (860 lb).

| Maximum Payload Limit of the Vehicle |                                                                |
|--------------------------------------|----------------------------------------------------------------|
| 716 kg (1,579 lb)                    | Includes occupants, cargo, tongue weight and added accessories |

The following is an example of suitable total vehicle load distribution:

| Example of suitable payloads<br>Models with a 716 kg (1,579 lb) load limit, adjust according to your model load limit. |                 |               |                |                       |
|------------------------------------------------------------------------------------------------------------------------|-----------------|---------------|----------------|-----------------------|
| Operator and Passengers                                                                                                | Cargo Box Load  | Accessories   | Tongue Weight  | Total Vehicle Payload |
| 226 kg (500 lb)                                                                                                        | 382 kg (842 lb) | 40 kg (88 lb) | 68 kg (150 lb) | 716 kg (1,579 lb)     |

To reduce the risk to lose control or the load carried, follow these recommendations.

### Vehicle Settings When Carrying Load

When carrying heavy loads or passengers, readjust suspension accordingly.

When carrying heavy loads in cargo box or pulling a loaded trailer, operate with the shift lever in L (low range).

#### **⚠ WARNING**

**Must use LOW GEAR if total payload is greater than 390 kg (860 lb).**

### Loading the Cargo Box

#### **NOTICE**

**When loading or unloading, do not exceed the maximum cargo capacity on tailgate. Always close tailgate before operating to reduce the risk of loss of load.**

#### **⚠ WARNING**

**When loading the flat bed, ensure to properly secure the cargo. An unsecured load can fall and cause serious injuries.**

When the cargo box is on flat bed position, use these hooks to secure the load.



FLAT BED

#### **⚠ WARNING**

**Avoid operate the vehicle with the tailgate open. Except when a tailgate extender is installed. Taillights and brake lights are not visible when tailgate is opened.**

#### **NOTICE**

**Be careful to not exceed the weight limit on the tailgate when loading or unloading the cargo box.**

In general, ensure no item protrudes outside the cargo box.

Be particularly vigilant if cargo box wall extensions are installed and items are attached on the outside of them. In this case, selection items with a small thickness (shovel, ramps, hi-lift jack, etc.) and avoid items like chainsaw, gun boot, fuel tanks, etc.

Items that protrude sideways can get snagged or caught in bush, branches, or other obstacles.

Avoid covering and obstructing the brake lights with the cargo.

Position cargo toward the front and center of the cargo box and as evenly distributed as possible.

Secure the load to the tie down hooks inside cargo box. Use only the tie down hooks on the floor of the cargo box; do not secure cargo to the cage or other part of the vehicle.

Load cargo as low as possible – a higher load can raise the vehicle's center of gravity, which can reduce stability.

Objects that are higher than the walls of the cargo box may act as projectiles in case of an accident.

If it is not properly secured, a load may slide or fall off, possibly striking occupants or bystanders; or it may shift during riding, affecting the handling of the vehicle.

Do not overload cargo box.

Close tailgate before operating the vehicle.

| Maximum Cargo Load |                   |                                                                                                         |
|--------------------|-------------------|---------------------------------------------------------------------------------------------------------|
| Cargo box          | 544 kg (1,200 lb) | Evenly distributed and safely secured. Loaded as low as possible to reduce height of center of gravity. |
| Tailgate           | 113 kg (250 lb)   | Only while loading cargo into cargo box. Never operate with tailgate open.                              |

### ***Operating While Carrying a Load***

Reduce your speed when carrying cargo and turn gradually. Avoid hills and rough terrain. Allow more distance for braking. This vehicle may require additional stopping distance if carrying heavy loads, especially on inclined surfaces.

### ***Tilting the Cargo Box***

#### **Tilting Using the Release Handles**

The cargo box can be tilted to ease unloading. Use release handles on either side of cargo box.



1. Release handles

### NOTICE

**Always turn off engine when tilting the cargo box.**

### ⚠ WARNING

- Always ensure no one is standing behind the cargo box before you actuate the release handle.
- The load weight may affect the operation of the cargo box tilting feature (tilting or lowering).
- Some accessories assembled on the cargo box may affect his behavior during the opening and closure. Always pay attention during this operation.

Be very careful with the operation of the tailgate and the cargo box as the load may have moved during transport.

To lower the cargo box, simply push it down into place.

### ⚠ WARNING

- Keep yourself and others clear of the cargo box and vehicle frame junction when lowering cargo box.
- Ensure to properly latch the cargo box and the tailgate before riding.
- Make sure you do not leave objects between lifted cargo box and vehicle frame to ensure proper latching of the cargo box when lowered.

## Hauling a Load

### NOTICE

**A BRP approved rear hitch must be properly installed on the vehicle for hauling trailers.**

Never pull a load by attaching it to the cage or any other accessories; this can cause the vehicle to tip over. Use only the trailer hitch (if installed) or winch (if installed) to pull a load.

In an emergency situation, use the recovery hook to recover a stuck vehicle.

When pulling loads with a chain or cable, ensure that there is no slack before starting and maintain tension while pulling.

When pulling loads with a chain or cable, be sure to brake progressively. The inertia of the load could lead to an impact.

When hauling a load, respect the maximum hauling capacity. See *Pulling a Trailer* below.

### **WARNING**

**A slack in the chain or cable can cause it to break and snap back.**

When pulling another vehicle, be sure that someone is controlling the pulled vehicle. They must brake and steer to prevent the vehicle from going out of control.

Before pulling loads with a winch, refer to the winch manufacturer's instructions.

Reduce your speed when hauling a load and turn gradually. Avoid hills and rough terrain. Never attempt steep hills. Allow more distance for braking, especially on inclined surfaces and when a passenger is on board. Be careful not to skid or slide.

## **Pulling a Trailer**

### **NOTICE**

**A BRP approved rear hitch must be properly installed on the vehicle for hauling trailers.**

Riding this vehicle with a trailer substantially increases the risk of toppling, especially on inclined slopes. If a trailer is used behind the vehicle make sure that its hitch is compatible with the one on the vehicle. Make sure the trailer is horizontal with the vehicle. (In some instances a special extension may have to be installed on the vehicle hitch). Use security chains or cables to secure the trailer with the vehicle.

Reduce your speed when pulling a trailer and turn gradually. Avoid hills and rough terrain. Never attempt steep hills. Allow more distance for braking, especially on inclined surfaces and when a passenger is on board. Be careful not to skid or slide.

Improperly loading a trailer may cause loss of control.

Always make sure load is evenly distributed and safely secured on the trailer; an evenly balanced trailer is easier to control.

Always put the shift lever to L (low range) for hauling a trailer – in addition to providing more torque, operating in low range helps account for the increased load on the rear tires.

When stopped or parked, block the vehicle and trailer wheels from possible movement.

Use caution when disconnecting a loaded trailer; it or its load may topple on you or others.

When hauling a trailer, respect the maximum tongue weight and towing capacity indicated on the label affixed to the hitch.

Make sure there is at least some weight on the tongue.

---

## IMPORTANT ON PRODUCT LABELS

### Important On-Product Labels (Countries Outside Canada and United States)

Read and understand all the safety labels on your vehicle.

These labels are affixed to the vehicle for the safety of the operator, passengers or bystanders.

The following labels are on your vehicle, and they should be considered permanent parts of the vehicle. They need to be clean and visible at all times. If missing or damaged, they need to be replaced. Safety labels are free of charge. See an authorized Can-Am dealer.

Upon replacement of parts that have warnings on them, make sure to order (free of charge) the applicable safety warnings if not already installed on the replacement part.

#### **NOTE:**

In the event of any discrepancy between this guide and the vehicle, the safety labels on the vehicle have precedence over the labels in this guide.

## Safety Pictograms

Read and understand all the safety labels on your vehicle.


These labels are affixed to the vehicle for the safety of the operator, passengers or bystanders.

The following labels are on your vehicle, and they should be considered permanent parts of the vehicle. They need to be clean and visible at all times. If missing or damaged, they need to be replaced. Safety labels are free of charge. See an authorized Can-Am dealer.


Upon replacement of parts that have warnings on them, make sure to order (free of charge) the applicable safety warnings if not already installed on the replacement part.

### NOTE:


In the event of any discrepancy between this guide and the vehicle, the safety labels on the vehicle have precedence over the labels in this guide.

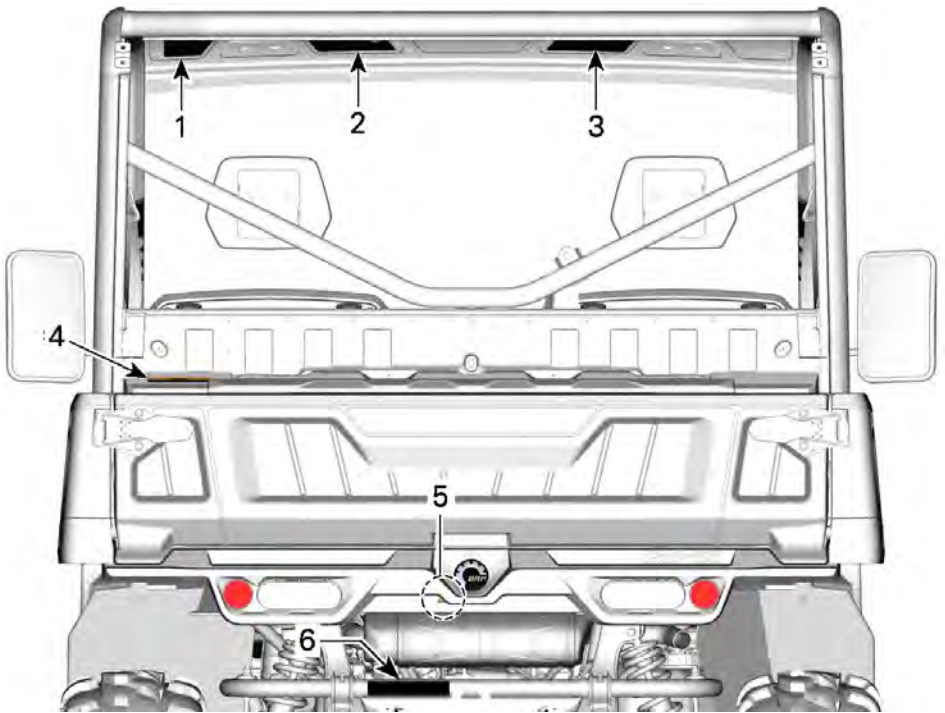

1. Operator warning
2. General warning
3. Passenger warning
4. Pulling a load using the cage
5. Hot part
6. Pulling a load and tongue weight

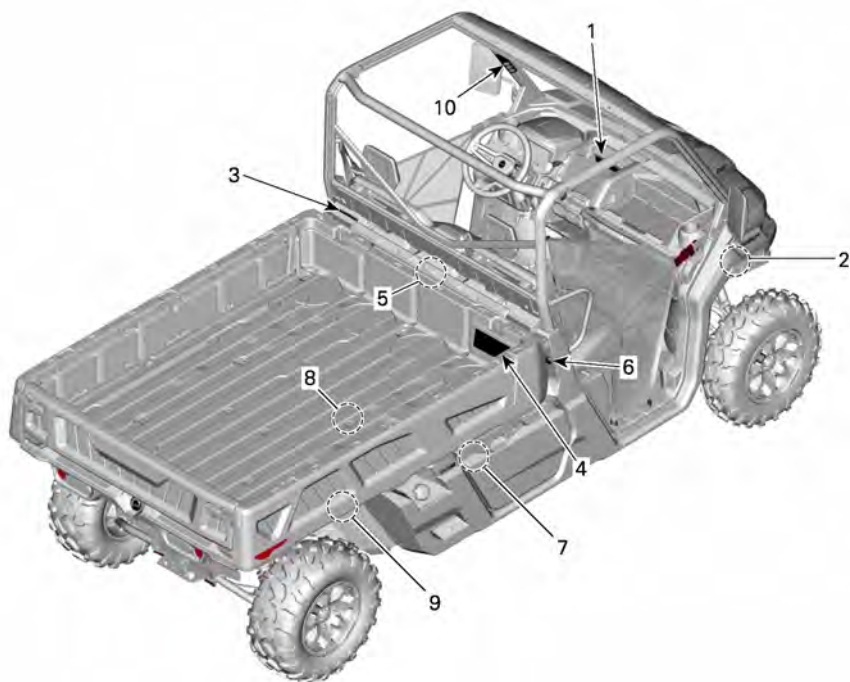

1. *Shifting and 2WD/4WD selection*
2. *Winch installation*
3. *Pulling a load using the cage*
4. *Tire pressure and maximum load*
5. *Coolant hot*
6. *Cargo box pinch point*
7. *No flammable products*
8. *Securing the cargo box*
9. *Hot part*
10. *Rollover warnings*

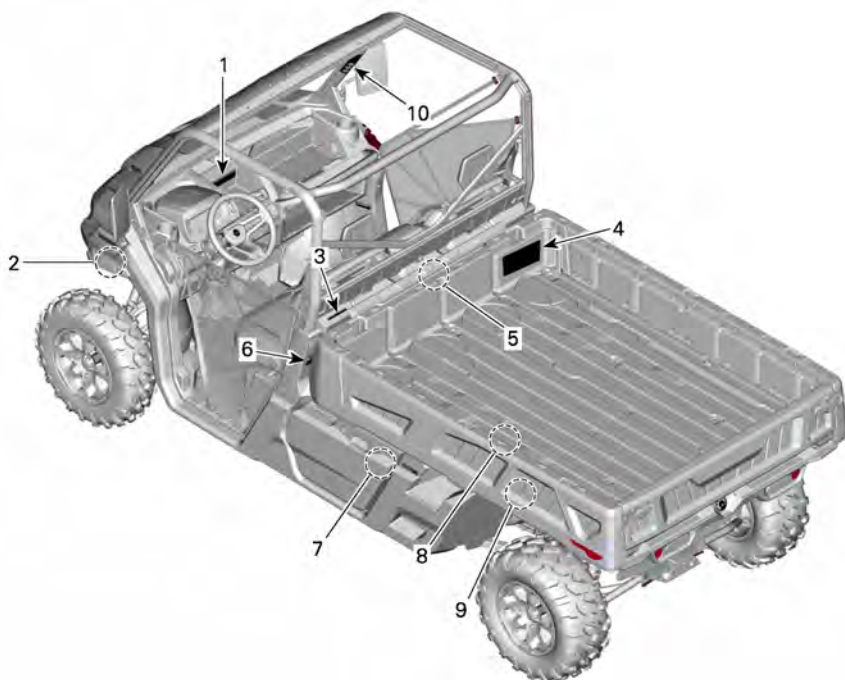

1. *Shifting and 2WD/4WD selection*
2. *Winch installation*
3. *Pulling a load using the cage*
4. *Tire pressure and maximum load*
5. *Coolant hot*
6. *Cargo box pinch point*
7. *No flammable products*
8. *Securing the cargo box*
9. *Hot part*
10. *Rollover warnings*

## General Warning Label

### **WARNING**

- Read and understand all safety labels, locate and read operator's guide.
- Always wear an approved helmet and protective gear.
- Make sure operators are 16 or older with a valid driver's license.
- Each rider must be able to sit with back against seat, feet flat on the floor or on footrest, and hands on steering wheel or handholds.
- Make sure net or door is securely latched in place.
- Fasten seat belts.
- Always wear ear protection.
- Always stay completely inside the vehicle.



Patent : [www.brp.com/en/about-brp/patents.html](http://www.brp.com/en/about-brp/patents.html)



11692

## Operator Warning Label

### **WARNING**

- Do not exceed seating capacity: 3 occupants.
- Refer to operator's guide for lifting point locations and procedure.
- Do not let people drive or ride after using alcohol or drugs.
- When driving on paved surfaces, always reduce your speed and be careful when turning
- Watch the safety video using the QR code link or visit Can-am web site before operation.



# Passenger Warning Label

⚠️ WARNING


- Always wear an approved helmet and protective gear.
- Make sure nets or doors are securely latched in place.
- Each rider must be able to sit with back against seat, feet flat on the floor or on footrest, and hands on steering wheel or handholds.
- Fasten seat belts.
- Always wear ear protection.
- Always stay completely inside the vehicle.
- Do not let people drive or ride after using alcohol or drugs.



## Tire Pressure and Maximum Load — Warning Label

### ⚠ WARNING

- Improper tire pressure or overloading can cause loss of control, resulting in **SEVERE INJURY** or **DEATH**.
- Always maintain proper tire pressure as shown.
- **NEVER** exceed the vehicle load capacity, including weight of operator, passenger, cargo, accessories and trailer tongue weight if applicable.
- Locate and read operator's guide.
- **NEVER** carry passenger in cargo box or on tailgate.
- Do not overload cargo box.
- Reduce your speed when carrying load.
- **NEVER** place gasoline container inside cargo box when filling it. This can lead to an explosion.

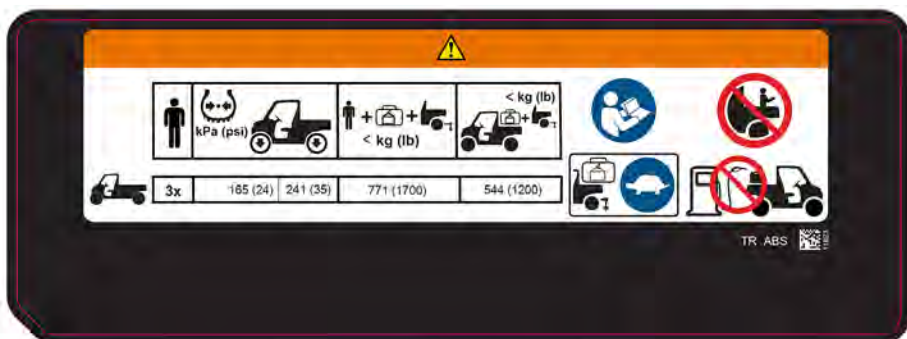

**⚠ WARNING**

- Never hold the cage while riding.
- Never try to stop a rollover using your arm or leg.
- Fasten seat belts and make sure net or door is securely latched in place.


RH side



## Cargo Box Retaining Tool – Warning Pictogram



## 2WD/4WD Selection – Warning Label

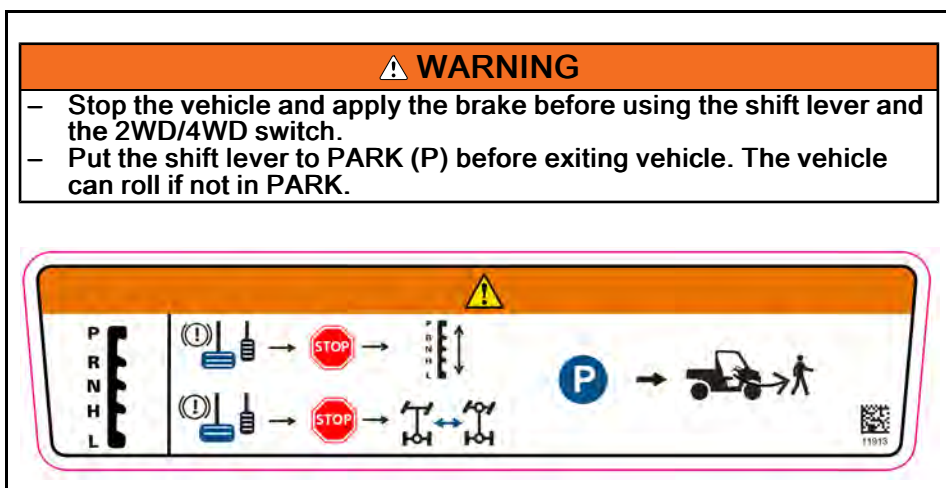


## Towing and Tongue Weight - Warning Pictogram


- When pulling a trailer, set the shift lever to low gear range (L).
- Reduce your speed and turn gradually.



## Cargo Box Pinch Point - Warning Label

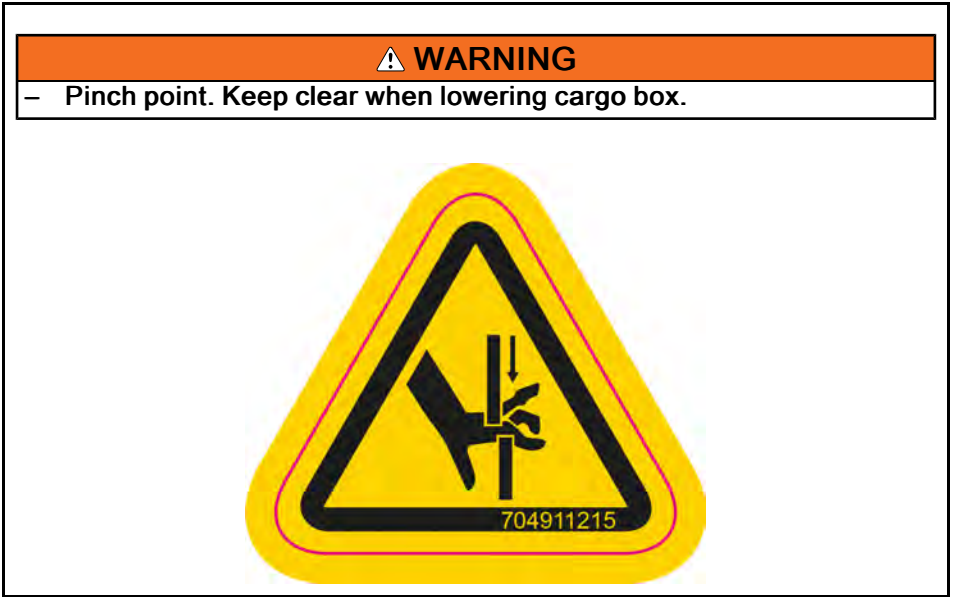

## Pulling a Load Using the Cage – Warning Label

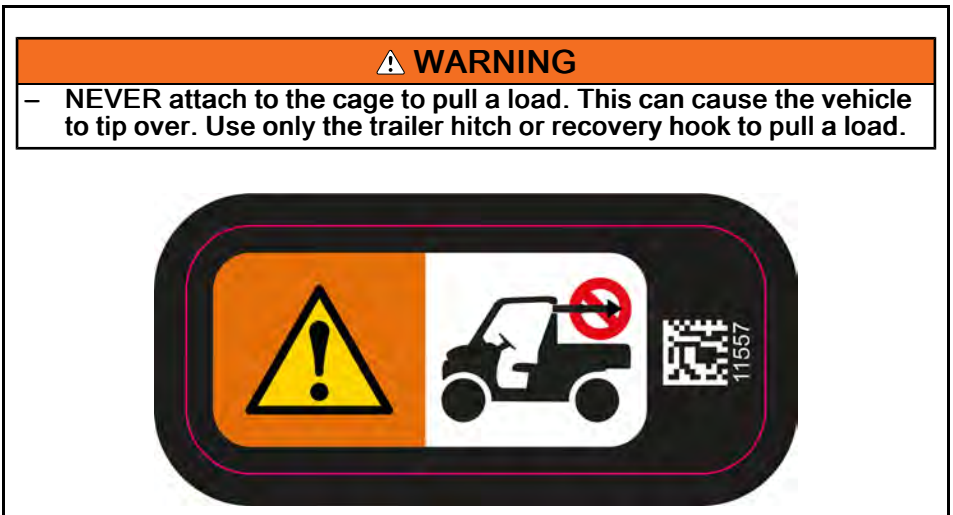

Winch Installation - Warning Label





**⚠ WARNING**

- Never use the frame near this location to ground any electrical component such as a winch.
- When in use, the electrical component may induce an undesired power steering signal resulting in an unintended steering input.
- In certain circumstances, some unintended steering input could lead to a loss of vehicle control increasing the risk of serious INJURY or DEATH.

Coolant Hot - Warning Label



**WARNING**

Do not open when HOT.



## Exhaust – Hot Part Pictogram

**CAUTION****Do not touch when hot.**

Brake Fluid Pictogram

NOTICE

Brake fluid only.



Molded Safety Pictogram

Molded Tailgate Pictogram

⚠ WARNING

Never carry passengers in cargo box or on tailgate. Max weight on tailgate during loading is 113 kg (250 lb)



MAX  
113kg / 250lb

# PRE-RIDE INSPECTION CHECKLIST

## Pre-Ride Inspection Check List with Mechanical Key

### What to Do Before Starting the Engine (Key OFF)

| Items to Be Inspected                 | Inspection to Perform                                                                                                                                                                                                                                                                                                                                                                          | ✓ |
|---------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---|
| Engine oil                            | Check engine oil level.                                                                                                                                                                                                                                                                                                                                                                        |   |
| Coolant                               | Check coolant level.                                                                                                                                                                                                                                                                                                                                                                           |   |
| Brake fluid                           | Check brake fluid level.                                                                                                                                                                                                                                                                                                                                                                       |   |
| Engine air filter                     | Inspect the engine air filter, clean or replace if needed (service more often when riding in dusty conditions).                                                                                                                                                                                                                                                                                |   |
| Brake holding mechanism (If equipped) | Apply brake holding mechanism and check if it operates properly.                                                                                                                                                                                                                                                                                                                               |   |
| Radiator                              | Check cleanliness of the radiator.                                                                                                                                                                                                                                                                                                                                                             |   |
| Front grille                          | Inspect front grille for cleanliness.                                                                                                                                                                                                                                                                                                                                                          |   |
| Exhaust system                        | If not already done, clean the area surrounding the exhaust system, especially if during the last ride, the vehicle was used in a swamp, bog, hay or dead leaves.                                                                                                                                                                                                                              |   |
| Drive shaft bellows                   | Check drive shaft bellows and protectors condition.                                                                                                                                                                                                                                                                                                                                            |   |
| Tires                                 | Check tire pressure and condition. Refer to the <i>Tire Pressure Label</i> and adjust according to load.                                                                                                                                                                                                                                                                                       |   |
| Wheels                                | Check wheels for damage and for abnormal play. Make sure that lug nuts are tightened. Refer to <i>Wheels and Tires</i> in <i>Maintenance Procedures</i> for torque specification.                                                                                                                                                                                                              |   |
| Cargo and load                        | <b>Cargo Load:</b> If you transport a cargo, respect the maximum loading capacity. Refer to <i>Loading the Cargo Box</i> . Ensure cargo is properly secured to the rear cargo box.<br><b>Vehicle Load:</b> Ensure that total load on the vehicle (including operator, passengers, cargo, tongue weight and added accessories) does not exceed specifications. Refer to <i>Carrying Loads</i> . |   |
| Rear cargo box                        | Check if the cargo box and the tailgate are properly latched.                                                                                                                                                                                                                                                                                                                                  |   |

| Items to Be Inspected  | Inspection to Perform                                                                                                                                                                                                                                                                                                                                         | ✓ |
|------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---|
| Hitch                  | If you are pulling a trailer or another equipment: <ul style="list-style-type: none"> <li>– Check hitch and trailer ball condition.</li> <li>– Respect the tongue capacity and towing capacity as indicated on the label affixed to the hitch or refer to <i>Technical Specifications</i>.</li> <li>– Ensure trailer is properly secured to hitch.</li> </ul> |   |
| Chassis and suspension | Check underneath vehicle for any debris on chassis or suspension components (upper and lower arms, wheels, shock absorber, springs) and clean them properly                                                                                                                                                                                                   |   |

### What to Do Before Starting the Engine (Key ON)

| Items to Be Inspected           | Inspection to Perform                                                                                                                                                                               | ✓ |
|---------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---|
| Gauge                           | Check operation of indicator lamps in gauge (during first few seconds of key ON).                                                                                                                   |   |
|                                 | Check for messages in gauge.                                                                                                                                                                        |   |
| Lights                          | Check operation and cleanliness of headlights and taillights.                                                                                                                                       |   |
|                                 | Check operation of high and low beam.                                                                                                                                                               |   |
|                                 | Check operation of flashers.                                                                                                                                                                        |   |
|                                 | Check operation of brake lights.                                                                                                                                                                    |   |
| Accelerator pedal               | Press on the accelerator pedal a few times to ensure it operates freely and it returns to the rest position when released.                                                                          |   |
| Brake pedal                     | Press down on the brake pedal and make sure you feel firm resistance and that it fully returns to position when released.                                                                           |   |
| Fuel level                      | Check the fuel level.                                                                                                                                                                               |   |
| Seats, side nets and seat belts | Check if seats are properly latched.                                                                                                                                                                |   |
|                                 | Check side nets for any damage. Have the nets replaced if any damage is found. Fasten both side nets and confirm that they latch securely. Use the adjustment strap to tighten the net as required. |   |

| Items to Be Inspected | Inspection to Perform                                                                                | ✓ |
|-----------------------|------------------------------------------------------------------------------------------------------|---|
|                       | Check seat belts for any damage. Fasten seat belts and confirm that they latch and unlatch securely. |   |
| Mirror(s)             | Adjust mirror(s) to your preferences.                                                                |   |
| Horn                  | Check horn operation.                                                                                |   |

### ***What to Do After the Engine is Started***

| Items to Be Inspected | Inspection to Perform                                                                                                                                                                                          | ✓ |
|-----------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---|
| Steering              | Check if steering wheel operates freely by completely turning it from side to side.                                                                                                                            |   |
| Ignition switch       | Turn the ignition switch to OFF to verify if engine will shut down. Restart engine.                                                                                                                            |   |
| Shift lever           | Check operation of shift lever (P, R, N, H and L).                                                                                                                                                             |   |
| 2WD/4WD selector      | Check operation of 2WD/4WD selector.                                                                                                                                                                           |   |
| Brakes                | Drive forward slowly a few feet and apply brakes. The brake pedal must feel firm when applied. The pedal must return to rest position when released. The brakes must respond adequately to the driver's input. |   |
| Winch (if equipped)   | Check operation of winch.                                                                                                                                                                                      |   |

## **Pre-Ride Inspection Check List with D.E.S.S.**

### **What to Do Before Starting the Engine (D. E. S. S. key not installed)**

| Items to Be Inspected          | Inspection to Perform                                                                                           | ✓ |
|--------------------------------|-----------------------------------------------------------------------------------------------------------------|---|
| Engine oil (cool engine check) | Check engine oil level.                                                                                         |   |
| Coolant                        | Check coolant level.                                                                                            |   |
| Brake fluid                    | Check brake fluid level.                                                                                        |   |
| Engine air filter              | Inspect the engine air filter, clean or replace if needed (service more often when riding in dusty conditions). |   |

| Items to Be Inspected                 | Inspection to Perform                                                                                                                                                                                                                                                                                                                                                                          | ✓ |
|---------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---|
| CVT air filter                        | Inspect and clean the CVT air filter (when riding in dusty conditions).                                                                                                                                                                                                                                                                                                                        |   |
| HVAC air filters (if equipped)        | Inspect HVAC air filters, clean if needed (service more often when riding in dusty conditions).                                                                                                                                                                                                                                                                                                |   |
| Steering Wheel                        | Adjust steering wheel height to your preferences. Ensure steering is properly locked in position.                                                                                                                                                                                                                                                                                              |   |
| Brake holding mechanism (If equipped) | Apply brake holding mechanism and check if it operates properly. Release the brake before moving the vehicle.                                                                                                                                                                                                                                                                                  |   |
| Front grille and radiator             | Inspect front grille and radiator for cleanliness.                                                                                                                                                                                                                                                                                                                                             |   |
| Seats and seat belts                  | Check if seats are properly latched.                                                                                                                                                                                                                                                                                                                                                           |   |
|                                       | Check seat belts for any damage. Fasten seat belts and confirm that they latch and unlatch securely.                                                                                                                                                                                                                                                                                           |   |
| Side nets                             | Check side nets for any damage. Have the nets replaced if any damage is found.<br>Fasten both side nets and confirm that they latch securely.<br>Use the adjustment strap to tighten the net as required.                                                                                                                                                                                      |   |
| Exhaust system                        | If not already done, clean the area surrounding the exhaust system, especially if during the last ride the vehicle was used in a swamp, bog, hay or dead leaves.                                                                                                                                                                                                                               |   |
| Drive shaft bellows                   | Visually, check drive shaft bellows and protectors condition.                                                                                                                                                                                                                                                                                                                                  |   |
| Tires                                 | Verify tire pressure and condition, refer to the <i>Tire Pressure Label</i> and adjust according to load.                                                                                                                                                                                                                                                                                      |   |
| Wheels                                | Check wheels for damage and for abnormal play. Make sure that lug nuts are tightened. Refer to <i>Wheels and Tires</i> in <i>Maintenance Procedures</i> for torque specification.                                                                                                                                                                                                              |   |
| Cargo and load                        | <b>Cargo Load:</b> If you transport a cargo, respect the maximum loading capacity. Refer to <i>Loading the Cargo Box</i> . Ensure cargo is properly secured to the rear cargo box.<br><b>Vehicle Load:</b> Ensure that total load on the vehicle (including operator, passengers, cargo, tongue weight and added accessories) does not exceed specifications. Refer to <i>Carrying Loads</i> . |   |
| Rear cargo box                        | Check if the cargo box and the tailgate are properly latched.                                                                                                                                                                                                                                                                                                                                  |   |
| Hitch                                 | If you are pulling a trailer or another equipment:<br>– Check hitch and trailer ball condition.                                                                                                                                                                                                                                                                                                |   |

| Items to Be Inspected      | Inspection to Perform                                                                                                                                                                                                                               | ✓ |
|----------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---|
|                            | <ul style="list-style-type: none"> <li>Respect the tongue capacity and towing capacity as indicated on the label affixed to the hitch or refer to <i>Technical Specifications</i>.</li> <li>Ensure trailer is properly secured to hitch.</li> </ul> |   |
| Chassis and suspension     | Check underneath vehicle for any debris on chassis or suspension components (upper and lower arms, wheels, shock absorber, springs) and clean them properly                                                                                         |   |
| Doors                      | Check all doors for any damage. Have the doors replaced if any damage is found.<br>Close all doors and confirm that they latch securely.                                                                                                            |   |
| Mirror(s)<br>(if equipped) | Adjust mirror(s) to your preferences.                                                                                                                                                                                                               |   |

## What to Do Before Starting the Engine (With D. E. S. S. key installed)

| ITEMS TO BE INSPECTED | INSPECTION TO PERFORM                                                                                                                                      | ✓ |
|-----------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------|---|
| Digital display       | Check operation of indicator lamps in digital display(during first few seconds after pressing briefly the Start/Stop button).                              |   |
|                       | Check for messages in gauge.                                                                                                                               |   |
| Lights                | Check operation and cleanliness of: <ul style="list-style-type: none"> <li>Headlights (High and Low)</li> <li>Taillights</li> <li>Brake lights.</li> </ul> |   |
| Accelerator pedal     | Press on the accelerator pedal a few times to ensure it operates freely and it returns to the rest position when released.                                 |   |
| Brake pedal           | Press down on the brake pedal and make sure you feel firm resistance and that it fully returns to position when released.                                  |   |
| Fuel level            | Check the fuel level.                                                                                                                                      |   |

## What to Do After the Engine is Started

| ITEMS TO BE INSPECTED          | INSPECTION TO PERFORM                                                               | ✓ |
|--------------------------------|-------------------------------------------------------------------------------------|---|
| Engine oil (warm engine check) | Check engine oil level.                                                             |   |
| Steering                       | Check if steering wheel operates freely by completely turning it from side to side. |   |

| ITEMS TO BE INSPECTED                      | INSPECTION TO PERFORM                                                                                                                                                                                          | ✓ |
|--------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---|
| Start/Stop Switch                          | Start the engine then press the Start/stop button again to stop the engine<br>Restart engine.                                                                                                                  |   |
| D.E.S.S. key (engine stop switch function) | Pull the D.E.S.S. key to stop the engine.<br>Reinstall the D.E.S.S. key and restart the engine.                                                                                                                |   |
| Shift lever                                | Press brake and move the shifter to verify its operation (P, R, N, H and L).                                                                                                                                   |   |
| 2WD/4WD selector                           | Check operation of 2WD/4WD selector.                                                                                                                                                                           |   |
| Brakes                                     | Drive forward slowly a few feet and apply brakes. The brake pedal must feel firm when applied. The pedal must return to rest position when released. The brakes must respond adequately to the driver's input. |   |
| Winch<br>(If equipped)                     | Check operation of winch.                                                                                                                                                                                      |   |
| Horn<br>(if equipped)                      | Check horn operation.                                                                                                                                                                                          |   |
| HVAC/Heater fan<br>(if equipped)           | Check operation of HVAC/heater fan.<br>Check air flows out of every louver according to selected output (defrost, vents, feet).                                                                                |   |

# VEHICLE INFORMATION


---

## PRIMARY CONTROLS

It is important to know the location and operation of all controls, and to develop and practice smooth and coordinated use of them.

### NOTE:

Some vehicle safety labels are not shown on illustrations. For information on vehicle safety labels, refer to *Important on-product labels*.

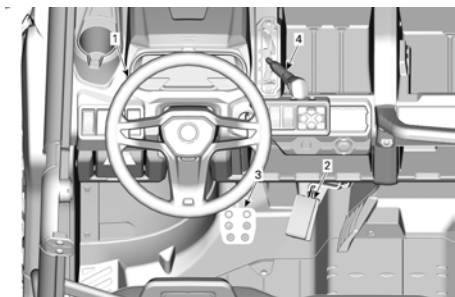

### TYPICAL

1. Steering wheel
2. Accelerator pedal
3. Brake pedal
4. Shifter

## Steering Wheel

The steering wheel is located in front of the driver's seat.

The steering wheel steers the vehicle to the left or right.

Turn the steering wheel in the direction you want to go.

Grip the steering wheel with both hands, without having thumbs rolled around the steering wheel.

### CAUTION

**Under rough trail conditions or when crossing an obstacle, the steering wheel could suddenly jerk on one side, causing hand or wrist injuries if the thumbs are rolled around the steering wheel.**

A dynamic power steering (DPS) reduces the effort to turn the steering wheel.

## Accelerator Pedal

The accelerator pedal is located on the right side of the brake pedal.

The accelerator pedal controls the engine speed.

To increase or maintain vehicle speed, press on the accelerator pedal with your right foot.

To decrease vehicle speed, release the accelerator pedal.

The accelerator pedal is spring loaded and should return to rest position (idle) when not pressed.

## Brake Pedal

The brake pedal is located on the left side of the accelerator pedal.

The brake pedal function is to slow down or stop the vehicle.


To decrease vehicle speed or to stop vehicle, press down the brake pedal with your right foot.

The brake pedal is spring loaded and should return to rest position when not pressed.

## Shift Lever

The shift lever is located on the upper console to the right of steering wheel.

The shift lever is used to change the gearbox position.

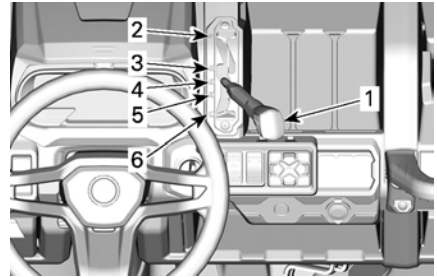

**TYPICAL**

1. Shift lever
2. Park
3. Reverse
4. Neutral
5. High range (forward)
6. Low range (forward)

The vehicle must be stopped and brakes applied prior to selecting any gear.

### WARNING

**This gearbox is not designed to shift while vehicle is moving.**

### Park

The park position locks the gearbox to help prevent vehicle movement.

### WARNING

**Always use the PARK (P) position when the vehicle is not in operation. The vehicle can roll if the shift lever is not set to P (PARK).**

## Reverse

The reverse position allows the vehicle to go backwards.

Depending upon your particular vehicle configuration, a back-up alarm may be equipped on the vehicle. It goes on automatically when the reverse gear is selected.

### NOTE:

In reverse operation, the engine RPM is limited thus limiting the vehicle reverse speed.

### WARNING

**When driving downhill in reverse, gravity can increase the vehicle speed above safe reverse speed.**

## Neutral

The neutral position disengages the gearbox.

## High Range (Forward)

This position selects the high speed range of the gearbox. It is the normal driving speed range. It allows the vehicle to reach its maximum speed.

## Low Range (Forward)


This position selects the low speed range of the gearbox. It allows the vehicle to move slowly with maximum torque at the wheels.

### NOTICE

**Use the low speed range to pull a trailer, carry heavy cargo, go over obstacles or drive uphill and downhill.**

## Ignition Switch and Keys

The ignition switch is located on the upper console area.

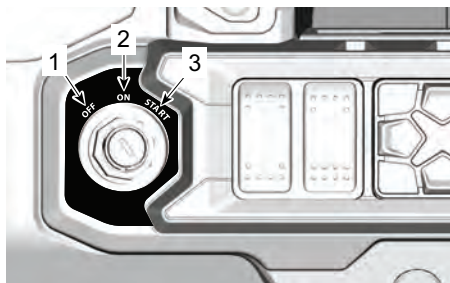

1. OFF
2. ON
3. START

### OFF

The key can be inserted or removed in this position only.

In OFF position, the electrical system of the vehicle is disabled.

The engine is shut down by turning the ignition switch to OFF position.

### ON

When the key is turned in this position, the electrical system of the vehicle is activated.

The gauge should wake-up.

The vehicle lights are turned on.

The engine can be started.

### START

This position starts the engine.

### NOTE:

If the ignition switch is left ON for more than 30 minutes, engine will not start unless ignition switch is turned OFF, then ON again.

## Keys

### Basic Key

The vehicle is delivered with 2 basic keys.

These 2 mechanical keys do not enforce speed or torque restrictions.

## Digitally Encoded Security System (D.E.S.S.) Key

The D.E.S.S. keys contain an electronic circuit that gives it a unique electronic serial number.

The D.E.S.S. system reads the key code and allows engine starting for keys it recognizes.

This vehicle can be operated using 3 different types of key programming:

- Work
- Normal
- Performance

Refer to your dealer for complete information.

### NOTE:

Additional keys are available from your dealer as an accessory.

### WARNING

**Rollovers, tipovers, collisions and loss of control resulting in serious injury or death are possible with the performance or normal key. Using the normal key is not a substitute for the operator being prepared, qualified, and operating with care.**

### Performance Key

The performance key allows the user to access the full torque of the engine as well as the top speed of the vehicle.

This may be useful for riders who prefer crisper throttle response, and for environments where higher speeds and greater acceleration are appropriate. For example, in wide-open straight trails, operators may prefer the performance key.

### Normal Key

The normal key limits the vehicle speed to 70 km/h (43 mph) and applies a torque reduction.

### Work key

The work key allows for usage of 100% of maximum engine torque but limits vehicle speed to 40 km/h (25 mph).

### WARNING

**On steep downhills, the engine speed limiter may not prevent the vehicle from accelerating beyond this speed.**

This key may be useful for riders who prefer more gradual acceleration, or for riding in environments where full speed and high acceleration are not desirable. For example, in narrow, winding trails, operators may prefer a normal key.


### *D.E.S.S. Flexibility*

The D.E.S.S. of your vehicle can be programmed by your authorized Can-Am dealer to accept up to 8 different keys.

If you have more than one D.E.S.S. equipped your vehicle, each can be programmed by your authorized Can-Am dealer to accept the other vehicle D.E.S.S. keys.


### *RF D.E.S.S. Post*

The D.E.S.S. post is located on the upper console.

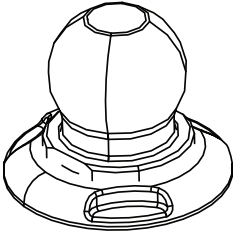

**Engine Start/Stop Button**

The engine start / stop button is located on the upper console, at the right of the steering wheel.

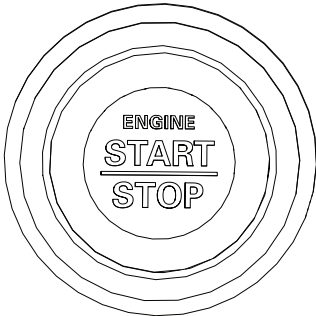

When pressed and held, it starts the engine.

If the engine is running, when pressed, it stops the engine.

**NOTE:**


The RF D.E.S.S. key must be installed on the RF D.E.S.S. post to allow engine start.

To power up the electrical system without starting the engine, refer to *Waking Up the Electrical System*.

## SECONDARY CONTROLS

### Multifunction Lever

#### Low/High Beam Selection

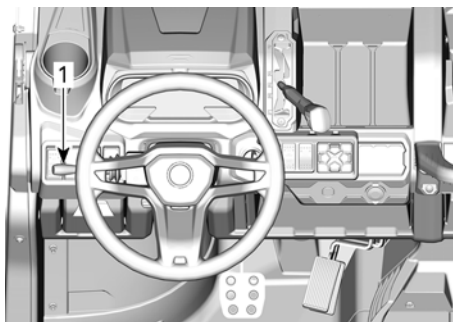

1. Multifunction lever

When the multifunction lever is in the middle position, the low beam is selected.

Push the multifunction lever forward to select high beam.

Pull back the multifunction lever to return to low beam.

#### NOTE:

The lights automatically turn on when the ignition switch is in the ON position.

#### Headlight Flashing

To flash the high beams while in low beams, pull on the multifunction lever.

#### Horn Activation

To activate the horn, push on the end of the multifunction lever towards the steering wheel.

#### Turn Signal Activation

To activate the LH turn signals, push down the multifunction lever.


To activate the RH turn signals, push up the multifunction lever.

Reposition the multifunction lever in the middle position to stop the turn signals.

### Rear Differential Lock Switch

The rear differential lock switch is located on the upper console.

This switch enables locking of rear differential.

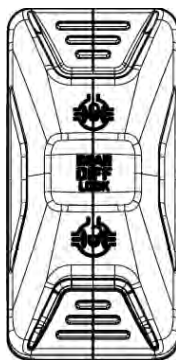

#### NOTICE

**The vehicle must be stopped to engage or disengage the differential switch.**

**The vehicle must be in gear (not in Park) to proceed**  
**Mechanical damage may occur if switch is engaged or disengaged while driving.**


The rear differential is locked when the switch is pushed upwards and unlocked when the switch is pushed downwards.

If the vehicle is in Park and the switch is pushed downwards, the rear differential will stay locked.

### Keypad


The keypad is used to navigate through various menus and options of the digital display.

The keypad is located on the upper console.

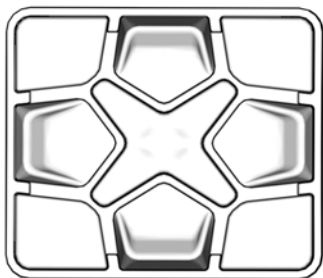


## Horn Switch (On applicable models)

To activate the horn, push on the switch.

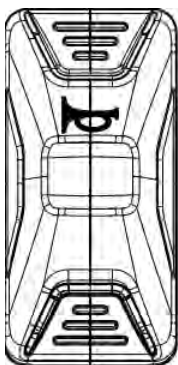

## Winch Switch

The winch can be controlled from inside and outside the vehicle with the winch control switch located in the dashboard, at the left of the steering wheel.

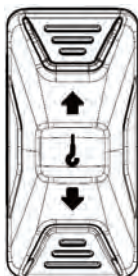


Refer to your *Winch Guide* included with your vehicle for proper winch operation.

## Headlight Dimmer Switch

### Headlight Dimmer Switch

The headlight dimmer switch is located on the upper console.

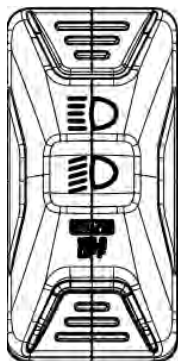


This switch is used to select either the headlights OFF position, low or high beams.

## Hill Descent Control (HDC) (ABS models only)

Hill Descent Control (HDC) function should be used to allow a smooth and controlled hill descent when driving down a steep incline without the driver having to press the brake pedal.

The vehicle should maintain set speed without any intervention from the driver.

HDC can be driver deactivated or re-activated by the HDC switch.

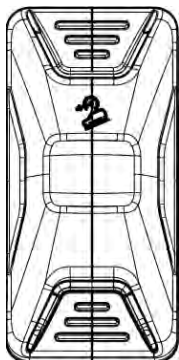

To activate/deactivate, press and hold the HDC switch for at least 0,5 second (HDC ON/OFF will be displayed in the lower display zone and the traction

control icon  will light up).

HDC activation / deactivation requests will be valid at any vehicle speed:

- If HDC is activated below 4 km/h (2.5 MPH), HDC target speed will be set to 4 km/h (2.5 MPH).
- If HDC is activated between 4 and 30 km/h (2.5 to 19 MPH), HDC target speed is considered the actual speed.
- If HDC is activated above 30 km/h (19 MPH), HDC will be turned on in standby mode (symbol still ON in the cluster)

#### NOTE:

When HDC is actively intervening, the traction control icon will blink in the cluster.


## Hazard Warning Switch

The hazard warning switch is located on the upper console.

This switch operates all the turn signals simultaneously. To be used when the vehicle is stationary to indicate that the vehicle is temporarily obstructing traffic.

Press the hazard warning switch to turn on.

When a trailer is connected and the flashers or hazards are activated, the 1 symbol located on the lower portion of the switch will blink.

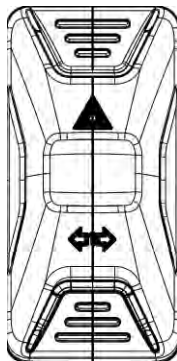

#### NOTE:

Hazard warning lights can be activated even when the vehicle electrical system is shut down.

# 7.6" DIGITAL DISPLAY

## Multifunction Display

### **WARNING**

Do not adjust the display while riding. You could lose control.

## Lower Display




May display the following:

- RPM
- Speed statistics
- Engine Temperature
- Battery Voltage
- Settings
- Messages
- Active DPS mode

The SPEED STAT display shows the maximum and the average speed. Hold MENU or OK button for 1 second to reset.

## Left Lateral Display

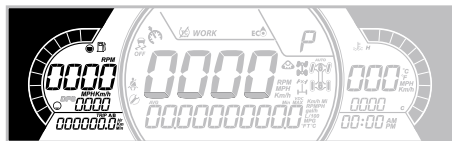


The left lateral display includes:

- Fuel level indicator
- Tripmeter (A - B)
- Odometer
- Vehicle Hour meter
- DPS indicator
- RPM
- Vehicle speed

### **NOTE:**

When the vehicle speed is indicated here, the RPMs are automatically indicated in the central part and vice versa.

## Right Lateral Display

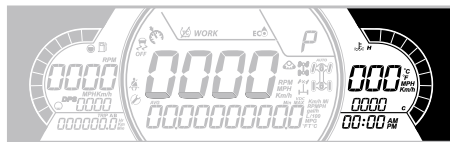


The right lateral display includes:

- Engine Temperature
- Clock
- Utility Speed limiter indicator

The speed indicator in this display is activated when the central display shows information other than the speed. Otherwise it is blank.

## Central Display

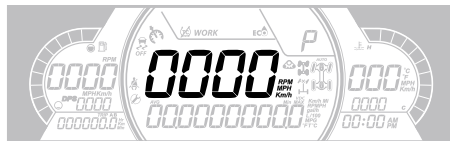


May display the following:

- RPM
- Vehicle speed

## Transmission Display


## Position

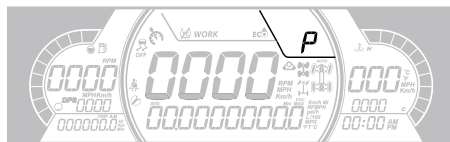

This display shows gears position of gearbox:

- P (Park)
- R (Reverse)
- N (Neutral)
- H (High range)
- L (Low range)
- (Invalid gear)

## Engine Mode Display

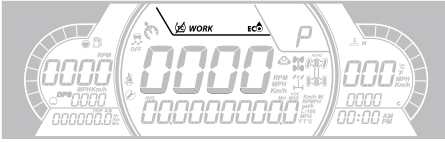

The engine mode display indicates the selected mode of operation:

- ECO OFF (nothing is display)
- ECO
- WORK

To change between modes, hold LOWER button and short press LOWER button to cycle through available modes.

| Engine Mode | Message at Activation |
|-------------|-----------------------|
| Eco OFF     | ECO OFF               |
| Eco         | ECO MODE              |
| Work        | WORK MODE             |


The Traction Control icon  is also displays in this area.

### Middle Right Display



The middle right display indicates the selected mode of operation:

- 2X4
- 4X4
- Front differential lock (Smart-Lok)
- Track kit active (when installed).

| Icon                                                                              | Description                        |
|-----------------------------------------------------------------------------------|------------------------------------|
|  | 2X4 icon                           |
|  | 4X4 icon                           |
|  | Front differential lock            |
|  | Track kit active (when installed). |

### Middle Left Display



The middle left lateral display includes:

- Utility Speed Limiter
- Traction Control icon
- Seat belt reminder
- Maintenance reminder

### Indicator Lamps

#### Warning and Telltale Lights



| WARNING and Telltale Lights                                                         |                                                                     |
|-------------------------------------------------------------------------------------|---------------------------------------------------------------------|
|  | GREEN - Flashers                                                    |
|                                                                                     | Hazard Warning Flasher - All front and rear turn signals will flash |
|  | ORANGE - Vehicle Malfunction                                        |

| WARNING and Telltale Lights                                                       |                                                                                                                                                                                                     |
|-----------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|   | BLUE - High Beam                                                                                                                                                                                    |
|   | RED - The engine temperature is too high.                                                                                                                                                           |
|   | GREEN - Neutral                                                                                                                                                                                     |
|   | RED - Brake lock lever is engaged or malfunction of the brake system                                                                                                                                |
|   | RED - The battery voltage too low or problem with the electrical system                                                                                                                             |
|   | ORANGE - Malfunction of the ABS system                                                                                                                                                              |
|   | RED - Low oil pressure<br>Normally ON when engine is OFF                                                                                                                                            |
|   | ORANGE - Low fuel level                                                                                                                                                                             |
|  | <p>ORANGE<br/><b>Turn on:</b> Malfunction of the vehicle emissions control system</p> <p><b>Blink:</b> Engine problems, the limp home mode is activated. Have the vehicle serviced immediately.</p> |

## Icons and Indicators

| Icons and Indicators                                                                |                                              |
|-------------------------------------------------------------------------------------|----------------------------------------------|
|  | Denotes WORK mode is selected.               |
|  | Denotes ECO mode is selected.                |
|  | When lit, seat belt not buckled with vehicle |

| Icons and Indicators                                                              |                                                                                                                                                                                                                        |
|-----------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|                                                                                   | immobilized.<br>Flashing when vehicle is moving.                                                                                                                                                                       |
|  | When lit, indicates that a maintenance is required. See your authorized Can-Am dealer or person of your own choosing for the maintenance.                                                                              |
|  | Track kit active (If Equipped)                                                                                                                                                                                         |
|  | <ul style="list-style-type: none"> <li><b>Turn on:</b> When the HDC is activated or when there is a malfunction of the ABS module</li> <li><b>Blink:</b> when the HDC, BTC or DTC is doing an intervention.</li> </ul> |
|  | <ul style="list-style-type: none"> <li>Denotes Speed Limiter is selected.</li> <li>When this option is available.</li> </ul>                                                                                           |

## Settings

### Setup

Using the MENU button on the keypad, select **SETTINGS** and hold to enter setting menu.

OK button can be pressed instead of holding MENU button.

### Maintenance Reset

#### NOTE:

Only when the maintenance icon is displayed.

Using MENU button, select **RES MAINT** and hold to reset maintenance.

### **Fault Codes**

Available only when at least one code is activated.

Using MENU button, select **CODES** and hold to see active fault codes.

Fault codes will be scrolled on the Lower Display.

### **Reset Stats**

Using MENU button, select **RESET STAT** and hold to reset.

### **Unit Selection**

This multifunction gauge is factory preset in Imperial units but it is possible to change it to Metric units.

Using MENU button, select **UNITS** and hold button to change units.

### **Speed/RPM**

The speed and RPM display can be swapped.

Using MENU button, select **SPEED/RPM** and hold button to invert speed and RPM display.

### **Setting Clock**

All of the following action must be performed using the MENU button.

1. Select **CLOCK** and hold to change time.
2. Press the button to select clock display.
3. Push and hold the button for 1 second.
4. Press the button to select 12:00 AM PM or 24:00 time base.
5. Push and hold the button or OK button to acknowledge selection.
6. Press the button to change hours (hours flash).

7. Push and hold the button or OK button to acknowledge hour selection
8. Push the button to switch to minutes (minutes flash).
9. Push and hold the button to acknowledge minutes selection.

### **Setting Brightness**

The brightness of the LCD display can be adjusted.

Using MENU button, select **BRIGHTNESS** and hold MENU button to select the brightness setting.

Using MENU button, adjust brightness then push and hold MENU button to acknowledge selection.

### **Setting Language**

The gauge display language can be changed.

Refer to an authorized Can-Am dealer for language availability and to setup the gauge to your preference.

### **DPS Modes**

The lower display can show which DPS mode is active. Refer to *Tune Your ride*.

### **Speed Limiter Mode**

#### **WARNING**

**DO NOT use this function for enabling first-time users. On vehicle equipped with D.E.S.S. post, use the appropriate D.E.S.S. key type to limit speed for beginner operators.**

### **If available**

Speed limiter mode allows the operator to set the desired maximum speed.

This is useful when operating in limited speed zones.

The operator must keep the throttle depressed to maintain forward speed.

Once the maximum speed is set, the operator can vary vehicle speed from stopped to the set speed using the throttle.

The set speed will be exceeded when the throttle is fully depressed. At that time, the speed limiter will be temporary deactivated (the icon will blink) until vehicle speed is under or equal the speed limiter's set point.

As you proceed under a constant speed setting, keep your attention level up to maintain good situational awareness.

Slowing down is a matter of releasing the throttle.


Activating Speed Limiter Mode

- 1. Press the gauge switch to go to the SETTINGS menu.
- 2. Select SPEED LIM, then you will have a choice of:

| Unit selection | Information displayed                                                                            |
|----------------|--------------------------------------------------------------------------------------------------|
| Metric (km/h)  | <div>- --</div> <div>(Unlimited)</div> <div>- From 30 km/h to 100 km/h by step of 10 km/h.</div> |
| Imperial (mph) | <div>- --</div> <div>(Unlimited)</div> <div>- From 20 mph to 65 mph by step of 5 mph.</div>      |

- 3. Hold menu button to confirm selected speed limit.

The speed limiter indicator  will turn on.

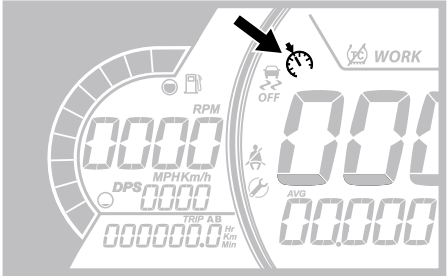

Activating speed limiter mode of operation only limits the maximum speed available when depressing the throttle.

The throttle must be held in to maintain forward speed.

Speed can be varied from idle up to the set speed using the throttle once the speed limiter function is activated.

Deactivating Speed Limiter Mode

- 1. To deactivate speed limiter mode, in SETTINGS, select SPEED LIM and then select the - (unlimited) limit.

# EQUIPMENT


## Steering Wheel Tilt Mechanism

The steering wheel height is adjustable.

Adjust the steering wheel height to face your chest, not your head.

To adjust steering wheel height:

1. Unlock steering by pulling the tilt lever toward you.
2. Move steering wheel to the desired position.
3. Release tilt lever to lock steering wheel in position.

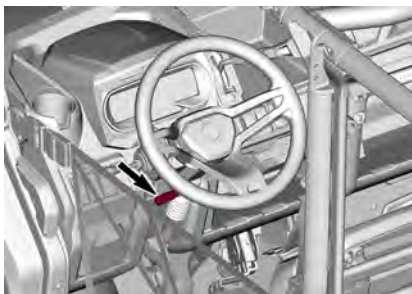

### **WARNING**

**Never adjust the steering wheel height while riding. You may lose control.**

## Cup Holder


### *Cup Holders*

Two cup holders are located on each side of the dash near the side nets attachment points.



Two additional cup holders are available on the back of the central passenger seat backrest.

To access them, lower the seat backrest.

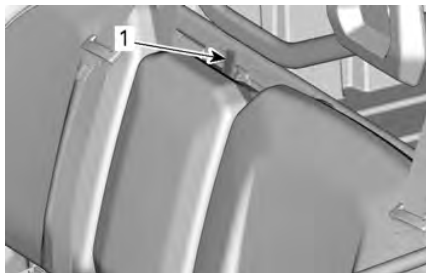

**TYPICAL**

1. Backrest clip locking mechanism



**TYPICAL**

1. Central passenger backrest cup holder


### **NOTE:**

Do not use cup holders while riding in rough conditions.

# Passenger Handholds

## Passengers Handhold

The passengers have access to a front handhold located in front of their seats.

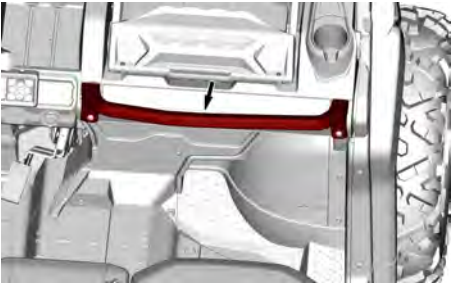

Adjust the seat position in order to get a solid and comfortable grip on the handholds. Refer to *Passenger's Seat* for adjustment procedure.


Holding the handhold helps the passengers brace against the movement of the vehicle and helps keep hands and body inside the cockpit in the event of a rollover.

**WARNING**

Never use any part of vehicle cage as handholds. Hands can be struck by objects outside the cockpit or crushed in a rollover.

## Passengers Handhold

The passengers have access to a front handhold located in front of their seats.

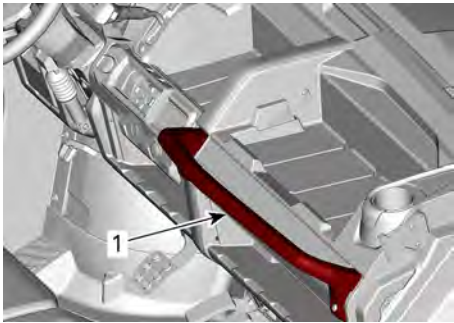

1. Passengers handhold

Holding the handhold helps the passengers brace against the movement of the vehicle and helps keep hands and body inside the cockpit in the event of a rollover.

**WARNING**

Never use any part of vehicle cage as handholds. Hands can be struck by objects outside the cockpit or crushed in a rollover.

# Storage compartment

## Storage Compartments

The vehicle is equipped with storage compartments designed to carry light objects.

## Multifunction Gauge Storage Compartment


A storage compartment is available above the multifunction gauge.



## Driver Storage Compartment

A small storage compartment is available on the driver side.

Pull on handle to rotate it open.

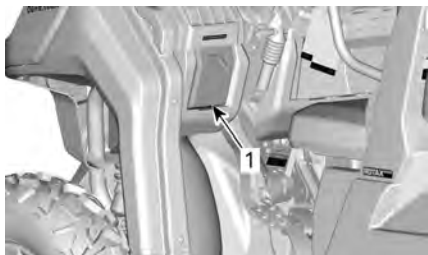


**TYPICAL**

1. Driver storage compartment

## Driver Storage Compartment Available on Base Models Only

A small storage compartment is available on the driver side.

Pull on handle to rotate it open.

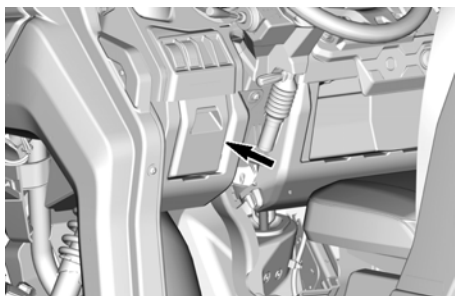

## Removable Tool Box (if equipped)

A removable tool box is located on the upper console in front of the passenger's seat.

## Opening the Tool Box Lid

### **⚠ WARNING**

**Before riding, always make sure tool box is secured to vehicle and lid is locked.**

1. Push the lock downwards and lift the lid.



2. To close the lid, lower it and push the lock upwards.

## Removing and Securing the Tool Box

### **⚠ WARNING**

**Before riding, always make sure tool box is secured to vehicle and lid is locked.**


1. To remove the tool box from the vehicle, lift its transport handle.
2. To secure the tool box in place, position it carefully and lower the transport handle.



**SECURING TOOL BOX IN PLACE**


## Under seat Storage Box (If Equipped)

A convenient removable under seat storage box is available.

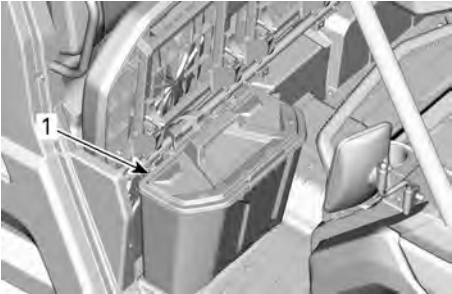

1. Under seat storage box

To remove under seat storage box, lift RH passenger seat and remove under seat storage box by pulling it upwards.

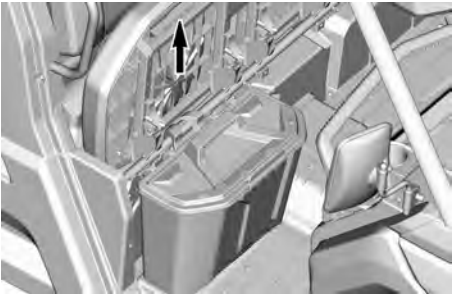

**NOTE:**


When reinstalling under seat storage box, make sure to align it properly with seat tubes and floor emboss so it fits properly under the seat.

**Open Storage Compartments**

Multiple open storage compartments are available in the console.

**⚠ WARNING**

When riding vehicle, make sure no object stored in open storage compartments could cause harm in the event of a roll over.

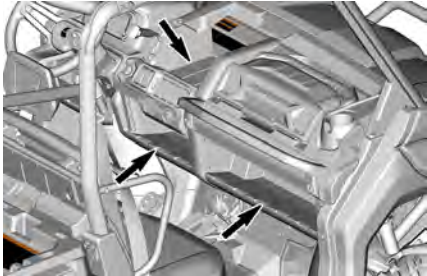

ALL EXCEPT BASE

**Central Passenger Backrest Storage Area**

When central passenger seat backrest is pulled down a storage area is available.

**NOTE:**

Always empty storage area before putting central passenger backrest up.




TYPICAL

1. Central passenger backrest storage area

**Lower Storage Box**

A storage area is located under the cargo box on each side of the vehicle.

Use the lower storage to haul small, lightweight cargo. Heavier cargo should be hauled in cargo box.

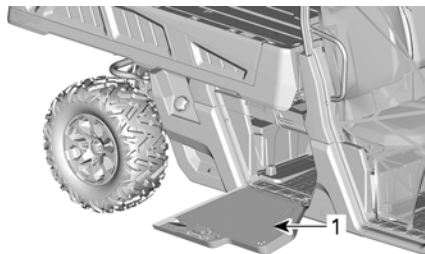


1. Access panel

### ⚠ WARNING

- Always close doors before riding.
- Never ride when the doors are removed.
- Do not drive with cargo that exceeds the dimensions of the compartment.
- Always properly secure the cargo.
- Always carry only evenly distributed lightweight cargo.

## Tool Kit

A tool kit with basic tools is provided. It is located in the front service center.

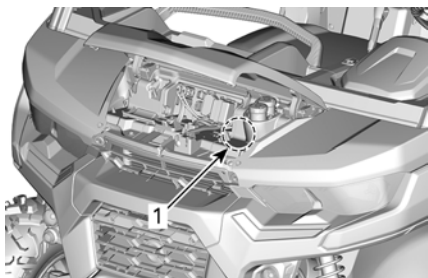

1. Tool kit

## Models with CAB

On models with a CAB the tool kit is located in the tool box.

## Footrests

The vehicle is equipped with driver and RH passenger footrests to allow

firmly planting feet on vehicle floor, which helps to maintain proper body position while riding.

The footrests help minimize the risk of leg or foot injury.

Always wear appropriate footwear. See *Riding Gear*.


## Side Nets

### Side Nets

A side net is provided on each side of the cockpit to help arms, legs or shoulders stay inside the vehicle, thus reducing the risk of injuries. Side nets may also keep bushes or other debris out of the cockpit.

### ⚠ WARNING

**Never operate the vehicle unless both side nets are in place and buckled.**

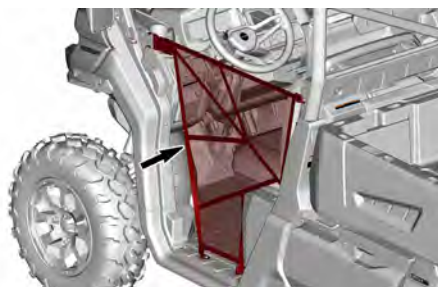


DRIVER'S SIDE NET SHOWN

Side nets are adjustable and must be kept as tight as possible.


To adjust side nets proceed as follows:

1. Secure side net with buckle.
2. Pull on three adjustment straps to tighten.

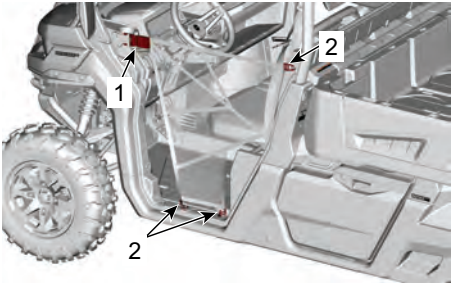

**DRIVER'S SIDE**

1. Buckle
2. Adjustment straps

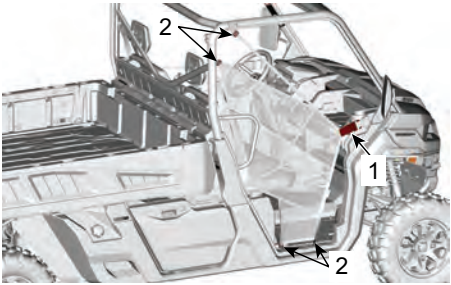

**PASSENGER'S SIDE**

1. Buckle
2. Adjustment straps

**Side Nets**

A side net is provided to help arms, legs or shoulders stay inside the vehicle, thus reducing the risk of injuries.

Side nets may also keep bushes or other debris out of the cockpit.

**⚠ WARNING**

**Never operate the vehicle unless both side nets are in place and buckled.**



**1. Driver's side net**


Side net is adjustable and must be kept as tight as possible.

To adjust side nets proceed as follows:

1. Secure side net with buckle.
2. Pull on the three (3) adjustment straps to tighten.



**1. Side net adjustment locations**

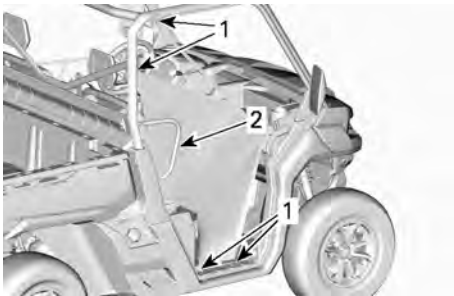

1. Side net adjustment locations
2. Shoulder guard

## Shoulder Guards

The vehicle is equipped with shoulder guards to help restrain the entire body of driver and passengers inside vehicle.

## Seat Belts

This vehicle is equipped with 3 points seat belts to help protect driver and passenger in the event of a collision, rollover, or tipover. The seat belts can help keep occupants stay in the passenger compartment.

### **⚠ WARNING**

**Wear seat belts properly at all times.**

**Seat belts reduce the risk of injury in case of a crash and help to keep limbs inside the cockpit during a rollover or any accidents. Before riding, everyone aboard should know how to unbuckle their seat belt rapidly. Knowing how to properly detach your seat belt is a crucial skill that can save your life in an emergency situation. In the event of an accident or vehicle malfunction, being able to quickly release your seat belt can help you escape the vehicle and avoid potential hazards such as fire or sinking. Additionally, knowing to quickly release your seat belt can also help you assist others such as children or older persons.**

If driver's seat belt is not fastened when:

- The ignition is turned ON
  - The seat belt indicator lamp will be turned ON.
  - The multifunction gauge will display the message: SEAT BELT.
- The engine is started and shift lever is moved out of PARK, vehicle speed will be limited to a maximum

of approximately 20 km/h (12 mph) on flat ground.

### **⚠ WARNING**

**The vehicle may reach higher or lower speed depending on inclines.**

### **⚠ WARNING**

**There is no indicator light or message for the passengers seat belt. The driver is responsible for the passenger safety and should ensure the passengers buckle their seat belt.**

### *Fastening and Adjusting the Seat Belt*

The seat belt is equipped with a semi-cinching tab that locks the lap belt when the webbing is under tension.



**TYPICAL**

1. Semi-cinching tab

To fasten the seat belt, insert the latch plate into the buckle, then pull the belt to ensure it is properly fastened.

Adjust the seat belt tightly against your body by pulling the shoulder belt upwards.



TYPICAL

### **WARNING**

**Wear seat belt properly.**  
Fasten seat belts and confirm that they latch and unlatch securely and tightened against the body. Make sure it is not twisted or defective.

To release the seat belt, push on the red button on the seat belt buckle.

## Driver's Seat

On applicable models, the driver's seat can be adjusted forward and backward.



TYPICAL

1. Adjustment lever

To adjust seat, move the seat lever to unlock the seat. Release the lever to lock the seat into desired position.


### **WARNING**

**Never adjust the seat position while driving.**

## Passenger Seats

The passenger seats are not adjustable.

The central passenger seat backrest can be tilted forward for access to cup holders by releasing the latch located on top of the backrest.

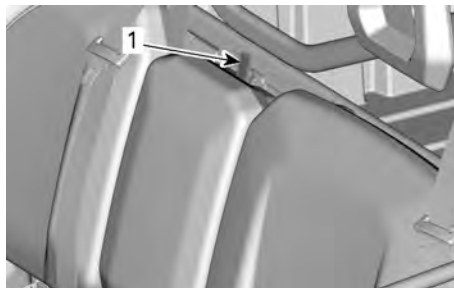

TYPICAL

1. Backrest clip locking mechanism

On applicable models, the seats can be lifted to allow access to removable under seat storage compartment.

To lift seat, pull on front of seat to unclip it and lift until it "clips" in the upper position.

## Fuel Reservoir Cap

### *Fuel Reservoir Cap*

The fuel reservoir cap is located on the right hand side of the vehicle, between the wheel and the lower storage box.



1. Fuel reservoir cap

Refer to *Fuel* section for information on fueling procedure and fuel requirements.

## Winch

### **⚠ WARNING**

To avoid severe injury or death or important components damages.

- Never use the winch cable/rope to retain a vehicle during trailering.
- Never ride with the winch cable/rope attached to a load or another vehicle.
- Only use the winch to help a stuck vehicle (snow, mud, etc.).
- Always refer to the winch manufacturer's instruction before pulling loads.

Refer to your winch guide included with your vehicle for proper winch operation.

The winch can be actuated inside the vehicle using the winch control switch on the upper console.

### **NOTICE**

Using the winch intensively over a long period of time may discharge the battery.

Intensive use of the winch may cause the built-in circuit breakers to momentarily turn OFF. In such a case, wait a moment, then continue winching. The breakers automatically turn ON once they have cooled down.

The following tips will help to reduce the risk of discharging the battery:

- Always unreel manually: Unlock the cable using the handle then pull on the hook strap to unreel.
- Let the vehicle run while winching. Do not stop vehicle immediately

after winching to let battery recharge.

- Also, when winching for more than 30 seconds, it is recommended to increase engine RPM in the range of 3000 RPM to increase charging power to the battery.

### **⚠ WARNING**

Make sure vehicle is in **NEUTRAL (N)** or **PARK (P)** before increasing engine RPM.

## Cargo Box


### *Cargo Box*

The vehicle is equipped with a an inclinable cargo box. The cargo box may be used for various types of cargo.

### **⚠ WARNING**

To reduce the risk of loss of control or loss of load, use the cargo box only in accordance with *Carrying Loads* in the *safety Information* section.

The cargo box may be opened with the tailgate.

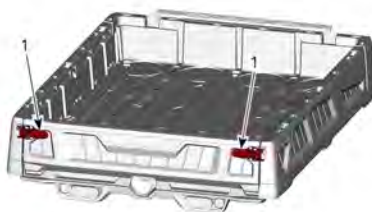

1. Latch handle

Lower the tailgate by opening the latch handle as illustrated below.



**LATCH HANDLE**

**Cargo Box Side Walls**

The side walls can be removed.

1. Open the latch handles and remove the tailgate.




2. Remove screws



1. Screw
2. Washer

3. Slide backward and lift up.

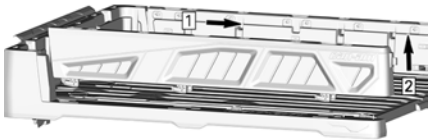

1. Sliding backward
2. Lifting up

**Cargo Box Separations**

Cargo box can be easily separated into smaller storage compartments to prevent cargo loads from mixing.



**EXAMPLE OF CARGO BOX SEPARATIONS**

**Cargo Box Tilt**

**Cargo Box Tilt Release Handles (If equipped)**


The latching mechanism of the cargo box can be actuated from either side of the vehicle through a release handle.



1. Cargo box release handle

### Cargo Box Power-Tilt (If equipped)

The cargo box can be tilted with the control switch located in the upper control.

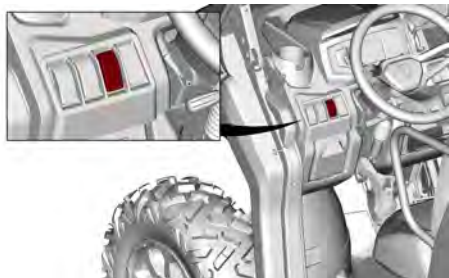

### Anchoring Hooks


To provide anchoring point in order to secure cargo inside the cargo box, 4 anchoring hooks are located inside the cargo area.

#### NOTICE

**Never lift vehicle using anchoring hooks.**

### Tailgate

The cargo box can be closed with a tailgate.

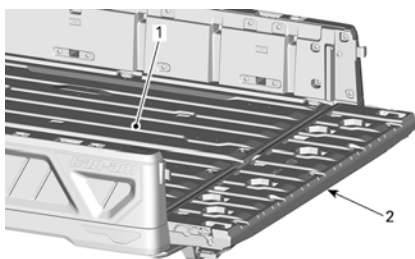

1. Cargo box
2. Tailgate

#### NOTICE

**Do not exceed 113 kg (250 lb) of weight on the tailgate during loading or unloading. Always close tailgate before operating to reduce the risk of loss of load.**

### Removing the Tailgate

1. Open tailgate.
2. Using a flat screwdriver, gently pry the spring clip past the screw head on each side.



3. Lift the tailgate 45°.
4. Lift the RH side off it's hinge.
5. Remove the tailgate by sliding it to the right.
6. The installation is the reverse of the removal procedure.

### Side Mirrors (If equipped)

This vehicle may be equipped with side mirrors.

The mirrors can be adjusted to suit driver preferences.

#### ⚠ WARNING

**Do not adjust mirrors while riding. You could lose control.**

### Trailer Hitch

The vehicle comes equipped with a 50.8 x 50.8 mm (2 x 2 in) standard receiver hitch.

For the proper usage of the hitch support, refer to *Moving Loads and Doing Work*.


#### ⚠ WARNING

**To reduce the risk of loss of control or loss of load, always respect the maximum hauling capacity.**

## Hitch Draw Bar

Hitch draw bar with a 50 mm ball installed.

Refer to *Technical Specifications* for recommendations on carrying loads and towing.

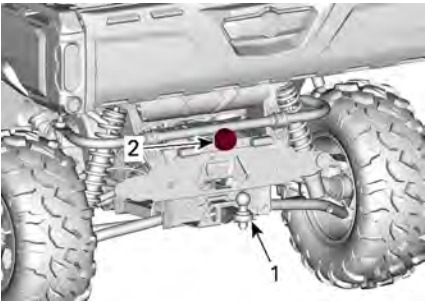

1. Trailer Hitch
2. Trailer connector

### **WARNING**


Ensure to install the proper ball size that matches the equipment to be towed.

### NOTE:

Follow the trailer manufacturer instructions for proper attachment.


### Installing the Hitch Draw Bar

Insert the draw bar in the receiver hitch.

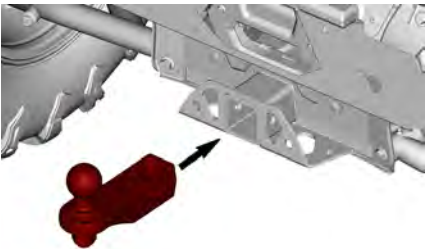


### TYPICAL

Insert the pin through the draw bar and receiver hitch.

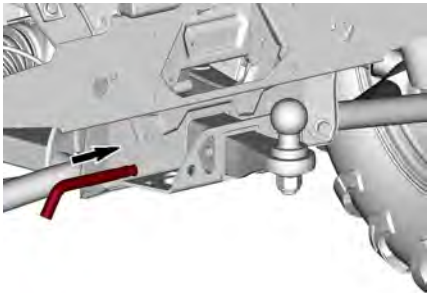

### TYPICAL

Secure the pin by folding the lock.

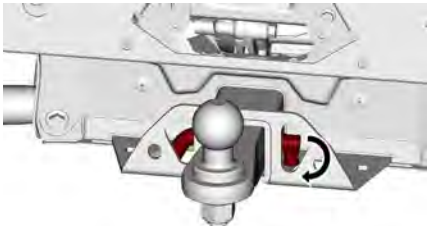

### TYPICAL


### **WARNING**

Make sure the draw bar is secured properly.

## Trailer Lights Connector

Connector to be used if the trailer is equipped with lights.


For towing, refer to towing instructions label located at trailer hitch.

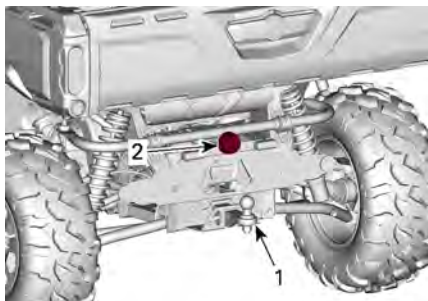

1. Trailer Hitch
2. Trailer connector

## Recovery Hooks (Models Without a Winch)

Convenient hook that can be used to recover a stuck vehicle.

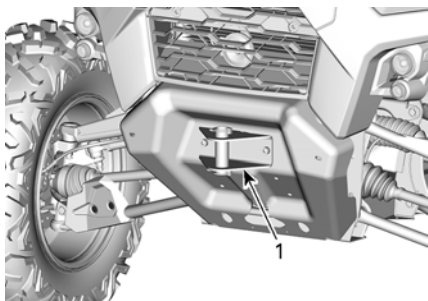

1. Front recovery hook

## 12-Volt Power Outlets

Convenient for handheld spotlight or other portable equipment.




**ALL MODELS**

1. 12 V power outlets

Remove protective cap to use. Always reinstall it after use to protect against weather.

## USB Power Outlet


Some models are equipped with a USB port used for charging.

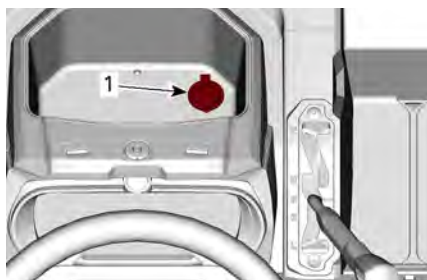

1. USB charging port

## Brake Holding Mechanism

The brake holding mechanism lever is located on the LH side of the steering wheel, above the brake pedal.

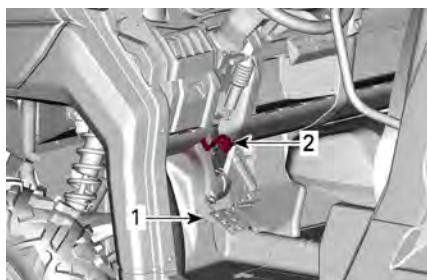

**TYPICAL**

1. Brake pedal
2. Brake holding mechanism lever

The brake holding mechanism function is to maintain brakes to all wheels while shift lever is set to Park.

To engage the brake holding mechanism, proceed as follow:

1. Immobilize vehicle,
2. Apply and hold the brakes,
3. Put shift lever in **Park**,
4. While holding the brakes, lift lever toward the steering wheel,

5. Remove foot from brake pedal, the pedal should stay lowered.



Step 1. Apply and hold brake pedal  
Step 2. Lift lever

**NOTE:**

The brake holding mechanism lever can be set to several positions.

**⚠ WARNING**

When the brake holding mechanism is applied, make sure the vehicle stays securely in place. **ALWAYS** put the shift lever in **PARK** when using the brake holding mechanism.

To release the brake holding mechanism, simply apply and hold the brake pedal, put shift lever in gear then release brake pedal. When released it should return to the rest position.

Safe usage of the brake holding mechanism requires the shift lever to be set to the Park position. It is not recommended to use the brake holding mechanism on its own.

**⚠ WARNING**

Make sure brake holding mechanism is released before operating the vehicle. If the brake holding mechanism is left **ON** while riding, it may cause damage to the brake system and lead to loss of braking capacity and/or fire.

## Side Mirrors


This vehicle may be equipped with side mirrors.

The mirrors can be adjusted to suit driver preferences.

**⚠ WARNING**

Do not adjust mirrors while riding. You could lose control.

## Climate Control System

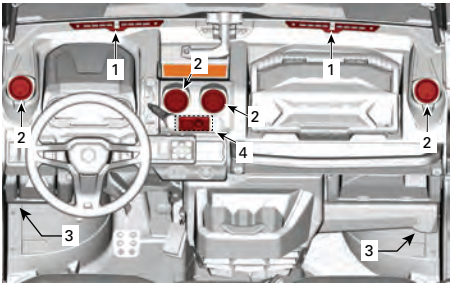

**MODELS WITH A/C**

1. Windshield air vents
2. Central air vents
3. Footwell air vents
4. Climate control


### Windshield Air Vents

Located on the top of the dash, they allow distribute the air flow on the windshield.



The air flow may be adjusted using the central knob.


- Push the knob toward the windshield to close the vent.
- Pull it to open the vent.

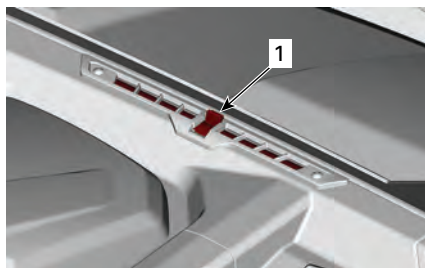**CLOSED POSITION SHOWN**

1. Central knob

### Console Air Vents


Located on the center of the console, they allow distribute the air flow inside the cockpit.

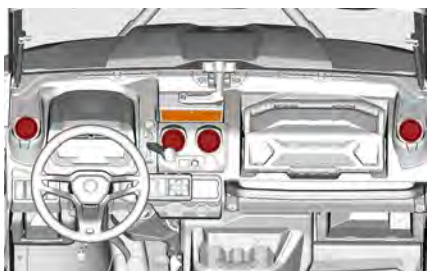

Push on the molded dot to open the vent.

Push on vent tabs to close.

Rotate the external ring of the vent to orient the air flow in the cockpit.

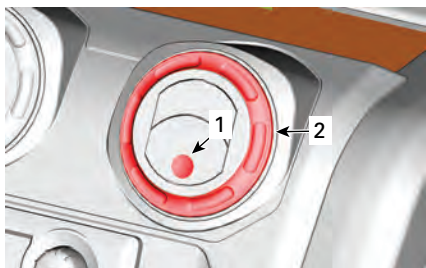

1. Molded dot  
2. External ring

### Footwell Air Vents

Located underneath the dash, each side of the vehicle, they allow distribute the air flow at the bottom of the cockpit.

Push on the molded dot to open the vent.


Push on vent tabs to close.

### Climate Control - With A/C

This vehicle is equipped with an heating/air conditioning system.

This system is controlled by a multi-function module. This module gives access to the following functions:

- Temperature
- Temperature mode
- Fan speed
- Settings

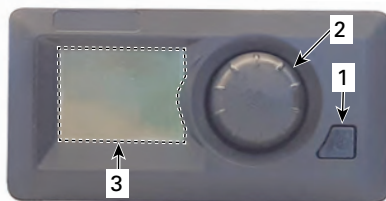

1. Power switch  
2. Selector knob  
3. Display

For an optimal efficiency of the system, the supply control of the outside air is determined automatically by the climate control module. No operator action is required.

### Temperature

To adjust the temperature, turn the selector knob to select the desired temperature.

The temperature can be set between 13 °C and 28 °C (56 °F and 82 °F) in 1 degree increments.

In position T ° MIN, the system switches to continuous cooling.



In T ° MAX, the system switches to continuous heating.



#### NOTE:

In either T ° MIN or T ° MAX position, the system can not regulate a stable temperature.

### Temperature Mode

1. To select the temperature mode, press the selector knob until one of the following icon appear.



2. Turn the selector knob to change the mode.

#### NOTE:

After 5 seconds, the module saves your selection and returns automatically to the temperature display.

In AUTO mode, the system automatically adjusts to heat or cool the cockpit to obtain the selected temperature as

quickly as possible by adjusting the fan speed automatically.

If an other fan speed is selected while in AUTO mode, the system will fall in cool or heat mode depending the ambient conditions.

### Fan Speed

To adjust the fan speed, press the selector knob until the fan icon  appears then turn the knob to select the desired speed.

3 settings are available for fan speed:

- LOW
- MED
- HIGH

#### NOTE:

After 5 seconds, the module saves your selection and returns automatically to the temperature display.

### Setting

The following settings can be modified by the operator.

- Contrast (0% to 100%)
- Brightness (0% to 100%)
- Unit (°C or °F)

To modify a setting, press the selector knob 2 time to reach the Fan Speed page.

#### NOTE:

Each next action must be performed within 10 seconds, otherwise the module will come back to the temperature display.

Press and hold the power button while turning the selector knob clockwise for at least 3 clicks.

To change the **CONTRAST**: turn the selector knob until the desired level is reached.

To change the **BRIGHTNESS**: press the selector knob 1 time, then turn the knob until the desired level is reached.

To select °C or °F: press the selector knob 2 times, and turn the knob to change the unit.

---

## DRIVING AID TECHNOLOGIES

These systems actively manage braking and traction.

Under certain conditions, the driver may feel the actions taken by the systems in the form of vibrations or slight jerks in the steering wheel or brake pedal, which is normal.

### ABS (Anti-Lock Brake System)

If equipped this system prevents the wheels from locking during braking, which improves the stability of the vehicle and the contact of the tires on the ground.

**Limitations:** Low tire adhesion to the surface limits the braking ability. Even with ABS, the braking distance will be longer under the conditions of low adhesion.

### BTC (Brake Torque Control)

When front or rear wheel slippage is detected, BTC automatically transfers torque to the wheel providing better traction.

### DTC (Drag Torque Control)

During deceleration, this system prevents the wheels from slipping due to the engine brake by requesting a light and limited engine torque request. When in 4WD mode, the DTC will be more noticeable eliminating most engine braking. This ensures proper ABS system operation.

#### **WARNING**

**Unit modification, such as fitting a different tire model and/or size, may cause unwanted system behavior such as under or overreaction of the above system.**

slope and momentarily holds brake pressure to ensure the vehicle does not roll down while moving the foot from the brake pedal to the accelerator pedal.

### HDC (Hill Descent Control)

HDC controls the vehicle speed in down hill situation by applying and modulating the brake pressure to hold the target speed set by the driver. The driver can change the set speed by pressing the accelerator or brake pedal.

HDC can be activated and deactivated by pressing the HDC button.

Refer to *Secondary Controls* for complete instructions.

### HHC (Hill Hold Control)

When the brake pedal is applied as to hold the vehicle stationary, HHC automatically detects if the vehicle is on a

---

# BREAK-IN PERIOD

## Operation During Break-In

A break-in period of 10 operating hours or 300 km (200 mi) is required for the vehicle.

### *Engine*

During the break-in period:

- Avoid full throttle operation.
- Avoid pressing accelerator pedal more than 3/4 of the stroke.
- Avoid sustained accelerations.
- Avoid prolonged cruising speeds.
- Avoid engine overheating.

However, brief accelerations and speed variations contribute to a good break-in.

### *Brakes*

#### **WARNING**

**New brakes will not operate at their maximum efficiency until their break-in is completed. Braking performance may be reduced, so use extra caution.**

**Apply moderate braking force for the 40 to 50 first braking events.**

### *Belt*

A new belt requires a break in period of 50 km (30 mi).

During the break-in period:

- Avoid strong acceleration and deceleration.
- Avoid pulling a load.
- Avoid high speed cruising.

# OPERATING THE VEHICLE

## Starting the Engine

Press the brake pedal.

Insert key in ignition switch and turn to the ON position.

### NOTE:

If shift lever is not set to PARK (P) or (N) NEUTRAL, the brake pedal must be pressed to allow engine starting.

Turn the key to the start position and hold until the engine starts.

### NOTE:

Do not press the accelerator pedal. If the accelerator pedal is pressed at least 50%, the engine will not start.

Release the engine start position immediately when the engine has started.

### NOTICE

If engine does not start after a few seconds, do not hold the start position more than 10 seconds. Refer to *Troubleshooting*.

## Operating the Shift Lever

Apply brakes and select the desired shift lever position.

Release brakes.

### NOTICE

When changing gear selection, always completely stop the vehicle and apply the brakes prior to shifting. Damage to the gearbox may occur.

## Choosing the Correct Range (Low or High)

It is important to limit situations known to make the drive belt slip excessively. The main reason the drive belt will slip is if the gearbox is in high range when it should be in low range.

Pay attention to the following:

### Low range

Low range should be used whenever:

- Pulling
- Pushing
- Hauling a load
- 4x4 applications
- Mud holes
- Water holes
- Crossing obstacles
- Climbing onto trailer
- Hill climbing

It is also recommended to use low range if driving for prolonged periods at speeds under 24 km/h (15 mph).

Please refer to *Break-in Period* for drive belt break-in information.

### High range

High is the default riding range.

### Electronic Drive Belt Protection (if available and activated on your model)

Some vehicles have the electronic drive belt protection function activated.

Refer to your authorized Can-Am dealer for availability and possible activation.

This function is activated when riding at too slow speed for the **high range**, such as in the following situations:

- Pulling
- Pushing
- Hauling a load
- 4x4 applications
- Mud holes
- Water holes
- Crossing obstacles
- Climbing onto trailer
- Hill climbing

In the above mentioned situations the electronic drive belt protection will help protect the CVT drive belt from being damaged by activating the

engine torque limiter. The gauge will also scroll a LOW GEAR message, suggesting the operator to immobilize the vehicle and set to LOW GEAR.

**Whenever the electronic drive belt protection is activated, you MUST shift in LOW range.** Refer to *Operating the Shift Lever*.

## Stopping the Engine and Parking the Vehicle

### **WARNING**

**Avoid parking on steep slope as the vehicle may roll away.**

### **WARNING**

**Always put the vehicle in PARK when stopped or parked to prevent rolling.**

### **WARNING**

**Avoid parking in places where hot parts can start a fire.**

When stopped or parked always bring shift lever to park position. This is especially important when parking on a slope. On very steep inclines or if the vehicle is carrying a cargo, the wheels should be blocked using rocks or bricks.

Select the flattest terrain available for parking.

Release accelerator pedal and use brakes to completely stop the vehicle.

Set shift lever in PARK position.

Turn key in ignition switch to OFF position.

Remove key from ignition switch.

## Tips for Maximizing Drive Belt Durability

Riding style and conditions have a direct impact on drive belt durability. Your vehicle features a CVT system design that is optimized to offer the best performance. The CVT and drive belt have successfully endured thousands of miles of durability tests. However, to maximize drive belt durability and to prevent premature failures, it is important that the operator understands the limits of a belt driven CVT system and adapts their riding style and speed accordingly.

If riding in any of the conditions listed below, BRP highly recommends not to constantly hold the throttle wide open (WOT) for more than five (5) minutes.

- High ambient temperatures (above 30 °C (86 °F))
- Heavy loads: Passengers / Heavy cargo
- Heavy drag: Soft sand / Hill climbing / Mud / Using a track kit.

After a few minutes at WOT, partially release the accelerator and allow the CVT to cool down.

For more tips for maximizing the drive belt durability, refer to *Choosing the Correct Range (Low or High)*.

## Refueling

### Fuel Requirements

#### **NOTICE**

**Always use fresh gasoline. Gasoline will oxidize; the result is loss of octane, volatile compounds, and the production of gum and varnish deposits which can damage the fuel system.**

Alcohol fuel blending varies by country and region. Your vehicle has been designed to operate using the

recommended fuels, however, be aware of the following:

- Use of fuel containing alcohol above the percentage specified by government regulations is not recommended and can result in the following problems in the fuel system components:
  - Starting and operating difficulties.
  - Deterioration of rubber or plastic parts.
  - Corrosion of metal parts.
  - Damage to internal engine parts.
- Inspect frequently for the presence of fuel leaks or other fuel system abnormalities if you suspect the presence of alcohol in gasoline exceeds the current government regulations.
- Alcohol blended fuels attract and hold moisture which may lead to fuel phase separation and can result in engine performance problems or engine damage.

### Recommended Fuel

The gasoline must have the following minimum octane requirements:

Regular unleaded gasoline with an AKI (R+M)/2 octane rating of 87, or an RON octane rating of 91

Use unleaded gasoline containing MAXIMUM 10% ethanol.



### NOTICE

**Never experiment with other fuels. Engine or fuel system damages may occur with the use of an inadequate fuel.**

### NOTICE

**Do NOT use fuel from fuel pumps labeled E85.**

Use of fuel labeled E15 is prohibited by U.S. EPA Regulations.

### REFUELING PROCEDURE

#### WARNING

- Gasoline and gasoline vapors are extremely flammable and highly explosive under certain conditions. To reduce the risk of property damage, serious injury or death from improper handling of gasoline when refueling, always follow the instructions contained in this section explicitly.
- Gasoline is poisonous. Improper handling can cause serious injury or death. Never siphon gasoline by mouth. Do not inhale vaporized gasoline. If you swallow gasoline, get some in your eyes, or inhale gasoline vapor, see your doctor immediately. If gasoline spills on your skin, wash with soap and water. Change your clothes if gasoline spilled on them.

## Before Refueling the Vehicle

### **⚠ WARNING**

Failure to follow these precautions while refueling your vehicle may result in serious injury or death:

- Do not smoke, or allow open flames or sparks when refueling. Fuel vapors could ignite and cause a fire.
- Do not allow people to stay on the vehicle while refueling.
- Always proceed in a well-ventilated area.
- Ensure vehicle is on a level surface when refueling.


1. Park vehicle on a level surface. Apply parking brake.
2. Turn off the engine.
3. Ensure the operator and passengers get out of the vehicle.
4. Confirm the type of fuel, refer to *Recommended Fuel*.

## Opening the Fuel Tank Cap

### **⚠ WARNING**

If a whooshing sound is heard or fuel is sprayed when the fuel tank cap is opened, have your vehicle inspected by an authorized Can-Am On-Road dealer before further operation.

1. Slowly turn the cap counterclockwise to open it.

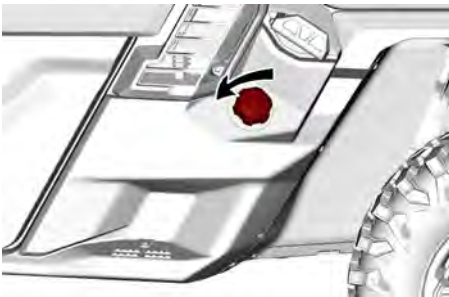

## When Refueling

### **⚠ WARNING**

Observe these precautions when refueling to prevent the fuel tank from overflowing:

- Fully insert the fuel nozzle into the fuel filler neck.
- Stop filling the fuel tank after the fuel nozzle automatically clicks off.
- Do not top off the fuel tank.

Additional precautions if using portable fuel containers:


- Do not spill fuel. Portable containers can spill more easily. Use smaller containers for an easier hold and balance when refueling.
- Make sure to use containers that do not hold more than the amount of fuel needed to avoid overfilling the fuel tank.
- Inspect your containers before use, they may leak due to wear and tear.

1. Fill the fuel tank.

### **⚠ WARNING**

Do not top up the fuel tank as this may cause fuel to overflow and result in fuel spillage.

Always leave room for the fuel to expand as the temperature rises. The fuel tank is full once the fuel level reaches the higher point of the bottom of the filler tube.

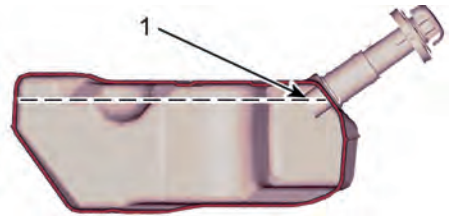

1. Higher point of the bottom of the filler tube

2. After refueling, wait a few second before removing the fuel nozzle from the fuel filler neck to let it drain and prevent spillage.

### Closing the Fuel Tank Cap

#### **WARNING**

**Avoid serious injury or death from an unlatched fuel cap that may leak gasoline and cause a fire, an explosion or other incident.**

- **ALWAYS** make sure the fuel cap is properly closed after re-fueling and before closing the operator's seat.

1. Reinstall the fuel cap and turn it clockwise until you hear a click.
2. Wipe up the vehicle if fuel was spilled.
3. Close the fuel tank cap cover.

# SPECIAL PROCEDURES

## NOTE:

Component failures resulting from these events are not covered by warranty.

## Fuel Flooded Engine

If the engine does not start and it is fuel-flooded, the drowned mode can be activated to prevent fuel injection and to cut ignition while cranking. Proceed as follows:

1. Install key on D.E.S.S. post.
2. Press completely and HOLD accelerator pedal.
3. Press the engine START button during 10 seconds.
4. Release engine START button.
5. Release accelerator pedal completely.
6. Press the engine START button again to allow starting.

If it does not work:

1. Remove the spark plugs.
2. Crank engine several times.
3. Install new spark plugs if possible or clean and dry spark plugs.


If engine does not start, see an authorized Can-Am dealer, a repair shop, or a person of your own choosing for maintenance, repair, or replacement.

## What to do if Water is Suspected to be in the CVT

If water is present in the CVT, the engine will accelerate but the vehicle will remain still.

### NOTICE

**Stop the engine and drain the water to avoid damage to the CVT.**

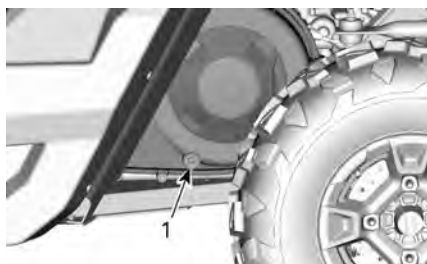

**TYPICAL - LEFT SIDE OF VEHICLE UNDER CARGO BOX**

1. CVT drain

See an authorized Can-Am dealer, a repair shop or person of your choosing to have the CVT inspected and cleaned.

## What to do if Battery is Drained Out

The vehicle can be jump started by using the RED (+) cable to the battery positive pole and the BLACK (-) cable to the vehicle chassis.

### NOTICE

**Do not connect any electrical source to the steering column or components which are in contact with DPS.**

## What to Do if Vehicle Rolled Over

Abrupt maneuvers, sharp turns, side hilling or accident may cause vehicle to rollover.

Should the vehicle be rolled over, it will be necessary to have it transported to an authorized Can-Am dealer for inspection as soon as possible. **NEVER START THE ENGINE!**

Points to be verified, including but not limited to:

- All fluid levels
- Seat belts, including retractors, buckles and semi-cinching tabs
- Cage and its attachment points
- Steering system

- Suspension and its attachment points.

## **What to do if Vehicle is Submerged**

Should the vehicle become immersed, it will be necessary to have it transported to an authorized Can-Am dealer as soon as possible.

### ***NOTICE***

**Never start the engine as immersion of the vehicle can cause serious damage to the engine if the correct restart procedure is not followed.**

## TRANSPORTING THE VEHICLE

When contacting a towing or transporting service, be sure to ask if they have a flatbed trailer, loading ramp or power ramp to safely lift the vehicle and tie-down straps. Ensure the vehicle is properly transported as specified in this section.

### NOTICE

**Do not tow this vehicle — towing can seriously damage the vehicle's drive system.**

### NOTICE

**Avoid using chains to tie the vehicle — they may damage the surface finish or plastic components.**

### ⚠ WARNING

**To avoid severe injury or death or important components damages.**

- **Never use the winch cable/rope to retain a vehicle during trailering.**
- **Never ride with the winch cable/rope attached to a load or another vehicle.**
- **Only use the winch to help a stuck vehicle (snow, mud, etc.).**
- **Always refer to the winch manufacturer's instruction before pulling loads.**

### ⚠ WARNING

**Make sure all accessories, cargo and loose objects inside the vehicle are properly secured, or remove it to prevent from failing on the road and creating a hazard for following vehicles.**

### ⚠ WARNING

**Always transport the vehicle facing forward to avoid damaging the windshield or other components. Parts may detach during transport.**

### ⚠ WARNING

**Before attempting to mount vehicle onto a platform or a trailer, make sure to respect the following safety precautions.**

### Safety Precautions

|                    |                                                                                                                                                 |
|--------------------|-------------------------------------------------------------------------------------------------------------------------------------------------|
| Carrying equipment | The carrying item (platform or trailer or flat bed) must be of appropriate dimensions and capacity to safely support and transport the vehicle. |
| Hauling vehicle    | Do not exceed vehicle hauling capacity and specifications. Ensure the trailer or platform is properly secured to the hauling vehicle hitch.     |
| Visibility         | Ensure you have a good visibility during the entire maneuver.                                                                                   |
| Terrain            | The hauling vehicle and trailer must be on a leveled surface. Use wheel chocks on trailer and hauling vehicle to avoid any movement.            |
| Ramps              | Use ramps with proper rating and secure ramps to the trailer or platform. Avoid steep ramps.                                                    |

| Safety Precautions    |                                                                                                                                                                                            |
|-----------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Bystanders            | Always make sure bystanders are not close to the vehicle or the trailering equipment while climbing up.                                                                                    |
| Accessories and cargo | Make sure all accessories, cargo and loose objects inside the vehicle are properly secured, or remove it to prevent from failing on the road and creating a hazard for following vehicles. |

Using Vehicle Power to Climb  
Onto Trailering Equipment

When vehicle can climb on its own power, proceed as follows;

1. Wear protective gear.
2. Fasten seat belt.
3. Use low gear only.
4. Use 4WD.
5. Start from a sufficient distance from the trailer to align the vehicle in a straight line with the ramps. Never attempt to turn while getting closer to the ramp. Rear wheels might not be aligned once you get to the ramp and vehicle may fall off.
6. Slowly climb the front wheels onto the ramp to verify alignment.
7. Back off the vehicle, verify ramps are still secure, then proceed at proper speed.
8. Carefully drive vehicle onto platform or trailer. Use sufficient speed to climb without spinning or abruptly accelerating. Avoid acceleration while on ramps to prevent ramps movement.
9. If trailer is inclined towards front, simply let vehicle roll in without acceleration.

10. Once vehicle is climbed, put shift lever to Park. Apply brake locking mechanism (if equipped).

 **CAUTION**

**When vehicle cannot move on its own power, or in case overshooting is a risk or if any dangerous condition prevents for embarking on its own power, proceed using a winch.**

Using a Winch to Pull Vehicle  
Onto Trailering Equipment

When vehicle cannot climb on its own power, proceed as follows;

 **WARNING**

**Have the help of an assistant. One person should be in vehicle to have access to vehicle steering, brakes and winch switch, while the other person controls the environment and safety of the maneuver.**

 **WARNING**

**Ensure the winch hook can be safely attached to a proper anchoring point. Use proper rigging.**

**NOTE:**  
If vehicle can be started safely, let engine idle during winching to avoid draining the battery.

1. Place shift lever to NEUTRAL (N).
2. If the vehicle is equipped with a winch, use the winch to roll the vehicle on the platform.
3. If the vehicle is not equipped with a winch, proceed as follows:
  1. Attach strap to lower front bumper anchor.
  2. Attach the strap to the winch cable of the towing vehicle.
  3. Pull the vehicle on the flatbed trailer with the winch.

- Put shift lever to Park. Apply brake locking mechanism (if equipped).

## Securing Vehicle for Transport

### **⚠ WARNING**

To avoid severe injury or death or important components damages.

- Never use the winch cable/rope to retain a vehicle during trailering.
- Never ride with the winch cable/rope attached to a load or another vehicle.
- Only use the winch to help a stuck vehicle (snow, mud, etc.).
- Always refer to the winch manufacturer's instruction before pulling loads.



1. Front upper suspension arm

### **⚠ WARNING**

Ensure the brake hose is away from the strap.  
A pinched brake hose may reduce the braking performance of the vehicle.

- Remove the key from the vehicle.
- At rear, secure the vehicle on both sides using a strap around the suspension arm as close to the wheel as possible.
- At front, secure the vehicle on both sides using a strap around the upper suspension arm as close to the wheel as possible and away from the brake line.
- Strap the rear tires by using tire towing straps.
- Firmly attach the rear suspension tie-down straps to both sides of the rear of the trailer with ratchets.
- Ensure that both the front and rear wheels are firmly attached to the trailer.

## Getting Vehicle Out of Trailer

### **⚠ WARNING**

Vehicle may have moved during transport. Ensure vehicle is properly aligned with ramps before proceeding.


### **⚠ WARNING**

Visibility will be greatly reduced when backing off from the trailer. Have the help of an assistant to ensure proper alignment and safe environment.


# LIFTING AND SUPPORTING THE VEHICLE

## Front of Vehicle

1. Place vehicle on a flat non slippery ground.
2. Ensure vehicle shift lever is set to PARK.
3. Install an hydraulic jack under the front skid plate.
4. Lift front of vehicle and install a jack stand on each side under frame section.

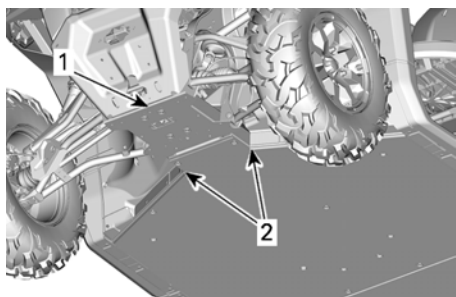

1. Front of vehicle
2. Frame section

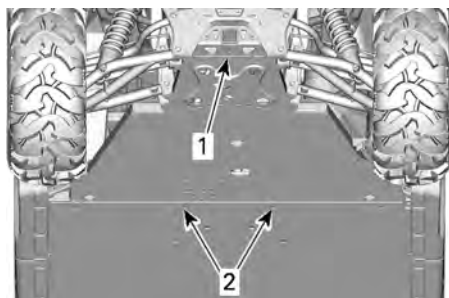

1. Lifting location under skid plate
2. Frame section to install jack stands

5. Lower hydraulic lift and ensure vehicle is supported safely onto both jack stands.

## Rear of Vehicle

1. Place vehicle on a flat non slippery ground.
2. Activate 4WD mode.
3. Ensure vehicle shift lever is set to PARK.
4. Install an hydraulic jack under the skid plate.
5. Lift rear of vehicle and install a jack stand on each side under frame section in front of rear wheel.

# TUNE YOUR RIDE

## Suspension Adjustment Guidelines

Your vehicle handling and comfort depend upon suspension adjustments.

### WARNING

**Suspension adjustment could affect vehicle handling. Always take time to familiarize yourself with the vehicle's behavior after any suspension adjustment has been made.**

Choice of suspension adjustments vary with vehicle load, personal preference, riding speed and terrain condition.

The best way to set up the suspension, is to start from factory settings, then customize each adjustment one at a time.

Front and rear adjustments are inter-related. It may be necessary to readjust the rear shock absorbers after adjusting front shock absorbers for instance.

Test run the vehicle under the same conditions; trail, speed, load, etc. Change one adjustment and retest. Proceed methodically until you are satisfied.

## Suspension Factory Settings

Factory settings are suitable for almost all conditions.

Take into consideration that an increase in ground clearance can affect the handling of the vehicle.

## Front Suspension

### Spring Preload

Cam position 1 (soft)

### Spring Preload

Cam position 1 (soft)

## Suspension Adjustments

### Spring Preload Adjustment

The following are guidelines to fine-tune suspension.

The spring preload affects the ground clearance of the vehicle.

Shorten the spring for a firmer ride and rough riding condition or when pulling a trailer.

Lengthen the spring for a softer ride and smooth riding condition.

### NOTE:

Factory settings are suitable for almost all conditions. Take into consideration that an increase in ground clearance can affect the handling of the vehicle.

### WARNING


**The left and right shock adjustment on front or rear suspension must always be set to the same position.**

**Never adjust one shock only. Uneven adjustment can cause poor handling and loss of stability, which could lead to an accident.**

Lift the vehicle to adjust spring preload.

Adjust by turning adjusting cam.

## Rear Suspension

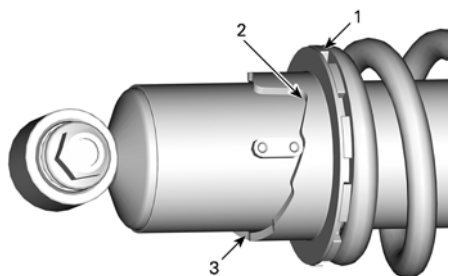

1. *Turn adjusting cam*
2. *Soft adjustment*
3. *Firm adjustment*

## DPS Function

The Dynamic Power Steering (DPS) provides a computer controlled, variable power assist, achieved by an electric motor to optimize the amount of steering input required by the rider.

# MAINTENANCE

---

## PERIODIC MAINTENANCE

Maintenance is very important to keep your vehicle in safe operating condition. The vehicle should be serviced as per the maintenance schedule.

Proper maintenance is the owner's responsibility. A warranty claim may be denied if, among other things, the owner or operator caused the problem through improper maintenance or use.

Perform periodic checks and follow the maintenance schedule. **The maintenance schedule does not exempt the pre-ride inspection.**

### **WARNING**

**Failure to properly maintain the vehicle according to the maintenance schedule and procedures can make it unsafe to operate.**

## Air Filter Maintenance Guideline

Air filter maintenance should be adjusted according to riding conditions.

Air filter maintenance must be increased in frequency when riding on snow, dry sand, dirt, gravel or similar conditions which have a high dust or particle dispersion.

Riding in a group in these conditions will require increasing the air filter maintenance frequency further.

### NOTE:

Accessory filters and pre-filter are available for such conditions. Contact an authorized Can-Am dealer for details.

## Severe Duty Use

If your vehicle is used in the following conditions, refer to the *Severe Duty* section of the maintenance schedule.

- Repeated hauling of loads at more than 75% the maximum capacity.
  - The increase workload applied to the drive system accelerates the differentials, gearbox/transmission, and engine oil life. This reduces internal component longevity if not replaced more frequently.
- Driving at excessive speeds for prolonged amount of time.

Commercial/work and rental vehicles must also use the *Severe Duty* maintenance schedule.

Higher than the average use requires more frequent fluid and wear component replacement than trail, recreational, or occasional utility purposes.

### *Extreme Cold Condition*

An engine that is frequently operated at or below an ambient temperature of -25 °C (-13 °F) will require an increase in service and maintenance schedule.

Any combustion engine operated at these low ambient temperature will collect an increased amount of condensation at every startup/warm-up.

Since the engine is not reaching operating temperatures for extended periods of time, the oil is starting to be strongly diluted with water and gas residue (more water content).

An engine needs to reach operating temperature, in order to be able to evaporate condensate out of the oil.

If daily usage (work or leisure driving cycle) is similar to those mentioned below, BRP strongly recommends changing the oil at least once a month.

Parameters of an increase in service and maintenance schedule:

- Engine not reaching the proper operating temperature during normal daily usage
- Multiple starts and stops without reaching operating temperature
- Short idle periods
- Low RPM driving cycle in short distances without reaching operating temperature.

#### **NOTE:**

BRP strongly recommends the installation of a block heater to help warm up the liquids, this will also help to extend the oil lifetime.

## **Deep Mud / Water Use**

Whether your vehicle is a X mr model or was accessorized for deep mud / water use, this type of usage requires more frequent maintenance and inspections to ensure debris has not infiltrated mechanical components.

If you regularly ride in deep mud or water, refer to the *Deep Mud / Water* section of the maintenance schedule.

After every ride, be sure to perform the *Post Operation Care for Deep Mud / Water Environment*.

### ***Post Operation Care for Deep Mud / Water Environment***

- Rinse the vehicle and its components with fresh water.
- Clean the CVT air filters.
- Drain the CVT compartment and clean if any water or mud is found.
- Inspect and clean engine air filters and engine air filter housing.
- Clean debris around exhaust pipe and muffler area and the spark arrester.
- Clean radiator.
- Visually inspect for any water accumulation in the vent hoses (fuel tank, gear-box, front differential and rear final drive). If there is water, bring the vehicle to your nearest authorized Can-Am dealer for inspection and servicing of main components related to the vents.
- Clean front and rear shock absorbers to prevent seal from damage by dust or dirt.
- Clean drive shaft bellows and the propeller shaft yokes or boots.

## Maintenance Schedule

### IMPORTANT

For severe vehicle utilization (Example: immersion in mud, water or sand, towing, cold weather operation, rock crawling activity, etc.), the maintenance must be completed at 50% of the regular intervals.

Make sure to perform proper maintenance at recommended intervals as indicated in the tables.

The maintenance chart intervals are based on 3 factors:

- Calendar time
- Vehicle hours
- Odometer reading.

Take in account whichever comes first to determine the maintenance threshold.

Your driving habits determines the factors you shall adhere too. For example:

- Someone who uses their vehicle every other weekend trail riding with friends would most likely follow the **odometer reading** to determine the maintenance interval.
- Someone who uses their vehicle seldomly over the year or only on a few occasions (hunting, camping) would most likely follow the **calendar time** to determine the maintenance interval.
- Someone who uses their vehicle daily / weekly for long periods of time such as agricultural / work would most likely follow the **vehicle hours** to determine the maintenance interval.

#### FIRST 3 000 km (1,900 mi)

|                                          |                |
|------------------------------------------|----------------|
| Front differential oil                   | – Replace oil. |
| Gearbox oil                              | – Replace oil. |
| Rear Differential Oil (mono cyl. engine) | – Replace oil. |
| Middle & Rear differential (6x6 models)  | – Replace oil. |

#### EVERY YEAR or 200 Hours or 3 000 km (1,900 mi)

|                                |                                                                                                                                                                                      |
|--------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Air delivery components*       | – Inspect and clean; replace air filter as needed.                                                                                                                                   |
| Battery                        | – Inspect and tighten connections and condition; Clean as needed.                                                                                                                    |
| Brake components and function* | <ul style="list-style-type: none"> <li>– Inspect fluid level, brake pads, brake discs, calipers, brake lines, master cylinder.</li> <li>– Clean and lubricate components.</li> </ul> |

**EVERY YEAR or 200 Hours or 3 000 km (1,900 mi)**

|                                                                  |                                                                                                                                                                                                                                                                |
|------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| CVT components                                                   | <ul style="list-style-type: none"> <li>– Inspect and clean air filter, drive and driven pulley, drive belt, drive pulley rollers and hub bearings.</li> <li>– Lubricate CVT components.</li> </ul>                                                             |
| Drive components and function*                                   | <ul style="list-style-type: none"> <li>– Inspect for loose or worn out parts.</li> <li>– Inspect for oil leaks at differential and transmission.</li> </ul>                                                                                                    |
| Electronic modules (Fault codes and applicable software updates) | <ul style="list-style-type: none"> <li>– Connect the vehicle to the latest version of the BRP diagnostic software (B.U.D.S.).</li> <li>– Scan for fault codes and take the actions to resolve the problem.</li> <li>– Verify for available updates.</li> </ul> |
| Engine cooling components*                                       | <ul style="list-style-type: none"> <li>– Inspect coolant concentration, coolant level, hose condition, clamps, leaks.</li> <li>– Adjust coolant level as needed.</li> </ul>                                                                                    |
| Engine oil and oil filter                                        | <ul style="list-style-type: none"> <li>– Replace oil and filter.</li> <li>– Inspect for oil leaks.</li> </ul>                                                                                                                                                  |
| Exhaust components*                                              | <ul style="list-style-type: none"> <li>– Inspect gaskets, pipes, muffler, condition, leaks.</li> <li>– Inspect and clean muffler spark arrester.</li> </ul>                                                                                                    |
| Fuel components and function*                                    | <ul style="list-style-type: none"> <li>– Pressurize the fuel system by turning the ignition key ON/OFF or press the Start/Stop button. Turn or press 3-4 times.</li> <li>– Inspect fuel tank cap, fuel tank hoses, clamps, leaks.</li> </ul>                   |
| Fuel tank breather (Non-EVAP model)                              | <ul style="list-style-type: none"> <li>– Replace.</li> </ul>                                                                                                                                                                                                   |
| General lubrication                                              | <ul style="list-style-type: none"> <li>– Lubricate door latches, hinges and key barrels.</li> <li>– Grease power tilt bed cylinder spherical bearing (If equipped) and greaseable bushings.</li> </ul>                                                         |
| Seat belts retractors, buckles and semi-cinching                 | <ul style="list-style-type: none"> <li>– Inspect and clean.</li> <li>– Test retractors locking function.</li> </ul>                                                                                                                                            |
| Steering components and function*                                | <ul style="list-style-type: none"> <li>– Inspect for loose or worn out parts.</li> </ul>                                                                                                                                                                       |

**EVERY YEAR or 200 Hours or 3 000 km (1,900 mi)**

|                                                                                                         |                                                                                                                |
|---------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------|
| HVAC Air filter & Air conditioning components (If equipped)                                             | – Inspect and clean. Replace filter if needed.                                                                 |
| Suspension components*                                                                                  | – Inspect wheel bearings, suspension bushings, and ball joints for loose or worn out parts; replace as needed. |
| Cage fasteners                                                                                          | – Inspect for loose fasteners.                                                                                 |
| Valve Clearance (V-Twin engine)                                                                         | – Inspect and adjust as needed.                                                                                |
| *For an extensive list of maintenance actions to be performed, refer to your local dealership services. |                                                                                                                |

**ADDITIONAL MAINTENANCE INTERVALS**

|                                                                     |                                                 |                              |
|---------------------------------------------------------------------|-------------------------------------------------|------------------------------|
| Every 2 years / 400 hours / 6 000 km (3,700 mi)                     | Canister vent pre-filter (CARB and EVAP models) | – Replace.                   |
|                                                                     | Gearbox oil                                     | – Replace oil.               |
|                                                                     | Front differential oil                          | – Replace oil.               |
|                                                                     | Rear differential oil (Mono cyl. engine)        | – Replace oil.               |
|                                                                     | Middle & Rear differential (6x6 models)         | – Replace oil.               |
|                                                                     | Slide shoes in driven pulley (mono cyl. engine) | – Replace.                   |
|                                                                     | Disconnect unit (If equipped)                   | – Replace oil.               |
| Every 6 000 km (3,700 mi)/ 400 hours (Regardless of calendar time)  | Spark plugs (V-Twin engine)                     | – Replace.                   |
| Every 300 hours / 9 000 km (5,600 mi) (Regardless of calendar time) | Spark plugs (Mono cyl. engine)                  | – Replace.                   |
|                                                                     | Valve Clearance (Mono cyl. engine)              | – Inspect; adjust as needed. |
| Every 5 years or 12 000 km (7,500 mi) (Regardless the hours)        | Coolant                                         | – Replace coolant.           |

**ADDITIONAL MAINTENANCE INTERVALS**

|                                                                                                            |             |                  |
|------------------------------------------------------------------------------------------------------------|-------------|------------------|
| Every 2 years<br>(Regardless the hours and<br>mileage)                                                     | Brake Fluid | – Replace Fluid. |
| *For an extensive list of maintenance actions to be performed, refer to your local<br>dealership services. |             |                  |

| Pre-delivery                                                                |                  |
|-----------------------------------------------------------------------------|------------------|
| Serial number:                                                              | Signature/Print: |
| Mileage / km:                                                               |                  |
| Hours:                                                                      |                  |
| Date:                                                                       |                  |
| Dealer no:                                                                  |                  |
| Notes:                                                                      |                  |
|                                                                             |                  |
| Refer to vehicle Pre-Delivery Bulletin for detailed installation procedures |                  |

| FIRST inspection                                                                               |                        |
|------------------------------------------------------------------------------------------------|------------------------|
| Mileage / km: _____<br>Hours: _____<br>Date: _____<br>Dealer no: _____<br>Notes: _____<br><br> | Signature/Print: _____ |
| For maintenance schedule refer to Maintenance Information section of this operator's guide     |                        |

| Service                                                                                         |                                                |
|-------------------------------------------------------------------------------------------------|------------------------------------------------|
| Mileage / km: _____<br>Hours: _____<br>Date: _____<br>Dealer no: _____<br>Notes: _____<br>_____ | Signature/Print: _____<br><br><br><br><br><br> |
| For maintenance schedule refer to Maintenance Information section of this operator's guide      |                                                |

| Service                                                                                         |                                                |
|-------------------------------------------------------------------------------------------------|------------------------------------------------|
| Mileage / km: _____<br>Hours: _____<br>Date: _____<br>Dealer no: _____<br>Notes: _____<br>_____ | Signature/Print: _____<br><br><br><br><br><br> |
| For maintenance schedule refer to Maintenance Information section of this operator's guide      |                                                |

| Service                                                                                         |                                                |
|-------------------------------------------------------------------------------------------------|------------------------------------------------|
| Mileage / km: _____<br>Hours: _____<br>Date: _____<br>Dealer no: _____<br>Notes: _____<br>_____ | Signature/Print: _____<br><br><br><br><br><br> |
| For maintenance schedule refer to Maintenance Information section of this operator's guide      |                                                |

Service

Mileage / km:

\_\_\_\_\_

Hours:

\_\_\_\_\_

Date:

\_\_\_\_\_

Dealer no:

\_\_\_\_\_

Notes:

\_\_\_\_\_

\_\_\_\_\_

Signature/Print:

For maintenance schedule refer to Maintenance Information section of this operator's guide

Service

Mileage / km:

\_\_\_\_\_

Hours:

\_\_\_\_\_

Date:

\_\_\_\_\_

Dealer no:

\_\_\_\_\_

Notes:

\_\_\_\_\_

\_\_\_\_\_

Signature/Print:

For maintenance schedule refer to Maintenance Information section of this operator's guide

Service

Mileage / km:

\_\_\_\_\_

Hours:

\_\_\_\_\_

Date:

\_\_\_\_\_

Dealer no:

\_\_\_\_\_

Notes:

\_\_\_\_\_

\_\_\_\_\_

Signature/Print:

For maintenance schedule refer to Maintenance Information section of this operator's guide

| Service                                                                                         |                                                |
|-------------------------------------------------------------------------------------------------|------------------------------------------------|
| Mileage / km: _____<br>Hours: _____<br>Date: _____<br>Dealer no: _____<br>Notes: _____<br>_____ | Signature/Print: _____<br><br><br><br><br><br> |
| For maintenance schedule refer to Maintenance Information section of this operator's guide      |                                                |

| Service                                                                                         |                                                |
|-------------------------------------------------------------------------------------------------|------------------------------------------------|
| Mileage / km: _____<br>Hours: _____<br>Date: _____<br>Dealer no: _____<br>Notes: _____<br>_____ | Signature/Print: _____<br><br><br><br><br><br> |
| For maintenance schedule refer to Maintenance Information section of this operator's guide      |                                                |

| Service                                                                                         |                                                |
|-------------------------------------------------------------------------------------------------|------------------------------------------------|
| Mileage / km: _____<br>Hours: _____<br>Date: _____<br>Dealer no: _____<br>Notes: _____<br>_____ | Signature/Print: _____<br><br><br><br><br><br> |
| For maintenance schedule refer to Maintenance Information section of this operator's guide      |                                                |

Service

Mileage / km:

Hours:

Date:

Dealer no:

Notes:

Signature/Print:

For maintenance schedule refer to Maintenance Information section of this operator's guide

Service

Mileage / km:

Hours:

Date:

Dealer no:

Notes:

Signature/Print:

For maintenance schedule refer to Maintenance Information section of this operator's guide

Service

Mileage / km:

Hours:

Date:

Dealer no:

Notes:

Signature/Print:

For maintenance schedule refer to Maintenance Information section of this operator's guide

# MAINTENANCE PROCEDURES

This section includes instructions for basic maintenance procedures.

Due to the complexity of some of the maintenance procedures, good mechanical skills are required.

If you are not comfortable with these procedures, do not hesitate to contact an authorized Can-Am dealer, a repair shop or a person of your own choosing.

## **⚠ WARNING**

Unless otherwise indicated, always turn ignition switch to the OFF position before performing any maintenance and remove key.

## **⚠ WARNING**

Should removal of a locking device be required (e.g. lock tab, self-locking fastener, etc.), always replace it with a new one.

## ENGINE AIR FILTER

### **NOTICE**

Never modify the air intake system. Otherwise, engine performance degradation or damage can occur. The engine is calibrated to operate specifically with these components.

### **Engine Air Filter Replacement Guideline**

Engine air filter inspection and replacement frequency should be adjusted according to riding conditions as it is critical to ensure proper engine performance and life span.

Engine air filter inspection and replacement frequency must be increased for the following severe riding conditions:

- Riding on dry sand.

- Riding on dry dirt covered surfaces.
- Riding on dry gravel trails or similar conditions.
- Riding in areas with high concentration of seeds or crop husks.
- Riding in severe snow conditions.

### **NOTICE**


**When riding in dusty conditions or sand, the air box needs to be cleaned before every ride.**

### **NOTE:**

Riding in a group, under these conditions, increases the frequency of the air filter maintenance.

### **Removing the Engine Air Filter**

Unlatch air filter cover and remove air filter.

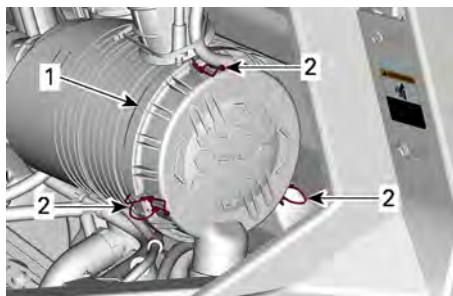

1. Air filter cover
2. Latches

The filter fits tightly over the outlet tube and there will be some initial resistance. Gently move the end of the filter back and forth to break the seal, then rotate while pulling straight out. Avoid knocking the filter against the housing.

### **Cleaning the Engine Air Filter**

1. Inspect the filter for any signs of leaks. A streak of dust on the clean side of the filter is a telltale sign. Replace filter if there is any damages. Eliminate any source of air leaks before installing a new filter.

2. Clean engine air filter by tapping out heavy dust from paper element, this will allow dirt and dust to get out of the paper filter.

### NOTICE


**It is not recommended to blow compressed air on the paper element; this could damage the paper fibers and reduce its filtration ability when used in dusty environments. If engine air filter is too dirty and cannot be cleaned following the recommended procedure, it should be replaced.**

3. Inspect air filter housing for cleanliness. Clean if necessary.
4. Use a clean damp cloth to wipe both the filter sealing surface and the inside of the inlet tube. Ensure that the inlet tube sealing area is undamaged.

### Duckbill Valve Cleaning

#### Installing the Engine Air Filter

1. Insert the filter carefully.
2. Seat the filter by hand, making certain it is inserted completely into the air cleaner housing.
3. Apply pressure by hand at the outer rim of the filter, not the flexible center.
4. Inspect and carefully clean gasket in the groove of the cover. Replace if damaged.
5. Secure air filter cover with latches.

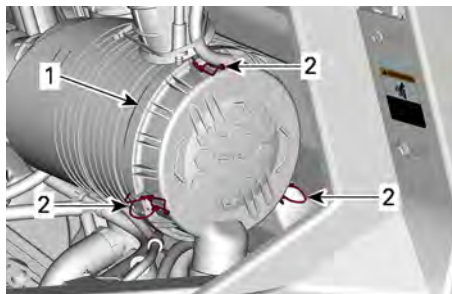

1. Air filter cover

2. Latches

6. Install the air filter access door back in place and secure it with the quarter-turn screw.

## CVT Air Filter

### CVT Air Filter Replacement Guideline

CVT air filter inspection and replacement frequency should be adjusted according to riding conditions as it is critical to ensure proper engine performance and life span.

Under the following severe riding conditions, the inspection and replacement frequency must be increased:

- Riding on dry sand.
- Riding on dry dirt covered surfaces.
- Riding on dry gravel trails or similar conditions.
- Riding in muddy conditions.
- Riding in areas with high concentration of seeds or crop husks.
- Riding in severe snow conditions.

### NOTICE


**When riding in dusty conditions or sand, the air filter needs to be cleaned before every ride.**

### NOTE:

Riding in a group, under these conditions, increases the frequency of the air filter maintenance.

### **Removing the Primary CVT Air Filter**

1. Tilt the cargo box.
2. Press the filter tabs to release it.

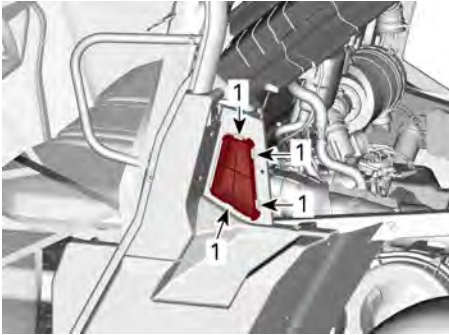


1. Press here
3. Remove the CVT air filter.

### **Removing the Secondary CVT Air Filter (If equipped)**


1. Tilt the cargo box.
2. Remove the primary CVT filter. Refer to *Removing the Primary CVT Air Filter*.



3. Loosen the clamp.

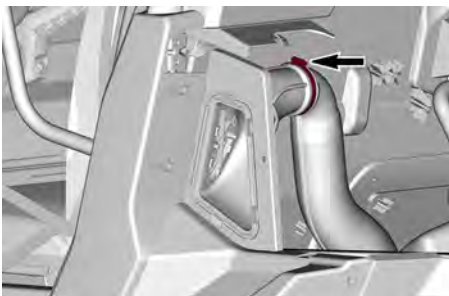

4. Remove filter housing from the vehicle.

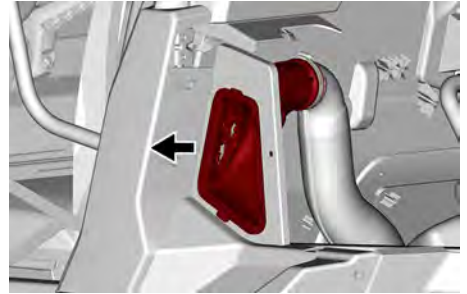

5. Press the filter tabs to release it.



6. Remove the CVT air filter.

### **Inspecting and Cleaning the CVT Air Filter**

1. Inspect filter and replace if damaged.
2. Clean filter using a solution of soft soap and water, then rinse.
3. Gently shake off excess water and allow filter to dry at room temperature.
4. Clean inside the CVT air inlet with a vacuum cleaner.

### **Installing the Primary CVT Air Filter**

1. Reinstall the primary CVT air filter.
2. Lower and lock the cargo box.

### **Installing the Secondary CVT Air Filter**


1. The installation is the reverse of the removal procedure. However pay attention to the following.

| Tightening Torque |                                                         |
|-------------------|---------------------------------------------------------|
| Gear clamp        | $2 \pm 0.3 \text{ Nm}$<br>( $17 \pm 3 \text{ lbf-in}$ ) |

## Evaporative Emission System Pre-Filter (If Equipped)

### Evaporative Emission System Pre-Filter Replacement

1. Tilt the cargo box.
2. Remove the hose clamps.
3. Remove the retaining screws.
4. Remove the pre-filter assembly.

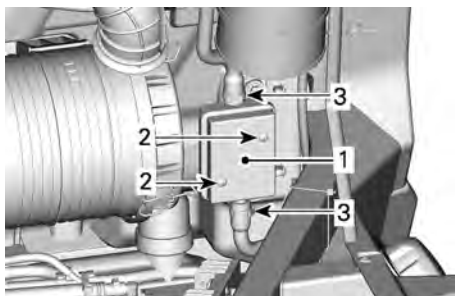

1. Pre-Filter
2. Retaining screw
3. Clamps

5. Install a new pre-filter assembly.

| Tightening Torque          |                                                           |
|----------------------------|-----------------------------------------------------------|
| Pre-filter retaining screw | $2.5 \pm 0.5 \text{ Nm}$<br>( $22 \pm 4 \text{ lbf-in}$ ) |

6. Secure hoses with clamps.
7. Install all other removed parts.

## ENGINE OIL

### Recommended Engine Oil

Rotax® engines were developed and validated using the XPS® oil.

BRP recommends the use of its XPS engine oil or an equivalent at all time.

Damage caused by the use of an oil not suitable for the engine may not be covered by the BRP Limited Warranty.

| XPS Recommended Engine Oil |                     |
|----------------------------|---------------------|
| General purpose            | 5W40 synthetic oil  |
| Cold temperature           | 0W40 synthetic oil  |
| Warm temperature           | 10W50 synthetic oil |

If the recommended XPS engine oil is not available:

- Use a 4-stroke SAE engine synthetic oil meeting or exceeding the following lubricant industry specifications.
- Always check the API service label certification on the oil container, it must contain at least one of the indicated standards.
  - **API service classification**  
SN, or
  - **JASO MA2**

### Twin Cylinders Engines

#### Verifying the Engine Oil Level (V-Twin)


#### NOTICE

Operating the engine with an improper level may severely damage engine.

#### NOTICE

Check the oil level when the engine is COLD.

1. Place vehicle on a level surface.
2. Clean around dipstick to avoid foreign particles falling down the tube.

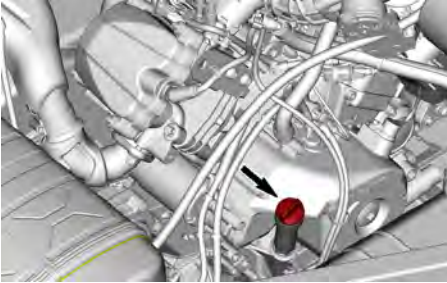

3. Unscrew dipstick then remove it and wipe clean.
4. Reinstall dipstick, screw in it completely.
5. Remove dipstick and check oil level. It should be near or equal to the upper mark.



1. MIN
2. MAX

If the level is between marks, reinstall the dipstick.

If the level is below the lower mark, add oil as follow:

- Place a funnel into the dipstick hole.
- Add a small amount of recommended oil and recheck oil level.
- Continue to add oil until the level reaches the upper mark.

### NOTICE

**Do not overfill. Wipe off any spillage.**

### Changing the Engine Oil

### NOTICE


**Engine oil and oil filter must be replaced at the same time.**

Oil change and oil filter replacement should be done with a warm engine.

### CAUTION

**The engine oil can be very hot. Wait until engine oil is warm.**

1. Place the vehicle on a level surface.
2. Clean the dipstick area.
3. Remove the dipstick.
4. Place a drain pan under the engine drain plug area.
5. Clean the drain plug area.
6. Unscrew drain plug and discard the gasket ring.

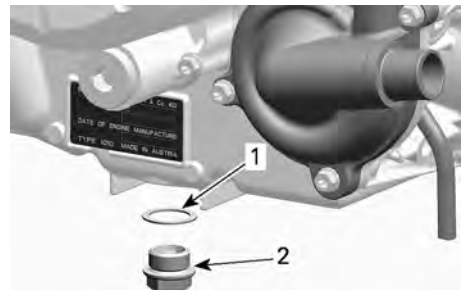

1. Gasket ring (discard)
2. Drain plug

7. Allow oil to drain completely from the crankcase.
8. Replace oil filter, refer to *Oil Filter*.
9. Clean the magnetic drain plug from metal shavings and residue.

**NOTE:** Presence of debris gives an indication of internal engine damage.

10. Install a NEW gasket ring on the drain plug.

### NOTICE

**Never use the gasket ring a second time. Always replace with a new one.**

11. Install and tighten drain plug to the recommended specification.

| Tightening Torque |                              |
|-------------------|------------------------------|
| Drain plug        | 30 ± 2 Nm<br>(22 ± 1 lbf-ft) |

12. Refill engine, refer to *Recommended Engine Oil*.

### NOTE:

For engine oil capacity, refer to *Technical Specifications*.

13. Start engine and let it idle for a 60 seconds.
14. Stop engine.
15. Check the oil level immediately, refer to *Verifying the Engine Oil Level*.
16. Refill as necessary.
17. Ensure oil filter and drain plug areas are not leaking.
18. Dispose oil and filter as per your local environmental regulations.

## OIL FILTER

### *Twin Cylinders Engines*


#### Removing the Oil Filter

1. Tilt the cargo box.

### NOTE:

The oil filter cover can also be reached by removing the passenger seats and the engine service cover.

2. Clean oil filter area.
3. Remove oil filter cover.
4. Remove and discard oil filter.

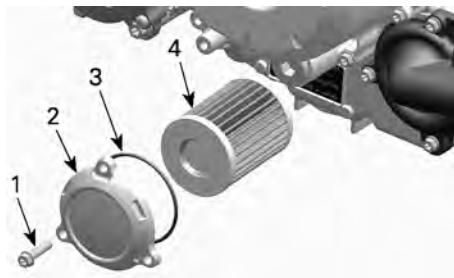


### TYPICAL

1. Oil filter screw
2. Oil filter cover
3. O-ring
4. Oil filter


#### Installing the Oil Filter

1. Check and clean the oil filter inlet and outlet area for dirt and other contaminations.

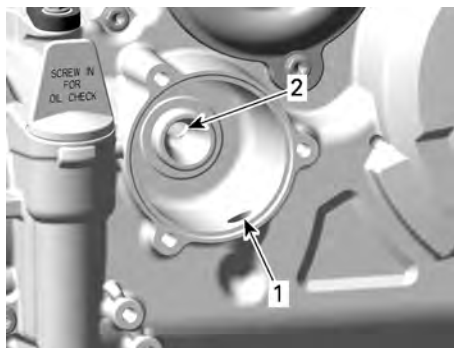

1. Inlet bore from the oil pump to the oil filter
2. Outlet bore to the engine oil providing system

2. Wet a NEW O-ring with engine oil and slip onto oil filter cover.
3. Install the new filter into the cover.
4. Apply engine oil to the seal on the open end of the oil filter.

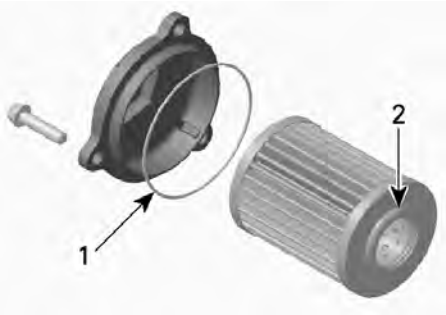

1. Slightly oil
2. Slightly oil

### NOTICE

**Pay attention to avoid pinching the O-ring during filter and cover installation.**

5. Install the cover on the engine.
6. Tighten oil filter cover screws to recommended specification.

#### Tightening Torque


|                         |                              |
|-------------------------|------------------------------|
| Oil filter cover screws | 10 ± 1 Nm<br>(89 ± 9 lbf-in) |
|-------------------------|------------------------------|

7. Wipe off any oil spillage on engine.

## RADIATOR

### Inspecting and Cleaning the Radiator

Periodically check the radiator area for cleanliness.

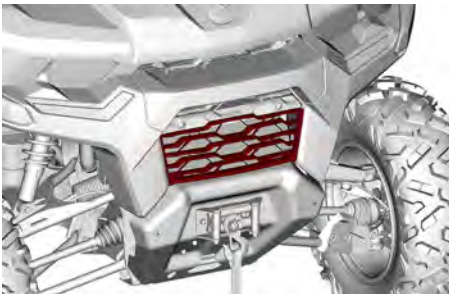

1. To access radiator, pull the lower part of the front grille and slide it down.
2. Inspect radiator and hoses for leaks or any damage.
3. Inspect radiator fins. They must be clean, free of mud, dirt, leaves or any other deposit that would prevent air from passing freely through the radiator.

If available, use a garden hose to rinse the radiator fins.


### CAUTION

**Never clean radiator with your hands when it is hot. Let the radiator cool down before cleaning.**

### NOTICE

**Be careful not to damage the radiator fins when cleaning. Do not use any object/tool that could damage the fins. When hosing, use low pressure only. Never use a HIGH PRESSURE washer.**

4. To install the front grille, insert the upper tabs first and push bottom of grille in the front fascia.

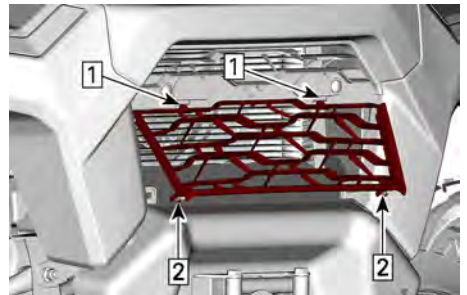

1. Insert upper tabs
2. Push and lock lower tabs in fascia

## ENGINE COOLANT

### *Recommended Type of Engine Coolant*

BRP recommends the use of its XPS engine coolant or an equivalent at all time.

Damage caused by the use of a coolant not suitable for the engine may not be covered by the BRP Limited Warranty.

| XPS Recommended Engine Coolant |
|--------------------------------|
| XPS COOL-X LT                  |

If the recommended XPS engine coolant is not available:

- Use a coolant that meets or exceeds ASTM D3306 NAPS free (Nitrite, Amine, Phosphate, Silicate) Non 2-EH Acid

### **NOTICE**

**Always use ethylene-glycol anti-freeze containing corrosion inhibitors specifically for internal combustion aluminum engines.**

### *Verifying the Engine Coolant Level*


### **NOTICE**

**Check coolant level with engine cold.**


1. Place vehicle on a level surface.
2. Open the cargo box.
3. Remove the pressure cap

### **⚠ WARNING**

**In order to avoid potential burns, do not remove the pressure cap or loosen the coolant drain plug if the engine is hot.**

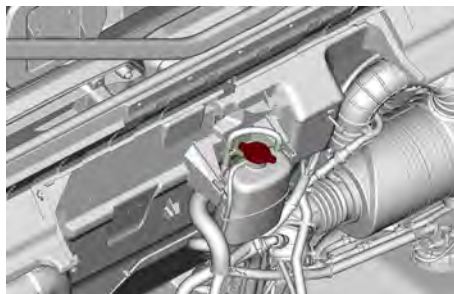

4. Ensure cooling system is full up to the Max line.

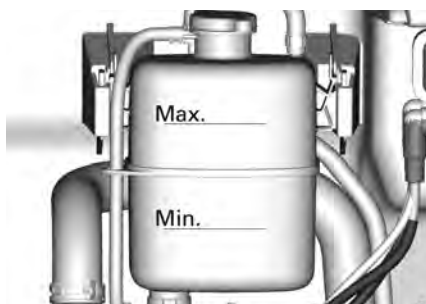

### *Adding Coolant*

1. Remove the coolant tank pressure cap.
2. Using a funnel to avoid spillage, add coolant in system as necessary. **Do not overfill.**
3. Properly reinstall pressure cap on cooling tank.
4. Close the cargo box.

### **NOTE:**

A cooling system that frequently requires addition of coolant is an indication of leaks or engine problems.


### *Replacing the Engine Coolant*

### **⚠ WARNING**

**In order to avoid potential burns, do not remove the pressure cap or loosen the coolant drain plug if the engine is hot.**

1. Remove the cooling system pressure cap.

2. Unscrew coolant drain plug partially to drain the coolant into a suitable container.

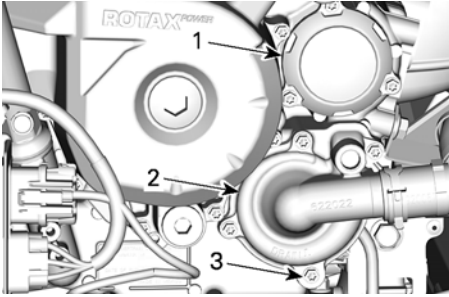

**V-TWIN ENGINE**


1. Oil filter cover
2. Water pump cover
3. Coolant drain plug
3. Disconnect the lower radiator hose from the water pump cover and drain the remaining coolant into a suitable container.
4. Tighten the coolant drain plug to specification.

| Tightening Torque  |                              |
|--------------------|------------------------------|
| Coolant drain plug | 10 ± 1 Nm<br>(89 ± 9 lbf-in) |

5. Reinstall radiator hose.
6. Fill cooling system with coolant, refer to *Bleeding the Cooling System* procedure.

### Bleeding the Cooling System

1. Remove the pressure cap.
2. Fill coolant system until it is full up to the Max line on the coolant tank.

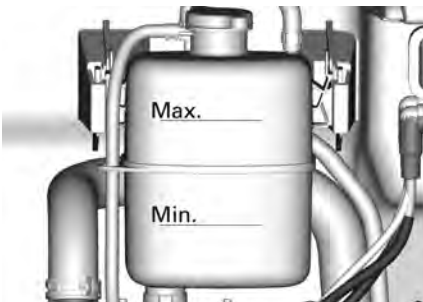

3. Install pressure cap.
4. Run engine at idle with the pressure cap **ON** until the cooling fan cycles on for a second time.
5. Stop the engine and let it cool down.

### ⚠ WARNING

**In order to avoid potential burns, do not remove the pressure cap if the engine is hot.**

6. When the engine is cool, remove pressure cap and add coolant if required.
7. Install pressure cap.
8. After the next ride, following this procedure, check coolant level. Add coolant as required. Refer to *Verifying the Engine Coolant Level* in this section.


### Heating/Air Conditioning Air Filter (if equipped)

#### NOTICE


**The cleaning of the filters must be performed more often than recommended when riding in dusty conditions or sand.**

### Fresh Air Filter

Open hood to access fresh air filter.

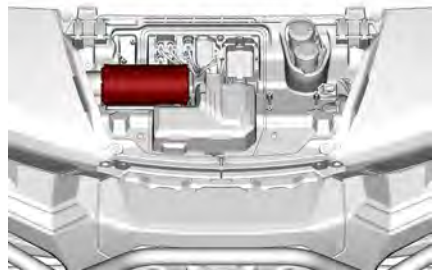

Lift and slide filter to remove.

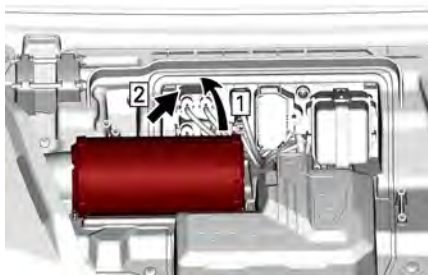

1. Lift
2. Slide

Inspect the filter for any signs of leaks. A streak of dust on the clean side of the filter is a telltale sign. Replace filter if there is any damages. Eliminate any source of air leaks before installing a new filter.

Clean air filter by tapping out heavy dust from paper element, this will allow dirt and dust to get out of the paper filter.

### NOTICE

It is not recommended to blow compressed air on the paper element; this could damage the paper fibers and reduce its filtration ability when used in dusty environments. If air filter is too dirty and cannot be cleaned following the recommended procedure, it should be replaced.


Use a clean damp cloth to wipe both the filter sealing surface and the inside of the outlet tube. Ensure that the outlet tube sealing area is undamaged.

The installation is the reverse of the removal procedure.

### Cockpit Air filters

Cockpit air filters are located at the bottom of the center console. There are 3 filters:

- One at the front of the unit
- One on each side of the unit.

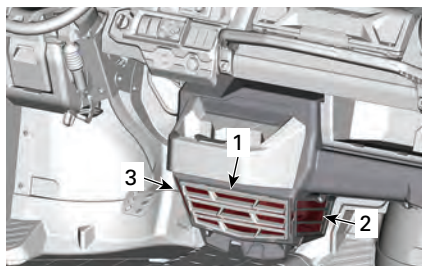

1. Front cockpit air filter
2. Lateral cockpit air filter - passenger side
3. Lateral cockpit air filter - driver side

### Front Cockpit Air Filter

To remove this filter, lift the grille tabs and pull up.




Clean air filter by washing it in lukewarm water with mild soap. Remove excess water and air dry before installation.

Before installing the filter, clean the inside of the heating/air conditioning unit and the evaporator coil using vacuum and a soft brush.

## NOTICE

**Be careful when brushing to avoid damaging the evaporator coil fins.**

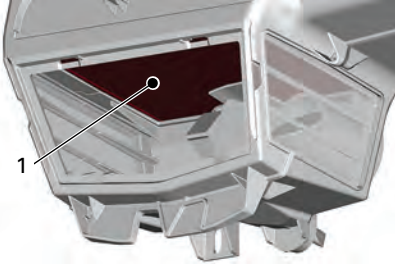

1. Evaporator

The installation is the reverse of the removal procedure.

### Lateral Cockpit Air Filters

To remove these filters, grab the grille tab and pull.



1. Grille tab

Clean air filters by washing them in lukewarm water with mild soap. Remove excess water and air dry before installation.

The installation is the reverse of the removal procedure.

### Air Conditioning Compressor Belt

Visually inspect the compressor belt for wear.

Hairline cracks do not require the replacement of the belt, but must be

monitored closely. Damage to the center of the belt will eventually require belt replacement, but when cracks extend to the edge of the belt, the belt failure is imminent.

The compressor belt tension verification and belt replacement should be performed by an authorized Can-Am dealer according to the *Maintenance Schedule*.

## EXHAUST SYSTEM

### *Cleaning the Area Surrounding the Exhaust System*

#### **WARNING**

Debris accumulation could lead to a vehicle fire when the exhaust system is hot and the debris are dried.

In some cases, that could result in serious properly damages, injuries or even death.

Clean often and regularly the area surrounding the exhaust system when riding in swamp, bog, hay or dead leaves.

In other situations, clean as per maintenance schedule requirement.

Also, check all exhaust heat shields for damage regularly and replaced when needed.

#### **CAUTION**

Never perform this operation immediately after the engine has been running because exhaust system is very hot.

1. From the rear of the vehicle, clean the areas around the muffler.
2. Clean the areas around the exhaust pipe and the exhaust manifold.

#### **WARNING**


Clean also under the heat shields.

## Inspecting and Cleaning the Muffler Spark Arrester


### **CAUTION**

**Never perform this operation immediately after the engine has been running as exhaust system is very hot.**

1. Remove and discard the tail pipe retaining screws.

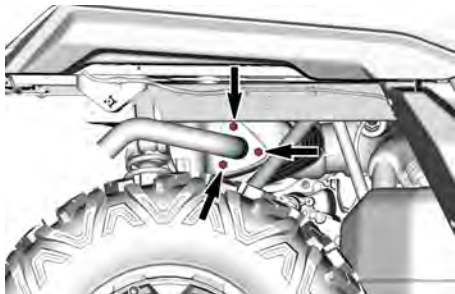

2. Remove exhaust tail pipe, gasket (discard) and spark arrester.

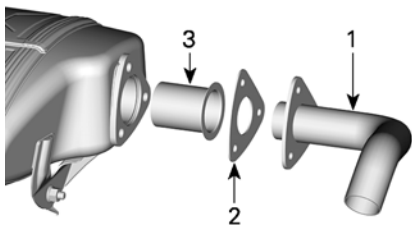

### **TYPICAL**

1. Tail pipe
  2. Gasket (discard)
  3. Spark arrester
4. Remove carbon deposits from the spark arrester using a brush.

### **NOTICE**

**Use a metallic soft brush and be careful to avoid damaging spark arrester mesh.**

4. Inspect mesh of spark arrester for any damage. Replace as required.

5. Inspect spark arrester chamber in muffler. Remove any debris as required.
6. Reinstall the muffler spark arrester in the reverse of the removal procedure.
7. Tighten the tail pipe screws to specification.

### **Tightening Torque**

|                  |                              |
|------------------|------------------------------|
| Tail pipe screws | 32 ± 2 Nm<br>(24 ± 1 lbf-ft) |
|------------------|------------------------------|

## GEARBOX

### **Recommended Gearbox Oil**

The XPS oil is specially formulated to meet the lubrication requirements of this gearbox. BRP strongly recommends the use of its XPS oil.

### **NOTICE**

**Do not use another type of oil when servicing.**

### **XPS Recommended Gearbox Oil**

75W140 Synthetic gear oil

### **Alternative, or if not available**

75W 140 API GL-5 Synthetic gear oil

## FRONT DIFFERENTIAL

### **Recommended Front Differential Oil**

The XPS oil is specially formulated to meet the lubrication requirements of this differential. BRP strongly recommends the use of its XPS oil.

### **NOTICE**

**Do not use another type of oil when servicing.**

### XPS Recommended Front Differential Oil

75W90 Synthetic gear oil

### Alternative if XPS Product is not Available

75W90 (API GL-5) synthetic gear oil



## CVT COVER

For a better understanding, some illustrations are taken with engine out of vehicle. To perform the following instructions, it is not necessary to remove engine.

### ⚠ WARNING

**Never touch CVT while engine is running.**  
**Never drive vehicle when CVT cover is removed.**

### ⚠ CAUTION

**Engine must be cool before cover is removed.**

### NOTICE

**This CVT is lubrication free.**  
**Never lubricate any components except drive pulley bearing and thrust rollers bearing.**

### Accessing the CVT Cover

1. Tilt the cargo box.
2. Remove the LH rear deflector by removing the plastic rivets.

### Removing the CVT Cover

1. Place the vehicle on a level surface.
2. If equipped, detach all CVT cooling ducts from the CVT cover.
3. Manually, remove all CVT cover retaining screws.


### NOTICE

**Do not use an impact tool to remove CVT cover screws.**

### NOTE:

Remove the center top screw last to support the cover during removal.


4. Remove the CVT cover and its gasket.

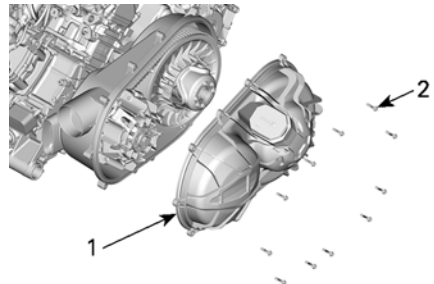

1. CVT cover
2. CVT cover screws

### Installing the CVT Cover

1. Install the center top screw of first.
2. Tighten the CVT cover screws as per following sequence.

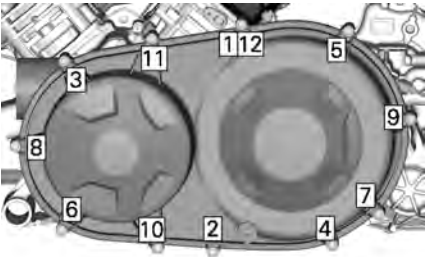

| Tightening Torque |                               |
|-------------------|-------------------------------|
| CVT cover screws  | 7 ± 0.8 Nm<br>(62 ± 7 lbf-in) |

3. Reconnect all CVT cooling ducts.

Drive Belt

Removing the Drive Belt (Twin Cylinder Engine)

NOTICE

In case of a drive belt failure, the CVT, cover and air outlet must be cleaned.

Please refer to *Tips for Maximizing Drive Belt Durability in Basic Procedures* for some important information.


- 1. Remove the CVT Cover.
- 2. Install the adaptor in the threaded hole of the driven pulley.

Driven pulley adapter  
(P/N 708200720)

3. Screw the puller/locking tool in the threaded hole of the adaptor.

Puller/locking tool  
(P/N 529000088)

4. Tighten to open the pulley.

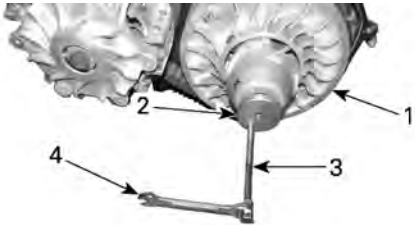

- 1. Fixed sheave of driven pulley
  - 2. Adaptor
  - 3. Puller/locking tool
  - 4. Wrench
5. To remove belt, slip the belt over the top edge of fixed sheave, as shown.




Installing the Drive Belt (Twin Cylinder Engine)

NOTICE


The maximum drive belt life span is obtained when the drive belt has the proper rotation direction.

- 1. To install the drive belt, slip the drive belt over the top edge of fixed sheave.
- 2. Install it so that the arrow printed on belt is pointing towards front of the vehicle, viewed from top.

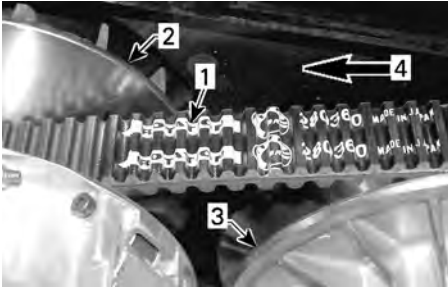

1. Arrow printed on belt
2. Drive pulley (front)
3. Driven pulley (rear)
4. Rotation direction

3. Unscrew and remove the puller/locking tools.

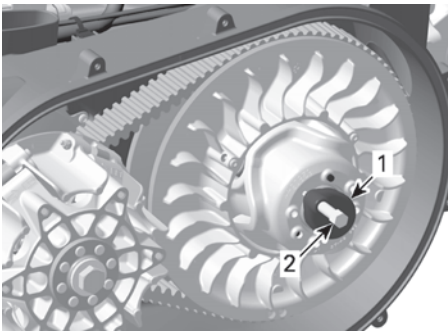

1. Driven pulley adapter
2. Puller/locking tool

4. Turn the driven pulley until the lowest portion of the cogs on the external surface of the drive belt is even with the driven pulley edge.



1. Lowest portion of cogs even with driven pulley edge

5. Install the CVT cover.

## Drive and Driven Pulleys

### Inspecting Drive and Driven Pulleys

This inspection must be performed by an authorized Can-Am dealer, repair shop, or person of your own choosing for maintenance, repair, or replacement.

#### Drive Pulley

Inspect the bushings and rollers of the sliding sheave of the drive pulley, replace worn parts.

#### Driven Pulley

Inspect rollers on fixed sheave.



## SPARK PLUGS

### Removing the Spark Plug

1. Unplug spark plug cable.
2. Clean spark plug area with pressurized air before removing spark plug.
3. Unscrew spark plug completely using a spark plug socket, then remove it.

## Battery

### Battery Maintenance

#### NOTICE

**Never charge a battery while installed in vehicle.**

These vehicles are equipped with a VRLA battery (Valve Regulated Lead Acid). It is a maintenance-free type battery, there is no need to add water to adjust electrolyte level.

### NOTICE

**Never remove the battery sealing cap.**

### Installing the Battery

Battery installation is the reverse of the removal procedure.

### NOTICE

**Improper orientation of the battery cables (reverse polarity) will result in damage to the voltage regulator.**

### NOTICE

**Always connect RED (+) cable first then BLACK (-) cable.**

## Fuses and Fusible Links

### Fuse Replacement

If a fuse is burnt, replace it by one of the same rating.

### NOTICE

**Do not use a higher rated fuse as this can cause severe damage.**

### Fuse Box Location

The vehicle is equipped with multiple fuse boxes. Several are located inside the front service center and another one under the right passenger seat, near the battery.

Two fuse links inside the electric harness complete the system protection.

An additional 50A fuse to protect the voltage regulator is located near the battery.

To open front service cover, pull on front edges of service cover to unlock mechanism




**PULLING ON FRONT SERVICE COVER EDGE.**


Lift service cover.



**LIFTING FRONT SERVICE COVER EDGE.**

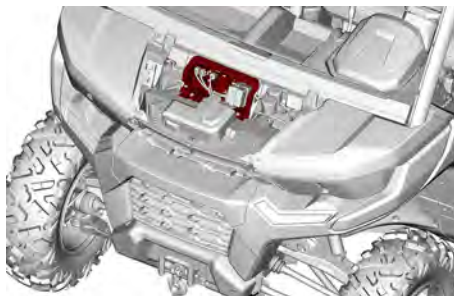


**FUSE BOX SUPPORT**

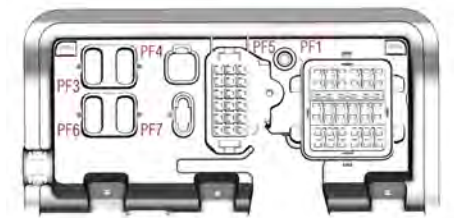


**FUSE BOX SUPPORT**

Remove the battery cover to access the rear secondary fuse box.

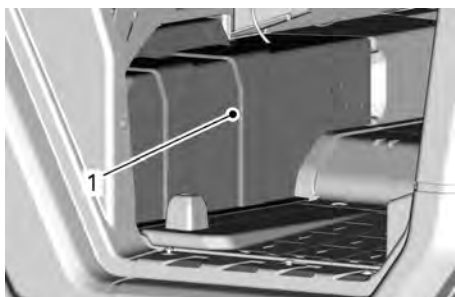

1. Battery cover

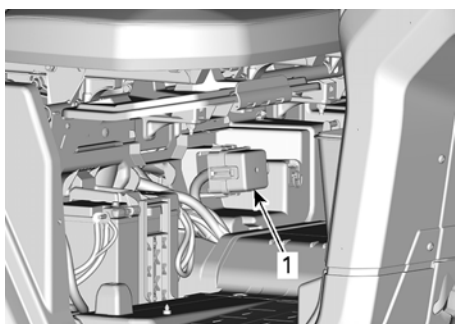

1. Rear secondary fuse box

### Fuse Box Description

Fuses are identified inside each fuse box cover.

Inside the front storage center, the fuse box number is molded in the support.

| Fuse support at Front |                                                  |            |
|-----------------------|--------------------------------------------------|------------|
| No                    | DESCRIPTION                                      | RAT<br>ING |
| PF1                   | Front Fuse box                                   | -          |
| PF3                   | DPS                                              | 40 A       |
| PF4                   | Accessory post<br>(Under dash<br>terminal block) | 40 A       |

| Fuse support at Front |             |            |
|-----------------------|-------------|------------|
| No                    | DESCRIPTION | RAT<br>ING |
| PF6                   | ABS Pump    | 40 A       |
| PF7                   | ABS Valves  | 25 A       |

|                      |                        |                          |
|----------------------|------------------------|--------------------------|
| R8<br>BRK<br>RELAY   | F24 5A<br>TRAILER LAMP | F25 5A<br>TRAILER DETECT |
|                      | F10 10A<br>T VEHICLE   | F14 10A<br>OUTLET        |
| SPARE                |                        | R9 ACC 2                 |
| R3 ACC 1             |                        |                          |
| F11 20A<br>HEAD LAMP | F18 10A<br>DC5/TILT    | F26 5A<br>SEAT SWITCH    |
| F16 10A<br>TAIL LAMP | F12 10A<br>DC1/DC3 ACC |                          |

### FRONT FUSE BOX

|                               |                            |                  |
|-------------------------------|----------------------------|------------------|
| F8 10A<br>KEY SW              |                            | R1<br>FAN RELAY  |
| F9 25A<br>COOLING FAN         |                            |                  |
| F4 10A<br>RELAY / CLUSTER     | F5 10A<br>INJ / IGN / FUEL | R2 MAIN<br>RELAY |
| F18 EVAP 10A<br>OXYGEN SENSOR | F6 10A<br>ECM              |                  |
| F7 10A<br>4 X 4               | F28 10A<br>REAR OUTLET     |                  |

### REAR FUSE BOX

**NOTE:**

Fuses are identified inside fuse box cover.

| Fuse links |                |        |
|------------|----------------|--------|
| Fuse Link  | DESCRIPTION    | RATING |
| 1          | Main           | 18 awg |
| 2          | Accessory post | 14 awg |

| REGULATOR FUSE |             |        |
|----------------|-------------|--------|
| No             | DESCRIPTION | RATING |
| -              | Regulator   | 50 A   |


**LIGHTS**

*Headlight Bulb Replacement*

NOTICE

Never touch glass portion of a halogen bulb with bare fingers, it shortens its operating life. If glass is touched, clean it with isopropyl alcohol which will not leave a film on the bulb.

Unplug connector from bulb.

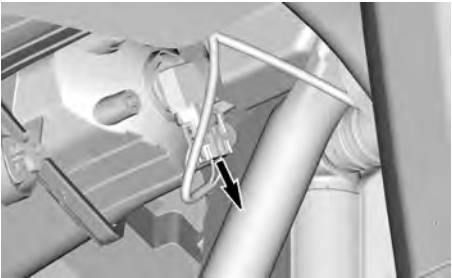

TYPICAL

Rotate bulb.



TYPICAL

Pull out bulb.

Properly reinstall removed parts in the reverse order of their removal.

Validate headlights operation.

*Headlight Beam Aiming*

Turn adjustment screw to adjust beam height to your convenience.

**NOTE:**

Adjust headlights evenly.




1. Adjustment screw

*Taillight Bulbs Replacement*

The taillights are built with LEDs (light emitting diode) and this technology proved to be reliable. In the unlikely event they do not work, have them checked by an authorized Can-Am dealer, a repair shop or person of your choosing.

*Front Turn Signal Light Bulb Replacement*

1. Remove the light bulb socket.

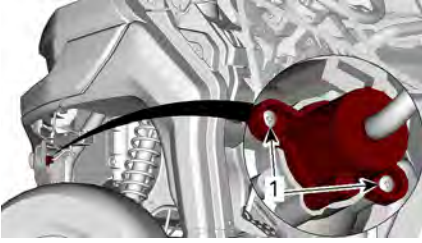

### TURN SIGNAL LIGHT SOCKET

1. Retaining screws
2. Replace the light bulb.
3. Reinstall the socket.


### Rear Turn Signal Light Bulb Replacement

1. Remove the tail gate. Refer to *Equipment*.
2. Remove the turn signal lens retaining screw.




1. Lens retaining screw

3. Remove the cargo box side panel upper screws.

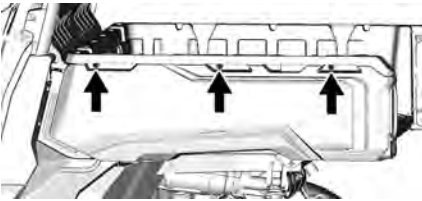

4. Tilt the panel.
5. Remove the light bulb socket.

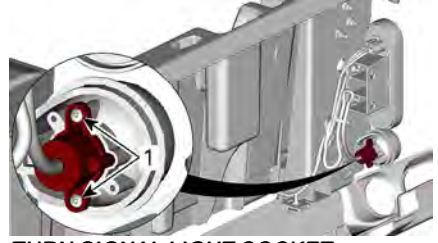

### TURN SIGNAL LIGHT SOCKET


1. Retaining screws
6. Replace the light bulb.
7. Reinstall the bulb socket and other removed parts in the reverse order.

### Front Position Light Replacement

#### NOTE:

The front position lights cannot be disassembled. They have to be replaced as a whole.

1. Disconnect the electrical connector.
2. Unscrew the retaining nut.
3. Remove the position light.

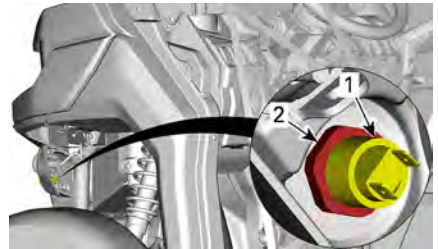


1. Position light
2. Retaining nut

4. Install the new position light in the reverse order.

### Licence Plate Bulb Replacement

1. Remove the licence plate bulb cover.

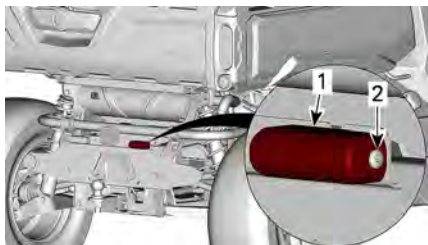


1. Licence plate bulb cover
2. Retaining screw

2. Replace the bulb.
3. Reinstall the cover.


## Drive Shaft Bellow and Protector

### *Inspecting Drive Shaft Bellows and Protector*


1. Visually inspect drive shaft protectors and bellows condition.
2. Check protectors for damage or rubbing against shafts.
3. Check bellows for cracks, tears, leaking grease, etc.
4. Repair or replace damaged parts as necessary.

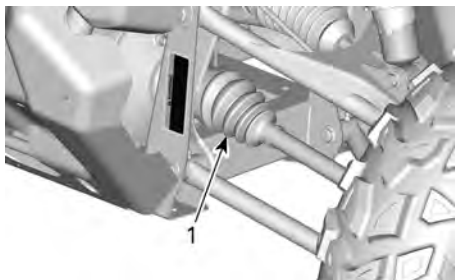

1. Inner drive shaft bellows

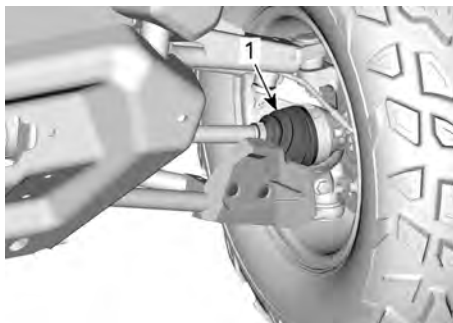

1. Outer drive shaft bellows

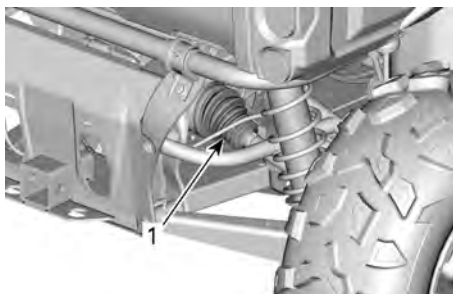

1. Inner drive shaft bellows



1. Outer drive shaft bellows

## Wheel Bearing

### *Inspecting a Wheel Bearing*

1. Lift and support vehicle. Refer to *Lifting and Supporting the Vehicle*.
2. Push and pull the wheels from the upper edge to feel the play.
3. See an authorized Can-Am dealer, a repair shop or a person of your choosing if there is excessive play.



TYPICAL

## Wheels and Tires

### Removing a Wheel

1. Place the vehicle on a level surface.
2. Place shift lever on PARK position.
3. Loosen the wheel lug nuts.
4. Lift and support vehicle. Refer to *Lifting and Supporting Vehicle* section
5. Remove lug nuts and wheel.

### Installing a Wheel

1. Inspect studs threads and lug nuts. Replace if needed.
2. Install the wheel.

**NOTE:** The tires are unidirectional and their rotation must be kept in a specific direction for proper operation.

3. Install all lug nuts by hand.

### NOTICE

**Always use the recommended wheel lug nuts for the type of wheel. Using a different lug nut could cause damages to the rim or studs.**

4. Tighten wheel lug nuts in accordance with the following illustration.

| Tightening Torque |                                |
|-------------------|--------------------------------|
| Wheel lug nuts    | 100 ± 10 Nm<br>(74 ± 7 lbf-ft) |



TIGHTENING SEQUENCE

### Tire Pressure

#### ⚠ WARNING

**Tire pressure greatly affects vehicle handling and stability. Insufficient pressure may cause tire to deflate and rotate on wheel. Overpressure may burst the tire. Always follow recommended pressure. NEVER set tire pressure below minimum. It could cause the tire to dislodge from the rim.**

Check pressure when tires are **cold** before using the vehicle. Tire pressure changes with temperature and altitude. Recheck pressure if one of these conditions has changed.

Refer to the *Tires Pressure and Maximum Load Label* on your vehicle for applicable pressure.

#### NOTE:

In the event of a flat tire, it is recommended to carry a tire gauge, tire pump and a repair kit.

### Tire Inspection

Check tire for damage and wear. Replace if necessary.

## **⚠ WARNING**

Do not rotate tires. The front and rear tires have a different size. The left and right tires have different unidirectional tread patterns.

### **Tire Replacement**

Tire replacement should be performed by an authorized Can-Am dealer, a repair shop or a person of your choosing.

## **⚠ WARNING**


Replace tires only with the same type and size as original tires. For unidirectional tread pattern, ensure that the tires are installed in the correct direction of rotation. Tires should be replaced, by an experienced person, in accordance with tire industry standards and tools.

## **Suspensions**

### **Lubricating the Rear Suspension**


Lubricate rear suspension arms (two grease fittings on each arm) and rear stabilizer bar bushing.

XPS synthetic suspension grease

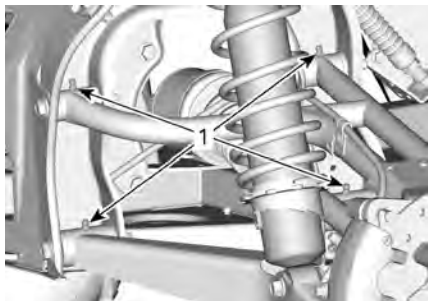

**TYPICAL**

1. Rear suspension arm grease fittings

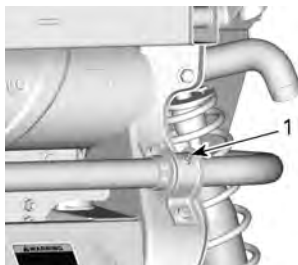

**TYPICAL**

1. Rear stabilizer bar bushing grease fitting

### **Inspecting the Suspension**

See an authorized Can-Am dealer, a repair shop or a person of your choosing if any problem is detected.

### **Shock Absorbers**

Inspect shock absorber for leaks, bump stop wear out or other damages. Verify fasteners are still well tightened.

### **Front Suspension Arms**

Check suspension arms for cracks, bending or other signs of excessive wear or damage.

### **Rear Suspension Arms**


Check suspension arms for cracks, bending or other signs of excessive wear or damage.

## **Brakes**

### **Verifying the Brake Fluid Reservoir Level**

With vehicle on a level surface, check brake fluid in reservoir for proper level. Brake fluid level should be between MIN. and MAX. marks.

The brake fluid reservoir is located in front of the multifunction gauge. Remove the gauge cover to access.

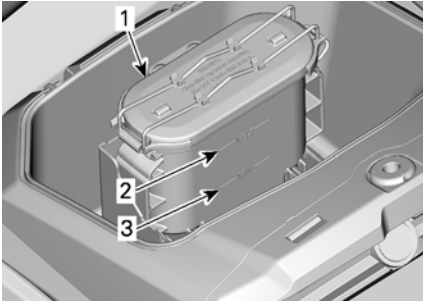

**GAUGE COVER REMOVED**

1. Brake fluid reservoir
2. MAX mark
3. MIN mark


### NOTE:

A low level may indicate leaks or worn brake pads.

### Adding Brake Fluid

Clean filler cap.

Remove the cap by releasing the tab.

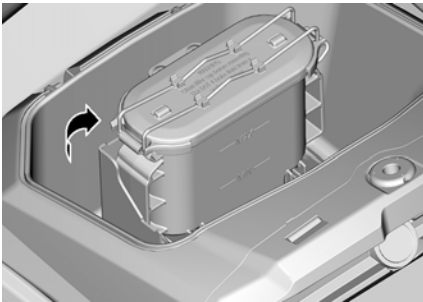

Add fluid as required. **Do not overfill.**

### NOTE:

Ensure filler cap diaphragm is pushed inside the cap before closing the brake fluid reservoir.

### Recommended Brake Fluid

Always use brake fluid meeting the specification DOT 4 only.

### NOTICE

**To avoid serious damage to the braking system, do not use fluids other than the recommended one, nor mix different fluids for topping up.**

**Do not use brake fluid taken from old or already opened containers.**

### Inspecting Brake System

The brake inspection, maintenance and repair should be performed by an authorized Can-Am dealer, a repair shop or person of your choosing.

However, verify the following between visits to your dealer:

- Brake fluid level
- Brake system for fluid leaks
- Brake pad wear
- Brake cleanliness

### ⚠ WARNING

**The brake fluid replacement or brake system maintenance and repairs should be performed by an authorized Can-Am dealer.**

## SEAT BELTS

### Cleaning Seat Belt

To clean dirt and debris from the seat belts, sponge the straps with mild soap and water.

### ⚠ WARNING

**To avoid damaging the seat belt components, never use a pressure washer to clean them.**

### NOTICE

**Do not use bleach, dye, or household detergents.**

Cage

Cage - Fasteners Tightening Verification

- 1. Remove the front fender and the side cage cover to get access to the fasteners.

**NOTE:**  
LH side shown, repeat on RH side.



TYPICAL

- 1. Front fender
- 2. Side cage cover



TOP CAGE FASTENERS

- 2. Tighten cage fasteners to specification from the outside of the vehicle.

| Tightening Torque |                                  |
|-------------------|----------------------------------|
| Cage fasteners    | 67.5 ± 2.5 Nm<br>(50 ± 2 lbf-ft) |



FRONT CAGE FASTENERS



REAR CAGE FASTENERS

# VEHICLE CARE

## Vehicle Cleaning and Protection

### NOTICE

**Never use a high pressure washer to clean the vehicle. USE LOW PRESSURE ONLY (like a garden hose). High pressure can cause damage to electrical or mechanical components.**

Pay attention to certain areas where salt-water, mud or debris can accumulate and potentially cause:

- Fire
- Wear
- Interference
- Corrosion.

This list includes but is not limited to:

- Around exhaust system and between muffler and muffler cover
- Under and around the fuel tank
- Radiator
- Shock absorbers
- Around front and rear differentials
- Around and underneath engine and gearbox
- Inside wheels
- On top of skid plates.

### ⚠ WARNING

**Debris accumulation could lead to a vehicle fire when the exhaust system is hot and the debris are dried.**

**In some cases, that could result in serious properly damages, injuries or even death.**

**Clean often and regularly the area surrounding the exhaust system when riding in swamp, bog, hay or dead leaves.**

**In other situations, clean as per maintenance schedule requirement.**

fresh water is necessary to preserve vehicle and its components after each operating day.

Metallic parts lubrication is highly recommended.

Use anti-corrosive lubricant or an equivalent.

### XPS Lubricant and anti-corrosive

Painted parts which are damaged should be properly repainted to prevent rust.

When required, wash the body with warm water and soap (only use mild detergent). Apply non-abrasive wax.

### NOTICE

**Never clean plastic parts with strong detergent, degreasing agent, paint thinner, acetone, etc.**

Protect the vehicle with a cover to prevent dust accumulation during storage.

### NOTICE

**The vehicle has to be stored in a cool and dry place and covered with an opaque tarpaulin. This will prevent sun rays and grime from affecting plastic components and vehicle finish.**

When vehicle is used in salt-water environment rinsing the vehicle with

---

## STORAGE AND PRESEASON PREPARATION

When a vehicle is not in use for more than 4 months, proper storage is a necessity.

If the vehicle is to remain inactive for more than 21 days, disconnect the BLACK (-) cable of the battery.

The use of a low amperage trickle charger is recommended to keep battery fully charged.

Before using your vehicle after storage, a preparation is required.

See an authorized Can-Am dealer, a repair shop, or a person of your own choosing to have your vehicle prepared properly.

While reading this Operator's Guide, remember that:



### **WARNING**

**Indicates a potential hazard which, if not avoided, could result in serious injury or death.**

# TECHNICAL INFORMATION


## VEHICLE IDENTIFICATION

The main components of your vehicle (engine and frame) are identified by different serial numbers. It may sometimes become necessary to locate these numbers for warranty purposes or to trace your vehicle in the event of loss. These numbers are required by the authorized Can-Am dealer to complete warranty claims properly. We strongly recommend that you take note of all the serial numbers on your vehicle and supply them to your insurance company.

## Vehicle Identification Number

The statutory plate is located on the passenger side, under the dash.

The VIN number label is located on the passenger side, under the dash.

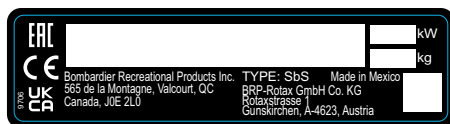


## VIN LABEL - EUROPEAN COUNTRIES



### TYPICAL - VIN LABEL LOCATION

- 1: Category
- 2: Type-approval number
- 3: VIN
- 4: Permissible maximum laden mass(es) of the vehicle
- 5-7: Permissible maximum mass(es) per axle
- B-1: Permissible towable mass on rear coupling point; unbraked trailer
- B-2: Permissible towable mass on rear coupling point; inertia-braked trailer

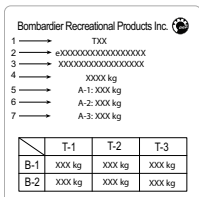

---

# BRP RF DESS POST GEN3 (CAN)

## USA and Canada

This device complies with FCC Part 15 and Industry Canada license exempt RSS standard(s). Operation is subject to the following two conditions:

1. this device may not cause interference, and
2. this device must accept any interference, including interference that may cause undesired operation of the device.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

Le dispositif a été évalué à satisfaire l'exigence générale de l'exposition aux rf. L'appareil peut être utilisé dans des conditions d'exposition portatif sans restriction.

L'émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence.

1. l'appareil ne doit pas produire de brouillage, et
2. l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

IC: 12006A-1001317030 For variant 1001316154 (CAN)

FCC ID: 2ACER-1001317030 For variant 1001316154 (CAN).

## Mexico



IFETEL

Marca: BRP Megatech

Número: BRME1023-28186

BRP Megatech Certificate number : 1450978

Modelo: 1001316154

NOM-208-SCFI-2016 (Disposición Técnica IFT-008-2015)

La operación de este equipo está sujeta a las siguientes dos condiciones:

1. Es posible que este equipo o dispositivo no cause interferencia perjudicial y
2. Este equipo o dispositivo debe aceptar cualquier interferencia, incluyendo la que pueda causar su operación no deseada.

## Brazil



Número: QC-5611-22

BRP Megatech Certificate number: 1450991

Modelo: 1001316154

Este equipamento não tem direito à proteção contra interferência prejudicial e não pode causar interferência em sistemas devidamente autorizados. Para maiores informações, consulte o site da ANATEL.

## Japan

This device is granted pursuant to the Japanese Radio Law (電波法) and the Japanese Telecommunications Business Law (電気通信事業法). This device should not be modified (otherwise the granted designation number will become invalid).

## Europe

### Declaration of Conformity

Simplified EU Declaration of Conformity according Radio Equipment Directive 2014/ 53/EU



### DE

Hiermit erklärt BRP Megatech, dass der Funkanlagentyp 1001316154 der Richtlinie 2014/53/EU entspricht. Der vollständige Text der EU-Konformitätserklärung ist unter der folgenden Internetadresse verfügbar: <https://www.brp.com/en/sustainability/product-responsibility.html>

### FR

Le soussigné, BRP Megatech, déclare que l'équipement radioélectrique du type 1001316154 est conforme à la directive 2014/53/UE. Le texte complet de la déclaration UE de conformité est disponible à l'adresse internet suivante: <https://www.brp.com/en/sustainability/product-responsibility.html>

### BG

С настоящото BRP Megatech декларира, че този тип радиосъоръжение 1001316154 е в съответствие с Директива 2014/53/ЕС.

Цялостният текст на ЕС декларацията за съответствие може да се намери на следния интернет адрес: <https://www.brp.com/en/corporatesocialresponsibility/productsafety.html>

### EL

Με την παρούσα ο/η BRP Megatech, δηλώνει ότι ο ραδιοεξοπλισμός 1001316154 πληροί την οδηγία 2014/53/ΕΕ. Το πλήρες κείμενο της δήλωσης συμμόρφωσης ΕΕ διατίθεται στην ακόλουθη ιστοσελίδα στο διαδίκτυο: <https://www.brp.com/en/sustainability/product-responsibility.html>

### CS

Tímto BRP Megatech prohlašuje, že typ rádiového zařízení 1001316154 je v souladu se směrnicí 2014/53/EU. Úplné znění EU prohlášení o shodě je k dispozici na této internetové adrese: <https://www.brp.com/en/sustainability/product-responsibility.html>

## DA

Hermed erklærer BRP Megatech, at radioudstyrstypen 1001316154 er i overensstemmelse med direktiv 2014/53/EU.

EU-overensstemmelseserklæringens fulde tekst kan findes på følgende internetadresse: <https://www.brp.com/en/sustainability/product-responsibility.html>

## ET

Käesolevaga deklareerib BRP Megatech, et käesolev raadioseadme tüüp 1001316154 vastab direktiivi 2014/53/EL nõuetele.

ELi vastavusdeklaratsiooni täielik tekst on kättesaadav järgmisel internetiaadressil: <https://www.brp.com/en/sustainability/product-responsibility.html>

## ES

Por la presente, BRP Megatech declara que el tipo de equipo radioeléctrico 1001316154 es conforme con la Directiva 2014/53/UE.

El texto completo de la declaración UE de conformidad está disponible en la dirección Internet siguiente: <https://www.brp.com/en/sustainability/product-responsibility.html>

## FI

BRP Megatech vakuuttaa, että radiolaitetyyppi 1001316154 on direktiivin 2014/53/EU mukainen.

EU-vaatimustenmukaisuusvakuutuksen täysimittainen teksti on saatavilla seuraavassa internetosoitteessa: <https://www.brp.com/en/sustainability/product-responsibility.html>

## EN

Hereby, BRP Megatech declares that the radio equipment type 1001316154 is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: <https://www.brp.com/en/sustainability/product-responsibility.html>

## HR

BRP Megatech ovime izjavljuje da je radijska oprema tipa 1001316154 u skladu s Direktivom 2014/53/EU. Cjeloviti tekst EU izjave o sukladnosti dostupan je na sljedećoj internetskoj adresi: <https://www.brp.com/en/sustainability/product-responsibility.html>

## HU

BRP Megatech igazolja, hogy a 1001316154 típusú rádióberendezés megfelel a 2014/53/EU irányelvnek. Az EU-megfelelőségi nyilatkozat teljes szövege elérhető a következő internetes címen: <https://www.brp.com/en/sustainability/product-responsibility.html>

## IT

Il fabbricante, BRP Megatech, dichiara che il tipo di apparecchiatura radio 1001316154 è conforme alla direttiva 2014/53/UE.

Il testo completo della dichiarazione di conformità UE è disponibile al seguente indirizzo Internet: <https://www.brp.com/en/sustainability/product-responsibility.html>

## LT

Aš, BRP Megatech, patvirtinu, kad radijo įrenginių tipas 1001316154 atitinka Direktyvą 2014/53/ES. Visas ES atitikties deklaracijos tekstas prieinamas šiuo interneto adresu: <https://www.brp.com/en/sustainability/product-responsibility.html>

## LV

Ar šo BRP Megatech deklarē, ka radioiekārta 1001316154 atbilst Direktīvai 2014/53/ES. Pilns ES atbilstības deklarācijas teksts ir pieejams šādā interneta vietnē: <https://www.brp.com/en/sustainability/product-responsibility.html>

## MT

B'dan, BRP Megatech, niddikjara li dan it-tip ta' tagħmir tar-radju 1001316154 huwa konformi mad-Direttiva 2014/53/UE. It-test kollu tad-dikjarazzjoni ta' konformità tal-UE huwa disponibbli f'dan l-indirizz tal-Internet li ġej: <https://www.brp.com/en/sustainability/product-responsibility.html>

## NL

Hierbij verklaar ik, BRP Megatech, dat het type radioapparatuur 1001316154 conform is met Richtlijn 2014/53/EU.

De volledige tekst van de EU-conformiteitsverklaring kan worden geraadpleegd op het volgende internetadres: <https://www.brp.com/en/sustainability/product-responsibility.html>

## PL

BRP Megatech niniejszym oświadczam, że typ urządzenia radiowego 1001316154 jest zgodny z dyrektywą 2014/53/UE. Pełny tekst deklaracji zgodności UE jest dostępny pod następującym adresem internetowym: <https://www.brp.com/en/sustainability/product-responsibility.html>

## PT

O(a) abaixo assinado(a) BRP Megatech declara que o presente tipo de equipamento de rádio 1001316154 está em conformidade com a Diretiva 2014/53/UE.

O texto integral da declaração de conformidade está disponível no seguinte endereço de Internet: <https://www.brp.com/en/sustainability/product-responsibility.html>

## RO

Prin prezenta, BRP Megatech declară că tipul de echipamente radio 1001316154 este în conformitate cu Directiva 2014/53/UE. Textul integral al declarației UE de conformitate este disponibil la următoarea adresă internet: <https://www.brp.com/en/sustainability/product-responsibility.html>

## SV

Härmed försäkrar BRP Megatech att denna typ av radioutrustning 1001316154 överensstämmer med direktiv 2014/53/EU. Den fullständiga texten till EU-försäkringen om överensstämmelse finns på följande webbadress: <https://www.brp.com/en/sustainability/product-responsibility.html>

## SL

BRP Megatech potrjuje, da je tip radijske opreme 1001316154 skladen z Direktivo 2014/53/EU. Celotno besedilo izjave EU o skladnosti je na voljo na naslednjem spletnem naslovu: <https://www.brp.com/en/sustainability/product-responsibility.html>

## SK

BRP Megatech týmto vyhlasuje, že rádiové zariadenie typu 1001316154 je v súlade so smernicou 2014/53/EÚ. Úplné EÚ vyhlásenie o zhode je k dispozícii na tejto internetovej adrese: <https://www.brp.com/en/sustainability/product-responsibility.html>

## IS

BRP Megatech lýsir því hér með yfir að þráðlausi fjarskiptabúnaðurinn 1001316154 er í samræmi við tilskipun 2014/53/ESB. Óstytta texta ESB-samræmisýfirlýsingarinnar er að finna á veffanginu: <https://www.brp.com/en/sustainability/product-responsibility.html>

## Liechtenstein

Hiermit erklärt BRP Megatech, dass der Funkanlagentyp 1001316154 der Richtlinie 2014/53/EU entspricht. Der vollständige Text der EU-Konformitätserklärung ist unter der folgenden Internetadresse verfügbar: <https://www.brp.com/en/sustainability/product-responsibility.html>

## NO

Hermed erklærer BRP Megatech at radioutstyrstypen 1001316154 er i samsvar med direktiv 2014/53/EU. Hele teksten i EU-samsvarserklæringen finnes på følgende internettadresse: <https://www.brp.com/en/sustainability/product-responsibility.html>

## RU

Компания BRP Megatech настоящим заявляет, что радиотехническое оборудование категории 1001316154 отвечает требованиям Директивы 2014/53/EU.

Полный текст декларации соответствия ЕС доступен на сайте : <https://www.brp.com/en/corporatesocialresponsibility/productsafety.html>

# TECHNICAL INFORMATION LABEL

## Middle Seat Opening Pictogram



This pictogram is located near the locking tab of the middle seat.



## Air Filter Replacement Pictogram

### NOTICE

To replace the air filter, refer to the operator's guide for the procedure.

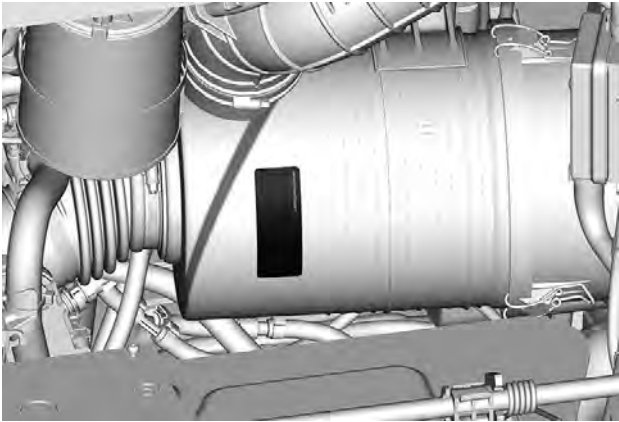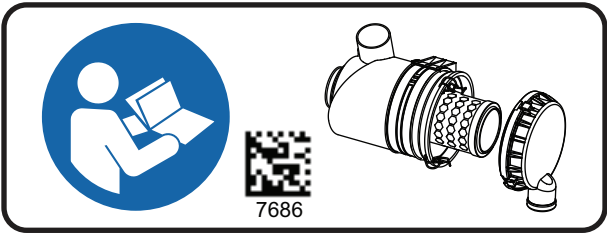


Park Position Pictogram

This label is located near the shift lever.

A pictogram for the Park position, consisting of a large capital letter 'P' centered within a circle. The circle is flanked by two curved lines on each side, resembling a parking 'P' sign.


Starting Position Pictogram

This label is located near the bottom of the ignition switch.

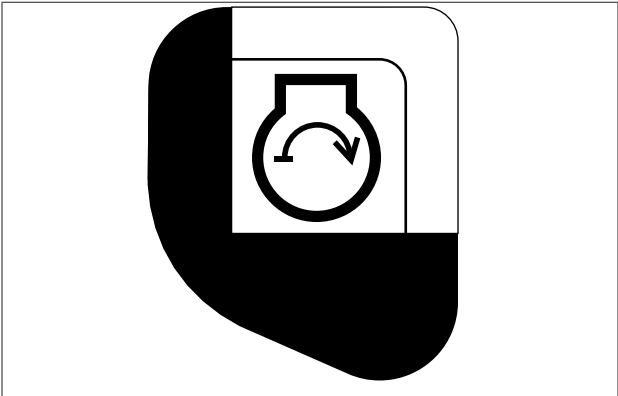A pictogram for the Starting position, showing a stylized key with a circular arrow around it, indicating a clockwise rotation. The key and arrow are contained within a white rectangular area, which is itself set against a larger black background that resembles the shape of a keyhole or a lever.

## Position Light Position Pictogram

This label is located on the top of the ignition switch.

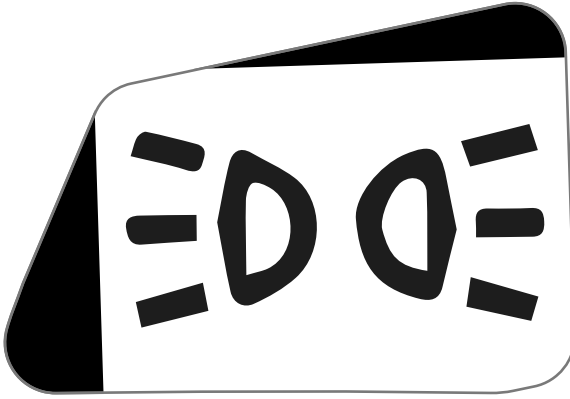


## Brake Fluid Pictogram

This label is located on the top of the brake fluid reservoir.




## Lifting Point Location

This label is located under the vehicle, near the lifting points.

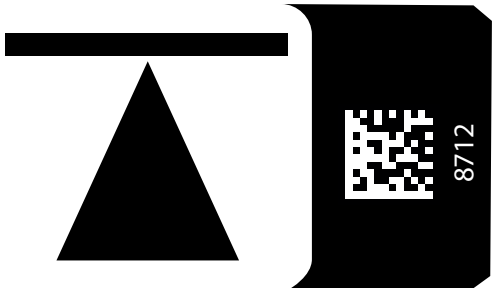


## Front Suspension Grease Fitting Location

This label is located above the upper suspension arm, near the shock absorber.

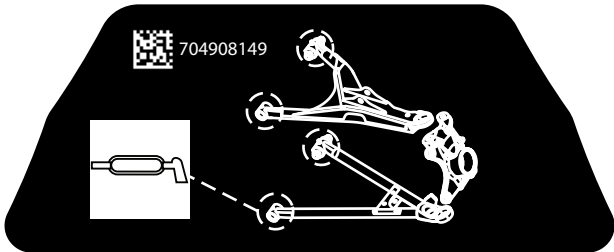

## Rear Suspension Grease Fitting Location

This label is located below cargo box, near the shock absorber.

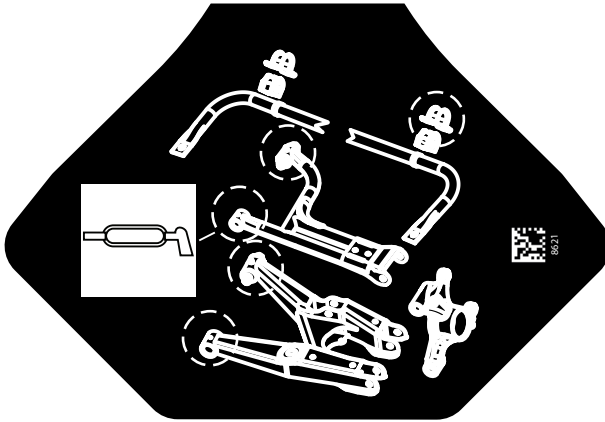

# COMPLIANCE LABEL

## Regulation (EU) 2016/1628 Applicable for Non-Road Mobile Machineries

Vehicles who comply to Regulation (EU) 2016/1628 (NRMM) are identified on the engine valve cover as well as on the vehicle, near the VIN label.



  
8639

**Rotax** NRSC G1 CO2 g/kWh: XXXX  
# MXXXXXXX  
Production date: MM-YYYY  
Family type: XXXXXX  

e13

 AT1/P V-####

TYPICAL - NRMM IDENTIFICATION LABEL



TYPICAL




**NOTE:**  
Tampering with the engine or its components voids the EU type-approval of that particular engine.

## Ethanol Compliance Pictogram

This label is always located near the fuel cap.


## Cage Compliance Pictogram

This label is located on the LH top of the cage.

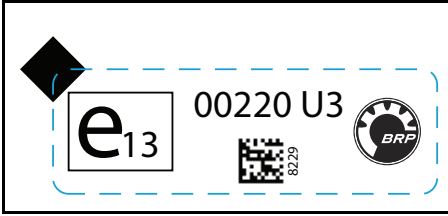

## Category Compliance Pictogram

This label is located on the LH top of the cage.

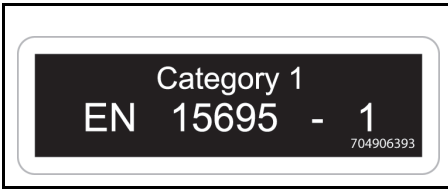

---

# NOISE EMISSION AND VIBRATION VALUES

|                                                                 |                       |
|-----------------------------------------------------------------|-----------------------|
| NOISE (according to Regulation (EU) NO 1322/2014 Annex XIII)    |                       |
| Noise level perceived by driver                                 | 68 dB (A)             |
| VIBRATION (according to Regulation (EU) NO 1322/2014 Annex XIV) |                       |
| Vibration measured at driver seat                               | 0.54 m/s <sup>2</sup> |
| NOISE (according to Regulation (EU) NO 2015/96 Annex II)        |                       |
| Stationary                                                      | 80 dB (A)             |
| Moving                                                          | 83 dB (A)             |

# DECLARATION OF CONFORMITY

## EU Declaration of Conformity



ADVENTURE BY DESIGN

565 de la Montagne Street  
Valcourt (Québec) J0B 2L0  
Canada  
www.brp.com

### EU Declaration of Conformity

**Authorized Representative:** BRP-Rotax GmbH Co. KG, Rotaxstrasse 1, Gunskirchen, A-4623 Austria

This declaration of conformity is issued under the sole responsibility of the manufacturer.

The undersigned, representing the manufacturer, hereby declares that model year **2027 Side by Side Vehicles** marked with the **CE** mark and a 17-character vehicle identification number (VIN) structured as **3JBxxxxxVxxxxxx** under commercial names **Can-Am Traxter**, **Can-Am Maverick Trail** and **Can-Am Maverick Sport** comply with all the relevant provisions of the following Directives and Regulations:

|                                                                                                                                                              |                                                                                                                           |
|--------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------|
| Machinery Directive (MD) 2006/42/EC, as superseded up to and including Machinery Regulation (EU) 2023/1230                                                   | ISO 12100:2010                                                                                                            |
| Non-Road Mobile Machinery (NRMM) Regulation (EU) 2016/1628 on gaseous pollutants as amended up to and including Regulation (EU) 2022/992                     | Category ATS,<br>Stage V emission limits                                                                                  |
| Electromagnetic Compatibility (EMC) Directive 2014/30/EU as amended up to and including Regulation (EU) 2018/1139                                            | CISPR 12:2007/A1:2009 &<br>IEC 61000-6-1:2007 or<br>UN R10.05 or later version                                            |
| Batteries Regulation (EU) 2023/1542, as amended up to and including Directive (EU) 2025/1561 and,<br>Regulation (EU) 1103/2010 on battery capacity labelling | EN 50342-7:2015                                                                                                           |
| Radio Equipment (RED) Directive 2014/53/EU as amended up to and including Regulation (EU) 2023/1717<br>(If fitted with radio frequency (RF) Devices)         | Art. 3.1a: IEC 62368-1:2014<br>Art. 3.1b: CISPR 25:2016 &<br>ISO 11452-2:2004<br>Art. 3.2: ETSI EN 300 330<br>V2.1.1:2017 |

  
Luc Bouchard, Eng.  
Director, Product Development, Can-Am SSV  
Bombardier Recreational Products Inc.

Valcourt, QC, Canada

February 19, 2026

SKI-DOO LYNX SEV-DOO EVERSE ROTAX CAN-AM

# UK Declaration of Conformity



ADVENTURE BY DESIGN

565 de la Montagne Street  
Valcourt (Québec) J0E 2L0  
Canada

www.brp.com

## UK Declaration of Conformity

**Authorized Representative:** BRP Recreational Products UK Ltd., Mitchell Charlesworth  
Suites C, D, E & F, 14th Floor The Plaza, 100 Old Hall Street, Liverpool, L3 9QJ

This declaration of conformity is issued under the sole responsibility of the manufacturer.

The undersigned, representing the manufacturer, hereby declares that model year **2027 Side by Side Vehicles** marked with the **UK** CA mark and a 17-character vehicle identification number (VIN) structured as **3JBxxxxxVxxxxxx** under commercial names **Can-Am Traxter**, **Can-Am Maverick Trail** and **Can-Am Maverick Sport** comply with all the relevant provisions of the following Statutory Instruments:

|                                                                                                                                                                           |                                                                                |
|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------|
| Supply of Machinery (Safety) Regulations 2008, UK SI 2008/1597 as amended up to and including SI 2024/696                                                                 | ISO 12100:2010                                                                 |
| Non-Road Mobile Machinery (Type-Approval and Emission of Gaseous and Particulate Pollutants) Regulations 2018, UK SI 2018/764 as amended up to and including SI 2022/1273 | Category ATS,<br>Stage V emission limits                                       |
| Electromagnetic Compatibility Regulations 2016, UK SI 2016/1091 as amended up to and including SI 2024/696                                                                | CISPR 12:2007/A1:2009 &<br>IEC 61000-6-1:2007 or UN<br>R10.05 or later version |
| Batteries and Accumulators (Placing on the Market) Regulations 2008, UK SI 2008/2164 as amended up to and including UK SI 2020/1540                                       | EN 50342-7:2015                                                                |
| Radio Equipment Regulations 2017, UK SI 2017/1206 as amended up to and including SI 2024/1231                                                                             | Art. 3.1a: IEC 62368-1:2014<br>Art. 3.1b: CISPR 25:2016 &<br>ISO 11452-2:2004  |
| (If fitted with radio frequency (RF) Devices)                                                                                                                             | Art. 3.2: ETSI EN 300 330<br>V2.1.1:2017                                       |

  
Luc Bouchard, Eng.

Director, Product Development, Can-Am SSV  
Bombardier Recreational Products Inc.

Valcourt, QC, Canada

February 19, 2026

SKI-DOO LYNX SEWAGE Evinrude ROTAX Can-Am

---

# EAC DECLARATION OF CONFORMITY

Left blank for Eurasian Conformity  
mark where applicable



2016/1628 Article 8, item 5

To whomsoever it may concern

The undersigned on behalf of Bombardier Recreational Products Inc. confirms that according to Item 5, Article 8 of the Regulation (EU) 2016/1628, this document will accompany the engine.

Company Name: Bombardier Recreational Products Inc.

Registered trade name: BRP-Rotax GmbH Co. KG

Registered trade mark: ROTAX

Address: BRP-Rotax GmbH Co. KG, Rotaxstrasse 1, Gunskirchen, A-4623, Austria

Sincerely yours.

Name and position in the company: Marc Larouche  
Director- Intel Property & Product Compliance

SKI-DOO LYNX SEADOO CAN-AM ROTAX

# **TECHNICAL SPECIFICATIONS**

# TECHNICAL SPECIFICATIONS

| Engine                  |  |                                                                    |
|-------------------------|--|--------------------------------------------------------------------|
| Engine type             |  | 82 hp / 69 lb-ft, Rotax®<br>976 cc, V-twin, liquid<br>cooled       |
| Number of cylinders     |  | 2                                                                  |
| Number of valves        |  | 8 valves (mechanical<br>adjustment)                                |
| Intake valve clearance  |  | 0.06 to 0.14 mm<br>(.0024 to .0055 in)                             |
| Exhaust valve clearance |  | 0.11 to 0.19 mm<br>(.0043 to .0075 in)                             |
| Bore                    |  | 91 mm<br>(3.58 in)                                                 |
| Stroke                  |  | 75 mm<br>(2.95 in)                                                 |
| Displacement            |  | 976 cm <sup>3</sup><br>(59.56 in <sup>3</sup> )                    |
| Exhaust system          |  | Spark arrestor approved<br>by USDA Forest Service<br>with catalyst |
| Air filter              |  | Synthetic paper filter                                             |

| Lubrication System |                     |                                                                                                            |
|--------------------|---------------------|------------------------------------------------------------------------------------------------------------|
| Type               |                     | Wet sump                                                                                                   |
| Oil filter         |                     | Replaceable cartridge<br>oil filter (paper type)                                                           |
| Engine oil         | Capacity            | 2 l<br>(2.1 qt (liq.,US))                                                                                  |
|                    | Recommended XPS oil | See <i>Recommended<br/>Engine Oil</i> in the<br><i>Maintenance<br/>Procedures</i> section of<br>this guide |

| Cooling System |                         |                                                                                    |
|----------------|-------------------------|------------------------------------------------------------------------------------|
| Coolant        | Recommended XPS coolant | See Recommended Engine Coolant in the Maintenance Procedures section of this guide |
|                | Capacity                | 7.5 l<br>(1.98 gal (liq.,US))                                                      |

| Transmission |                                               |
|--------------|-----------------------------------------------|
| Type         | PRO-TORQ CVT with Quick Response System (QRS) |
| Engagement   | 2000 ± 100 RPM                                |

| Gearbox     |                                  |                                                                                 |
|-------------|----------------------------------|---------------------------------------------------------------------------------|
| Type        | Selectable Turf Mode / 2WD / 4WD |                                                                                 |
| Gearbox oil | Capacity                         | 1.25 l<br>(1.3 qt (liq.,US))                                                    |
|             | Recommended XPS gearbox oil      | See Recommended Gearbox Oil in the Maintenance Procedures section of this guide |

| Electrical System        |               |                                             |
|--------------------------|---------------|---------------------------------------------|
| Magneto generator output |               | 650 W @ 6000 RPM                            |
| Ignition system type     |               | IDI (Inductive Discharge Ignition)          |
| Spark plug               | Quantity      | 2                                           |
|                          | Make and type | NGK LMAR8C-9                                |
|                          | Gap           | 0.8 to 0.9 mm<br>(.031 to .035 in)          |
| Battery                  | Type          | Maintenance free —SLA<br>(Sealed Lead Acid) |

| Electrical System |                      |                                                         |
|-------------------|----------------------|---------------------------------------------------------|
|                   | Voltage              | 12 volts                                                |
|                   | Nominal rating       | 30 A•h                                                  |
|                   | Power starter output | 0.75 kW                                                 |
| Headlight         |                      | 4 x 35W (H8) LED                                        |
| Taillight         |                      | LED                                                     |
| Fuses             |                      | Refer to <i>Fuses</i> in the <i>Maintenance</i> section |

| Fuel System                                 |                       |                                                                          |
|---------------------------------------------|-----------------------|--------------------------------------------------------------------------|
| Fuel delivery                               |                       | Intelligent Throttle Control (ITC™) with Electronic Fuel Injection (EFI) |
| Throttle body                               |                       | 54 mm with ETA                                                           |
| Fuel pump                                   |                       | Electric (in fuel tank)                                                  |
| Idle speed                                  | ECO mode              | 1250 ± 100 RPM                                                           |
| Fuel                                        | Type                  | Regular unleaded gasoline                                                |
|                                             | Minimum Octane rating | 91 RON                                                                   |
| Fuel tank capacity                          |                       | ± 40 l<br>(10.6 gal (liq.,US))                                           |
| Fuel remaining when low fuel light turns ON |                       | ± 8.5 l<br>(2.2 gal (liq.,US))                                           |

| Drive System           |                                  |                                                                                                          |
|------------------------|----------------------------------|----------------------------------------------------------------------------------------------------------|
| Drive system type      |                                  | Selectable Turf Mode / 2WD / 4WD                                                                         |
| Front differential oil | Capacity                         | 400 ml<br>(13.5 fl oz (US))                                                                              |
|                        | Recommended XPS differential oil | See <i>Recommended Front Differential Oil</i> in the <i>Maintenance Procedures</i> section of this guide |

| Drive System                                                           |                                          |
|------------------------------------------------------------------------|------------------------------------------|
| Front drive                                                            | Auto-Locking QE front differential       |
| Front drive ratio                                                      | 3.6:1                                    |
| Rear drive                                                             | Lockable differential                    |
| Rear drive ratio                                                       | 3.43:1                                   |
| CV joint grease                                                        | XPS CV joint grease                      |
| Spline's propeller shaft grease (grease applied to spline connections) | XPS Propeller shaft grease or equivalent |

| Steering       |                          |
|----------------|--------------------------|
| Type           | Rack and pinion          |
| Steering wheel | Adjustable tilt steering |

| Front Suspension   |          |                     |
|--------------------|----------|---------------------|
| Suspension type    |          | Arched Double A-Arm |
| Suspension travel  |          | 279 mm<br>(11 in)   |
| Shock absorber     | Quantity | 2                   |
|                    | Type     | Gas charged         |
| Preload adjustment |          | 5 positions cam     |

| Rear Suspension    |          |                                         |
|--------------------|----------|-----------------------------------------|
| Suspension type    |          | Arched TTA with external stabilizer bar |
| Suspension travel  |          | 279 mm<br>(11 in)                       |
| Shock absorber     | Quantity | 2                                       |
|                    | Type     | Gas charged                             |
| Preload adjustment |          | 5 positions cam                         |

| Brakes                       |          |                                                                                        |
|------------------------------|----------|----------------------------------------------------------------------------------------|
| Front brake                  | Qty      | 2                                                                                      |
|                              | Type     | 220 mm<br>(8.7 in)<br>ventilated brake disc<br>with hydraulic<br>twin-pistons calipers |
| Rear brake                   | Qty      | 2                                                                                      |
|                              | Type     | 220 mm<br>(8.7 in)<br>ventilated brake disc<br>with hydraulic<br>twin-pistons calipers |
| Brake fluid                  | Type     | DOT 4                                                                                  |
|                              | Capacity | Approximately 325 ml<br>(11 fl oz (US))                                                |
| Caliper                      |          | Floating                                                                               |
| Brake pad material           |          | Metallic                                                                               |
| Minimum brake pad thickness  |          | 0.5 mm<br>(.02 in)                                                                     |
| Minimum brake disc thickness |          | 4 mm<br>(.157 in)                                                                      |
| Maximum brake disc warpage   |          | 0.2 mm<br>(.01 in)                                                                     |

| Tires                     |       |                                                                                                                                                   |
|---------------------------|-------|---------------------------------------------------------------------------------------------------------------------------------------------------|
| Pressure                  |       | Recommended tire inflation pressure is found on the Tire Label. Refer to appropriate <i>Important On-Product Labels</i> section for its location. |
| Tire size                 | Front | 686 x 229 x 356 mm<br>(27 x 9R14 in)                                                                                                              |
|                           | Rear  | 686 x 279 x 356 mm<br>(27 x 11R14 in)                                                                                                             |
| Minimum tire thread depth |       | 3 mm<br>(.118 in)                                                                                                                                 |

| Wheels                |       |                                 |
|-----------------------|-------|---------------------------------|
| Type                  |       | Cast aluminum                   |
| Rim size              | Front | 35.6 x 18 cm<br>(14 x 7 in)     |
|                       | Rear  | 35.6 x 21.6 cm<br>(14 x 8.5 in) |
| Wheel lug nuts torque |       | 100 ± 10 Nm<br>(74 ± 7 lbf-ft)  |
| Wheel Offset          | Front | 41.2 mm<br>(1.6 in)             |
|                       | Rear  | 51 mm<br>(2 in)                 |

| Chassis   |                                |
|-----------|--------------------------------|
| Cage type | Profiled cage<br>ROPS approved |

| Dimensions     |                        |
|----------------|------------------------|
| Overall length | 391.5 cm<br>(154.1 in) |
| Overall width  | 162.5 cm<br>(64 in)    |

| Dimensions       |       |                     |
|------------------|-------|---------------------|
| Overall height   |       | 198.1 cm<br>(78 in) |
| Wheelbase        |       | 294 cm<br>(116 in)  |
| Wheel track      | Front | 137 cm<br>(54 in)   |
|                  | Rear  | 131.5 cm<br>(52 in) |
| Ground clearance |       | 33 cm<br>(13 in)    |

| Loading Capacity and Weight                                                             |                              |
|-----------------------------------------------------------------------------------------|------------------------------|
| Dry weight                                                                              | 943 kg<br>(2,079 lb)         |
| Weight distribution (front/rear)                                                        | 44/56                        |
| Cargo box capacity                                                                      | 544 kg<br>(1,200 lb)         |
| Tailgate capacity                                                                       | 113.4 kg<br>(250 lb)         |
| Total vehicle payload allowed (including driver, all other loads and added accessories) | 716 kg<br>(1,579 lb)         |
| Gross vehicle weight rating                                                             | 1 700 kg<br>(3,748 lb)       |
| Towing capacity                                                                         | 1 134 kg<br>(2,500 lb)       |
| Tongue capacity                                                                         | 86.2 kg<br>(190 lb)          |
| Receiver Hitch                                                                          | 50.8 x 50.8 mm<br>(2 x 2 in) |

# PARTS CATALOG

---

## ONLINE PARTS CATALOG

The parts catalog required for your Can-Am SSV is available on our website at:

**[www.epc.brp.com](http://www.epc.brp.com)**

# **TROUBLESHOOTING**

---

# TROUBLESHOOTING GUIDELINES

## CVT Belt Is Slipping

### 1. Water has entered in the CVT.

- *Refer to Special Procedures.*

## “–” Is Displayed On the Gearbox Position Display

### 1. Shift lever is between 2 positions.

- *Properly position the shift lever in the desired position.*

### 2. Shift lever is not properly adjusted.

- *Contact an authorized Can-Am dealer.*

### 3. Electrical communication error.

- *Contact an authorized Can-Am dealer.*

## Engine Does Not Turn

### 1. D.E.S.S. key is not installed on D.E.S.S. post.

- *Securely install key to D.E.S.S. post.*

### 2. D.E.S.S. key not recognized is displayed in the multifunction gauge.

- *Clean D.E.S.S. key. If message still displayed after cleaning, see an authorized Can-Am dealer.*

### 3. Shift lever is not set on PARK.

- *Set shift lever to either in PARK or press the brake pedal.*

### 4. Burnt fuse.

- *Check fuses.*

### 5. Weak battery or loose connections.

- *Check charging system fuse.*
- *Check fault message in cluster.*
- *Check battery connections and terminals condition.*
- *Have the battery checked by an authorized Can-Am dealer.*

### 6. Defective engine start button.

- *Contact an authorized Can-Am dealer.*

### 7. Defective starter solenoid.

- *Contact an authorized Can-Am dealer.*

## Engine Turns Over But Fails To Start

### 1. Flooded engine

- *Active the drowned mode to start the engine. Refer to Flooded Engine in Special Procedures section.*

## **2. No fuel to the engine (spark plug dry when removed).**

- *Check fuel tank level.*
- *Check fuel pump fuse.*
- *Obstructed fuel pump pre-filter or fuel pump failure.*

*See an authorized Can-Am dealer, a repair shop, or a person of your own choosing for maintenance, repair, or replacement.*

## **3. Spark plug/ignition (no spark).**

- *Check ignition fuse.*
- *Remove spark plug then reconnect to ignition coil.*
- *Start engine with spark plug grounded to the engine away from spark plug hole. If no spark appears, replace spark plug.*

*If trouble persists, see an authorized Can-Am dealer, a repair shop, or a person of your own choosing for maintenance, repair, or replacement.*

## **Engine Lacks Acceleration or Power**

### **1. Seat belt not buckled properly. Check cluster message.**

- *Buckle up seat belt.*

### **2. Fouled or damaged spark plug.**

- *Replace spark plugs.*

### **3. Engine air filter plugged or dirty.**

- *Check air filter and replace if necessary.*
- *Check deposits in engine air filter housing.*

### **4. Water in CVT**

- *Drain water from CVT. Refer to Special Procedures section.*

### **5. CVT dirty or worn-out.**

- *Contact an authorized Can-Am dealer.*

### **6. Lack of fuel**

- *Dirty or clogged fuel pump pre-filter. See an authorized Can-Am dealer, a repair shop, or a person of your own choosing for maintenance, repair, or replacement.*

### **7. Engine is in Torque Limitation mode (if equipped).**

- *Engine torque is gradually limited for protection when coolant temperature is too high. Check multifunction gauge display for engine temperature.*
- *Let engine cool down.*

## **8. Engine is in limp home mode.**

- Multifunction gauge *CHECK ENGINE* indicator lamp is on and display shows *LIMP HOME*. See an authorized Can-Am dealer, a repair shop, or a person of your own choosing for maintenance, repair, or replacement.

## **Engine Overheats**

### **1. Low coolant level in cooling system.**

- Check coolant level and refill. See *Maintenance Procedures*. Seek service from an authorized Can-Am dealer, a repair shop, or a person of your own choosing for maintenance, repair, or replacement.

### **2. Cooling fan is not working.**

- Ensure cooling fan is not jammed and working properly.
- Check fan fuse. See *Fuses and Fusible Links in the Maintenance Procedures*.

### **3. Dirty radiators fins.**

- Check and clean radiator fins. See *Maintenance Procedures*.

## **Engine Misfire**

### **1. Fouled/damaged/worn spark plug.**

- Replace spark plugs if fouled. If there is damage to the spark plugs contact an authorized Can-Am dealer, this can be a sign of more serious engine issues.

### **2. Water in fuel.**

- Drain fuel system and refill with fresh fuel.

## **The RPM Increases But the Vehicle Does Not Move**

### **1. Water in the CVT.**

- Drain water from CVT. See *Special Procedures* section.

### **2. CVT dirty or worn-out or belt failure.**

- Contact an authorized Can-Am dealer.

## **Partial or No Response From the Accelerator Pedal - Check Engine Is ON and PPS Fault Message Is Displayed**

### **1. Partial failure of the accelerator pedal sensors (PPS).**

- Contact an authorized Can-Am dealer.

### **2. Total failure of the accelerator pedal sensors (PPS).**

- Contact an authorized Can-Am dealer.

---

## DIGITAL DISPLAY MESSAGES

If an abnormal engine condition occurs, the following messages can be combined with a pilot lamp.

| Message                     | Description                                                                                                                           |
|-----------------------------|---------------------------------------------------------------------------------------------------------------------------------------|
| D.E.S.S. KEY NOT RECOGNIZED | D.E.S.S. key requires cleaning. If message still displayed after cleaning, See an authorized Can-Am dealer.                           |
| BAD KEY                     | Indicates that you have used the wrong D.E.S.S. key, use the proper key for this vehicle.                                             |
| CHECK ENGINE                | All active or previously activated faults that require attention.<br>No engine limitation engaged.                                    |
| LIMP HOME                   | Critical faults requiring diagnostic as soon as possible.<br>An engine limitation is engaged and/or the engine behavior is modified.  |
| TPS FAULT                   | Throttle body fault, generally followed by a Limp Home message.                                                                       |
| BRAKE SWITCH FAULT          | Brake signal fault.                                                                                                                   |
| CHECK DPS                   | Check engine pilot light on. Indicates that the DPS (Dynamic Power Steering) does not work properly. See an authorized Can-Am dealer. |
| PPS FAULT                   | Faulty Pedal Position Sensor(s) (PPS). See an authorized Can-Am dealer.                                                               |
| FUEL SENSOR FAULT           | When the fuel sender resistor value is out of range the digital display module will detect it and display the message.                |
| CHECK SMART-LOK             | Check engine pilot light on. Indicates that the Smart-Lok does not work properly. See an authorized Can-Am dealer.                    |

This page is intentionally blank

# **CUSTOMER INFORMATION**

---

# DATA PRIVACY INFORMATION

## DATA PRIVACY INFORMATION

Bombardier Recreational Products Inc., its affiliates and subsidiaries ("BRP") is committed to protecting your privacy. This notice is to inform you about how we collect, use and disclose your personal information in the course of managing our relationship with you. More details can be found by visiting the BRP's Privacy Policy website.

*[HTTPS://BRP.COM/EN/  
PRIVACY-POLICY.HTML](https://brp.com/en/privacy-policy.html)*



Please be assured that we have appropriate measures in place to ensure that your personal information is kept secured and protected against unauthorized access, use or disclosure.

The personal information we hold about you is collected either directly from you or through our authorized dealers and third parties (e.g. with whom we offer services or engage in joint-marketing activities), and includes:

- Contact, Demographic & Registration Information (e.g., name, full address, phone number, email, ownership history, language of communication)
- Transactional Information (e.g., information necessary to handle returns, payment information when you purchase our products or services through our websites or mobile applications and other issues related to your purchase of BRP products).
- Vehicle Information (e.g., serial number, vehicle identification number, mileage, purchase and delivery date, unit usage, vehicle location and movements)
- Your comments, opinions and reviews of our products and services
- Information collected automatically when you navigate on BRP or dealer's websites or mobile apps collected via cookies and similar technologies (e.g., IP address, type of device, operating system, browser type, webpages you view).

We may also receive information about you from social media platforms when you interact with us on those platforms.

We use your personal information for various reasons, mostly to:

- Manage your order of BRP products and services (e.g., to complete or deliver your order, or service your BRP product)
- Provide customer support, assistance, and after-sales (e.g., complete or follow up with you about your order or maintenance, help with any delivery issues, handle returns, and other issues related to your purchase of BRP products)
- Manage your BRP products registration, warranty, security, safety recall, and dispute resolution (e.g. to offer warranty and after-sales service to you, protect your security and safety, perform safety recalls)
- Send you commercial communications about our products and services (e.g. inform you about new BRP products, services or features; share news about contests, promotions, and events or discuss products or services offered by BRP that may be of interest to you)

- Offer you personalized experience, content, or offers and services based on profiling or geolocation technologies (e.g. to notify you when your vehicle may need servicing, to locate your nearest dealership)
- Perform data analytics and statistics data that no longer identifies you personally, for business intelligence and have insights on how to improve our products and services
- Prevent, detect, and control fraud and any unauthorized or illegal activities (e.g., to detect and control fraud in relation to BRP products or services purchase; manage illegal or unauthorized activities and cyberthreats)
- Comply with applicable laws and regulations.

Your personal information may be disclosed to the following: BRP, BRP's authorized dealerships, distributors, service providers, advertising & market research partners and other authorized third parties.

Depending on the circumstances, your personal information may be communicated outside the region where you reside. Your personal information is retained only for as long as necessary for the purpose for which we obtained it and according to our retention policies.

To exercise your data privacy rights (e.g. right of access, right of rectification), to withdraw your consent in order to be removed from the address list for marketing purposes or for the satisfaction survey or for general data privacy questions, please contact BRP's Data Protection Officer at or by mail at [privacyofficer@brp.com](mailto:privacyofficer@brp.com) or by mail at: BRP Legal Service, 726 St-Joseph, Valcourt, Quebec, Canada, J0E 2L0.

**When BRP processes your personal information, they do so in compliance with its Privacy Policy available at:**

[HTTPS://BRP.COM/EN/  
PRIVACY-POLICY.HTML](https://brp.com/en/privacy-policy.html)



---

# CONTACT US

*[www.brp.com](http://www.brp.com)*

## **Asia Pacific**

### **BRP Asia**

107D and 107E, 17/F, Tower 1,  
Grand Century Place, Mongkok,  
Kowloon, Hong Kong

### **Australia**

Level 26  
477 Pitt Street  
Sydney, NSW 2020

### **China**

上海市徐汇区衡山路10号6号楼301  
Rm 301, Building 6,  
No.10 Heng Shan Rd,  
Shanghai, China

### **Japan**

21F Shinagawa East One Tower  
2-16-1 Konan, Minato-ku-ku,  
Tokyo 108-0075

## **Europe, Middle East and Africa**

### **Belgium**

Oktrooiplein 1  
9000 Gent

### **Czech Republic**

Stefanikova 43a  
Prague 5  
150 00

### **Germany**

Alte Papierfabrik 16  
D-40699 Erkrath

### **Finland**

Isoaavantie 7  
PL 8040  
96101 Rovaniemi

### **France**

Arteparc Bâtiment B  
Route de la côte d'Azur, Le Canet  
13 590 Meyreuil

### **Norway**

Ingvald Ystgaards veg 15

N-7484 Trondheim

**Sweden**

Spinnvägen 15  
903 61 Umeå

**Switzerland**

Avenue d'Ouchy 4-6  
1006 Lausanne

**Latin America**

**Brazil**

Rua Odila Maia Rocha Brito, 25  
Edifício Beaumont, andar 1 ao 5  
CEP 13092-110 Campinas -SP

**Mexico**

Av. Ferrocarril 202  
Parque Industrial Querétaro  
Santo Rosa Jauregui, Querétaro  
C.P. 76220

**North America**

**Canada**

3200A, rue King Ouest,  
Suite 300  
Sherbrooke (Québec) J1L 1C9

**United States of America**

10101 Science Drive  
Sturtevant, Wisconsin  
53177

---

## CHANGE OF ADDRESS AND OWNERSHIP

If your address has changed or if you are the new owner of the vehicle, be sure to notify BRP by either:

- Notifying an authorized Can-Am dealer.
- **North America Only:** calling at 1 888 272-9222.
- Mailing one of the change of address cards on the following pages at one of the BRP addresses indicated in the *Contact Us* section of this guide.

In case of change of ownership, please join a proof that the former owner agreed to the transfer.

Notifying BRP, even after the expiration of the limited warranty, is very important as it enables BRP to reach the vehicle owner if necessary, like when safety recalls are initiated. It is the owner's responsibility to notify BRP.

**STOLEN UNITS:** If your personal vehicle is stolen, you should notify BRP or an authorized Can-Am dealer. We will ask you to provide your name, address, phone number, the vehicle identification number and the date it was stolen.



This page is  
intentionally blank



This page is  
intentionally blank

NOTE: \_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

NOTE: \_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

NOTE: \_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

NOTE: \_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

NOTE: \_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

NOTE: \_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

NOTE: \_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

NOTE: \_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

NOTE: \_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

NOTE: \_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

Model No. \_\_\_\_\_

**VEHICLE**

IDENTIFICATION NUMBER (V.I.N.) \_\_\_\_\_

**ENGINE**

IDENTIFICATION NUMBER (E.I.N.) \_\_\_\_\_

**Owner:** \_\_\_\_\_

NAME

No.

STREET

APT

CITY

STATE/PROVINCE

ZIP/POSTAL CODE

**Purchase Date** \_\_\_\_\_

YEAR

MONTH

DAY

**Warranty Expiry Date** \_\_\_\_\_

YEAR

MONTH

DAY

To be completed by the dealer at the time of the sale.

DEALER IMPRINT AREA

This page is intentionally blank



## **⚠ WARNING**

### TO REDUCE RISK OF SERIOUS INJURY OR DEATH,

- Read this operator's guide and safety labels.
- Watch the safety video.



### BE PREPARED

- Fasten seat belts and make sure nets and/or doors are securely latched in place.
- Wear an approved helmet and protective gear.
- Each rider must be able to sit with back against seat, foot flat on the floor or on the footrest, and hands on steering wheel or handholds. Stay completely inside the vehicle.

### DRIVE RESPONSIBLY

- Avoid loss of control and rollovers.
- Avoid abrupt maneuvers, sideways sliding, skidding or fishtailing and never do donuts.
- Avoid hard acceleration when turning, even from a stop.
- Slow down before entering a turn.
- Plan for hills, rough terrain, ruts and other changes in traction and terrain.
- Avoid side hilling (riding across slopes).

### BE QUALIFIED AND RESPONSIBLE

- Do not allow careless or reckless driving.
- Driver must be at least 16 years old with a valid driver's license.
- Do not operate after using drugs or alcohol.
- Do not allow operation on public roads (unless designated for off-highway vehicle access where collisions with cars and trucks can occur).
- Do not exceed vehicle seating capacity.

[www.brp.com](http://www.brp.com)



***ski-doo* LYNX SEA-DOO can-am ROTAX**